

interface-client-limit

Syntax	interface-client-limit <i>number</i> ;
Hierarchy Level	[edit forwarding-options dhcp-relay overrides], [edit forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides]
Release Information	Statement introduced in JUNOS Release 9.2.
Description	Sets the maximum number of DHCP subscribers per interface allowed for a specific group or for all groups. A group specification takes precedence over a global specification for the members of that group.
Options	<i>number</i> —Maximum number of clients allowed. Range: 1 through 500,000 Default: No limit
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Extended DHCP Relay Agent Overview■ Overriding the Default DHCP Relay Configuration

Published: 2009-07-16