

interface

Syntax interface (all | *interface-name*) {
 disable;
 maximum-power *watts*;
 priority *value*;
 telemetries {
 disable;
 interval *minutes*;
 duration *hours*;
 }
}

Hierarchy Level [edit poe]

Release Information Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Enable a PoE interface for a PoE port. An interface must be enabled in order for the port to provide power to a connected powered device.

Default The PoE interface is enabled by default.

Options all—All interfaces on the switch.

interface-name —Name of the specific interface.

The remaining statements are explained separately.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics

- Example: Configuring PoE Interfaces on an EX Series Switch
- Example: Configuring PoE Interfaces with Different Priorities on an EX Series Switch
- Configuring PoE (CLI Procedure)
- Configuring PoE (J-Web Procedure)
- PoE and EX Series Switches Overview

Published: 2009-07-22