

interfaces

Syntax	interfaces { ... }
Hierarchy Level	[edit]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure interfaces on the router.
Default	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
Usage Guidelines	See individual chapters.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

Published: 2009-07-16