

leave-timer

Syntax	leave-timer <i>milliseconds</i> ;
Hierarchy Level	[edit protocols gvrp]
Release Information	Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	For GARP VLAN Registration Protocol (GVRP), configure the number of milliseconds an interface waits after receiving a leave message before the interface leaves the VLAN specified in the message. If the interface receives a join message before the timer expires, the software keeps the interface in the VLAN.
Default	60 centiseconds
Options	<i>milliseconds</i> —Number of milliseconds. At a minimum, the leave timer interval should be twice the join timer interval. Default: 60 centiseconds
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ show gvrp■ Example: Configure Automatic VLAN Administration Using GVRP

Published: 2009-07-22