

link-mode

Syntax	link-mode <i>mode</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options]
Release Information	Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	Set the device's link-connection characteristic.
Default	The automatic mode is enabled.
Options	<p><i>mode</i> —Link characteristic:</p> <ul style="list-style-type: none">■ full-duplex—Connection is full duplex.■ half-duplex—Connection is half duplex.■ automatic—Link mode is negotiated. <p>If no-auto-negotiation is specified in ether-options, you can select only full-duplex or half-duplex. If auto-negotiation is specified in ether-options, you can select any mode.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Gigabit Ethernet Interfaces (CLI Procedure)■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at http://www.juniper.net/techpubs/software/junos/junos95/index.html

Published: 2009-07-22