

member

Syntax `member member-id {
 mastership-priority number;
 no-management-vlan;
 serial-number;
 role;
 }`

Hierarchy Level [edit virtual-chassis]

Release Information Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure an EX4200 switch as a member of a Virtual Chassis configuration.

Default When an EX4200 is powered on as a standalone switch (not interconnected through its Virtual Chassis ports with other EX4200 switches), its default member ID is 0.

Options *member-id*—Identifies a specific member switch of a Virtual Chassis configuration.
 Range: 0 through 9

The remaining statements are explained separately.

Required Privilege Level routing—To view this statement in the configuration.
 routing-control—To add this statement to the configuration.

Related Topics ■ Example: Configuring a Virtual Chassis Using a Preprovisioned Configuration File
 ■ Configuring a Virtual Chassis (CLI Procedure)
 ■ Configuring a Virtual Chassis (J-Web Procedure)
 ■ Understanding Virtual Chassis Components

Published: 2009-07-29