

password

Syntax	<code>password <i>password-string</i>;</code>
Hierarchy Level	[edit forwarding-options dhcp-relay authentication], [edit forwarding-options dhcp-relay group <i>group-name</i> authentication], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay authentication], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay authentication], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay authentication], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> authentication]
Release Information	Statement introduced in JUNOS Release 9.1.
Description	Configure the password that is sent to the external AAA authentication server for subscriber authentication.
Options	<i>password-string</i> —Authentication password.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Using External AAA Authentication Services with DHCP

Published: 2009-07-16