

preprovisioned

Syntax	preprovisioned;
Hierarchy Level	[edit virtual-chassis]
Release Information	Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	<p>Enable the preprovisioned configuration mode for a Virtual Chassis configuration.</p> <p>When preprovisioned configuration mode is enabled, you cannot use the CLI or the J-Web interface to change the mastership priority or member ID of member switches.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Topics	<ul style="list-style-type: none">■ Example: Configuring a Virtual Chassis Using a Preprovisioned Configuration File■ Configuring a Virtual Chassis (CLI Procedure)■ Configuring a Virtual Chassis (J-Web Procedure)■ Adding a New Switch to an Existing Virtual Chassis Configuration (CLI Procedure)■ Replacing a Member Switch of a Virtual Chassis Configuration (CLI Procedure)■ Understanding Virtual Chassis Configuration

Published: 2009-07-29