

## proxy-mode

---

<b>Syntax</b>	proxy-mode;
<b>Hierarchy Level</b>	[edit forwarding-options dhcp-relay overrides], [edit forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.5.
<b>Description</b>	<p>Enable DHCP relay proxy mode on the extended DHCP relay. Proxy mode supports all extended DHCP relay functionality.</p> <p>The extended DHCP relay proxy is not supported for the J Series routers DHCP server. Also, you cannot configure both the DHCP relay proxy and the extended DHCP local server on the same interface.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ DHCP Relay Proxy Overview</li><li>■ Extended DHCP Relay Agent Overview</li><li>■ Enabling DHCP Relay Proxy Mode</li></ul>

---

Published: 2009-07-16