

revert-interval

Syntax	<code>revert-interval <i>interval</i>;</code>
Hierarchy Level	[edit access profile <i>profile-name</i> radius options]
Release Information	Statement introduced in JUNOS Release 9.1.
Description	Configure the amount of time the router waits after a server has become unreachable. The router rechecks the connection to the server when the revert-interval expires. If the server is then reachable, it is used in accordance with the order of the server list.
Options	<i>interval</i> —Amount of time to wait. Range: 60 through 4294967295 seconds Default: 600 seconds
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Topics	■ Configuring Authentication and Accounting Parameters for Subscriber Access

Published: 2009-07-16