

## routing-instance

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | <code>routing-instance <i>routing-instance-name</i>;</code>   |
| <b>Hierarchy Level</b>          | [edit access radius-server <i>server-address</i> ],<br>[edit access profile <i>profile-name</i> radius-server <i>server-address</i> ] |
| <b>Release Information</b>      | Statement introduced before JUNOS Release 7.4.  |
| <b>Description</b>              | Configure the routing instance used to send RADIUS packets to the RADIUS server.  |
| <b>Options</b>                  | <i>routing-instance-name</i> —Routing instance name.  |
| <b>Required Privilege Level</b> | system—To view this statement in the configuration.<br>system-control—To add this statement to the configuration.                     |
| <b>Related Topics</b>           | ■ Configuring Authentication and Accounting Parameters for Subscriber Access  |

---

Published: 2009-07-16