

serial-number

Syntax	<code>serial-number <i>serial-number</i>;</code>
Hierarchy Level	[edit virtual-chassis preprovisioned member <i>member-id</i>]
Release Information	Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	In a preprovisioned Virtual Chassis configuration, specify the serial number of each EX4200 member switch to be included in the Virtual Chassis configuration. If you do not include the serial number within the Virtual Chassis configuration, the switch cannot be recognized as a member of a preprovisioned configuration.
Options	<code>serial-number</code> —The switch's permanent serial number, which is located on the back of the switch.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Configuring a Virtual Chassis Using a Preprovisioned Configuration File■ Configuring a Virtual Chassis (CLI Procedure)■ Configuring a Virtual Chassis (J-Web Procedure)■ Adding a New Switch to an Existing Virtual Chassis Configuration (CLI Procedure)■ Replacing a Member Switch of a Virtual Chassis Configuration (CLI Procedure)■ Understanding Virtual Chassis Configuration

Published: 2009-07-29