

## source-address

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | source-address <i>source-address</i> ;  |
| <b>Hierarchy Level</b>          | [edit access radius-server <i>server-address</i> ],<br>[edit access profile <i>profile-name</i> radius-server <i>server-address</i> ]   |
| <b>Release Information</b>      | Statement introduced before JUNOS Release 7.4.  |
| <b>Description</b>              | Configure a source address for each configured RADIUS server. Each RADIUS request sent to a RADIUS server uses the specified source address.  |
| <b>Options</b>                  | <i>source-address</i> —A valid IPv4 address configured on one of the router interfaces. On M Series routers only, the source address can be an IPv6 address and the UDP source port is 514. |
| <b>Required Privilege Level</b> | admin—To view this statement in the configuration.<br>admin-control—To add this statement to the configuration.   |
| <b>Related Topics</b>           | <ul style="list-style-type: none"><li>■ Configuring Router Interaction with RADIUS Servers</li><li>■ Configuring Authentication and Accounting Parameters for Subscriber Access</li></ul>   |

---

Published: 2009-07-16