

traceoptions

Syntax	<pre>traceoptions { file <i>name</i> <replace> <size <i>size</i>> <files <i>number</i>> <no-stamp> <(world-readable no-world-readable)>; flag <i>flag</i> <flag-modifier> <disable>; }</pre>
Hierarchy Level	[edit protocols mstp], [edit protocols rstp], [edit protocols stp], [edit protocols vstp vlan <i>vlan-id</i>]
Release Information	Statement introduced in JUNOS Release 9.0 for EX Series switches. Statement updated in JUNOS Release 9.4 for EX Series switches to add VSTP support.
Description	Set STP protocol-level tracing options.
Default	Traceoptions is disabled.
Options	<p>disable—(Optional) Disable the tracing operation. One use of this option is to disable a single operation when you have defined a broad group of tracing operations, such as all.</p> <p>file <i>name</i> —Name of the file to receive the output of the tracing operation. Enclose the name in quotation marks. We recommend that you place STP tracing output in the file <code>/var/log/stp-log</code>.</p> <p>files <i>number</i> —(Optional) Maximum number of trace files. When a trace file named <i>trace-file</i> reaches its maximum size, it is renamed <i>trace-file</i> .0, then <i>trace-file</i> .1, and so on, until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you must also specify a maximum file size with the size option. Range: 2 through 1000 files Default: 1 trace file only</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. These are the STP-specific tracing options:</p> <ul style="list-style-type: none">■ all —Trace all operations.■ all-failures—Trace all failure conditions.■ bpdu —Trace BPDU reception and transmission.■ bridge-detection-state-machine —Trace the bridge detection state machine.■ events —Trace events of the protocol state machine.■ port-information-state-machine —Trace the port information state machine.

- `port-migration-state-machine` —Trace the port migration state machine.
- `port-receive-state-machine` —Trace the port receive state machine.
- `port-role-select-state-machine` —Trace the port role selection state machine.
- `port-role-transit-state-machine` —Trace the port role transit state machine.
- `port-transmit-state-machine` —Trace the port transmit state machine
- `port-state-transit-state-machine` —Trace the port state transit state machine.
- `ppmd` —Trace the state and events for the ppm process
- `state-machine-variables` —Trace when the state machine variables change
- `timers` —Trace protocol timers
- `topology-change-state-machine` —Trace the topology change state machine.

The following are the global tracing options:

- `all`—All tracing operations
- `config-internal`—Trace configuration internals.
- `general`—Trace general events.
- `normal`—All normal events.
Default: If you do not specify this option, only unusual or abnormal operations are traced.
- `parse`—Trace configuration parsing.
- `policy`—Trace policy operations and actions.
- `regex-parse`—Trace regular-expression parsing.
- `route`—Trace routing table changes.
- `state`—Trace state transitions.
- `task`—Trace protocol task processing.
- `timer`—Trace protocol task timer processing.

`no-stamp`—(Optional) Do not place timestamp information at the beginning of each line in the trace file.

Default: If you omit this option, timestamp information is placed at the beginning of each line of the tracing output.

`no-world-readable`—(Optional) Prevent any user from reading the log file.

replace—(Optional) Replace an existing trace file if there is one.

Default: If you do not include this option, tracing output is appended to an existing trace file.

size *size* —(Optional) Maximum size of each trace file, in kilobytes (KB) or megabytes (MB). When a trace file named *trace-file* reaches this size, it is renamed *trace-file .0*. When the *trace-file* again reaches its maximum size, *trace-file .0* is renamed *trace-file .1* and *trace-file* is renamed *trace-file .0*. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you must also specify a maximum number of trace files with the **files** option.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 1 MB

world-readable—(Optional) Allow any user to read the log file.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

Related Topics

- show spanning-tree bridge
- show spanning-tree interface
- Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches
- Example: Configuring Faster Convergence and Improving Network Stability with RSTP on EX Series Switches
- Understanding MSTP for EX Series Switches
- Understanding RSTP for EX Series Switches
- Understanding STP for EX Series Switches
- Understanding VSTP for EX Series Switches

Published: 2009-07-28