

## transmit-rate

---

<b>Syntax</b>	transmit-rate ( <i>rate</i>   percent <i>percentage</i>   remainder);
<b>Hierarchy Level</b>	[edit class-of-service schedulers <i>scheduler-name</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX Series switches.
<b>Description</b>	Specify the transmit rate or percentage for a scheduler.
<b>Default</b>	If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 0, 0, 0, 0, and 5 percent.
<b>Options</b>	<p><i>rate</i> —Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1 000), m (1,000,000), or g (1,000,000,000). <b>Range:</b> 3200 through 160,000,000,000 bps</p> <p>percent <i>percentage</i> —Percentage of transmission capacity. A percentage of zero drops all packets in the queue. <b>Range:</b> 0 through 100 percent</p> <p>remainder—Remaining rate available</p>
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Configuring CoS on EX Series Switches</li><li>■ Defining CoS Schedulers (CLI Procedure) or Defining CoS Schedulers (J-Web Procedure)</li><li>■ Understanding CoS Schedulers</li></ul>

---

Published: 2009-07-22