

username-include

Syntax username-include {
 circuit-type;
 delimiter *delimiter-character*;
 domain-name *domain-name-string*;
 logical-system-name;
 mac-address;
 option-60;
 option-82 <circuit-id> <remote-id>;
 routing-instance-name;
 user-prefix *user-prefix-string*;
 }

Hierarchy Level [edit forwarding-options dhcp-relay authentication],
 [edit forwarding-options dhcp-relay group *group-name* authentication],
 [edit logical-systems *logical-system-name* forwarding-options dhcp-relay authentication],
 [edit logical-systems *logical-system-name* forwarding-options dhcp-relay group *group-name*
 authentication],
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*
 forwarding-options dhcp-relay authentication],
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*
 forwarding-options dhcp-relay group *group-name* authentication],
 [edit routing-instances *routing-instance-name* forwarding-options dhcp-relay authentication],
 [edit routing-instances *routing-instance-name* forwarding-options dhcp-relay group
 group-name authentication]

Release Information Statement introduced in JUNOS Release 9.1.

Description Configure the username that the router passes to the external AAA server. You must include at least one of the optional statements for the username to be valid. If you do not configure a username, the router accesses the local authentication service only and does not use external authentication services, such as RADIUS.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Topics ■ Using External AAA Authentication Services with DHCP

Published: 2009-07-16