

Configuring Active Server Groups

You can configure an active server group. Using an active server group enables you to apply a common DHCP relay agent configuration to a named group of DHCP server addresses.

To configure an active server group:

- Specify the name of the active server group.

```
[edit forwarding-options dhcp-relay]  
user@host# set active-server-group myServerGroup
```

To create an active server group as a global DHCP relay agent configuration option, include the **active-server-group** statement at the `[edit forwarding-options dhcp-relay]` hierarchy level. To have the group apply only to a named group of interfaces, include the **active-server-group** statement at the `[edit forwarding-options dhcp-relay group group-name]` hierarchy level.

Including the **active-server-group** statement at the `[edit forwarding-options dhcp-relay group group-name]` hierarchy level (as a group-specific option) overrides the effect of including the **active-server-group** statement at the `[edit forwarding-options dhcp-relay]` hierarchy level as a global option.

Published: 2009-07-16