

## Enabling DHCP Relay Proxy Mode

---

You can enable DHCP relay proxy mode on all interfaces or a group of interfaces.

To enable DHCP relay proxy mode:

1. Specify that you want to configure override options.

```
[edit forwarding-options dhcp-relay]  
user@host# edit overrides
```

2. Enable DHCP relay proxy mode.

```
[edit forwarding-options dhcp-relay overrides]  
user@host# set proxy-mode
```

- Related Topics**
- DHCP Relay Proxy Overview
  - Overriding the Default DHCP Relay Configuration

---

Published: 2009-07-16