

Configuring the NTP Server

To synchronize the JCS1200 platform with other servers on the network, you must configure a Network Time Protocol (NTP) server.

To configure an NTP server:

1. Log in to the JCS management module.
2. Use the **env** command to set JCS management module 1 (mm[1]) as the configuration target. For example:

```
system> env -T mm[1]
```

3. Use the **ntp** command to configure an NTP server. For example:

```
system:mm[1]> ntp -i 172.17.28.5 -f 60 -en enabled
```

In this example, the IP address of the NTP server is **172.17.28.5**, the JCS management module clock is updated by the NTP server every **60** minutes, and NTP is enabled.

- Related Topics**
- [env](#)
 - [ntp](#)

Published: 2009-07-23