

## Configuring an Address-Assignment Pool Name and Network Address

---

To configure an address-assignment pool, you must specify the name of the pool and configure the addresses for the pool.

To configure an address-assignment pool:

1. Configure the name of the pool and specify the IPv4 protocol.

```
[edit access]
user@host# edit address-assignment pool isp_1 family inet
```

2. Configure the network address and the prefix length of the addresses in the pool.

```
[edit access address-assignment pool isp_1 family inet]
user@host# set network 192.168.0.0/16
```

**Related Topics** ■ [Configuring Address-Assignment Pools Overview](#)

---

Published: 2009-07-16