

## Monitoring 802.1X Authentication

---

**Purpose** Use the monitoring feature to display details of authenticated users and users who have failed authentication.

**Action** To display authentication details in the J-Web interface, select **Monitoring > Security > 802.1X**.

To display authentication details in the CLI, enter the following commands:

- `show dot1x interface detail | display xml`
- `show dot1x interface detail <interface> | display xml`
- `show dot1x auth-failed-users`

**Meaning** The details displayed include:

- A list of authenticated users.
- The total number of users connected.
- A list of users who have failed authentication

You can also specify an interface for which the details must be displayed.

- Related Topics**
- [Configuring 802.1X Authentication \(J-Web Procedure\)](#)
  - [Configuring 802.1X Interface Settings \(CLI Procedure\)](#)
  - [Example: Setting Up 802.1X for Single Supplicant or Multiple Supplicant Configurations on an EX Series Switch](#)

---

Published: 2009-07-21