



Junos[®] OS

IP Demultiplexing Interfaces Feature Guide for Routing Devices

Release

14.1



Published: 2014-05-15

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS IP Demultiplexing Interfaces Feature Guide for Routing Devices

14.1

Copyright © 2014, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	vii
	Documentation and Release Notes	vii
	Supported Platforms	vii
	Using the Examples in This Manual	vii
	Merging a Full Example	viii
	Merging a Snippet	viii
	Documentation Conventions	ix
	Documentation Feedback	xi
	Requesting Technical Support	xi
	Self-Help Online Tools and Resources	xi
	Opening a Case with JTAC	xii
Part 1	Overview	
Chapter 1	IP Demultiplexing Interfaces	3
	Demultiplexing Interface Overview	3
Part 2	Configuration	
Chapter 2	IP Demultiplexing Interfaces	7
	Configuring an IP Demultiplexing Interface	7
	Specifying the Demux Underlying Interface	8
	Configuring an IP Demux Underlying Interface	9
	Configuring IP Demux Prefixes	10
	Configuring MAC Address Validation on Static Demux Interfaces	11
	Configuring a VLAN Demultiplexing Interface	11
	Configuring a VLAN Demux Underlying Interface	12
	Example: Configuring a Demux Interface	13
Chapter 3	Network Interfaces Configuration Statements and Hierarchy	17
	[edit interfaces] Hierarchy Level	17
	[edit logical-systems] Hierarchy Level	33
Chapter 4	Statement Summary	39
	demux0 (Static Interface)	40
	demux-destination (Demux Interface)	41
	demux-destination (Underlying Interface)	42
	demux-options (Static Interface)	42
	demux-source (Demux Interface)	43
	demux-source (Underlying Interface)	44
	family	45
	fast-aps-switch	49

	mac-validate	50
	preferred-source-address	51
	underlying-interface	52
	unit	53
Part 3	Administration	
Chapter 5	Monitoring Commands	63
	show interfaces demux0 (Demux Interfaces)	64
Part 4	Troubleshooting	
Chapter 6	Interface Diagnostics	75
	Interface Diagnostics	75
	Configuring Loopback Testing	75
	Interface Diagnostics	77
	Starting and Stopping a BERT Test	81
	Example: Configuring Bit Error Rate Testing	81
Part 5	Index	
	Index	85

List of Tables

	About the Documentation	vii
	Table 1: Notice Icons	ix
	Table 2: Text and Syntax Conventions	x
Part 3	Administration	
Chapter 5	Monitoring Commands	63
	Table 3: Demux show interfaces Output Fields	64
Part 4	Troubleshooting	
Chapter 6	Interface Diagnostics	75
	Table 4: Loopback Modes by Interface Type	76
	Table 5: BERT Capabilities by Interface Type	80

About the Documentation

- Documentation and Release Notes on page vii
- Supported Platforms on page vii
- Using the Examples in This Manual on page vii
- Documentation Conventions on page ix
- Documentation Feedback on page xi
- Requesting Technical Support on page xi

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- M Series
- MX Series
- T Series
- J Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```


2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page ix defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page x defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	}

GUI Conventions

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>

- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [IP Demultiplexing Interfaces on page 3](#)

CHAPTER 1

IP Demultiplexing Interfaces

- [Demultiplexing Interface Overview on page 3](#)

Demultiplexing Interface Overview

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can configure either IP demultiplexing interfaces or VLAN demultiplexing interfaces. IP demux interfaces use the IP source or destination address to demultiplex received packets when the subscriber is not uniquely identified by a Layer 2 circuit. VLAN demux interfaces use the VLAN ID to demultiplex received packets when the subscriber is not uniquely identified. Demux interfaces are supported on M120 or MX Series routers only.



NOTE: You can also configure demux interfaces dynamically. For information about how to configure dynamic IP demux or dynamic VLAN demux interfaces, see *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles* or *Configuring Dynamic Subscriber Interfaces Using VLAN Demux Interfaces in Dynamic Profiles*.

Related Documentation

- [Configuring an IP Demultiplexing Interface on page 7](#)
- [Configuring an IP Demux Underlying Interface on page 9](#)
- [Configuring a VLAN Demultiplexing Interface on page 11](#)
- [Configuring a VLAN Demux Underlying Interface on page 12](#)
- [Specifying the Demux Underlying Interface on page 8](#)
- [Configuring IP Demux Prefixes on page 10](#)
- [Binding VLAN IDs to Logical Interfaces](#)
- [Associating VLAN IDs to VLAN Demux Interfaces](#)
- [Example: Configuring a Demux Interface on page 13](#)
- [Subscriber Interfaces and Demultiplexing Overview](#)

PART 2

Configuration

- [IP Demultiplexing Interfaces on page 7](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 17](#)
- [Statement Summary on page 39](#)

CHAPTER 2

IP Demultiplexing Interfaces

- [Configuring an IP Demultiplexing Interface on page 7](#)
- [Specifying the Demux Underlying Interface on page 8](#)
- [Configuring an IP Demux Underlying Interface on page 9](#)
- [Configuring IP Demux Prefixes on page 10](#)
- [Configuring MAC Address Validation on Static Demux Interfaces on page 11](#)
- [Configuring a VLAN Demultiplexing Interface on page 11](#)
- [Configuring a VLAN Demux Underlying Interface on page 12](#)
- [Example: Configuring a Demux Interface on page 13](#)

Configuring an IP Demultiplexing Interface

To configure a demux interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
interface-name {
  unit logical-unit-number {
    ... logical-interface-configuration ...
  }
}
demux0 {
  unit logical-unit-number {
    demux-options {
      underlying-interface interface-name;
    }
    family family {
      demux-destination {
        destination-prefix;
      }
      demux-source {
        source-prefix;
      }
      mac-validate (loose | strict)
      unnumbered-address interface-name <preferred-source-address address>;
    }
  }
}
```

Keep the following guidelines in mind when configuring the demux interface:

- Demux interfaces are supported on M120 or MX Series routers only.
- You can configure only one **demux0** interface per chassis, but you can define logical demux interfaces on top of it (for example, **demux0.1**, **demux0.2**, and so on).
- You must associate demux interfaces with an underlying logical interface.



NOTE: IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.
- IP demux interfaces currently supports the Internet Protocol version 4 (IPv4) suite **inet** and Internet Protocol version 6 (IPv6) suite **inet6** family types.
- You can configure more than one demux prefix for a given demux unit. However, you cannot configure the exact same demux prefix on two different demux units with the same underlying interface.
- You can configure overlapping demux prefixes on two different demux units with the same underlying prefix. However, under this configuration, best match rules apply (in other words, the most specific prefix wins).
- If the address in a received packet does not match any demux prefix, the packet is logically received on the underlying interface. For this reason, the underlying interface is often referred to as the “primary” interface.

Related Documentation

- [Configuring an IP Demux Underlying Interface on page 9](#)
- [Specifying the Demux Underlying Interface on page 8](#)
- [Demultiplexing Interface Overview on page 3](#)
- [Configuring IP Demux Prefixes on page 10](#)

Specifying the Demux Underlying Interface

You must specify an underlying interface for static demux interfaces to use. This underlying interface must reside on the same logical system as the demux interface.

To specify the logical underlying interface, include the **underlying-interface** statement:

```
interfaces {  
  demux0 {  
    unit logical-unit-number {  
      demux-options {  
        underlying-interface interface-name;  
      }  
    }  
  }  
}
```

```
}
}
```

You can include these statements at the following hierarchy levels:

- [edit]
- [edit logical-systems *logical-system-name*]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]

Related Documentation

- [Configuring IP Demux Prefixes on page 10](#)
- [Demultiplexing Interface Overview on page 3](#)
- [Configuring an IP Demultiplexing Interface on page 7](#)
- [Configuring an IP Demux Underlying Interface on page 9](#)
- [Configuring a VLAN Demultiplexing Interface on page 11](#)
- [Configuring a VLAN Demux Underlying Interface on page 12](#)

Configuring an IP Demux Underlying Interface

An IP demux interface uses an underlying logical interface to receive packets.



NOTE: IP demux interfaces support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.

To determine which IP demux interface to use, the destination or source prefix is matched against the destination or source address of packets that the underlying interface receives. The underlying interface family type must match the demux interface prefix type.

To configure a logical interface as an IP demux underlying interface, configure the logical demultiplexing destination or source family type. To configure, include the **demux-destination** or **demux-source** statement:

```
interfaces {
  interface-name {
    unit logical-unit-number {
      (demux-destination family | demux-source family);
    }
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit]
- [edit logical-system *logical-system-name*]
- [edit logical-system *logical-system-name* routing-instances *routing-instance-name*]

- Related Documentation**
- [Specifying the Demux Underlying Interface on page 8](#)
 - [Demultiplexing Interface Overview on page 3](#)
 - [Configuring an IP Demultiplexing Interface on page 7](#)
 - [Configuring IP Demux Prefixes on page 10](#)

Configuring IP Demux Prefixes

You configure demux prefixes for use by the underlying interface. The demux prefixes can represent individual hosts or networks. For a given demux interface unit, you can configure either demux source or demux destination prefixes but not both. You can choose not to configure a demux source or demux destination prefix. This type of configuration results in a transmit-only interface.

To configure IP demux prefixes, include the **demux-destination** or **demux-source** statement:

```
interfaces {  
  demux0 {  
    unit logical-unit-number {  
      family family;  
      demux-destination {  
        destination-prefix;  
      }  
    }  
    family family;  
    demux-source {  
      source-prefix;  
    }  
  }  
}
```

You can include these statements at the following hierarchy levels:

- **[edit]**
- **[edit logical-systems *logical-system-name*]**
- **[edit logical-systems *logical-system-name* routing-instances *routing-instance-name*]**

- Related Documentation**
- [Demultiplexing Interface Overview on page 3](#)
 - [Configuring an IP Demultiplexing Interface on page 7](#)
 - [Configuring an IP Demux Underlying Interface on page 9](#)
 - [Specifying the Demux Underlying Interface on page 8](#)

Configuring MAC Address Validation on Static Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

MAC address validation is supported on static demux interfaces on MX Series routers only.

There are two types of MAC address validation that you can configure:

- Loose—Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not support the MAC address of the tuple

Continues to forward packets when the source address of the incoming packet does not match any of the trusted IP addresses.

- Strict—Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.

To configure MAC address validation on static Ethernet interfaces, include the **mac-validate (loose | strict)** statement at the **[edit interfaces demux0 unit logical-unit-number family family]** hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
mac-validate (loose | strict);
```

Configuring a VLAN Demultiplexing Interface

To configure a VLAN demux interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
demux0 {
  unit logical-unit-number {
    vlan-id number;
    demux-options {
      underlying-interface interface-name;
    }
    family family {
      demux-destination {
        destination-prefix;
      }
      demux-destination {
        source-prefix;
      }
    }
    mac-validate (loose | strict)
    unnumbered-address interface-name <preferred-source-address address>;
  }
}
```

```

    }
  }
}

```

Keep the following guidelines in mind when configuring the demux interface:

- Demux interfaces are supported on M120, M320, or MX Series routers only.
- You can configure only one **demux0** interface per chassis.
- You must associate VLAN demux interfaces with an underlying physical interface.



NOTE: VLAN demux interfaces currently support Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.
- VLAN demux interfaces support the Internet Protocol version 4 (IPv4) suite **inet** and Internet Protocol version 6 (IPv6) **inet6** family types.
- If the address in a received packet does not match any demux VLAN ID, the packet is logically received on the underlying interface. For this reason, the underlying interface is often referred to as the “primary” interface.

Configuring a VLAN Demux Underlying Interface

A VLAN demux interface uses an underlying logical interface to receive packets.



NOTE: VLAN demux interfaces support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.

VLAN demux subscriber interfaces over aggregated Ethernet physical interfaces are supported only for MX Series routers that have only Trio MPCs installed. If the router has other cards in addition to Trio MPCs, the CLI accepts the configuration but errors are reported when the subscriber interfaces are brought up.

To determine which VLAN demux interface to use, the VLAN ID is matched against that which the underlying interface receives.

To configure a logical interface as an VLAN demux underlying interface, include the **underlying-interface** statement at the **[edit interfaces demux0 unit logical-unit-number demux-options]** hierarchy level and the **vlan-id** statement at the **[edit interfaces demux0 unit logical-unit-number]** hierarchy level:

```

interfaces {
  demux0 {
    unit logical-unit-number {
      vlan-id number;
    }
  }
}

```



```

    demux-options {
        underlying-interface interface-name;
    }
    family family {
        address address;
    }
}
}
}

```

You can include these statements at the following hierarchy levels:

- [edit]
- [edit logical-system *logical-system-name*]
- [edit logical-system *logical-system-name* routing-instances *routing-instance-name*]

Example: Configuring a Demux Interface

Configure two VLANs, each with two IP demux interfaces. One VLAN demultiplexes based on the source address; the other VLAN demultiplexes based on the destination address.



NOTE: This example is not intended to depict any realistic deployment; it is intended to demonstrate many possible CLI variations.

```

[edit]
interfaces {
    fe-0/0/0 {
        vlan-tagging;
        unit 100 {
            vlan-id 100;
            demux-source inet; # Enable demux of inet prefixes
            family inet {
                address 10.1.1.1/24;
                filter {
                    input vlan1-primary-in-filter;
                    output vlan1-primary-out-filter;
                }
                mac-validate loose;
            }
        }
    }
    unit 200 {
        vlan-id 200;
        demux-destination inet; # Enable demux of inet using destination addresses
        family inet {
            address 20.1.1.1/24;
        }
    }
    unit 300 {
        vlan-id 300;
        demux-source inet; # Enable demux of inet using source addresses
    }
}

```

```
        family inet {
            address 20.1.2.1/24;
        }
    }
}
demux0 {
    unit 101 {
        description vlan1-sub1;
        demux-options {
            underlying-interface fe-0/0/0.100;
        }
        family inet {
            demux-source 10.1.1.0/24;
            filter {
                input vlan1-sub1-in-filter;
                output vlan1-sub1-out-filter;
            }
            mac-validate loose;
        }
    }
    unit 102 {
        description vlan1-sub2;
        demux-options {
            underlying-interface fe-0/0/0.100;
        }
        family inet {
            demux-source {
                10.1.0.0/16;
                10.2.1.0/24;
            }
            filter {
                input vlan1-sub2-in-filter;
                output vlan1-sub2-out-filter;
            }
            mac-validate loose;
        }
    }
    unit 202 {
        description vlan2-sub2;
        demux-options {
            underlying-interface fe-0/0/0.200;
        }
        family inet {
            demux-destination 100.1.2.0/24;
        }
    }
    unit 302 {
        description vlan2-sub2;
        demux-options {
            underlying-interface fe-0/0/0.300;
        }
        family inet {
            demux-source 100.1.2.0/24;
        }
    }
}
```

}

Related Documentation • [Demultiplexing Interface Overview on page 3](#)

CHAPTER 3

Network Interfaces Configuration Statements and Hierarchy

- [\[edit interfaces\] Hierarchy Level on page 17](#)
- [\[edit logical-systems\] Hierarchy Level on page 33](#)

[\[edit interfaces\] Hierarchy Level](#)

The statements at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level can also be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.



NOTE: The *accounting-profile* statement is an exception to this rule. The *accounting-profile* statement can be configured at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level, but it cannot be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
          (revertive | non-revertive);
          periodic interval;
          system-priority priority;
        }
      }
      link-protection;
      link-speed speed;
    }
  }
}
```

```

(loopback | no-loopback);
mc-ae{
  chassis-id chassis-id;
  mc-ae-id mc-ae-id;
  mode (active-active | active-standby);
  redundancy-group group-id;
  status-control (active | standby);
}
minimum-links number;
source-address-filter {
  mac-address;
}
(source-filtering | no-source-filtering);
}
shared-scheduler;
aggregated-sonet-options {
  link-speed speed | mixed;
  minimum-links number;
}
atm-options {
  cell-bundle-size cells;
  ilmi;
  linear-red-profiles profile-name {
    high-plp-max-threshold percent;
    low-plp-max-threshold percent;
    queue-depth cells high-plp-threshold percent low-plp-threshold percent;
  }
}
mpls {
  pop-all-labels {
    required-depth number;
  }
}
pic-type (atm1 | atm2);
plp-to-clp;
promiscuous-mode {
  vpi vpi-identifier;
}
scheduler-maps map-name {
  forwarding-class class-name {
    epd-threshold cells plp1 cells;
    linear-red-profile profile-name;
    priority (high | low);
    transmit-weight (cells number | percent number);
  }
  vc-cos-mode (alternate | strict);
}
use-null-cw;
vpi vpi-identifier {
  maximum-vcs maximum-vcs;
  oam-liveness {
    down-count cells;
    up-count cells;
  }
  oam-period (seconds | disable);
  shaping {

```

```

        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
         burst length);
        queue-length number;
    }
}
clocking clock-source;
damping {
    enable;
    half-life seconds;
    max-suppress seconds;
    reuse number;
    suppress number;
}
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;

```

```
alias alias-name;
dialer-options {
    pool pool-name <priority priority>;
}
disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
}
```



```

    }
  }
  source-address-filter {
    mac-address;
  }
  (source-filtering | no-source-filtering);
}
flexible-vlan-tagging;
gigether-options {
  802.3ad aex;
  (asynchronous-notification | no-asynchronous-notification);
  (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
    local-interface-offline>;
  auto-reconnect seconds;
  (flow-control | no-flow-control);
  ignore-l3-incompletes;
  (loopback | no-loopback);
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  no-auto-mdix;
  source-address-filter {
    mac-address;
  }
  (source-filtering | no-source-filtering);
  ethernet-switch-profile {
    (mac-learn-enable | no-mac-learn-enable);
    tag-protocol-id [ tpids ];
    ethernet-policer-profile {
      input-priority-map {
        ieee802.1p premium [ values ];
      }
      output-priority-map {
        classifier {
          premium {
            forwarding-class class-name {
              loss-priority (high | low);
            }
          }
        }
      }
    }
  }
  policer cos-policer-name {
    aggregate {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
    premium {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
  }
}
}
}
}

```

```
(gratuitous-arp-reply | no-gratuitous-arp-reply);
hold-time up milliseconds down milliseconds;
ima-group-options {
    differential-delay number;
    frame-length (32 | 64 | 128 | 256);
    frame-synchronization {
        alpha number;
        beta number;
        gamma number;
    }
    minimum-links number;
    symmetry (symmetrical-config-and-operation |
        symmetrical-config-asymmetrical-operation);
    test-procedure {
        ima-test-start;
        ima-test-stop;
        interface name;
        pattern number;
        period number;
    }
    transmit-clock (common | independent);
    version (1.0 | 1.1);
}
ima-link-options group-id group-id;
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit unit-number | vlan-tags-outer vlan-tag);
    }
    interface interface-name {
        (unit unit-number);
    }
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
```

```

no-termination-request;
[ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    drop-timeout milliseconds;
    fragment-threshold bytes;
    cisco-interoperability send-lip-remove-link-for-link-reject;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multi-chassis-protection {
    peer a.b.c.d {
        interface interface-name;
    }
}
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
no-vpivci-swapping;
otn-options {
    fec (efec | gfec | none);
    (laser-enable | no-laser-enable);
    (line-loopback | no-line-loopback);
    pass-thru;
    rate (fixed-stuff-bytes | no-fixed-stuff-bytes | pass-thru);
    transmit-payload-type number;
    trigger (oc-lof | oc-lom | oc-los | oc-wavelength-lock | odu-ais | odu-bbe-th | odu-bdi
        | odu-es-th | odu-lck | odu-oci | odu-sd | odu-ses-th | odu-ttim | odu-uas-th |
        opu-ptm | otu-ais | otu-bbe-th | otu-bdi | otu-es-th | otu-fec-deg | otu-fec-exe |
        otu-iae | otu-sd | otu-ses-th | otu-ttim | otu-uas-th);
}

```

```
tti;
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        compression;
    }
}
psn-vcip psn-vci-identifier;
psn-vpip psn-vpi-identifier;
receive-bucket {
    overflow (discard | tag);
    rate percentage;
    threshold bytes;
}
redundancy-options {
    priority sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
    hot-standby;
}
satop-options {
    payload-size n;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
```

```

dcd-polarity (negative | positive);
dce-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
}
dsr-polarity (negative | positive);
dte-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
}
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
    session-limit {
        maximum number;
        rate new-sessions-per-second;
    }
    syslog {
        host hostname {
            facility-override facility-name;
            log-prefix prefix-number;
            services priority-level;
        }
    }
}
shdsl-options {
    annex (annex-a | annex-b);
    line-rate line-rate;
    loopback (local | remote);
    snr-margin {
        current margin;
        snext margin;
    }
}

```

```

    }
  }
  sonet-options {
    aggregate asx;
    aps {
      advertise-interval milliseconds;
      annex-b;
      authentication-key key;
      fast-aps-switch;
      force;
      hold-time milliseconds;
      lockout;
      neighbor address;
      paired-group group-name;
      preserve-interface;
      protect-circuit group-name;
      request;
      revert-time seconds;
      switching-mode (bidirectional | unidirectional);
      working-circuit group-name;
    }
    bytes {
      c2 value;
      e1-quiet value;
      f1 value;
      f2 value;
      s1 value;
      z3 value;
      z4 value;
    }
    fcs (16 | 32);
    loopback (local | remote);
    mpls {
      pop-all-labels {
        required-depth number;
      }
    }
    path-trace trace-string;
    (payload-scrambler | no-payload-scrambler);
    rfc-2615;
    trigger {
      defect ignore;
      hold-time up milliseconds down milliseconds;
    }
    vtmapping (itu-t | klm);
    (z0-increment | no-z0-increment);
  }
  speed (10m | 100m | 1g | oc3 | oc12 | oc48);
  stacked-vlan-tagging;
  switch-options {
    switch-port port-number {
      (auto-negotiation | no-auto-negotiation);
      speed (10m | 100m | 1g);
      link-mode (full-duplex | half-duplex);
    }
  }
}

```

```

t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
        value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
}
traceoptions {
    flag flag <flag-modifier> <disable>;
}
transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
    accept-source-mac {
        mac-address mac-address {
            policer {
                input cos-policer-name;
                output cos-policer-name;
            }
        }
    }
}

```

```

    }
  }
  accounting-profile name;
  advisory-options {
    downstream-rate rate;
    upstream-rate rate;
  }
  allow-any-vci;
  atm-scheduler-map (map-name | default);
  backup-options {
    interface interface-name;
  }
  bandwidth rate;
  cell-bundle-size cells;
  clear-dont-fragment-bit;
  compression {
    rtp {
      f-max-period number;
      maximum-contexts number <force>;
      queues [ queue-numbers ];
      port {
        minimum port-number;
        maximum port-number;
      }
    }
  }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
  underlying-interface interface-name;
}
description text;
alias alias-name;
interface {
  l2tp-interface-id name;
  (dedicated | shared);
}
dialer-options {
  activation-delay seconds;
  callback;
  callback-wait-period time;
  deactivation-delay seconds;
  dial-string [ dial-string-numbers ];
  idle-timeout seconds;
  incoming-map {
    caller (caller-id | accept-all);
    initial-route-check seconds;
    load-interval seconds;
    load-threshold percent;
    pool pool-name;
    redial-delay time;
    watch-list {
      [ routes ];
    }
  }
}

```



```

    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    down-count cells;
    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
    }
}

```

```

    local-name name;
    passive;
}
compression {
    acfc;
    pfc;
    pap;
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
}
dynamic-profile profile-name;
lcp-max-conf-req number;
lcp-restart-timer milliseconds;
loopback-clear-timer seconds;
ncp-max-conf-req number;
ncp-restart-timer milliseconds;
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id];
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];

```

```

family family {
  accounting {
    destination-class-usage;
    source-class-usage {
      direction;
    }
  }
  access-concentrator name;
  address address {
    destination address;
  }
  bundle ml-fpc/pic/port | ls-fpc/pic/port);
  direct-connect;
  duplicate-protection;
  dynamic-profile profile-name;
  filter {
    group filter-group-number;
    input filter-name;
    input-list {
      [ filter-names ];
      output filter-name;
    }
    output-list {
      [ filter-names ];
    }
  }
  ipsec-sa sa-name;
  keep-address-and-control;
  max-sessions number;
  max-sessions-vsa-ignore;
  mtu bytes;
  multicast-only;
  negotiate-address;
  no-redirects;
  policer {
    arp policer-template-name;
    disable-arp-policer
    input policer-template-name;
    output policer-template-name;
  }
  primary;
  proxy inet-address address;
  receive-options-packets;
  receive-ttl-exceeded;
  remote (inet-address address | mac-address address);
  rpf-check {
    fail-filter filter-name;
    mode loose;
  }
  sampling {
    direction;
  }
  service {
    input {
      service-set service-set-name <service-filter filter-name>;
      post-service-filter filter-name;
    }
  }
}

```

```

    }
    output {
        service-set service-set-names <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
    profile-name | preferred-source-address address>;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
        hold-time seconds;
    }
}
priority-number number;
track {
    priority-cost seconds;
    priority-hold-time interface-name {
        bandwidth-threshold bits-per-second {
            priority;

```

```

    }
    interface priority;
  }
  route ip-address/mask routing-instance instance-name priority-cost cost;
}
virtual-address [ addresses ];
}
}
}
}
}
}
}
}

```

Related Documentation

- *Junos OS Hierarchy and RFC Reference*
- *Ethernet Interfaces*
- *Junos OS Network Interfaces Library for Routing Devices*

[edit logical-systems] Hierarchy Level

The following lists the statements that can be configured at the **[edit logical-systems]** hierarchy level that are also documented in this manual. For more information about logical systems, see the *Logical Systems Feature Guide for Routing Devices*.

```

logical-systems logical-system-name {
  interfaces interface-name {
    unit logical-unit-number {
      accept-source-mac {
        mac-address mac-address {
          policer {
            input cos-policer-name;
            output cos-policer-name;
          }
        }
      }
    }
  }
  allow-any-vci;
  atm-scheduler-map (map-name | default);
  bandwidth rate;
  backup-options {
    interface interface-name;
  }
  cell-bundle-size cells;
  clear-dont-fragment-bit;
  compression {
    rtp {
      f-max-period number;
      port {
        minimum port-number;
        maximum port-number;
      }
      queues [ queue-numbers ];
    }
  }
  compression-device interface-name;
}

```

```
description text;  
interface {  
    l2tp-interface-id name;  
    (dedicated | shared);  
}  
dialer-options {  
    activation-delay seconds;  
    deactivation-delay seconds;  
    dial-string [ dial-string-numbers ];  
    idle-timeout seconds;  
    initial-route-check seconds;  
    load-threshold number;  
    pool pool;  
    remote-name remote-callers;  
    watch-list {  
        [ routes ];  
    }  
}  
disable;  
dlci dlci-identifier;  
drop-timeout milliseconds;  
dynamic-call-admission-control {  
    activation-priority priority;  
    bearer-bandwidth-limit kilobits-per-second;  
}  
encapsulation type;  
epd-threshold cells plp1 cells;  
fragment-threshold bytes;  
input-vlan-map {  
    inner-tag-protocol-id;  
    inner-vlan-id;  
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);  
    tag-protocol-id tpid;  
    vlan-id number;  
}  
interleave-fragments;  
inverse-arp;  
layer2-policer {  
    input-policer policer-name;  
    input-three-color policer-name;  
    output-policer policer-name;  
    output-three-color policer-name;  
}  
link-layer-overhead percent;  
minimum-links number;  
mrru bytes;  
multicast-dlci dlci-identifier;  
multicast-vci vpi-identifier.vci-identifier;  
multilink-max-classes number;  
multipoint;  
oam-liveness {  
    up-count cells;  
    down-count cells;  
}  
oam-period (seconds | disable);  
output-vlan-map {
```

```

    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
}
dynamic-profile profile-name;
pap {
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
}
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id]
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;

```

```

vlan-tags outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id]
vpi vpi-identifier;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
bundle interface-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names];
    }
    output filter-name;
    output-list {
        [filter-names];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name> {
    <mode loose>;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile
    profile-name;
address address {

```



```

    arp ip-address ( mac | multicast-mac ) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address ( dlci dlci-identifier | vci vci-identifier );
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period ( seconds | disable );
        shaping {
            ( cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst length );
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    ( vrp-group | vrp-inet6-group ) group-number {
        ( accept-data | no-accept-data );
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        ( preempt | no-preempt ) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                interface priority;
                bandwidth-threshold bits-per-second {
                    priority;
                }
            }
        }
        route ip-address/mask routing-instance instance-name priority-cost cost;
    }
}
virtual-address [ addresses ];
}
}
}
}
}
}
}

```

Related Documentation

- [Junos OS Hierarchy and RFC Reference](#)
- [Ethernet Interfaces](#)
- [Junos OS Network Interfaces Library for Routing Devices](#)

CHAPTER 4

Statement Summary

- [demux0 \(Static Interface\) on page 40](#)
- [demux-destination \(Demux Interface\) on page 41](#)
- [demux-destination \(Underlying Interface\) on page 42](#)
- [demux-options \(Static Interface\) on page 42](#)
- [demux-source \(Demux Interface\) on page 43](#)
- [demux-source \(Underlying Interface\) on page 44](#)
- [family on page 45](#)
- [fast-aps-switch on page 49](#)
- [mac-validate on page 50](#)
- [preferred-source-address on page 51](#)
- [underlying-interface on page 52](#)
- [unit on page 53](#)

demux0 (Static Interface)

Syntax	<pre>demux0 { unit <i>logical-unit-number</i> { demux-options { underlying-interface <i>interface-name</i> } family <i>family</i> { access-concentrator <i>name</i>; { destination-prefix; } direct-connect; duplicate-protection; dynamic-profile <i>profile-name</i>; { source-prefix; } max-sessions <i>number</i>; service-name-table <i>table-name</i> targeted-distribution; unnumbered-address <i>interface-name</i> <preferred-source-address <i>address</i>>; } vlan-id <i>number</i>; vlan-tags outer [<i>tpid</i>].<i>vlan-id</i> [inner [<i>tpid</i>].<i>vlan-id</i>]; } }</pre>
Hierarchy Level	[edit interfaces], [edit logical-systems <i>logical-system-name</i> interfaces]
Release Information	Statement introduced in Junos OS Release 9.0.
Description	<p>Configure the logical demultiplexing (demux) interface.</p> <p>Logical IP demux interfaces do not support IPv4 and IPv6 dual stack.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying the Demux Underlying Interface on page 8• Configuring IP Demux Prefixes on page 10

demux-destination (Demux Interface)

Syntax	<code>demux-destination { <code>destination-prefix</code>; }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure one or more logical demultiplexing (demux) destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring IP Demux Prefixes on page 10

demux-destination (Underlying Interface)

Syntax	demux-destination <i>family</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure the logical demultiplexing (demux) destination family type on the IP demux underlying interface.



NOTE: The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring an IP Demux Underlying Interface on page 9


demux-options (Static Interface)

Syntax	demux-options { <i>underlying-interface interface-name</i> }
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.0.
Description	Configure logical demultiplexing (demux) interface options. The statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying the Demux Underlying Interface on page 8

demux-source (Demux Interface)

Syntax	<code>demux-source { source-prefix; }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure one or more logical demultiplexing (demux) source prefixes. The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring IP Demux Prefixes on page 10

demux-source (Underlying Interface)

Syntax	demux-source <i>family</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure the logical demultiplexing (demux) source family type on the IP demux underlying interface.
<div> NOTE: The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.</div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring an IP Demux Underlying Interface on page 9

family

```

Syntax  family family {
        accounting {
            destination-class-usage;
            source-class-usage {
                (input | output | input output);
            }
        }
        access-concentrator name;
        address address {
            ... the address subhierarchy appears after the main [edit interfaces interface-name unit
                logical-unit-number family family-name] hierarchy ...
        }
        bundle interface-name;
        core-facing;
        demux-destination {
            destination-prefix;
        }
        demux-source {
            source-prefix;
        }
        direct-connect;
        duplicate-protection;
        dynamic-profile profile-name;
        filter {
            group filter-group-number;
            input filter-name;
            input-list [ filter-names ];
            output filter-name;
            output-list [ filter-names ];
        }
        interface-mode (access | trunk);
        ipsec-sa sa-name;
        keep-address-and-control;
        mac-validate (loose | strict);
        max-sessions number;
        max-sessions-vsa-ignore;
        mtu bytes;
        multicast-only;
        negotiate-address;
        no-redirects;
        policer {
            arp policer-template-name;
            input policer-template-name;
            output policer-template-name;
        }
        primary;
        protocols [inet iso mpls];
        proxy inet-address address;
        receive-options-packets;
        receive-ttl-exceeded;
        remote (inet-address address | mac-address address);
        rpf-check {

```

```

fail-filter filter-name
mode loose;
}
sampling {
input;
output;
}
service {
input {
post-service-filter filter-name;
service-set service-set-name <service-filter filter-name>;
}
output {
service-set service-set-name <service-filter filter-name>;
}
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
maximum-seconds>;
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
arp ip-address (mac | multicast-mac) mac-address <publish>;
broadcast address;
destination address;
destination-profile name;
eui-64;
master-only;
multipoint-destination address dlci dlci-identifier;
multipoint-destination address {
epd-threshold cells;
inverse-arp;
oam-liveness {
up-count cells;
down-count cells;
}
oam-period (disable | seconds);
shaping {
(cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
sustained rate);
queue-length number;
}
vci vpi-identifier.vci-identifier;
}
preferred;
primary;
vrrp-group group-id {
(accept-data | no-accept-data);
advertise-interval seconds;
authentication-key key;
authentication-type authentication;
fast-interval milliseconds;

```

```

    (preempt | no-preempt) {
        hold-time seconds;
    }
    priority number;
    track {
        interface interface-name {
            bandwidth-threshold bits-per-second priority-cost priority;
            priority-cost priority;
        }
        priority-hold-time seconds;
        route prefix routing-instance instance-name priority-cost priority;
    }
    }
    virtual-address [ addresses ];
    }
    virtual-link-local-address ipv6-address;
    }
}

```

Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Option max-sessions-vs-a-ignore introduced in Junos OS Release 11.4.
Description	Configure protocol family information for the logical interface.



NOTE: Not all subordinate stanzas are available to every protocol family.

Options *family*—Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering



NOTE: This option is not supported on T4000 Type 5 FPCs.

- **bridge**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ethernet-switching**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite
- **inet**—Internet Protocol version 4 suite
- **inet6**—Internet Protocol version 6 suite
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16
- **multilink-ppp**—Multilink Point-to-Point Protocol
- **mpls**—Multiprotocol Label Switching (MPLS)
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite
- **tnp**—Trivial Network Protocol
- **vpls**—(M Series and T Series routers only) Virtual private LAN service

The remaining statements are explained separately.

Required Privilege Level **interface**—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • *Configuring the Protocol Family*
 • *Junos OS Services Interfaces Library for Routing Devices*

fast-aps-switch

Syntax	fast-aps-switch;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only and EX Series switches) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.



NOTE:

- Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.
- When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.
- To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.
- The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.
- The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Reducing APS Switchover Time in Layer 2 Circuits</i>


mac-validate

Syntax	mac-validate (loose strict);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Enable IP and MAC address validation for static Ethernet and IP demux interfaces. Supported on MX Series routers only.
Options	<p>loose—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not match the MAC address of the tuple. Continues to forward incoming packets when the source address of the incoming packet does not match any of the trusted IP addresses.</p> <p>strict—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>MAC Address Validation on Static Ethernet Interfaces Overview</i>• Configuring MAC Address Validation on Static Demux Interfaces on page 11

preferred-source-address

Syntax	<code>preferred-source-address address;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> unnumbered-address <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> unnumbered-address <i>interface-name</i>]</p>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	<p>For unnumbered Ethernet interfaces configured with a loopback interface as the donor interface, specify one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network.</p> <p>Configuration of a preferred source address for unnumbered Ethernet interfaces is supported for the IPv4 and IPv6 address families.</p>
Options	address —Secondary IP address of the donor loopback interface.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces</i> • <i>address</i> • <i>Junos OS Administration Library for Routing Devices</i>

underlying-interface

Syntax	<code>underlying-interface <i>interface-name</i>;</code>
Hierarchy Level	<p>[edit interfaces pp0 unit <i>logical-unit-number</i> pppoe-options], [edit interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> interfaces pp0 unit <i>logical-unit-number</i> pppoe-options], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces pp0 unit <i>logical-unit-number</i> pppoe-options]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4. Support for aggregated Ethernet added in Junos OS Release 9.4.</p>
Description	<p>For J Series Services Routers, M120 and M320 Multiservice Edge routers, and MX Series Universal Edge Routers with PPP over Ethernet interfaces, configure the interface on which PPP over Ethernet is running.</p> <p>For demux interfaces, configure the underlying interface on which the demultiplexing (demux) interface is running.</p>
Options	<p><i>interface-name</i>—Name of the interface on which PPP over Ethernet or demux is running. For example, at-0/0/1.0 (ATM VC), fe-1/0/1.0 (Fast Ethernet interface), ge-2/0/0.0 (Gigabit Ethernet interface), ae1.0 (for IP demux on an aggregated Ethernet interface), or ae1 (for VLAN demux on an aggregated Ethernet interface).</p>
<div style="display: flex; align-items: center;">  <div> <p>NOTE: Demux interfaces are currently supported on Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet interfaces, or aggregated Ethernet devices.</p> </div> </div>	
Required Privilege Level	<p>interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring an IP Demux Underlying Interface on page 9 • Configuring a VLAN Demux Underlying Interface on page 12 • Specifying the Demux Underlying Interface on page 8 • Configuring the PPPoE Underlying Interface • Junos OS Interfaces and Routing Configuration Guide

unit

```

Syntax  unit logical-unit-number {
        accept-source-mac {
            mac-address mac-address {
                policer {
                    input cos-policer-name;
                    output cos-policer-name;
                }
            }
        }
        accounting-profile name;
        advisory-options {
            downstream-rate rate;
            upstream-rate rate;
        }
        allow-any-vci;
        atm-scheduler-map (map-name | default);
        backup-options {
            interface interface-name;
        }
        bandwidth rate;
        cell-bundle-size cells;
        clear-dont-fragment-bit;
        compression {
            rtp {
                maximum-contexts number <force>;
                f-max-period number;
                queues [queue-numbers];
                port {
                    minimum port-number;
                    maximum port-number;
                }
            }
        }
        compression-device interface-name;
        copy-tos-to-outer-ip-header;
        demux-destination family;
        demux-source family;
        demux-options {
            underlying-interface interface-name;
        }
        description text;
        interface {
            l2tp-interface-id name;
            (dedicated | shared);
        }
        dialer-options {
            activation-delay seconds;
            callback;
            callback-wait-period time;
            deactivation-delay seconds;
            dial-string [dial-string-numbers];
            idle-timeout seconds;

```

```

incoming-map {
    caller caller-id | accept-all;
    initial-route-check seconds;
    load-interval seconds;
    load-threshold percent;
    pool pool-name;
    redial-delay time;
    watch-list {
        [routes];
    }
}
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
family family-name {
    ... the family subhierarchy appears after the main [edit interfaces interface-name unit
        logical-unit-number] hierarchy ...
}
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (disable | seconds);

```

```

output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-restart-timer milliseconds;
    pap {
        access-profile name;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
pppoe-underlying-options {
    access-concentrator name;
    direct-connect;
    dynamic-profile profile-name;
    max-sessions number;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
    length);
    queue-length number;
}
short-sequence;

```

```

targeted-distribution;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            (input | output | input output);
        }
    }
}
access-concentrator name;
address address {
    ... the address subhierarchy appears after the main [edit interfaces interface-name unit
    logical-unit-number family family-name] hierarchy ...
}
bundle interface-name;
core-facing;
demux-destination {
    destination-prefix;
}
demux-source {
    source-prefix;
}
direct-connect;
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list [filter-names];
    output filter-name;
    output-list [filter-names];
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mac-validate (loose | strict);
max-sessions number;

```

```

mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    master-only;
    multipoint-destination address {
        dlci dlci-identifier;
        epd-threshold cells <plp1 cells>;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (disable | seconds);
        shaping {

```

```

        (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
         sustained rate);
        queue-length number;
    }
    vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
        hold-time seconds;
    }
    priority number;
    track {
        interface interface-name {
            bandwidth-threshold bits-per-second priority-cost number;
        }
        priority-hold-time seconds;
        route ip-address/prefix-length routing-instance instance-name priority-cost cost;
    }
    virtual-address [addresses];
    virtual-link-local-address ipv6-address;
    vrrp-inherit-from {
        active-interface interface-name;
        active-group group-number;
    }
}
}
}
}

```

Hierarchy Level [edit interfaces *interface-name*],
[edit logical-systems *logical-system-name* interfaces *interface-name*],
[edit interfaces interface-set *interface-set-name* interface *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.

Range: 0 through 1,073,741,823 for demux and PPPoE static interfaces. 0 through 16,385 for all other static interface types.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Logical Interface Properties*
 - *Junos OS Services Interfaces Library for Routing Devices*

PART 3

Administration

- [Monitoring Commands on page 63](#)

CHAPTER 5

Monitoring Commands

- `show interfaces demux0` (Demux Interfaces)

show interfaces demux0 (Demux Interfaces)

Syntax	<pre>show interfaces demux0.logical-interface-number <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced in Junos OS Release 9.0.
Description	(MX Series and M Series routers only) Display status information about the specified demux interface.
Options	<p>none—Display standard information about the specified demux interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration
List of Sample Output	show interfaces (Demux) on page 70 show interfaces (PPPoE over Aggregated Ethernet) on page 71 show interfaces extensive (Targeted Distribution for Aggregated Ethernet Links) on page 71 show interfaces demux0 (ACI Interface Set Configured) on page 72
Output Fields	Table 3 on page 64 lists the output fields for the show interfaces (demux interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 3: Demux show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	brief detail extensive none
Interface index	Index number of the physical interface, which reflects its initialization sequence.	brief detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Physical link	Status of the physical link (Up or Down).	detail extensive none
Admin	Administrative state of the interface (Up or Down).	terse
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Link	Status of the physical link (Up or Down).	terse
Targeting summary	Status of aggregated Ethernet links that are configured with targeted distribution (primary or backup)	extensive
Bandwidth	Bandwidth allocated to the aggregated Ethernet links that are configured with targeted distribution.	extensive
Proto	Protocol family configured on the interface.	terse
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	brief detail extensive none
Link-level type	Encapsulation being used on the physical interface.	brief detail extensive
MTU	Maximum transmission unit size on the physical interface.	brief detail extensive
Clocking	Reference clock source: Internal (1) or External (2).	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled. <p>NOTE: These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface whose definitions are as follows:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant packet threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious: <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Output Rate	Output rate in bps and pps.	none
Logical Interface		
Logical interface	Name of the logical interface.	brief detail extensive none
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	brief detail extensive none
Encapsulation	Encapsulation on the logical interface.	brief extensive none
ACI VLAN: Dynamic Profile	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying demux interface to create dynamic VLAN subscriber interfaces based on ACI information.	brief detail extensive none
Demux	Specific IP demultiplexing (demux) values: <ul style="list-style-type: none"> • Underlying interface—The underlying interface that the demux interface uses. • Index—Index number of the logical interface. • Family—Protocol family configured on the logical interface. • Source prefixes, total—Total number of source prefixes for the underlying interface. • Destination prefixes, total—Total number of destination prefixes for the underlying interface. • Prefix—inet family prefix. 	detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<i>protocol-family</i>	Protocol family configured on the logical interface.	brief
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. • Input packets, Output packets—Number of packets received and transmitted on the interface set. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled. <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	<p>Number of transit bytes and packets received and transmitted on the local interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
IPv6 Transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input packets	Number of packets received on the interface.	none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output packets	Number of packets transmitted on the interface.	none
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive statistics none
Local	IP address of the logical interface.	detail extensive terse none
Remote	IP address of the remote interface.	terse
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	detail extensive none
Dynamic-profile	Name of the PPPoE dynamic profile assigned to the underlying interface.	detail extensive none
Service Name Table	Name of the PPPoE service name table assigned to the PPPoE underlying interface.	detail extensive none
Max Sessions	Maximum number of dynamic PPPoE logical interfaces that the router can activate on the underlying interface.	detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Duplicate Protection	State of duplicate protection: On or Off . Duplicate protection prevents the activation of another dynamic PPPoE logical interface on the same underlying interface when a dynamic PPPoE logical interface for a client with the same MAC address is already active on that interface.	detail extensive none
Direct Connect	State of the configuration to ignore DSL Forum VSAs: On or Off . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none

Sample Output

show interfaces (Demux)

```

user@host> show interfaces demux0
Physical interface: demux0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 79, Generation: 129
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: 9192, Clocking: 1,
  Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped  : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  IPv6 transit statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0

Logical interface demux0.0 (Index 87) (SNMP ifIndex 84) (Generation 312)
  Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
  Demux:
    Underlying interface: ge-2/0/1.0 (Index 74)
    Family Inet Source prefixes, total 1
    Prefix: 1.1.1/24
    Traffic statistics:
      Input bytes   :                0

```

```

Output bytes :          1554
Input packets:           0
Output packets:         37
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Local statistics:
  Input bytes :          0
  Output bytes :         1554
  Input packets:           0
  Output packets:         37
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:         0          0 pps
  Output packets:        0          0 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Protocol inet, MTU: 1500, Generation: 395, Route table: 0
  Flags: Is-Primary, Mac-Validate-Strict
  Mac-Validate Failures: Packets: 0, Bytes: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 11.1.1/24, Local: 11.1.1.1, Broadcast: 11.1.1.255,
    Generation: 434

```

show interfaces (PPPoE over Aggregated Ethernet)

```

user@host> show interfaces demux0.100
Logical interface demux0.100 (Index 76) (SNMP ifIndex 61160)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ]
  Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 199)
  Link:
    ge-1/0/0
    ge-1/1/0
  Input packets : 0
  Output packets: 0
  Protocol pppoe
    Dynamic Profile: pppoe-profile,
    Service Name Table: service-table1,
    Max Sessions: 100, Duplicate Protection: On,
    Direct Connect: Off,
    AC Name: pppoe-server-1

```

show interfaces extensive (Targeted Distribution for Aggregated Ethernet Links)

```

user@host> show interfaces demux0.1073741824 extensive

Logical interface demux0.1073741824 (Index 75) (SNMP ifIndex 558) (Generation
346)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 201)
  Link:
    ge-1/0/0

```

```
ge-1/1/0
ge-2/0/7
ge-2/0/8
Targeting summary:
ge-1/1/0, primary, Physical link is Up
ge-2/0/8, backup, Physical link is Up
Bandwidth: 1000mbps
```

show interfaces demux0 (ACI Interface Set Configured)

```
user@host> show interfaces demux0.1073741827
Logical interface demux0.1073741827 (Index 346) (SNMP ifIndex 527)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1802 0x8100.302 ] Encapsulation:
ENET2
Demux: Source Family Inet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
Demux:
  Underlying interface: ge-1/0/0 (Index 138)
Input packets : 18
Output packets: 16
Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re, Unnumbered
  Donor interface: lo0.0 (Index 322)
  Preferred source address: 100.20.200.202
  Addresses, Flags: Primary Is-Default Is-Primary
    Local: 10.4.12.119
Protocol pppoe
  Dynamic Profile: aci-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc
```

PART 4

Troubleshooting

- [Interface Diagnostics on page 75](#)

CHAPTER 6

Interface Diagnostics

- [Interface Diagnostics on page 75](#)

Interface Diagnostics

You can use two diagnostic tools to test the physical layer connections of interfaces: loopback testing and bit error rate test (BERT) testing. Loopback testing enables you to verify the connectivity of a circuit. BERT testing enables you to identify poor signal quality on a circuit. This section contains the following topics:

- [Configuring Loopback Testing on page 75](#)
- [Interface Diagnostics on page 77](#)

Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDS0, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own data link layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own data link layer packets, you can assume the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

There are several types of loopback testing supported by the Junos OS, as follows:

- DCE local—Loops packets back on the local DCE.
- DCE remote—Loops packets back on the remote DCE.

- **Local**—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces interface-name** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- **Payload**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- **Remote**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 4 on page 76 shows the loopback modes supported on the various interface types.

Table 4: Loopback Modes by Interface Type

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	<i>Configuring Ethernet Loopback Capability</i>
Circuit Emulation E1	Local and remote	<i>Configuring E1 Loopback Capability</i>
Circuit Emulation T1	Local and remote	<i>Configuring T1 Loopback Capability</i>
E1 and E3	Local and remote	<i>Configuring E1 Loopback Capability and Configuring E3 Loopback Capability</i>
NxDSO	Payload	<i>Configuring Channelized E1 IQ and IQE Interfaces, Configuring T1 and NxDSO Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Channelized STM1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces</i>
Serial (V.35 and X.21)	Local and remote	<i>Configuring Serial Loopback Capability</i>
Serial (EIA-530)	DCE local, DCE remote, local, and remote	<i>Configuring Serial Loopback Capability</i>
SONET/SDH	Local and remote	<i>Configuring SONET/SDH Loopback Capability</i>

Table 4: Loopback Modes by Interface Type (*continued*)

Interface	Loopback Modes	Usage Guidelines
T1 and T3	Local, payload, and remote	<i>Configuring T1 Loopback Capability and Configuring T3 Loopback Capability</i> <i>See also Configuring the T1 Remote Loopback Response</i>

To configure loopback testing, include the **loopback** statement:

loopback mode;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ds0-options]
- [edit interfaces *interface-name* e1-options]
- [edit interfaces *interface-name* e3-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* gigether-options]
- [edit interfaces *interface-name* serial-options]
- [edit interfaces *interface-name* sonet-options]
- [edit interfaces *interface-name* t1-options]
- [edit interfaces *interface-name* t3-options]

Interface Diagnostics

BERT allows you to troubleshoot problems by checking the quality of links. You can configure any of the following interfaces to execute a BERT when the interface receives a request to run this test: E1, E3, T1, T3; the channelized DS3, OC3, OC12, and STM1 interfaces; and the channelized DS3 IQ, E1 IQ, and OC12 IQ interfaces.

A BERT test requires a line loop to be in place on either the transmission devices or the far-end router. The local router generates a known bit pattern and sends it out the transmit path. The received pattern is then verified against the sent pattern. The higher the bit error rate of the received pattern, the worse the noise is on the physical circuit. As you move the position of the line loop increasingly downstream toward the far-end router, you can isolate the troubled portion of the link.

To configure BERT, you must configure the duration of the test, the bit pattern to send on the transmit path, and the error rate to monitor when the inbound pattern is received.

To configure the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream, include the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements, respectively, at the [edit interfaces *interface-name* *interface-type*-options] hierarchy level:

```
[edit interfaces interface-name interface-type-options]
bert-algorithm algorithm;
bert-error-rate rate;
bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

rate is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from 10^{-0} (1 error per bit) to 10^{-7} (1 error per 10 million bits).

algorithm is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]
user@host# set bert-algorithm ?
Possible completions:
pseudo-2e11-o152    Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151    Pattern is 2^15 - 1 (per 0.152 standard)
pseudo-2e20-o151    Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153    Pattern is 2^20 - 1 (per 0.153 standard)
...
```

For specific hierarchy information, see the individual interface types.



NOTE: The 4-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152     Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151     Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151     Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7           Pattern is 2^7 - 1
pseudo-2e9-o153      Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The IQE PICs support only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 - 1 (per 0.151 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is $2^{23} - 1$ (per 0.151 standard)

Table 5 on page 80 shows the BERT capabilities for various interface types.

Table 5: BERT Capabilities by Interface Type

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)		<ul style="list-style-type: none"> Limited algorithms
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)		<ul style="list-style-type: none"> Limited algorithms
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time Limited algorithms
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time
Channelized OC12	N/A	Yes (channel 0–11)	<ul style="list-style-type: none"> Single channel at a time Limited algorithms No bit count
Channelized STM1	Yes (channel 0–62)	N/A	<ul style="list-style-type: none"> Multiple channels Only one algorithm No error insert No bit count
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> Multiple ports and channels Limited algorithms for T1 No error insert for T1 No bit count for T1

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see *Channelized IQ and IQE Interfaces Properties*.

Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name* *interface-type*-bert-start** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you wish to terminate the test sooner, issue the **test interface *interface-name* *interface-type*-bert-stop** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the [CLI Explorer](#).



NOTE: To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

Example: Configuring Bit Error Rate Testing

Configure a BERT test on a T3 interface. In this example, the run duration lasts for 120 seconds. The configured error rate is 0, which corresponds to a bit error rate of 10^{-0} (1 error per bit). The configured bit pattern of **all-ones-repeating** means that every bit the interface sends is a set to a value of 1.

```
[edit interfaces]
t3-1/2/0 {
  t3-options {
    bert algorithm all-ones-repeating;
    bert-error-rate 0;
    bert-period 120;
```

```
}  
}
```

PART 5

Index

- [Index on page 85](#)

Index

Symbols

#, comments in configuration statements.....	x
(), in syntax descriptions.....	x
< >, in syntax descriptions.....	x
[], in configuration statements.....	x
{ }, in configuration statements.....	x
(pipe), in syntax descriptions.....	x

B

BERT	
configuring interface diagnostics.....	77
bert-algorithm statement	
usage guidelines.....	77
bert-error-rate statement	
usage guidelines.....	77
bert-period statement	
usage guidelines.....	77
bit error rate test See BERT	
braces, in configuration statements.....	x
brackets	
angle, in syntax descriptions.....	x
square, in configuration statements.....	x

C

comments, in configuration statements.....	x
conventions	
text and syntax.....	ix
curly braces, in configuration statements.....	x
customer support.....	xi
contacting JTAC.....	xi

D

demux interfaces	
configuring underlying interfaces for.....	9, 12
demux-destination statement.....	42
demux interfaces.....	41
demux-options statement.....	42
demux-source statement.....	44
demux interfaces.....	43
demux0 statement.....	40

documentation	
comments on.....	xi

E

Ethernet interfaces	
unnumbered	
preferred source address.....	51

F

family statement.....	45
family type	
specifying for underlying interfaces.....	10
fast-aps-switch statement.....	49
font conventions.....	ix

G

Gigabit Ethernet interfaces	
demultiplexing interface information,	
displaying.....	64

I

interfaces	
configuration statements.....	17
demux underlying.....	9, 12

L

logical systems	
configuration statements.....	33
loopback testing.....	75

M

mac-validate statement.....	50
manuals	
comments on.....	xi

P

parentheses, in syntax descriptions.....	x
preferred-source-address statement.....	51

S

show interfaces demux0 (Demux Interfaces)	
command.....	64
support, technical See technical support	
syntax conventions.....	ix

T

technical support	
contacting JTAC.....	xi

U

underlying interfaces	
specifying family type for.....	10
underlying-interface statement.....	52
unit statement.....	53
unnumbered interfaces	
Ethernet	
preferred source address.....	51