



Junos[®] OS

Physical Interfaces

Release

14.1



Published: 2014-05-15

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS Physical Interfaces

14.1

Copyright © 2014, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xvii
	Documentation and Release Notes	xvii
	Supported Platforms	xvii
	Using the Examples in This Manual	xviii
	Merging a Full Example	xviii
	Merging a Snippet	xix
	Documentation Conventions	xix
	Documentation Feedback	xxi
	Requesting Technical Support	xxii
	Self-Help Online Tools and Resources	xxii
	Opening a Case with JTAC	xxii
Part 1	Overview	
Chapter 1	Physical Interfaces	3
	Physical Part of an Interface Name	3
	Interface Names for ACX Series Universal Access Routers	3
	J Series Interface Names	3
	Interface Names for M Series and T Series Routers	4
	MX Series Router Interface Names	4
	Interface Names for PTX Series Routers	5
	Physical Interface Configuration Statements Overview	5
	Clock Source Overview	15
	Receive and Transmit Leaky Bucket Properties Overview	16
	Understanding Unidirectional Traffic Flow on Physical Interfaces	17
	Interface Alias Names Overview	18
	Physical Interface Damping Overview	19
	Damping Overview for Shorter Physical Interface Transitions	19
	Damping Overview for Longer Physical Interface Transitions	20
Part 2	Configuration	
Chapter 2	Physical Interfaces	27
	Physical Interfaces Properties Statements List	28
	Interface Ranges	44
	Configuring Interface Ranges	44
	Expanding Interface Range Member and Member Range Statements	48
	Configuration Inheritance for Member Interfaces	49
	Member Interfaces Inheriting Configuration from Configuration Groups	50
	Interfaces Inheriting Common Configuration	51
	Configuring Inheritance Range Priorities	51

Configuration Expansion Where Interface Range Is Used	52
Specifying an Aggregated Interface	53
Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode	54
Configuring Interface Description	55
Configuring the Link Characteristics	56
Configuring the Media MTU	57
Media MTU Overview	57
How to Configure the Media MTU	58
Encapsulation Overhead by Encapsulation Type	59
Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	60
Media MTU Sizes by Interface Type for M40e Routers	61
Media MTU Sizes by Interface Type for M160 Routers	62
Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	62
Media MTU Sizes by Interface Type for MX Series Routers	63
Media MTU Sizes by Interface Type for T320 Routers	64
Media MTU Sizes by Interface Type for T640 Platforms	64
Media MTU Sizes by Interface Type for J2300 Platforms	65
Media MTU Sizes by Interface Type for J4300 and J6300 Platforms	65
Media MTU Sizes by Interface Type for J4350 and J6350 Platforms	66
Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	68
Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	68
Configuring Interface Encapsulation on Physical Interfaces	68
Configuring the Encapsulation on a Physical Interface	69
Encapsulation Capabilities	72
Example: Configuring the Encapsulation on a Physical Interface	73
Configuring Interface Encapsulation on PTX Series Packet Transport Routers	74
Configuring the PPP Challenge Handshake Authentication Protocol	75
Assigning an Access Profile to an Interface	76
Configuring a Default CHAP Secret	76
Configuring the Local Name	77
Configuring Passive Mode	77
Example: Configuring the PPP Challenge Handshake Authentication Protocol	77
Configuring the PPP Password Authentication Protocol	78
Configuring the Local Name	80
Configuring the Local Password	80
Configuring Passive Mode	80
Example: Configuring PAP Authentication Protocol	80
Monitoring a PPP Session	82
Tracing Operations of the pppd Process	82
Configuring PPP Address and Control Field Compression	84
Configuring the PPP Protocol Field Compression	86

	Configuring the Interface Speed	87
	Configuring the Speed of Management Ethernet Interfaces on M Series and T Series Routers	87
	Configuring the Speed of Gigabit Ethernet Interfaces on J Series Routers . . .	88
	Configuring the Speed of Fast Ethernet Interfaces	88
	Configuring the Speed of Tri-Rate Ethernet Copper Interfaces	89
	Configuring the Speed of SONET/SDH Interfaces	89
	Configuring Keepalives	91
	Configuring the Clock Source	93
	Configuring the Router as a DCE with Frame Relay Encapsulation	95
	Configuring Receive and Transmit Leaky Bucket Properties	95
	Configuring Accounting for the Physical Interface	96
	Applying an Accounting Profile to the Physical Interface	97
	Example: Applying an Accounting Profile to the Physical Interface	97
	Configuring Multiservice Physical Interface Properties	97
	Damping Shorter Physical Interface Transitions	98
	Damping Longer Physical Interface Transitions	99
	Example: Configuring Interface Damping	100
	Enabling or Disabling SNMP Notifications on Physical Interfaces	103
	Enabling Unidirectional Traffic Flow on Physical Interfaces	103
	Disabling a Physical Interface	104
	Example: Disabling a Physical Interface	105
	Example: Adding an Interface Alias Name	106
Chapter 3	Network Interfaces Configuration Statements and Hierarchy	111
	[edit interfaces] Hierarchy Level	111
	[edit logical-systems] Hierarchy Level	127
	[edit protocols ppp] Hierarchy Level	132
	[edit protocols pppoe] Hierarchy Level	132
Chapter 4	Statement Summary	135
	802.3ad	143
	access-profile	144
	accounting-profile	145
	acfc	145
	acknowledge-retries	146
	acknowledge-timer	147
	action-red-differential-delay	147
	advertise-interval	148
	aggregated-ether-options	149
	aggregate-ports	150
	aggregated-sonet-options	150
	aggregate (Gigabit Ethernet CoS Policer)	151
	aggregate (SONET/SDH)	151
	alarm (optics-options)	152
	alias (Interfaces)	152
	annex	153
	aps	154
	asynchronous-notification	155
	atm-encapsulation	155

atm-options	156
authentication-key	157
auto-negotiation	158
auto-reconnect	159
backup-interface	160
bandwidth-limit (Policer for Gigabit Ethernet Interfaces)	160
bchannel-allocation	161
bert-algorithm	162
bert-error-rate	164
bert-period	166
buildout (E3 or T3 over ATM Interfaces)	167
buildout (T1 Interfaces)	168
burst-size-limit (Policer for Gigabit Ethernet Interfaces)	169
byte-encoding	170
bytes	171
calling-number	172
cbit-parity	172
cbr	173
cell-bundle-size	174
chap	175
classifier	176
clock-rate	177
clocking	178
clocking-mode	179
compatibility-mode	180
compression (PPP Properties)	181
control-polarity	181
control-signal	182
core-dump	182
crc-major-alarm-threshold	183
crc-minor-alarm-threshold	184
cts	185
cts-polarity	185
current	186
damping (Interfaces)	187
data-input	189
dcd	190
dcd-polarity	190
dce	191
dce-options	191
default-chap-secret	192
description (Interfaces)	193
dialin	194
disable (Interface)	195
drop-timeout	196
ds0-options	197
dsr	198
dsr-polarity	198
dte-options	199

dtr-circuit	199
dtr	200
dtr-polarity	201
dump-on-flow-control	201
dynamic-profile (PPP)	202
e1-options	203
e3-options	204
encapsulation (Physical Interface)	205
encoding	209
epd-threshold (Physical Interface)	210
es-options	210
ethernet-policer-profile	211
ethernet-switch-profile	212
facility-override	213
fastether-options	214
fast-aps-switch	215
fcs	216
feac-loop-respond	217
flexible-vlan-tagging	218
flow-control	219
force	220
forwarding-class (ATM2 IQ Scheduler Maps)	220
forwarding-class (Gigabit Ethernet IQ Classifier)	221
fragment-threshold	221
framing (E1, E3, and T1 Interfaces)	222
gether-options	223
gratuitous-arp-reply	224
hello-timer	225
high-plp-max-threshold	225
high-plp-threshold	226
hold-time (APS)	226
hold-time (Physical Interface)	227
hold-time (SONET/SDH Defect Triggers)	229
host (Interfaces)	230
idle-cycle-flag	231
ieee802.1p	232
ignore-all	232
ignore-l3-incompletes	233
ilmi	233
inactivity-timeout	234
indication	234
indication-polarity	235
ingress-rate-limit	235
input-priority-map	236
interface (Hierarchical CoS Schedulers)	236
interfaces	237
interface-shared-with	237
interface-type (Interfaces)	238
invert-data	239

keepalives	240
lACP (Aggregated Ethernet)	241
line-encoding	243
line-protocol	244
line-rate	244
linear-red-profile	245
linear-red-profiles	246
link-layer-overhead	246
link-mode	247
link-protection	249
link-speed (Aggregated Ethernet)	250
link-speed (Aggregated SONET/SDH)	251
lmi (Frame Relay)	252
lmi-type	253
local-name	254
local-password	255
lockout	255
log-prefix (Interfaces)	256
long-buildout	256
loop-timing	257
loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)	258
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	260
loopback (Serial)	261
loss-priority	261
low-plp-max-threshold	262
low-plp-threshold	263
mac	264
mac-learn-enable	265
minimum-links	266
mlfr-uni-nni-bundle-options	267
modem-options	268
mpls (Interfaces)	268
mrru	269
mtu	270
multicast-statistics	272
multiservice-options	273
n391	274
n392	275
n393	276
native-vlan-id	277
neighbor (Automatic Protection Switching for SONET/SDH)	278
no-gratuitous-arp-request	278
no-keepalives	279
non-revertive (Interfaces)	279
no-partition	280
no-termination-request	281
oam-liveness	282
oam-period	283
oc-slice	284

open-timeout	284
optics-options	285
output-priority-map	286
overflow (Receive Bucket)	286
overflow (Transmit Bucket)	287
paired-group	287
pap	288
partition	289
passive (CHAP)	290
passive (PAP)	290
passive-monitor-mode	291
path-trace	292
payload-scrambler	293
periodic	294
per-unit-scheduler	295
pfc	296
pic-type	296
plp1	297
plp-to-clp	298
policer (CoS)	299
pool	300
pop-all-labels	301
ppp-options	302
premium (Output Priority Map)	303
premium (Policer)	304
preserve-interface	305
primary (AS PIC or Multiservices PIC Interfaces)	305
priority (Schedulers)	306
promiscuous-mode	307
protect-circuit	308
queue-depth	308
queue-length	309
rate	310
receive-bucket	310
red-differential-delay	311
redundancy-options	312
remote-loopback-respond	313
request	314
required-depth	315
revert-time (Interfaces)	316
revertive	316
rfc-2615	317
rts	317
rts-polarity	318
rtvbr	319
scheduler-maps (For ATM2 IQ Interfaces)	320
secondary	320
serial-options	321
services (Priority Level)	322

services-options	323
shaping	324
shared-interface	325
shdsl-options	325
snext	326
snr-margin	327
sonet-options	328
source-address-filter	330
source-filtering	331
speed (Ethernet)	332
speed (MX Series DPC)	333
speed (SONET/SDH)	334
spid1	334
spid2	335
stacked-vlan-tagging	335
start-end-flag	336
static-tei-val	337
switching-mode	337
switch-options	338
switch-port	339
switch-type	340
syslog (Monitoring)	340
system-priority	341
t1-options	342
t310	343
t391	343
t392	344
t3-options	345
tag-protocol-id (TPIDs Expected to Be Sent or Received)	346
tei-option	347
threshold	347
timeslots	348
tm	349
tm-polarity	349
traceoptions (Individual Interfaces)	350
transmit-bucket	351
transmit-clock	352
transmit-weight (ATM2 IQ CoS Forwarding Class)	352
traps	353
trigger	354
trigger-link-failure	355
unframed	355
unidirectional	356
unit	357
vbr	364
vc-cos-mode	365
vlan-tagging	366
vlan-tags-outer	366
vlan-vci-tagging	367

	vpi (ATM CCC Cell-Relay Promiscuous Mode)	367
	vtmapping	368
	warning	369
	wavelength	370
	working-circuit	374
	yellow-differential-delay	374
	z0-increment	375
Part 3	Administration	
Chapter 5	Monitoring Commands	379
	show interfaces (10-Gigabit Ethernet)	381
	show interfaces (ATM)	406
	show interfaces (ATM-over-ADSL)	441
	show interfaces (ATM-over-SHDSL)	449
	show interfaces (Channelized DS3-to-DS0)	457
	show interfaces (Channelized DS3-to-DS1)	468
	show interfaces (Channelized E1 IQ)	471
	show interfaces (Channelized E1)	475
	show interfaces (Channelized OC12 IQ and IQE)	486
	show interfaces (Channelized OC12)	490
	show interfaces (Channelized OC3 IQ and IQE)	494
	show interfaces (Channelized STM1 IQ)	513
	show interfaces (Channelized STM1)	516
	show interfaces (Channelized T1 IQ)	531
	show interfaces (Channelized T3 IQ)	543
	show interfaces (Discard)	545
	show interfaces (Fast Ethernet)	550
	show interfaces (Gigabit Ethernet)	566
	show interfaces (ISDN B-Channel)	589
	show interfaces (ISDN BRI)	595
	show interfaces (ISDN D-channel)	599
	show interfaces (ISDN Dialer)	605
	show interfaces (M Series, MX Series and T Series Routers, and PTX Series Packet Transport Routers Management and Internal Ethernet)	615
	show interfaces (PTX Series Packet Transport Routers)	631
	show interfaces (SONET/SDH)	645
	show interfaces (Serial)	673
	show interfaces (T1, E1, or DS)	686
	show interfaces (T3 or E3)	711
	show interfaces extensive	728
	show interfaces media	747
	show interfaces terse	750
Part 4	Index	
	Index	755

List of Figures

Part 1	Overview	
Chapter 1	Physical Interfaces	3
	Figure 1: Two Router Interfaces Connected Through Transport Equipment	19
	Figure 2: Multiple Flaps of Short Duration (Milliseconds)	20
	Figure 3: Periodic Flaps of Long Duration (Seconds)	21
	Figure 4: Physical Level Link is Down When the Penalty Falls Below the Reuse Level	22
	Figure 5: Physical Level Link is Up When the Penalty Falls Below the Reuse Level	23

List of Tables

	About the Documentation	xvii
	Table 1: Notice Icons	xx
	Table 2: Text and Syntax Conventions	xx
Part 2	Configuration	
Chapter 2	Physical Interfaces	27
	Table 3: Statements for Physical Interface Properties	28
	Table 4: Encapsulation Overhead by Encapsulation Type	59
	Table 5: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	60
	Table 6: Media MTU Sizes by Interface Type for M40e Routers	61
	Table 7: Media MTU Sizes by Interface Type for M160 Routers	62
	Table 8: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	62
	Table 9: Media MTU Sizes by Interface Type for MX Series Routers	63
	Table 10: Media MTU Sizes by Interface Type for T320 Routers	64
	Table 11: Media MTU Sizes by Interface Type for T640 Platforms	64
	Table 12: Media MTU Sizes by Interface Type for J2300 Platforms	65
	Table 13: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms	65
	Table 14: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms	66
	Table 15: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	68
	Table 16: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	68
	Table 17: Type 1 PIC Mode Combinations	89
	Table 18: Type 2 PIC Mode Combinations	90
	Table 19: Effect of set interfaces disable <interface_name> on T series PICs	104
Part 3	Administration	
Chapter 5	Monitoring Commands	379
	Table 20: show interfaces Gigabit Ethernet Output Fields	382
	Table 21: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type	396
	Table 22: ATM show interfaces Output Fields	406
	Table 23: ATM-over-ADSL show interfaces Output Fields	441
	Table 24: ATM-over-SHDSL show interfaces Output Fields	450
	Table 25: Channelized DS3 show interfaces Output Fields	457
	Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields	475

Table 27: Channelized OC show interfaces Output Fields	495
Table 28: Channelized STM1 show interfaces Output Fields	516
Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields	531
Table 30: Discard show interfaces Output Fields	545
Table 31: show interfaces Fast Ethernet Output Fields	550
Table 32: show interfaces Gigabit Ethernet Output Fields	567
Table 33: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type	580
Table 34: ISDN B-Channel show interfaces Output Fields	589
Table 35: ISDN BRI show interfaces Output Fields	595
Table 36: ISDN D-Channel show interfaces Output Fields	599
Table 37: ISDN Dialer show interfaces Output Fields	605
Table 38: M Series and T Series Router Management and Internal Ethernet show interfaces Output Fields	616
Table 39: show interfaces PTX Series Output Fields	632
Table 40: SONET/SDH show interfaces Output Fields	646
Table 41: show interfaces (Serial) Output Fields	673
Table 42: T1 or E1 show interfaces Output Fields	687
Table 43: T3 or E3 show interfaces Output Fields	711
Table 44: show interfaces terse Output Fields	750

About the Documentation

- Documentation and Release Notes on page xvii
- Supported Platforms on page xvii
- Using the Examples in This Manual on page xviii
- Documentation Conventions on page xix
- Documentation Feedback on page xxi
- Requesting Technical Support on page xxii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- ACX Series
- M Series
- MX Series
- T Series
- J Series
- PTX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {  
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]  
user@host# edit system scripts  
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]  
user@host# load merge relative /var/tmp/ex-script-snippet.conf  
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

[Table 1 on page xx](#) defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xx defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i>>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	<pre>[edit] routing-options { static { route default { nexthop <i>address</i>; retain; } } }</pre>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number

- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Physical Interfaces on page 3](#)

CHAPTER 1

Physical Interfaces

- [Physical Part of an Interface Name on page 3](#)
- [Physical Interface Configuration Statements Overview on page 5](#)
- [Clock Source Overview on page 15](#)
- [Receive and Transmit Leaky Bucket Properties Overview on page 16](#)
- [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 17](#)
- [Interface Alias Names Overview on page 18](#)
- [Physical Interface Damping Overview on page 19](#)

Physical Part of an Interface Name

- [Interface Names for ACX Series Universal Access Routers on page 3](#)
- [J Series Interface Names on page 3](#)
- [Interface Names for M Series and T Series Routers on page 4](#)
- [MX Series Router Interface Names on page 4](#)
- [Interface Names for PTX Series Routers on page 5](#)

Interface Names for ACX Series Universal Access Routers

ACX Series routers do not have actual PIC devices. Instead they have built-in network ports on the front panel of the router. These ports are named using the same naming convention used for routers with PIC devices with the understanding that the FPC, PIC and port are pseudo devices. When you display information about one of these ports, you specify the interface type, the slot for the Flexible PIC Concentrator (FPC), the slot on the FPC for the Physical Interface Card (PIC), and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

type-fpc/pic/port

J Series Interface Names

On J Series routers, when you display information about an interface, you specify the interface type, the slot in which the Physical Interface Module (PIM) is installed, 0, and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the PIM number, and a slash (/) separates the PIM, 0, and port numbers:

type-pim/0/port



NOTE: An exception to the *type-pim/0/port* physical description is the Integrated Services Digital Network (ISDN) dialer interface, which uses the syntax *dlnumber*.

Interface Names for M Series and T Series Routers

On M Series and T Series routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

type-fpc/pic/port



NOTE: Exceptions to the *type-fpc/pic/port* physical description include the aggregated Ethernet and aggregated SONET/SDH interfaces, which use the syntax *ae number* and *as number*, respectively.

MX Series Router Interface Names

On MX Series routers when you display information about an interface, you specify the interface type, the Dense Port Concentrator (DPC), Flexible PIC Concentrator (FPC), or Modular Port Concentrator (MPC) slot, the PIC or MIC slot, and the configured port number.



NOTE: Although the MX Series routers use DPCs, FPCs, MPCs, MICs, and PICs, command syntax in this book is shown as *fpc/pic/port* for simplicity.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the DPC, FPC or MPC, MIC or PIC, and port numbers:

type-fpc/pic/port

- *fpc*—Slot in which the DPC, FPC, or MPC is installed.
- *pic*—Slot on the FPC in which the PIC is located.

For DPCs, MICs, and the 16-port MPC, the PIC value is a logical grouping of ports and varies on different platforms.

- *port*—Port number on the DPC, PIC, MPC, or MIC.

Interface Names for PTX Series Routers

On PTX Series Packet Transport Routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.



NOTE: The PTX router supports Ethernet type interfaces only. The media type portion of the physical interface name, *type* supports the Ethernet interface type only: **et**.

In the physical part of the interface name, a hyphen (-) separates the media type (**et**) from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

type-fpc/pic/port

Related Documentation

- [Interface Naming Overview](#)
- [Interface Naming Overview](#)

Physical Interface Configuration Statements Overview

The software driver for each network media type sets reasonable default values for general interface properties, such as the interface's maximum transmission unit (MTU) size, receive and transmit leaky bucket properties, link operational mode, and clock source.

M Series, MX Series, T Series, and J Series routers are factory configured according to the specific router, its features, and its physical interfaces. This section includes a default configuration example showing the statements used to configure the physical interfaces properties. Additional statements are used to set properties for specific interface types and are described in [“Physical Interfaces Properties Statements List” on page 28](#).

To modify any of the default general interface properties, include the appropriate statements at the `[edit interfaces interface-name]` hierarchy level:



NOTE: The following configuration hierarchy and its included statements are shown only as an example of a configuration statement hierarchy and should not be referenced for resolving actual configurations. For information on a specific hierarchy level, see the hierarchy level document for that specific hierarchy, for example [“\[edit interfaces\] Hierarchy Level” on page 111](#).

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable>;
    flag flag <disable>;
  }
  interface-name {
```

```
accounting-profile name;
aggregated-ether-options {
  (flow-control | no-flow-control);
  lacp {
    (active | passive);
    link-protection{
      disable;
      (revertive | non-revertive (Interfaces));
      periodic interval;
      system-priority priority;
    }
    link-protection;
    link-speed speed;
    (loopback | no-loopback);
    minimum-links number;
    source-address-filter {
      mac-address
    }
    (source-filtering | no-source-filtering);
  }
aggregated-sonet-options {
  link-speed speed | mixed;
  minimum-links number;
}
atm-options {
  cell-bundle-size cells;
  ilmi;
  linear-red-profiles profile-name {
    high-plp-max-threshold percent;
    low-plp-max-threshold percent;
    queue-depth cells high-plp-threshold percent low-plp-threshold percent;
  }
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  pic-type (atm1 | atm2);
  plp-to-clp;
  promiscuous-mode {
    vpi vpi-identifier;
  }
  scheduler-maps map-name {
    forwarding-class class-name {
      epd-threshold cells plp1 cells;
      linear-red-profile profile-name;
      priority (high | low);
      transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
  }
  vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
  }
}
```

```

    }
    oam-period (seconds | disable);
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
         rate burst length);
        queue-length number;
    }
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}
disable;

```

```
ds0-options {
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  byte-encoding (nx56 | nx64);
  fcs (16 | 32);
  idle-cycle-flag (flags | ones);
  invert-data;
  loopback payload;
  start-end-flag (filler | shared);
}
e1-options {
  bert-error-rate rate;
  bert-period seconds;
  fcs (16 | 32);
  framing (g704 | g704-no-crc4 | unframed);
  idle-cycle-flag (flags | ones);
  invert-data;
  loopback (local | remote);
  start-end-flag (filler | shared);
  timeslots time-slot-range;
}
e3-options {
  atm-encapsulation (direct | plcp);
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout feet;
  compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
  fcs (16 | 32);
  framing (g.751 | g.832);
  idle-cycle-flag (filler | shared);
  invert-data;
  loopback (local | remote);
  (payload-scrambler | no-payload-scrambler);
  start-end-flag (filler | shared);
  (unframed | no-unframed);
}
encapsulation type;
es-options {
  backup-interface es-fpc/pic/port;
}
fastether-options {
  802.3ad aex;
  (flow-control | no-flow-control);
  ignore-l3-incompletes;
  ingress-rate-limit rate;
  (loopback | no-loopback);
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  source-address-filter {
    mac-address;
  }
}
```



```
(source-filtering | no-source-filtering);  
}  
flexible-vlan-tagging;  
gigether-options {  
    802.3ad aex;  
    (asynchronous-notification | no-asynchronous-notification);  
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |  
        local-interface-offline>;  
    auto-reconnect seconds;  
    (flow-control | no-flow-control);  
    ignore-l3-incompletes;  
    (loopback | no-loopback);  
    mpls {  
        pop-all-labels {  
            required-depth number;  
        }  
    }  
} source-address-filter {  
    mac-address;  
}  
(source-filtering | no-source-filtering);  
ethernet-switch-profile {  
    (mac-learn-enable | no-mac-learn-enable);  
    tag-protocol-id [ tpids ];  
    ethernet-policer-profile {  
        input-priority-map {  
            ieee802.1p premium [ values ];  
        }  
        output-priority-map {  
            classifier {  
                premium {  
                    forwarding-class class-name {  
                        loss-priority (high | low);  
                    }  
                }  
            }  
        }  
    }  
    policer cos-policer-name {  
        aggregate {  
            bandwidth-limit bps;  
            burst-size-limit bytes;  
        }  
        premium {  
            bandwidth-limit bps;  
            burst-size-limit bytes;  
        }  
    }  
}  
}  
(gratuitous-arp-reply | no-gratuitous-arp-reply);  
hold-time up milliseconds down milliseconds;  
interface-set interface-set-name {  
    interface ethernet-interface-name {  
        (unit unit-number | vlan-tags-outer vlan-tag);  
    }  
}
```

```
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    cisco-interoperability send-lip-remove-link-for-link-reject;
    drop-timeout milliseconds;
    fragment-threshold bytes;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
    encapsulation type;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multiservice-options {
```

```

(core-dump | no-core-dump);
(syslog | no-syslog);
(dump-on-flow-control);
flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
}
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        passive;
    }
}
}
receive-bucket {
    overflow (discard | tag);
    rate percentage;
    threshold bytes;
}
}
redundancy-options {
    primary sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
}

```

```
}
schedulers number;
serial-options {
  clock-rate rate;
  clocking-mode (dce | internal | loop);
  control-polarity (negative | positive);
  cts-polarity (negative | positive);
  dcd-polarity (negative | positive);
  dce-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  dsr-polarity (negative | positive);
  dte-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  }
  dtr-circuit (balanced | unbalanced);
  dtr-polarity (negative | positive);
  encoding (nrz | nrzi);
  indication-polarity (negative | positive);
  line-protocol protocol;
  loopback mode;
  rts-polarity (negative | positive);
  tm-polarity (negative | positive);
  transmit-clock invert;
}
services-options {
  inactivity-timeout seconds;
  open-timeout seconds;
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}
shdsl-options {
  annex (annex-a | annex-b);
  line-rate line-rate;
  loopback (local | remote);
```

```

snr-margin {
    current margin;
    snext margin;
}
}
sonet-options {
    aggregate asx;
    aps {
        advertise-interval milliseconds;
        authentication-key key;
        force;
        hold-time milliseconds;
        lockout;
        neighbor address;
        paired-group group-name;
        preserve-interface;
        protect-circuit group-name;
        request;
        revert-time seconds;
        switching-mode (bidirectional | unidirectional);
        working-circuit group-name;
    }
    bytes {
        c2 value;
        e1-quiet value;
        f1 value;
        f2 value;
        s1 value;
        z3 value;
        z4 value;
    }
    fcs (16 | 32);
    loopback (local | remote);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    path-trace trace-string;
    (payload-scrambler | no-payload-scrambler);
    rfc-2615;
    trigger {
        defect ignore;
        hold-time up milliseconds down milliseconds;
    }
    vtmapping (itu-t | klm);
    (z0-increment | no-z0-increment);
}
(speed (10m | 100m | 1g | auto) | speed (auto | 1Gbps | 100Mbps | 10Mbps) | speed
(oc3 | oc12 | oc48));
stacked-vlan-tagging;
switch-options {
    switch-port port-number {
        (auto-negotiation | no-auto-negotiation);
        speed (10m | 100m | 1g);
        link-mode (full-duplex | half-duplex);
    }
}

```

```

    }
  }
  multicast-statistics
  t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
  }
  t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
      value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
  }
  traceoptions {
    flag flag <flag-modifier> <disable>;
  }
  transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
  }
  (traps | no-traps);
  unidirectional;
  vlan-tagging;
  vlan-vci-tagging;
  unit logical-unit-number {
    logical-interface-statements;
  }
}

```

}

**Related
Documentation**

- [Router Interfaces Overview](#)

Clock Source Overview

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

For example, interface A can transmit on interface A's received clock (external, loop timing) or the Stratum 3 clock (internal, line timing, or normal timing). Interface A cannot use a clock from any other source. For interfaces such as SONET/SDH that can use different clock sources, you can configure the source of the transmit clock on each interface.

The clock source resides on the System Control Board (SCB) for M40 routers, the System and Switch Board (SSB) for M20 routers, the Control Board (CB) for M120 routers, and the Miscellaneous Control Subsystem (MCS) for M40e and M160 routers. M7i and M10i routers have a clock source on the Compact Forwarding Engine Board (CFEB) and Enhanced Compact Forwarding Engine Board (CFEB-E).

For T Series and MX Series, the clock source internal Stratum 3 clock resides on the SONET Clock Generator and Switch Control Board (SCB) respectively. By default, the 19.44-MHz Stratum 3 reference clock generates the clock signal for all serial PICs (SONET/SDH) and Plesiochronous Digital Hierarchy (PDH) PICs. PDH PICs include DS3, E3, T1, and E1 PICs.



NOTE: M7i and M10i routers do not support external clocking of SONET interfaces.

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120, M320, routers and T Series routers, see *Junos OS Administration Library for Routing Devices, Configuring the Junos OS to Support an External Clock Synchronization Interface for M Series and T Series Routers*.

For information about configuring Synchronous Ethernet on MX 80, MX240, MX480, and MX960 3D Universal Edge Routers, see *Junos OS Administration Library for Routing Devices, Synchronous Ethernet Overview* and *Configuring Clock Synchronization Interface on MX Series Routers*.

**Related
Documentation**

- [Configuring an External Synchronization Interface](#)
- [Configuring the Clock Source on page 93](#)

- *Configuring the Junos OS to Support an External Clock Synchronization Interface for M Series and T Series Routers*
- *Synchronous Ethernet Overview*
- *Configuring Clock Synchronization Interface on MX Series Routers*

Receive and Transmit Leaky Bucket Properties Overview

Congestion control is particularly difficult in high-speed networks with high volumes of traffic. When congestion occurs in such a network, it is usually too late to react. You can avoid congestion by regulating the flow of packets into your network. Smoother flows prevent bursts of packets from arriving at (or being transmitted from) the same interface and causing congestion.

For all interface types except ATM, Fast Ethernet, Gigabit Ethernet, and channelized IQ and IQE, you can configure leaky bucket properties, which allow you to limit the amount of traffic received on and transmitted by a particular interface. You effectively specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.



NOTE: Instead of configuring leaky bucket properties, you can limit traffic flow by configuring policers. Policers work on all interfaces. For more information, see the *Routing Policy Feature Guide for Routing Devices*.

The leaky bucket is used at the host-network interface to allow packets into the network at a constant rate. Packets might be generated in a bursty manner, but after they pass through the leaky bucket, they enter the network evenly spaced. In some cases, you might want to allow short bursts of packets to enter the network without smoothing them out. By controlling the number of packets that can accumulate in the bucket, the **threshold** property controls burstiness. The maximum number of packets entering the network in time units is **threshold + rate * t**.

By default, leaky buckets are disabled and the interface can receive and transmit packets at the maximum line rate.

For each DS3 channel on a channelized OC12 interface, you can configure unique receive and transmit buckets.



NOTE: HDLC payload scrambling conflicts with traffic shaping configured using leaky bucket properties. If you configure leaky bucket properties, you must disable payload scrambling, because the Junos OS rejects configurations that have both features enabled. For more information, see *Configuring SONET/SDH HDLC Payload Scrambling*.

- Related Documentation**
- [Configuring Receive and Transmit Leaky Bucket Properties on page 95](#)
 - [SONET/SDH Physical Interface Properties Overview](#)
 - [receive-bucket on page 310](#)
 - [transmit-bucket on page 351](#)

Understanding Unidirectional Traffic Flow on Physical Interfaces

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

The unidirectional interfaces enable the configuration of a unidirectional link topology. Unidirectional links are useful for applications such as broadband video services where almost all traffic flow is in one direction, from the provider to the user. Unidirectional link mode conserves bandwidth by enabling it to be differentially dedicated to transmit and receive interfaces. In addition, unidirectional link mode conserves ports for such applications because the transmit-only and receive-only interfaces act independently. Each can be connected to different routers, for example, reducing the total number of ports required.



NOTE: Unidirectional link mode is currently supported on only the following hardware:

- 4-port 10-Gigabit Ethernet DPC on the MX960 router
- 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router

The transmit-only interface is always operationally up. The operational status of the receive-only interface depends only on local faults; it is independent of remote faults and of the status of the transmit-only interface.

On the parent interface, you can configure attributes common to both interfaces, such as clocking, framing, gige-ether-options, and sonet-options. On each of the unidirectional interfaces, you can configure encapsulation, MAC address, MTU size, and logical interfaces.

Unidirectional interfaces support IP and IPv6. Packet forwarding takes place by means of static routes and static ARP entries, which you can configure independently on both unidirectional interfaces.

Only transmit statistics are reported on the transmit-only interface (and shown as zero on the receive-only interface). Only receive statistics are reported on the receive-only interface (and shown as zero on the transmit-only interface). Both transmit and receive statistics are reported on the parent interface.

- Related Documentation
- [unidirectional on page 356](#)
 - [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 103](#)

Interface Alias Names Overview

You can configure a textual description of a logical unit on a physical interface to be the alias of an interface name. Interface aliasing is supported only at the unit level. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all **show**, **show interfaces**, and other operational mode commands. Configuring an alias for a logical unit of an interface has no effect on how the interface on the router or switch operates.

When you configure the alias name of an interface, the CLI saves the alias name as the value of the *interface-name* variable in the configuration database. To enable backward compatibility with Junos OS releases in which the support for interface aliases is not available, when the Junos OS processes query the configuration database for the *interface-name* variable, the actual, exact value of the *interface-name* variable is returned instead of the alias name for system operations and computations.

This capability to define interface alias names for physical and logical interfaces is useful in a Junos Node Unifier (JNU) environment that contains a Juniper Networks MX Series 3D Universal Edge Router as a controller and EX Series Ethernet switches, QFX Series devices, and ACX Series Universal Access Routers as satellite devices. The following are the benefits of configuring an alias name, which enables a meaningful, single, and easily identifiable name to be allocated to an interface:

- You can group physical interfaces as one aggregated interface (link aggregation group or LAG bundle) and name that bundle as a satellite connection interface (for example, sat1).
- You can select a logical interface as a member of the LAG bundle or the entire LAG, and name that interface to represent a satellite device port or a service instance (for example, ge-0/0/1).
- You can combine the satellite name and the interface name aliases to wholly represent the satellite port name (for example, sat1:ge-0/0/1 or ge-sat1/0/0/1 or ge-1/0/0/1) in the most easily distinguishable format that denotes a combination of port and satellite parts of the name.

To specify an interface alias, you can use the **alias** statement at the **[edit interfaces interface-name unit logical-unit-number]** and **[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]** hierarchy levels.

- Related Documentation
- [Example: Adding an Interface Alias Name on page 106](#)
 - [alias on page 152](#)

Physical Interface Damping Overview

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into these categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds).
- Periodic flaps of long duration (seconds).

Figure 1 on page 19 is used to describe these types of interface flaps and the damping configuration that you can use in each case.

Figure 1: Two Router Interfaces Connected Through Transport Equipment



NOTE: We recommend using similar damping configurations on both ends of the physical interface.

The following sections describe the types of interface damping depending upon the transition time length.

- [Damping Overview for Shorter Physical Interface Transitions on page 19](#)
- [Damping Overview for Longer Physical Interface Transitions on page 20](#)

Damping Overview for Shorter Physical Interface Transitions


Figure 1 on page 19 shows two routers with two transport devices between them. If a redundant link between the two transport devices fails, link switching is performed. Link switching takes a number of milliseconds. As shown in Figure 2 on page 20, during switching, both router interfaces might encounter multiple flaps with an up-and-down duration of several milliseconds. These multiple flaps, if advertised to the upper-level routing protocols, might result in undesired route updates. This is why you might want to damp these interface flaps.



NOTE: Damping is suitable only with routing protocols.

For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the interface is not advertised to the rest of the system as being down until it has remained down for the hold-down timer period. Similarly, when a hold-up timer is configured and an interface goes from down to up, it is not advertised as being up until it has remained up for the hold-up timer period.


Figure 2: Multiple Flaps of Short Duration (Milliseconds)

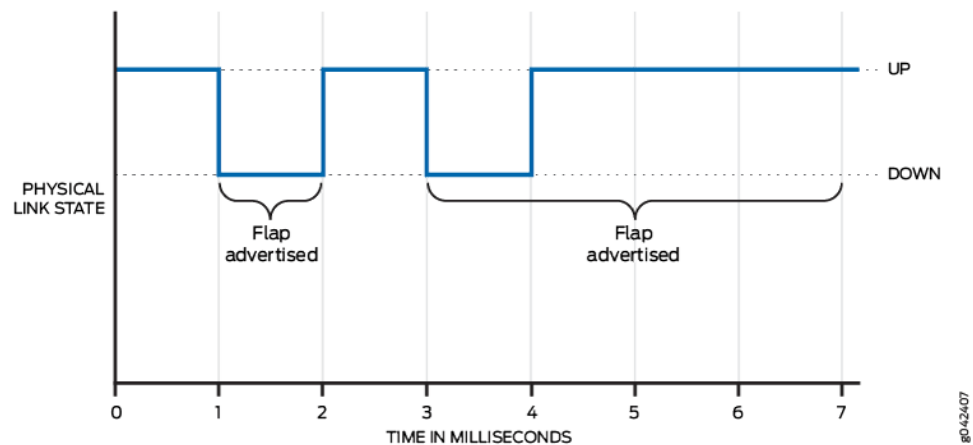

Damping Overview for Longer Physical Interface Transitions

(PTX Series Packet Transport Routers and T Series routers only) When the link between a router interface and the transport devices is not stable, this can lead to periodic flapping, as shown in [Figure 3 on page 21](#). Flaps occur in the order of seconds or more, with an up-and-down flap duration in the order of a second or more. In this case, using the hold timer feature might not produce optimal results as it cannot suppress the relatively longer and repeated interface flaps. Increasing the hold time duration to seconds still allows the system to send route updates on the flapping interface, so fails to suppress periodically flapping interfaces on the system.

Figure 3: Periodic Flaps of Long Duration (Seconds)

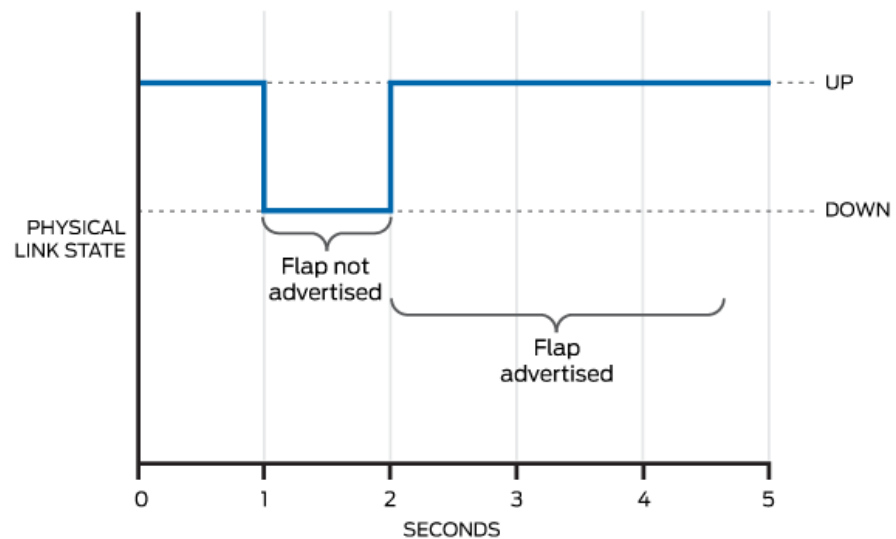

g042408

For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up-and-down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface link up and down events are not reported to the upper-level protocols.



NOTE: The system does not indicate whether an interface is down due to suppression or the actual state of the physical interface. You can verify suppression by the suppression state field within the **show interface** command.

At all times, the interface penalty counter follows an exponential decay process. [Figure 4 on page 22](#) and [Figure 5 on page 23](#) show the decay process as it applies to recovery when the physical level link is down or up. As soon as the accumulated penalty reaches the lower boundary of the reuse level, the interface is marked as unsuppressed, and further changes in the interface link state are again reported to the upper-level protocols. You use the **max-suppress** option to configure the maximum time for restricting the accumulation of the penalty beyond the value of the maximum penalty. The value of the maximum penalty is calculated by the software. The maximum penalty corresponds to the time it would take max-suppress to decay and reach the reuse level. The penalty continues to decay after crossing the reuse level.

[Figure 4 on page 22](#) and [Figure 5 on page 23](#) show the accumulated penalty, and the decay over time as a curve. Whenever the penalty is below the reuse level and the physical level link changes state, state changes are advertised to the system and cause SNMP state changes.

Figure 4 on page 22 shows the penalty dropping below the reuse level when the physical link is down. The system is notified of a state change only after the physical level link transitions to up.

Figure 4: Physical Level Link is Down When the Penalty Falls Below the Reuse Level


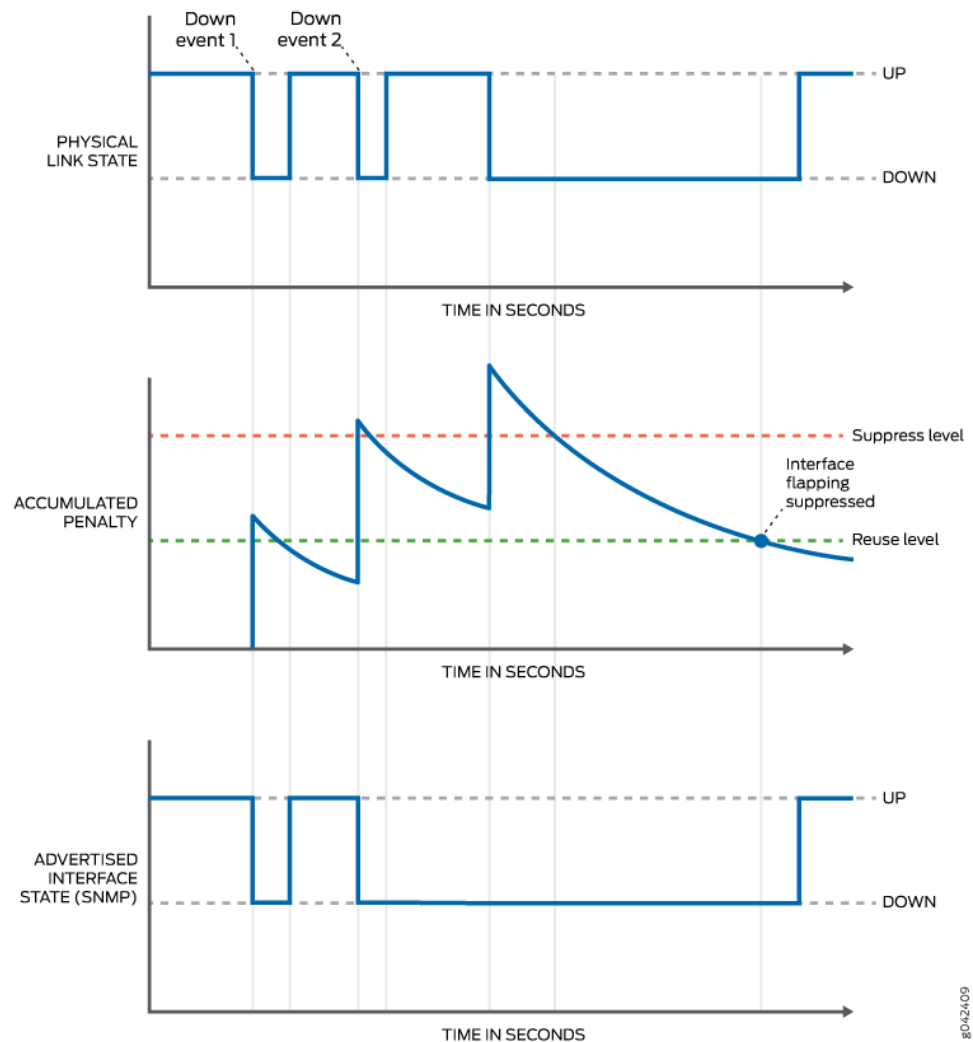


Figure 5 on page 23 shows the penalty dropping below the reuse level when the physical link is up. The system is notified of a state change immediately.

Figure 5: Physical Level Link is Up When the Penalty Falls Below the Reuse Level

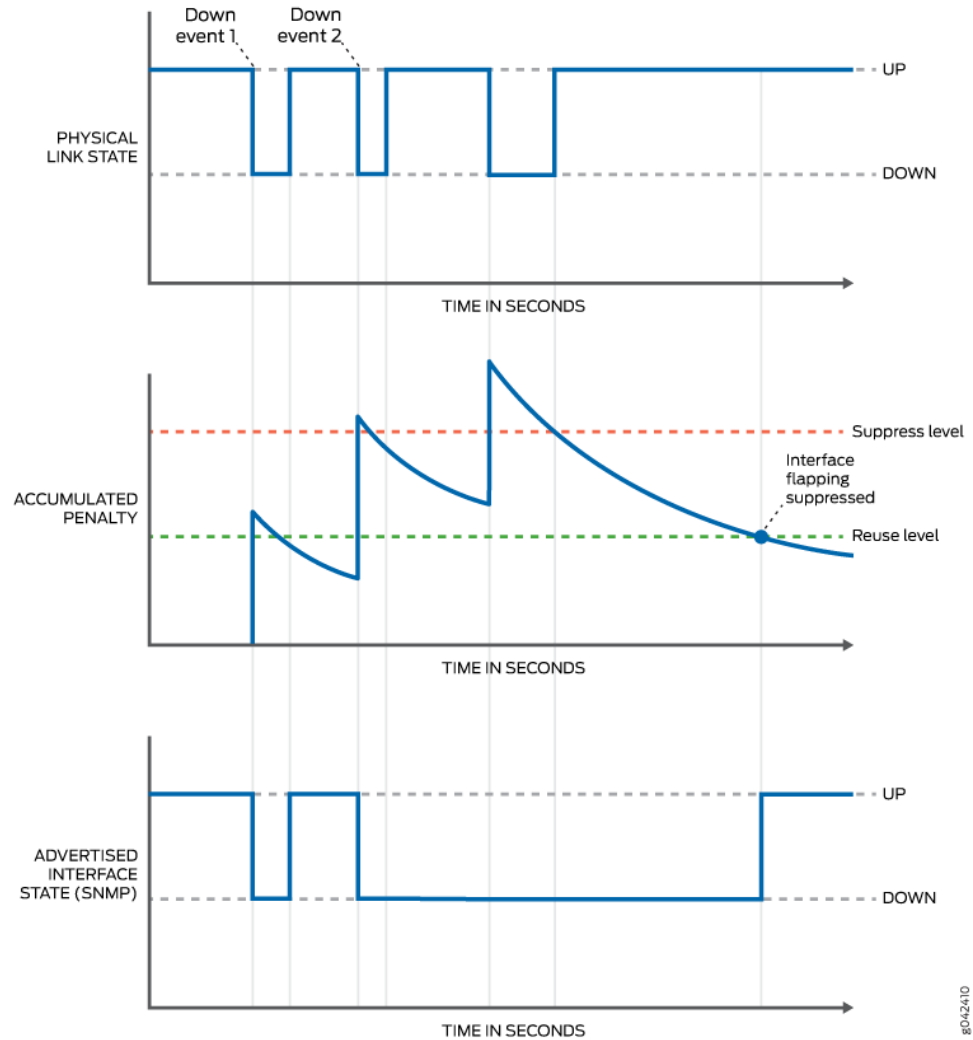

Related Documentation

- [Damping Shorter Physical Interface Transitions on page 98](#)
- [Damping Longer Physical Interface Transitions on page 99](#)
- [Understanding BGP Route Flap Damping Parameters](#)
- [damping on page 187](#)
- [hold-time on page 227](#)

PART 2

Configuration

- [Physical Interfaces on page 27](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 111](#)
- [Statement Summary on page 135](#)

CHAPTER 2

Physical Interfaces

- [Physical Interfaces Properties Statements List on page 28](#)
- [Interface Ranges on page 44](#)
- [Specifying an Aggregated Interface on page 53](#)
- [Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode on page 54](#)
- [Configuring Interface Description on page 55](#)
- [Configuring the Link Characteristics on page 56](#)
- [Configuring the Media MTU on page 57](#)
- [Configuring Interface Encapsulation on Physical Interfaces on page 68](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 74](#)
- [Configuring the PPP Challenge Handshake Authentication Protocol on page 75](#)
- [Configuring the PPP Password Authentication Protocol on page 78](#)
- [Monitoring a PPP Session on page 82](#)
- [Tracing Operations of the pppd Process on page 82](#)
- [Configuring PPP Address and Control Field Compression on page 84](#)
- [Configuring the PPP Protocol Field Compression on page 86](#)
- [Configuring the Interface Speed on page 87](#)
- [Configuring Keepalives on page 91](#)
- [Configuring the Clock Source on page 93](#)
- [Configuring the Router as a DCE with Frame Relay Encapsulation on page 95](#)
- [Configuring Receive and Transmit Leaky Bucket Properties on page 95](#)
- [Configuring Accounting for the Physical Interface on page 96](#)
- [Configuring Multiservice Physical Interface Properties on page 97](#)
- [Damping Shorter Physical Interface Transitions on page 98](#)
- [Damping Longer Physical Interface Transitions on page 99](#)
- [Example: Configuring Interface Damping on page 100](#)
- [Enabling or Disabling SNMP Notifications on Physical Interfaces on page 103](#)
- [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 103](#)

- [Disabling a Physical Interface on page 104](#)
- [Example: Adding an Interface Alias Name on page 106](#)

Physical Interfaces Properties Statements List

Table 3 on page 28 lists statements that you can use to configure physical interfaces.

Table 3: Statements for Physical Interface Properties

Statement	Interface Types	Usage Guidelines
802.3ad aex	Aggregated Ethernet interfaces	<i>Aggregated Ethernet Interfaces Overview</i>
access-profile name	Interfaces with Point-to-Point Protocol (PPP) encapsulation	" Configuring the PPP Challenge Handshake Authentication Protocol " on page 75
accounting-profile name	All	" Configuring Accounting for the Physical Interface " on page 96
acfc	Interfaces with PPP encapsulation	<i>Configuring PPPoE</i>
acknowledge-retries number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
acknowledge-timer milliseconds	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
action-red-differential-delay (disable-tx remove-link)	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
advertise-interval milliseconds	SONET/SDH interfaces	<i>Configuring APS Timers</i>
aggregate	Gigabit Ethernet intelligent queuing (IQ and IQE) interfaces and Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
aggregate asx	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>
aggregated-ether-options	Aggregated Ethernet interfaces	<i>Aggregated Ethernet Interfaces Overview</i>
aggregate-ports	SONET/SDH interfaces	" Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode " on page 54
aggregated-sonet-options	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>alarm</code> <i>alarm-name</i> (<i>syslog</i> <i>link-down</i>)	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
<code>alias</code> <i>alias-name</i> ;	All	“Example: Adding an Interface Alias Name” on page 106
<code>annex</code> (<i>annex-a</i> <i>annex-b</i>)	ATM interfaces on J Series routers SONET interfaces using annex-b for MSP switching on M320 and M120 Routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i> <i>Configuring Basic Automatic Protect Switching</i>
<code>aps</code>	SONET/SDH interfaces	<i>SONET/SDH Physical Interface Properties Overview</i>
<code>atm-encapsulation</code> (<i>direct</i> <i>plcp</i>)	E3 and T3 traffic over Asynchronous Transfer Mode (ATM) interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>
<code>atm-options</code>	ATM1 and ATM2 IQ interfaces	<i>Interface Encapsulations Overview</i>
<code>authentication-key</code> <i>key</i>	SONET/SDH interfaces	<i>SONET/SDH Physical Interface Properties Overview</i>
<code>backup-interface</code>	E1, E3, T1, T3 and Fast Ethernet	<i>Configuring ISDN Logical Interface Properties</i>
<code>bandwidth-limit</code> <i>bps</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>bchannel-allocation</code> (<i>ascending</i> <i>descending</i>)	J Series routers equipped with a Dual-Port Channelized T1/E1 PIM; for Integrated Services Digital Network Primary Rate Interfaces (ISDN PRI)	<i>Allocating B-Channels for Dialout</i>
<code>bert-algorithm</code> <i>algorithm</i>	E3, T1, T3, multichannel DS3, channelized interfaces (DS3, OC12, and STM1), and channelized IQ and IQE interfaces (E1 and DS3)	<i>Interface Diagnostics</i>
<code>bert-error-rate</code> <i>rate</i>	E1, E3, T1, T3, and channelized interfaces (DS3, OC3, OC12, and STM1)	<i>Interface Diagnostics</i>
<code>bert-period</code> <i>seconds</i>	E1, E3, T1, T3, and channelized interfaces (DS3, OC12, and STM1)	<i>Interface Diagnostics</i>
<code>Configuring the T1 Buildout</code> <i>value</i>	T1 interfaces	<i>Configuring the T1 Buildout</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
buildout <i>feet</i>	E3 and T3 traffic over ATM interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>
burst-size-limit <i>bytes</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
byte-encoding (nx56 nx64)	DS0 and T1 interfaces	<i>Configuring T1 Byte Encoding</i>
bytes [<i>values</i>	SONET/SDH interfaces	<i>Configuring SONET/SDH Header Byte Values</i>
cbit-parity no-cbit-parity	T3 interfaces	<i>Disabling T3 C-Bit Parity Mode</i>
cbr <i>rate</i>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile</i>
cell-bundle-size <i>cells</i>	ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode	<i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum</i>
chap	Interfaces with PPP encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 75
cisco-interoperability send-lip-remove-link-for-link-reject	link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
classifier	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
clocking <i>clock-source</i>	ATM, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	“Configuring the Clock Source” on page 93
clocking-mode (dce internal loop)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Clocking Mode</i>
clock-rate <i>rate</i>	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Clocking Mode</i>
compatibility-mode <i>mode</i>	E3 and T3 interfaces	<i>Configuring the E3 CSU Compatibility Mode and Configuring the T3 CSU Compatibility Mode</i>
compression	Interfaces with PPP encapsulation	“Configuring the PPP Protocol Field Compression” on page 86
control-polarity (negative positive)	Serial interfaces (X.21)	<i>Configuring Serial Signal Polarities</i>
control-signal (assert de-assert normal)	Serial interfaces (X.21)	<i>Configuring the Serial Signal Handling</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>core-dump</code> <code>no-core-dump</code>)	Adaptive services, monitoring services, and collector interfaces	"Configuring Multiservice Physical Interface Properties" on page 97
<code>cts</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Signal Handling</i>
<code>cts-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	<i>Configuring Serial Signal Polarities</i>
<code>current margin</code>	ATM interfaces on J Series routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>
<code>dcd</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Signal Handling</i>
<code>dcd-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	<i>Configuring Serial Signal Polarities</i>
<code>dce</code>	Interfaces with Frame Relay encapsulation	"Configuring the Router as a DCE with Frame Relay Encapsulation" on page 95
<code>dce-options</code>	Serial interfaces (EIA-530, V.35, and X.21) on J Series routers	<i>Configuring the Serial Signal Handling</i>
<code>default-chap-secret name</code>	Interfaces with Point-to-Point Protocol (PPP) encapsulation	"Configuring a Default CHAP Secret" on page 76
<code>description text</code>	All	"Configuring Interface Description" on page 55
<code>dialer-options</code>	ISDN interfaces	<i>Configuring ISDN Physical Interface Properties</i>
<code>disable</code>	All	"Disabling a Physical Interface" on page 104 and <i>Tracing Operations of an Individual Router Interface</i>
<code>dot1x</code>	802.1x Port-Based Network Access Control	<i>IEEE 802.1x Port-Based Network Access Control Overview</i>
<code>down-count</code>	ATM interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<code>drop-timeout milliseconds</code>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>ds0-options</code>	DS0 interfaces	<i>Channelized Interfaces Overview</i>
<code>dsr</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Signal Handling</i>
<code>dsr-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	<i>Configuring Serial Signal Polarities</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
dte-options	Serial interfaces (EIA-530, V.35, and X.21) on M Series and T Series routers	<i>Configuring the Serial Signal Handling</i>
dtr signal-handling-option	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Signal Handling</i>
dtr-circuit (balanced unbalanced)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial DTR Circuit</i>
dtr-polarity (negative positive)	Serial interfaces (EIA-530 and V.35)	<i>Configuring Serial Signal Polarities</i>
e1-options	E1 interfaces	<i>E1 Interfaces Overview</i>
e3-options	E3 interfaces	<i>E3 Interfaces Overview</i>
encapsulation type	All interfaces, except loopback and multicast tunnel	“Configuring Interface Encapsulation on Physical Interfaces” on page 68
encoding (nrz nrzi)	Serial interfaces (EIA-530, V.35, and X.21)	<i>Configuring Serial Line Encoding</i>
epd-threshold cells	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
es-options	ES interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
ethernet-policer-profile	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
ethernet-switch-profile	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, Aggregated Ethernet with Gigabit Ethernet IQ interfaces, and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers, Configuring MAC Address Filtering, and Configuring the Management Ethernet Interface</i>
facility-override facility-name	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
fastether-options	Fast Ethernet interfaces	<i>Ethernet Interfaces Overview</i>
fcs (16 32)	E1/E3, SONET/SDH, and T1/T3 interfaces	<i>Configuring the E1 Frame Checksum, Configuring the E3 Frame Checksum, Configuring the SONET/SDH Frame Checksum, Configuring the T1 Frame Checksum, and Configuring the T3 Frame Checksum</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>feac-loop-respond</code> <code>no-feac-loop-respond</code>)	T3 interfaces	<i>Configuring the T3 FEAC Response</i>
<code>flow-control</code> <code>no-flow-control</code>)	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Flow Control</i>
<code>force</code>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<code>forwarding-class class-name</code>	ATM2 IQ interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>forwarding-class class-name</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>fragment-threshold bytes</code>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>framing framing-type</code>	E1, E3, and T1 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E1 Framing, and Configuring T1 Framing</i>
<code>framing framing-type</code>	10-Gigabit Ethernet interfaces	<i>10-Gigabit Ethernet Framing Overview</i>
<code>framing framing-type</code>	SONET interfaces	<i>Configuring SONET/SDH Framing Mode</i>
<code>gether-options</code>	Gigabit Ethernet and Tri-Rate Ethernet copper interfaces	<i>Ethernet Interfaces Overview</i>
<code>(gratuitous-arp-reply no-gratuitous-arp-reply)</code>	Ethernet interfaces	<i>Configuring Gratuitous ARP</i>
<code>hello-timer milliseconds</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>high-plp-max-threshold</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>high-plp-threshold percent</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>hold-time milliseconds</code>	SONET/SDH interfaces	<i>SONET/SDH Physical Interface Properties Overview</i>
<code>hold-time up milliseconds down milliseconds</code>	All interfaces, except aggregated SONET/SDH, generalized routing encapsulation (GRE) tunnel, and IP tunnel	<i>Configuring SONET/SDH Defect Triggers</i>
<code>host hostname</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>ieee802.1p premium [values]</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>idle-cycle-flag value</code>	E1, E3, T1, and T3 interfaces	<i>Configuring the E1 Idle Cycle Flag, Configuring the E3 Idle Cycle Flag, Configuring the T1 Idle Cycle Flag, and Configuring the T3 Idle Cycle Flag</i>
<code>ignore-all</code>	Serial interfaces (EIA-530, V.35, and X.21)	<i>Configuring the Serial Signal Handling</i>
<code>ilmi</code>	ATM interfaces	<i>Configuring Communication with Directly Attached ATM Switches and Routers</i>
<code>inactivity-timeout seconds</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>indication (ignore normal require)</code>	Serial interfaces (X.21)	<i>Configuring the Serial Signal Handling</i>
<code>indication-polarity (negative positive)</code>	Serial interfaces (X.21)	<i>Configuring Serial Signal Polarities</i>
<code>ingress-rate-limit rate</code>	8-port, 12-port, and 48-port Fast Ethernet interfaces	<i>Configuring the Ingress Rate Limit</i>
<code>input-priority-map</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>interface-type type</code>	Channelized IQ and IQE interfaces, ISDN interfaces	<i>Channelized Interfaces Overview and Configuring ISDN Physical Interface Properties</i>
<code>invert-data</code>	DS0, E1, E3, and T1 interfaces	<i>Configuring E1 Data Inversion, Configuring E3 Data Inversion, and Configuring T1 Data Inversion</i>
<code>isdn-options</code>	ISDN interfaces	<i>Configuring ISDN Logical Interface Properties</i>
<code>keepalives <down-count number <interval seconds> <up-count number></code>	Aggregated SONET/SDH, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	"Configuring Keepalives" on page 91
<code>lACP mode</code>	Aggregated Ethernet interfaces	<i>Configuring Aggregated Ethernet LACP</i>
<code>line-encoding (ami b8zs)</code>	T1 interfaces	<i>Configuring T1 Line Encoding</i>
<code>line-protocol protocol</code>	Serial interfaces (EIA-530, V.35, and X.21)	<i>Configuring the Serial Line Protocol</i>
<code>line-rate line-rate</code>	ATM interfaces on J Series routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>linear-red-profile profile-name</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>linear-red-profiles profile-name</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>link-layer-overhead percent</code>	AS PIC link services IQ interfaces (lsq)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>link-mode mode</code>	Management Ethernet (fxp0 or em0) and Fast Ethernet interfaces	<i>"Configuring the Link Characteristics" on page 56, Understanding Management Ethernet Interfaces</i>
<code>link-speed speed</code>	Aggregated Ethernet interfaces	<i>Configuring Aggregated Ethernet Link Speed</i>
<code>link-speed speed</code>	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>
<code>lmi lmi-options</code>	Interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives and Junos OS Services Interfaces Library for Routing Devices</i>
<code>lmi</code>	OAM CFM Ethernet Local Management Interface	<i>Configuring Ethernet Local Management Interface</i>
<code>lmi-type (ansi itu c-lmi)</code>	Link services interfaces and interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives</i>
<code>local-name name</code>	Interfaces with PPP encapsulation	<i>"Configuring the PPP Challenge Handshake Authentication Protocol" on page 75</i>
<code>lockout</code>	SONET/SDH interfaces	<i>Configuring Annex B Option</i>
<code>log-prefix prefix-number</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(long-buildout no-long-buildout)</code>	T3 interfaces	<i>Configuring the T3 Line Buildout</i>
<code>(loop-timing no-loop-timing)</code>	Channelized IQ interfaces	<i>Configuring the Channelized T3 Loop Timing</i>
<code>loopback mode</code>	DS0, E1, E3, T1, T3, SHDSL on ATM and ATM interfaces on J Series routers, and SONET/SDH interfaces	<i>Configuring E1 Loopback Capability, Configuring E3 Loopback Capability, Configuring T1 Loopback Capability, Configuring T3 Loopback Capability, Configuring SHDSL Operating Mode on an ATM Physical Interface, Configuring SONET/SDH Loopback Capability, and Configuring Ethernet Loopback Capability</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>loopback mode</code>	Ethernet and 10-Gigabit Ethernet interfaces in WAN PHY mode	<i>Configuring Ethernet Loopback Capability</i>
<code>loopback mode</code>	Serial interfaces	<i>Configuring Serial Loopback Capability</i>
<code>(loopback no-loopback)</code>	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Ethernet Loopback Capability</i>
<code>loss-priority (high low)</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>lowest-priority-defect (all-defects err-xcon mac-rem-err-xcon no-defect rem-err-xcon xcon)</code>	Configuring IEEE 802.1ag OAM connectivity-fault management	<i>Configuring a Maintenance Endpoint</i>
<code>low-plp-max-threshold percent</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>low-plp-threshold percent</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>lsq-failure-options</code>	Link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mac mac-address</code>	Management Ethernet interface (<code>fxp0</code> or <code>em0</code>)	<i>Configuring the MAC Address on the Management Ethernet Interface, Understanding Management Ethernet Interfaces</i>
<code>(mac-learn-enable no-mac-learn-enable)</code>	Gigabit Ethernet IQ and IQE, Tri-Rate Ethernet copper, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>master-only;</code>	Management Ethernet (<code>fxp0</code> or <code>em0</code>) and Fast Ethernet interfaces	<i>Configuring a Consistent Management IP Address, Understanding Management Ethernet Interfaces</i>
<code>maximum-vcs maximum-vcs</code>	ATM interfaces	<i>Configuring the Maximum Number of ATM1 VCs on a VP</i>
<code>mc-ae</code>	Aggregated Ethernet interfaces	<i>Configuring Multichassis Link Aggregation</i>
<code>minimum-links number</code>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mip-half-function</code>	Connectivity Fault Management	<i>Configuring IEEE 802.3ah OAM Link-Fault Management</i>
<code>mlfr-uni-nni-bundle-options bundle-options</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
mpls	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets, Enabling Passive Monitoring on SONET/SDH Interfaces, and SONET/SDH Physical Interface Properties Overview</i>
mrru bytes	Link services and voice services interfaces	<i>Junos Services Interfaces Configuration Guide</i>
mtu bytes	All interfaces, except management Ethernet (fxp0 or em0), loopback, multilink, and multicast tunnel	“Configuring the Media MTU” on page 57, Understanding Management Ethernet Interfaces
multicast-statistics	Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces.	<i>Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces, Configuring Multicast Statistics Collection on SONET Interfaces, Configuring Multicast Statistics Collection on Ethernet Interfaces, and Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</i>
multiservice-options	Adaptive services, monitoring services, and collector interfaces	“Configuring Multiservice Physical Interface Properties” on page 97
n391 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
n392 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
n393 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
neighbor address	SONET/SDH interfaces	<i>SONET/SDH Physical Interface Properties Overview</i>
no-gratuitous-arp-request	Ethernet interfaces	<i>Configuring Gratuitous ARP</i>
no-keepalives	Interfaces with PPP, Frame Relay, or Cisco High-level Data Link Control (HDLC) encapsulation	“Configuring Keepalives” on page 91
no-partition	Channelized IQ interfaces	<i>Channelized Interfaces Overview</i>
no-termination-request	Link Services IQ (LSQ) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
oam-liveness	ATM interfaces	<i>Configuring the OAM F4 Cell Flows</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>oam-period</code> (<i>seconds</i> <i>disable</i>)	ATM interfaces	<i>Defining the ATM OAM F5 Loopback Cell Period</i>
<code>oc-slice</code> <code>oc-slice-range</code>	Channelized OC12 IQ interfaces	<i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i>
<code>open-timeout</code> <i>seconds</i>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>optics-options</code>	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
<code>output-priority-map</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>overflow</code> (<i>discard</i> <i>tag</i>) (Receive bucket)	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ interfaces	“Configuring Receive and Transmit Leaky Bucket Properties” on page 95
<code>overflow</code> (<i>discard</i>) (Transmit bucket)		
<code>paired-group</code> <i>group-name</i>	SONET/SDH interfaces	<i>Configuring APS Load Sharing</i>
<code>partition</code> <i>partition-number</i>	Channelized IQ interfaces	<i>Channelized Interfaces Overview</i>
<code>passive</code>	Interfaces with PPP encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 75
<code>passive-monitor-mode</code>	SONET/SDH interfaces	<i>Enabling Passive Monitoring on SONET/SDH Interfaces</i>
<code>path-trace</code> <i>trace-string</i>	10-Gigabit Ethernet interfaces in WAN PHY mode and SONET/SDH interfaces	<i>Configuring the SONET/SDH Path Trace Identifier</i>
(<code>payload-scrambler</code> <code>no-payload-scrambler</code>)	E3, SONET/SDH, and T3 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E3 HDLC Payload Scrambling, Configuring SONET/SDH HDLC Payload Scrambling, and Configuring T3 HDLC Payload Scrambling</i>
<code>periodic</code> <i>interval</i>	Aggregated Ethernet interfaces	<i>Configuring Aggregated Ethernet LACP</i>
<code>per-unit-scheduler</code>	IQ interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>pfc</code>	Interfaces with PPP encapsulation	“Configuring the PPP Protocol Field Compression” on page 86

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>pic-type</code> (atm1 atm2)	ATM2 IQ interfaces	<i>Configuring the ATM PIC Type</i>
<code>plp1 cells</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>plp-to-clp</code>	ATM2 IQ interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>policer</code> <i>cos-policer-name</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>pop-all-labels</code>	ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets and Enabling Passive Monitoring on SONET/SDH Interfaces</i>
<code>ppp-options</code>	Interfaces with PPP encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 75
<code>premium</code>	Enhanced Intelligent Queuing (IQE) interfaces (hierarchical policer)	<i>Applying Policers and Junos OS Class of Service Library for Routing Devices</i>
<code>premium</code>	Gigabit Ethernet IQ interfaces (policer)	<i>Configuring Gigabit Ethernet Policers</i>
<code>premium</code>	Gigabit Ethernet IQ interfaces (output priority map)	<i>Configuring Gigabit Ethernet Policers</i>
<code>primary</code> <i>sp-fpc/pic/port</i>	Redundant interfaces for adaptive services interfaces (rsp-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>priority</code> (high low)	ATM2 IQ interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>priority</code> <i>number</i>	Ethernet protocols (OAM CFM)	<i>Configuring a Maintenance Endpoint</i>
<code>promiscuous-mode</code>	ATM2 IQ interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode</i>
<code>protect-circuit</code> <i>group-name</i>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<code>queue-depth</code> <i>cells</i>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>queue-length</code> <i>number</i>	ATM1 interfaces	<i>Configuring the ATM1 Queue Length</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
rate <i>percentage</i>	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	"Configuring Receive and Transmit Leaky Bucket Properties" on page 95
receive-bucket	All interfaces, except ATM, Fast Ethernet, and Gigabit Ethernet	"Configuring Receive and Transmit Leaky Bucket Properties" on page 95
red-differential-delay <i>milliseconds</i>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
redundancy-options	Redundant interfaces for adaptive services interfaces (rsp-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
remote-loopback-respond	T1 interfaces	<i>Configuring the T1 Remote Loopback Response</i>
request	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
required-depth <i>number</i>	ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets and Enabling Passive Monitoring on SONET/SDH Interfaces</i>
revert-time <i>seconds</i>	SONET/SDH interfaces	<i>Configuring Revertive Mode</i>
rfc-2615	SONET/SDH interfaces	<i>Configuring SONET/SDH RFC 2615 Support</i>
rts (assert de-assert normal)	Serial interfaces (EIA-530 and V.35)	<i>Configuring the Serial Signal Handling</i>
rts-polarity (negative positive)	Serial interfaces (EIA-530 and V.35)	<i>Configuring Serial Signal Polarities</i>
rtvbr peak rate sustained rate burst length	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile</i>
scheduler-maps <i>map-name</i>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
schedulers <i>number</i>	Ethernet IQ2 and IQ2-E PICs port interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
secondary <i>sp-fpc/pic/port</i>	Redundant interfaces for adaptive services interfaces (rsp-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
services-options	Services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
serial-options	Serial interfaces (EIA-530, V.35, and X.21)	<i>Serial Interfaces Overview</i>
services <i>priority-level</i>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>shdsl-options</code>	ATM interfaces on J Series routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>
<code>size</code>	All	<i>Tracing Operations of the Interface Process</i>
<code>shaping</code>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile</i>
<code>shaping</code>	Circuit Emulation PICs	<i>Configuring ATM QoS or Shaping</i>
<code>snext margin</code>	ATM interfaces on J Series routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>
<code>snr-margin</code>	ATM interfaces on J Series routers	<i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>
<code>sonet-options</code>	SONET/SDH interfaces	<i>SONET/SDH Physical Interface Properties Overview</i>
<code>source-address-filter mac-address</code>	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>Enabling Ethernet MAC Address Filtering</i>
<code>(source-filtering no-source-filtering)</code>	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, Gigabit Ethernet IQ and IQE, and Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Enabling Ethernet MAC Address Filtering</i>
<code>speed (10m 100m 1g auto)</code>	Management Ethernet interface (<code>fxp0</code> or <code>em0</code>), Tri-Rate Ethernet copper interfaces, and 12-port and 48-port Fast Ethernet interfaces	<i>Configuring the Interface Speed on Ethernet Interfaces, Understanding Management Ethernet Interfaces</i>
<code>speed (oc3 oc12 oc48)</code>	SONET/SDH PICs with SFP	<i>Configuring SONET/SDH Interface Speed</i>
<code>spid1spid2</code>	ISDN interfaces	<i>Configuring ISDN Physical Interface Properties and Configuring ISDN Logical Interface Properties</i>
<code>stacked-vlan-tagging</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>start-end-flag (filler shared)</code>	DS0, E1, E3, T1, and T3 interfaces	<i>Configuring E1 Start and End Flags, Configuring the E3 Start and End Flags, Configuring T1 Start and End Flags, and Configuring T3 Start and End Flags</i>
<code>switching-mode (bidirectional unidirectional)</code>	Unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers	<i>Configuring Switching Mode</i>

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>syslog</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(syslog no-syslog)</code>	Adaptive services, monitoring services, and collector interfaces	“Configuring Multiservice Physical Interface Properties” on page 97
<code>t1-options</code>	T1 interfaces	<i>T1 Interfaces Overview</i>
<code>t3-options</code>	T3 interfaces	<i>T3 Interfaces Overview</i>
<code>t310</code>	ISDN interfaces	<i>Configuring ISDN Physical Interface Properties</i>
<code>t391 seconds</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>t392 number</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>tei-option (first-call power-up)</code>	ISDN interfaces	<i>Configuring ISDN Physical Interface Properties</i>
<code>threshold bytes</code>	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	“Configuring Receive and Transmit Leaky Bucket Properties” on page 95
<code>timeslots time-slot-range</code>	Channelized T1 IQ and channelized E1 IQ interfaces	<i>Channelized Interfaces Overview</i>
<code>tm (ignore normal require)</code>	Serial interfaces (EIA-530)	<i>Configuring the Serial Signal Handling</i>
<code>tm-polarity (negative positive)</code>	Serial interfaces (EIA-530)	<i>Configuring Serial Signal Polarities</i>
<code>traceoptions</code>	All	<i>Tracing Operations of an Individual Router Interface</i>
<code>traceoptions</code>	All	<i>Tracing Operations of the Interface Process</i>
<code>transmit-bucket</code>	All interfaces, except ATM, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet	“Configuring Receive and Transmit Leaky Bucket Properties” on page 95
<code>transmit-clock invert</code>	Serial interfaces (EIA-530, V.35, and X.21)	<i>Configuring the Serial Clocking Mode</i>
<code>transmit-weight (cells <i>number</i> percent <i>number</i>)</code>	ATM2 IQ interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>(traps no-traps)</code>	All	“Enabling or Disabling SNMP Notifications on Physical Interfaces” on page 103

Table 3: Statements for Physical Interface Properties (*continued*)

Statement	Interface Types	Usage Guidelines
<code>trigger defect ignore defect hold-time up milliseconds down milliseconds;</code>	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM over SONET/SDH and SONET/SDH interfaces	<i>Configuring SONET/SDH Defect Triggers</i>
<code>(unframed no-unframed)</code>	E3 IQ interfaces	<i>Configuring E3 IQ and IQE Unframed Mode</i>
<code>unidirectional</code>	10-Gigabit Ethernet interfaces on: <ul style="list-style-type: none"> MX960 4-Port 10-Gigabit Ethernet DPC T Series 10-Gigabit Ethernet IQ2 PIC T Series 10-Gigabit Ethernet IQ2E PIC 	“Enabling Unidirectional Traffic Flow on Physical Interfaces” on page 103
<code>vbr peak rate sustained rate burst length</code>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile</i>
<code>vc-cos-mode (alternate strict)</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>vlan-tagging</code>	Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>802.1Q VLANs Overview</i>
<code>vlan-vci-tagging</code>	Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet interfaces	<i>Configuring ATM-to-Ethernet Interworking</i>
<code>vpi vpi-identifier</code>	ATM interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode and Configuring the Maximum Number of ATM1 VCs on a VP</i>
<code>vtmapping</code>	Channelized STM1 interfaces	<i>Configuring Channelized STM1 Interfaces</i>
<code>warning warning-name (syslog link-down)</code>	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
<code>wavelength nm</code>	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
<code>working-circuit group-name</code>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<code>yellow-differential-delay milliseconds</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(z0-increment no-z0-increment)</code>	SONET/SDH interfaces	<i>Configuring an Incrementing STM ID</i>

Interface Ranges



NOTE: This task uses Junos OS for EX Series switches that does not support the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that supports ELS, see *Interface Ranges*. For ELS details, see *Getting Started with Enhanced Layer 2 Software*.

The Junos OS allows you to group a range of identical interfaces into an *interface range*. You first specify the group of identical interfaces in the interface range. Then you can apply a common configuration to the specified interface range, reducing the number of configuration statements required and saving time while producing a compact configuration.

- [Configuring Interface Ranges on page 44](#)
- [Expanding Interface Range Member and Member Range Statements on page 48](#)
- [Configuration Inheritance for Member Interfaces on page 49](#)
- [Member Interfaces Inheriting Configuration from Configuration Groups on page 50](#)
- [Interfaces Inheriting Common Configuration on page 51](#)
- [Configuring Inheritance Range Priorities on page 51](#)
- [Configuration Expansion Where Interface Range Is Used on page 52](#)

Configuring Interface Ranges

To configure an interface range, include the **interface-range** statement at the **[edit interfaces]** hierarchy level.

The **interface-range** statement accepts only physical networking interface names in its definition. The following interface types are supported and example CLI descriptors are shown:

- ATM—**at-fpc/pic/port**
- Channelized—**(coc | cstm)n-fpc/pic/port**
- DPC—**xe-fpc/pic/port**
- E1/E3—**(e1 | e3)-fpc/pic/port**
- Ethernet—**(xe | ge | fe)-fpc/pic/port**
- ISDN—**isdn-fpc/pic/port**
- Serial—**se-fpc/pic/port**
- SONET/SDH—**so-fpc/pic/port**
- T1/T3—**(t1 | t3)-fpc/pic/port**

Interfaces can be grouped either as a range of interfaces or using a number range under the **interface-range** statement definition.

Interfaces in an **interface-range** definition can be added as part of a member range or as individual members or multiple members using a number range.

To specify a member range, use the **member-range** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify interfaces in lexical order, use the **member-range start-range to end-range** statement.

A range for a member statement should contain the following:

- *****—All, specifies sequential interfaces from 0 through 47.



CAUTION: The wildcard ***** in a member statement does not take into account the interface numbers supported by a specific interface type. Irrespective of the interface type, ***** includes interface numbers ranging from 0 through 47 to the interface group. Therefore, use ***** in a member statement with caution.

- **num**—Number, specifies one specific interface by its number.
- **[low-high]**—Numbers between low to high, specifies a range of sequential interfaces.
- **[num1, num2, num3]**—Numbers **num1**, **num2**, and **num3** specify multiple specific interfaces.

**Example: Specifying an
Interface Range
Member Range**

```
member-range ge-0/0/0 to ge-4/0/40;
```

To specify one or multiple members, use the **member** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify the list of interface range members individually or for multiple interfaces using regex, use the **member list of interface names** statement.

**Example: Specifying an
Interface Range
Member**

```
member ge-0/0/0;  
member ge-0/*/*  
member ge-0/[1-10]/0;  
member ge-0/[1,2,3]/3;
```

Regex or wildcards are not supported for interface-type prefixes. For example, prefixes **ge**, **fe**, and **xe** must be mentioned explicitly.

An **interface-range** definition can contain both **member** and **member-range** statements within it. There is no maximum limit on the number of **member** or **member-range** statements within an interface-range. However, at least one **member** or **member-range** statement must exist within an **interface-range** definition.

**Example: Interface
Range Common
Configuration**

Configuration common to an interface range can be added as a part of the **interface-range** definition, as follows:

```
[edit]  
interfaces {
```

```

+ interface-range foo {
+ member-range ge-1/0/0 to ge-4/0/40;
+ member ge-0/1/1;
+ member ge-5/[1-10]/*;
  /*Common configuration is added as part of interface-range definition*/
  mtu 256;
  hold-time up 10;
  ether-options {
    flow-control;
    speed {
      100m;
    }
    802.3ad primary;
  }
}
}

```

An **interface-range** definition having just **member** or **member-range** statements and no common configurations statements is valid.

These defined interface ranges can be used in other configuration hierarchies, in places where an **interface** node exists.

Example:
Interface-Range foo
Used Under the
Protocols Hierarchy

```

protocols {
  dot1x {
    authenticator {
      interface foo{
        retries 1;
      }
    }
  }
}

```

foo should be an **interface-range** defined at the **[interfaces]** hierarchy level. In the above example, the **interface** node can accept both individual interfaces and interface ranges.



TIP: To view an interface range in expanded configuration, use the (**show | display inheritance**) command. For more information, see the *CLI User Guide*.

By default, **interface-range** is not available to configure in the CLI where the **interface** statement is available. The following locations are supported; however, some of the hierarchies shown in this list are product specific:

- protocols dot1x authentication interface
- protocols dvmrp interface
- protocols oam ethernet lmi interface
- protocols esis interface
- protocols igmp interface
- protocols igmp-host client *num* interface

- protocols mld-host client *num* interface
- protocols router-advertisement interface
- protocols isis interface
- protocols ldp interface
- protocols oam ethernet link-fault-management interface
- protocols lldp interface
- protocols link-management peer lmp-control-channel interface
- protocols link-management peer control-channel
- protocols link-management te-link *name* interface
- protocols mld interface
- protocols ospf area *id* interface
- protocols pim interface
- protocols router-discovery interface
- protocols rip group *name* neighbour
- protocols ripng group *name* neighbour
- protocols rsvp interface
- protocols snmp interface
- protocols layer2-control bpdu-block interface
- protocols layer2-control mac-rewrite interface
- protocols mpls interface
- protocols stp interface
- protocols rstp interface
- protocols mstp interface
- protocols vstp interface
- protocols mstp msti *id* interface
- protocols mstp msti vlan *id* interface
- protocols vstp vlan *name* interface
- protocols gvrp interface
- protocols igmp-snooping vlan *name* interface
- protocols lldp interface
- protocols lldp-med interface
- protocols sflow interfaces
- ethernet-switching-options analyzer *name* input [egress | ingress] interface

- ethernet-switching-options analyzer *name* output interface
- ethernet-switching-options secure-access-port interface
- ethernet-switching-options interfaces ethernet-switching-options voip interface
- ethernet-switching-options redundant-trunk-group group *g1* interface
- ethernet-switching-options redundant-trunk-group group *g1* interface
- ethernet-switching-options bpdu-block interface
- poe interface vlans pro-bng-mc1-bsd1 interface

Expanding Interface Range Member and Member Range Statements

All **member** and **member-range** statements in an interface range definition are expanded to generate the final list of interface names for the specified interface range.

Example: Expanding Interface Range Member and Member Range Statements

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-0/0/0 to ge-4/0/20;
    member ge-10/1/1;
    member ge-5/[0-5]/*;
    /*Common configuration is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
```

For the **member-range** statement, all possible interfaces between **start-range** and **end-range** are considered in expanding the members. For example, the following **member-range** statement:

member-range ge-0/0/0 to ge-4/0/20

expands to:

```
[ge-0/0/0, ge-0/0/1 ... ge-0/0/max_ports
ge-0/1/0 ge-0/1/1 ... ge-0/1/max_ports
ge-0/2/0 ge-0/2/1 ... ge-0/2/max_ports
.
.
ge-0/MAX_PICS/0 ... ge-0/max_pics/max_ports
ge-1/0/0 ge-1/0/1 ... ge-1/0/max_ports
.
ge-1/MAX_PICS/0 ... ge-1/max_pics/max_ports
.
.
ge-4/0/0 ge-4/0/1 ... ge-4/0/max_ports]
```


The following **member** statement:

```
ge-5/[0-5]/*
```

expands to:

```
ge-5/0/0 ... ge-5/0/max_ports
ge-5/1/0 ... ge-5/0/max_ports
.
.
ge-5/5/0 ... ge-5/5/max_ports
```

The following **member** statement:

```
ge-5/1/[2,3,6,10]
```

expands to:

```
ge-5/1/2
ge-5/1/3
ge-5/1/6
ge-5/1/10
```

Configuration Inheritance for Member Interfaces

When the Junos OS expands the **member** and **member-range** statements present in an **interface-range**, it creates *interface objects* if they are not explicitly defined in the configuration. The common configuration is copied to all its member interfaces in the **interface-range**.

Example: Foreground interface configuration takes priority compared to configuration inherited by the interface through the **interface-range**.

```
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0/ to ge-10/0/47;
    mtu 256;
  }
  ge-1/0/1 {
    mtu 1024;
  }
}
```

In the preceding example, interface **ge-1/0/1** will have an MTU value of 1024.

This can be verified with output of the **show interfaces | display inheritance** command, as follows:

```
user@host: # show interfaces | display inheritance
## 'ge-1/0/0' was expanded from interface-range 'range-1'
##
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
ge-1/0/1 {
  mtu 1024;
```

```
}
##
## 'ge-1/0/2' was expanded from interface-range 'range-1'
##
ge-1/0/2 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}

.....
.....
##
## 'ge-10/0/47' was expanded from interface-range 'range-1'
##
ge-10/0/47 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
```

Member Interfaces Inheriting Configuration from Configuration Groups

Interface range member interfaces inherit the config-groups configuration like any other foreground configuration. **interface-range** is similar to any other foreground configuration statement. The only difference is that the **interface-range** goes through a member interfaces expansion before Junos OS reads this configuration.

```
groups {
  global {
    interfaces {
      <*> {
        hold-time up 10;
      }
    }
  }
  apply-groups [global];
  interfaces {
    interface-range range-1 {
      member-range ge-1/0/0 to ge-10/0/47;
      mtu 256;
    }
  }
}
```

The **hold-time** configuration is applied to all members of **interface-range range-1**.

This can be verified with **show interfaces | display inheritance** as follows:

```
user@host# show interfaces | display inheritance
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
  ##
  ## 'hold-time' was inherited from group 'global'
  ## '10' was inherited from group 'global'
```

```

    ##
    hold-time up 10;
}
ge-1/0/1 {
    ##
    ## '256' was expanded from interface-range 'range-1'
    ##
    mtu 256;
    ##
    ## 'hold-time' was inherited from group 'global'
    ## '10' was inherited from group 'global'
    ##
    hold-time up 10;
}
ge-10/0/47 {
    ##
    ## '256' was expanded from interface-range 'range-1'
    ##
    mtu 256;
    ##
    ## 'hold-time' was inherited from group 'global'
    ## '10' was inherited from group 'global'
    ##
    hold-time up 10;
}

```

Interfaces Inheriting Common Configuration

If an interface is a member of several interface ranges, that interface will inherit the common configuration from all of those interface ranges.

```

[edit]
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0 to ge-10/0/47;
    mtu 256;
  }
}
interfaces {
  interface-range range-1 {
    member-range ge-10/0/0 to ge-10/0/47;
    hold-time up 10;
  }
}

```

In this example, interfaces **ge-10/0/0** through **ge-10/0/47** will have both **hold-time** and **mtu**.

Configuring Inheritance Range Priorities

The interface ranges are defined in the order of inheritance priority, with the first interface range configuration data taking priority over subsequent interface ranges.

```

[edit]
interfaces {
  interface-range int-grp-one {
    member-range ge-0/0/0 to ge-4/0/40;
    member ge-1/1/1;
  }
}

```

```
/*Common config is added part of the interface-range definition*/
mtu 256;
hold-time up 10;
}
}
interfaces {
  interface-range int-grp-two {
    member-range ge-5/0/0 to ge-10/0/40;
    member ge-1/1/1;
    mtu 1024;
  }
}
```

Interface **ge-1/1/1** exists in both **interface-range *int-grp-one*** and **interface-range *int-grp-two***. This interface inherits **mtu 256** from **interface-range *int-grp-one*** because it was defined first.

Configuration Expansion Where Interface Range Is Used

In this example, **interface-range *range-1*** is used under the **protocols** hierarchy:

```
[edit]
interfaces {
  interface-range range-1 {
    member ge-10/1/1;
    member ge-5/5/1;
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
protocols {
  dot1x {
    authenticator {
      interface range-1 {
        retries 1;
      }
    }
  }
}
}
```

The **interface** node present under **authenticator** is expanded into member interfaces of the **interface-range *range-1*** as follows:

```
protocols {
  dot1x {
    authenticator {
      interface ge-10/1/1 {
        retries 1;
      }
      interface ge-5/5/1 {
```

```

        retries 1;
    }
}
}

```

The **interface range-1** statement is expanded into two interfaces, ge-10/1/1 and ge-5/5/1, and configuration **retries 1** is copied under those two interfaces.

This configuration can be verified using the **show protocols dot1x | display inheritance** command.

Related Documentation

- *Physical Interfaces*

Specifying an Aggregated Interface

The M Series, MX Series, and T Series routers support aggregated interfaces. To specify an aggregated interface assign a number with the aggregated interface name. For example, configure **aex** at the **[edit interfaces]** hierarchy level, where *x* is an integer ranging 0 through 127 for M Series and T Series routers and 0 through 479 on MX Series routers.

For aggregated SONET/SDH interfaces, configure **asx** at the **[edit interfaces]** hierarchy level.



NOTE: SONET/SDH aggregation is proprietary to the Junos OS and might not work with other software.

If you are configuring VLANs for aggregated Ethernet interfaces, you must include the **vlan-tagging** statement at the **[edit interfaces aex]** hierarchy level to complete the association.

Related Documentation

- *Aggregated Ethernet Interfaces Overview*
- *Configuring Aggregated SONET/SDH Interfaces*

Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode

In the 4-port OC192 PIC with OC768-over-OC192 mode, four OC192 links are aggregated into one OC768 link with one logical interface. This single interface achieves data rates of approximately 40 Gbps. OC768 optics are expensive, and most long-distance networks currently use fiber optics and regenerators that cannot carry OC768 SONET. When you create an OC768 pipe as a large data pipe running over existing infrastructures, you transfer network traffic without link bonding or load sharing over parallel links. Load sharing is automatically accomplished in the Junos OS using a proprietary method, and does not need to be manually configured.

The following limitations apply to OC768-over-OC192 mode:

- The maximum difference in delay between all links in the bundle is 8 μ (microseconds), equivalent to approximately 1.5 km maximum difference in length between the longest and shortest fiber pairs.
- If a single link in the bundle fails, the whole bundle fails. If link redundancy is required, implement an aggregated SONET/SDH bundle instead.
- Only routers that contain 4-port OC192 PICs can operate in OC768-over-OC192 mode.

To configure the 4-port OC192 PIC to operate in OC768-over-OC192 mode:

1. In the configuration mode go to the **[edit chassis]** hierarchy level.

```
[edit]
user@host# edit chassis
```

2. Configure the aggregate-ports.

- On standalone T640, T1600, and T4000 routers, include the **aggregate-ports** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level.

```
[edit chassis]
user@host# edit fpc slot-number pic pic-number
user@host# set aggregate-ports
```

- On TX Matrix and TX Matrix Plus router, configure the **aggregate-ports** statement at the **[edit chassis lcc lcc-number fpc slot-number pic pic-number]** hierarchy level.

```
[edit chassis]
user@host# edit lcc lcc-number fpc slot-number pic pic-number
user@host# set aggregate-ports
```

3. To verify the configuration, execute the **show interfaces so-fpc/pic/port extensive** operational command. When this command is used for the 4-port OC192 PIC configured for OC768-over-OC192 mode, only port 0 (**so-fpc/pic/0**) is displayed. This port is displayed as **OC768**.



NOTE: When you configure the 4-port OC192 PIC for OC768-over-OC192 mode, only port 0 (the first port) needs be configured as the OC768 port.

Related Documentation • [aggregate-ports on page 150](#)

Configuring Interface Description

You can include a text description of each physical interface in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration.

Before you add a text description of a physical interface in the configuration file, you must first configure the interface at the **[edit interfaces]** hierarchy level. To add a text description, include the **description** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
description text
```

For example:

```
[edit interfaces fe-0/0/1]
description "Backbone connection to PHL01"
```

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



NOTE: You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See *Using DHCP Relay Agent Option 82 Information* in the *Junos OS Subscriber Management and Services Library*.

For information about describing logical units, see *Adding a Logical Unit Description to the Configuration*.

To display the description from the router or switch CLI, use the **show interfaces** command:

```
user@host>
show interfaces fe-0/0/1
Physical interface: fe-0/0/1, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23
  Description: Backbone connection to PHL01
  ...
```

To display the interface description from the interfaces MIB, use the **snmpwalk** command from a server. To isolate information for a specific interface, search for the interface index shown in the **SNMP ifIndex** field of the **show interfaces** command output. The **ifAlias** object is in **ifXTable**.

```
user-server>snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifName.23 = fe-0/0/1
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInMulticastPkts.23 = Counter32: 0
```

```

ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutMulticastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInOctets.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOctets.23 = Counter64: 42
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifLinkUpDownTrapEnable.23 = enabled(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHighSpeed.23 = Gauge32: 100
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifPromiscuousMode.23 = false(2)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifConnectorPresent.23 = true(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifAlias.23 = Backbone connection to PHL01
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifCounterDiscontinuityTime.23 = Timeticks:
(0) 0:00:00.00

```

- Related Documentation**
- *Using DHCP Relay Agent Option 82 Information*
 - *Adding a Logical Unit Description to the Configuration*

Configuring the Link Characteristics

By default, the router's management Ethernet interface, **fxp0** or **em0**, autonegotiates whether to operate in full-duplex or half-duplex mode. Fast Ethernet and J Series router Gigabit Ethernet interfaces can operate in either full-duplex or half-duplex mode, and all other interfaces can operate only in full-duplex mode. For Gigabit Ethernet, the link partner must also be set to full duplex.



NOTE: When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.



NOTE: When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.



NOTE: When the Fast Ethernet interface on Juniper Networks routers with autonegotiation enabled interoperates with a device configured to operate in half-duplex mode (autonegotiation disabled), the interface defaults to half-duplex mode after the PIC is taken offline and brought back online. This results in packet loss and cyclic redundancy check (CRC) errors.

To explicitly configure an Ethernet interface to operate in either full-duplex or half-duplex mode, include the **link-mode** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
link-mode (full-duplex | half-duplex);
```

Configuring the Media MTU

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

This topic contains the following sections:

- [Media MTU Overview on page 57](#)
- [How to Configure the Media MTU on page 58](#)
- [Encapsulation Overhead by Encapsulation Type on page 59](#)
- [Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers on page 60](#)
- [Media MTU Sizes by Interface Type for M40e Routers on page 61](#)
- [Media MTU Sizes by Interface Type for M160 Routers on page 62](#)
- [Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers on page 62](#)
- [Media MTU Sizes by Interface Type for MX Series Routers on page 63](#)
- [Media MTU Sizes by Interface Type for T320 Routers on page 64](#)
- [Media MTU Sizes by Interface Type for T640 Platforms on page 64](#)
- [Media MTU Sizes by Interface Type for J2300 Platforms on page 65](#)
- [Media MTU Sizes by Interface Type for J4300 and J6300 Platforms on page 65](#)
- [Media MTU Sizes by Interface Type for J4350 and J6350 Platforms on page 66](#)
- [Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers on page 68](#)
- [Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers on page 68](#)

Media MTU Overview

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

Default media MTU = Default IP MTU + encapsulation overhead

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint

connections, all interfaces in the subnet must use the same MTU size. For details about encapsulation overhead, see “[Encapsulation Overhead by Encapsulation Type](#)” on page 59.



NOTE: The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

A SONET/SDH interface operating in concatenated mode has a “c” added to the rate descriptor. For example, a concatenated OC48 interface is referred to as OC48c.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

$$\text{MPLS MTU} = \text{physical interface MTU} - \text{encapsulation overhead} - 12$$

If you configure an MTU value by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family mpls]` hierarchy level, the configured value is used.

How to Configure the Media MTU

To modify the default media MTU size for a physical interface, include the `mtu` statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]  
  mtu bytes;
```

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.



NOTE: Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

You configure the protocol MTU by including the `mtu` statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family family]`

- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

Because tunnel services interfaces are considered logical interfaces, you cannot configure the MTU setting for the physical interface. This means you cannot include the **mtu** statement at the [edit interfaces *interface-name*] hierarchy level for the following interface types: generic routing encapsulation (**gr-**), IP-IP (**ip-**), loopback (**lo-**), link services (**ls-**), multilink services (**ml-**), and multicast (**pe-**, **pd-**). You can, however, configure the protocol MTU on tunnel interfaces, as described in *Setting the Protocol MTU*.

Encapsulation Overhead by Encapsulation Type

Table 4: Encapsulation Overhead by Encapsulation Type

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4

Table 4: Encapsulation Overhead by Encapsulation Type (*continued*)

Interface Encapsulation	Encapsulation Overhead (Bytes)
VLAN VPLS	4
VLAN TCC	22

Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Table 5: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	9192	1500
E3/T3	4474	9192	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-port) 1532 (12-port) <i>NOTE:</i> The maximum MTU for two 100Base-TX Fast Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 <i>NOTE:</i> The maximum MTU for one Gigabit Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470

Media MTU Sizes by Interface Type for M40e Routers

Table 6: Media MTU Sizes by Interface Type for M40e Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500 9192 (4-port)	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 9192 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (4-port OC3) 9192 (4-port OC3c) 4500 (1-port OC12) 4500 (4-port OC12) 4500 (4-port OC12c) 4500 (1-port OC48) 9192 (2-port OC3) 9192 (2-port OC3c) 9192 (1-port OC12c) 9192 (1-port OC48c) 4500 (1-port OC192) 9192 (1-port OC192c)	4470

Media MTU Sizes by Interface Type for M160 Routers

Table 7: Media MTU Sizes by Interface Type for M160 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 4500 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (1- or 2-port) 4500 (4-port)	4470

Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Table 8: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
Channelized DS3 IQ	4471	4500	4470
Channelized E1 IQ	1504	4500	1500
Channelized OC12 IQ	4474	9192	4470

Table 8: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
E1	1504	4500	1500
E3 IQ	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-, 12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
T1	1504	4500	1500
CT3 IQ (excluding M120)	4474	9192	4470

Media MTU Sizes by Interface Type for MX Series Routers**Table 9: Media MTU Sizes by Interface Type for MX Series Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Multi-Rate Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Tri-Rate Ethernet	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Table 9: Media MTU Sizes by Interface Type for MX Series Routers (*continued*)

Channelized SONET/SDH OC3/STM1 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
DS3/E3 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
ATM with SFP	9192	9192	9192

Media MTU Sizes by Interface Type for T320 Routers**Table 10: Media MTU Sizes by Interface Type for T320 Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM	4482	9192	4470
ATM2 IQ	4482	9192	4470
Channelized OC12 IQ	4474	9192	4470
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for T640 Platforms**Table 11: Media MTU Sizes by Interface Type for T640 Platforms**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
48-port Fast Ethernet	1514	1532	1500 (IPv4), 1497 (ISO)

Table 11: Media MTU Sizes by Interface Type for T640 Platforms *(continued)*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for J2300 Platforms

Table 12: Media MTU Sizes by Interface Type for J2300 Platforms

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Fast Ethernet (10/100)	1514	9192	1500
G.SHDSL	4482	9150	4470
ISDN BRI	1504	4092	1500
Serial	1504	9150	1500
T1 or E1	1504	9150	1500

Media MTU Sizes by Interface Type for J4300 and J6300 Platforms

Table 13: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ADSL2+ PIM	4482	9150	4470
Dual-port Fast Ethernet (10/100) PIM	1514	9192	1500
Dual-port Serial PIM	1504	9150	1500
Dual-port T1 or E1 PIM	1504	9150	1500
Dual-port Channelized T1/E1 PIM (channelized to DS0s)	1504	4500	1500

Table 13: Media MTU Sizes by Interface Type for J4300 and J6300 Platforms (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Dual-port Channelized T1/E1 PIM (clear channel T1 or E1)	1504	9150	1500
Fast Ethernet (10/100) built-in interface	1514	9192	1500
G.SHDSL PIM	4482	9150	4470
4-port ISDN BRI PIM	1504	4092	1500
T3 (DS3) or E3 PIM	4474	9192	4470

Media MTU Sizes by Interface Type for J4350 and J6350 Platforms

Table 14: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
4-port ISDN BRI PIM	1504	4092	1500
ADSL2+ PIM	4482	9150	4470
Dual-port Fast Ethernet (10/100) PIM	1514	9192	1500
Dual-port Serial PIM	1504	9150	1500
Dual-port T1 or E1 PIM	1504	9150	1500
Dual-port Channelized T1/E1 PIM (channelized to DS0s)	1504	4500	1500
Dual-port Channelized T1/E1 PIM (clear channel T1 or E1)	1504	9150	1500
4-port Fast Ethernet (10/100) ePIM	1518	1518	1500

Table 14: Media MTU Sizes by Interface Type for J4350 and J6350 Platforms (*continued*)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet (10/100/1000) built-in interface	1514	9018	1500
Gigabit Ethernet (10/100/1000) Enhanced Physical Interface Module (ePIM)	1514	9018	1500
Gigabit Ethernet (10/100/1000) SFP ePIM	1514	9018	1500
G.SHDSL PIM	4482	9150	4470
T3 (DS3) or E3 PIM	4474	9192	4470



NOTE: On Gigabit Ethernet ePIMs in J4350 and J6350 Services Routers, you can configure a maximum transmission unit (MTU) size of only 9018 bytes even though the CLI indicates that you can configure an MTU of up to 9192 bytes. If you configure an MTU greater than 9018 bytes, the router does not accept the configuration and generates a system log error message similar to the following:

```
/kernel: ge-0/0/0: Illegal media change. MTU invalid: 9192. Max MTU supported on this PIC: 9018
```

On 4-port Fast Ethernet ePIMs in J4350 and J6350 Services Routers, you can configure a maximum transmission unit (MTU) size of only 1518 bytes even though the CLI indicates that you can configure an MTU of up to 9192 bytes. If you configure an MTU greater than 1518 bytes, the router does not accept the configuration and generates a system log error message similar to the following:

```
/kernel: fe-3/0/1: Illegal media change. MTU invalid: 9192. Max MTU supported on this PIC: 1518
```

Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers

Table 15: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)

Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Table 16: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
10-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
40-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
100-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces on page 68](#)
- [Setting the Protocol MTU](#)

Configuring Interface Encapsulation on Physical Interfaces

Point-to-Point Protocol (PPP) encapsulation is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default. For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface.

You can optionally configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types. For more information about logical interface encapsulation, see *Configuring Interface Encapsulation on Logical Interfaces*.

For information about encapsulation overhead, see [Table 4 on page 59](#).

This section contains the following topics:

- [Configuring the Encapsulation on a Physical Interface on page 69](#)
- [Encapsulation Capabilities on page 72](#)

Configuring the Encapsulation on a Physical Interface

By default, PPP is the encapsulation type for physical interfaces. To configure the encapsulation on a physical interface, include the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
encapsulation (atm-ccc-cell-relay | atm-pvc | cisco-hdlc | cisco-hdlc-ccc | cisco-hdlc-tcc
| ethernet-ccc | ethernet-over-atm | ethernet-tcc | ethernet-vpls |
extended-frame-relay-ccc | extended-frame-relay-ether-type-tcc |
extended-frame-relay-tcc | extended-vlan-ccc | extended-vlan-tcc | extended-vlan-vpls
| flexible-ethernet-services | flexible-frame-relay | frame-relay | frame-relay-ccc |
frame-relay-ether-type | frame-relay-ether-type-tcc | frame-relay-port-ccc |
frame-relay-tcc | multilink-frame-relay-uni-nni | ppp | ppp-ccc | ppp-tcc | vlan-ccc |
vlan-vpls);
```

The physical interface encapsulation can be one of the following:

- ATM CCC cell relay—Connects two remote virtual circuits or ATM physical interfaces with a label-switched path (LSP). Traffic on the circuit is ATM cells.

You can configure an ATM1 Physical Interface Card (PIC) to use cell-relay accumulation mode (CAM). In this mode, the incoming cells (1 to 8 cells) are packaged into a single packet and forwarded to the LSP. Cell-relay accumulation mode is not supported on ATM2 PICs. You configure CAM as shown in the following example:

```
[edit chassis]
fpc 1 {
  pic 0 {
    atm-cell-relay-accumulation;
  }
}
```

For more information, see the *Junos OS Administration Library for Routing Devices*.

- ATM PVC—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- Cisco HDLC—E1, E3, SONET/SDH, T1, and T3 interfaces can use Cisco HDLC encapsulation. Two related versions are supported:
 - CCC version (**cisco-hdlc-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**cisco-hdlc-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.

- Ethernet over ATM—As defined in RFC 1483, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*, this encapsulation type allows ATM interfaces to connect to devices that support only bridged-mode protocol data units (BPDUs). The Junos OS does not completely support bridging, but accepts BPDU packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet logical link control (LLC)/SNAP frames with IP or Address Resolution Protocol (ARP) in the payload, and drops the rest. For packets destined to the Ethernet local area network (LAN), a route lookup is done using the destination IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and media access control (MAC) header, and the packet is forwarded to the ATM interface.
- Ethernet cross-connect—Ethernet interfaces without VLAN tagging can use Ethernet CCC encapsulation. Two related versions are supported:
 - CCC version (**ethernet-ccc**)—Ethernet interfaces with standard Tag Protocol ID (TPID) tagging can use Ethernet CCC encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**ethernet-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- VLAN CCC (**vlan-ccc**)—Ethernet interfaces with VLAN tagging enabled can use VLAN CCC encapsulation. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.
- Extended VLAN cross-connect—Gigabit Ethernet interfaces with VLAN 802.1Q tagging enabled can use extended VLAN cross-connect encapsulation. (Ethernet interfaces with standard TPID tagging can use VLAN CCC encapsulation.) Two related versions of extended VLAN cross-connect are supported:
 - CCC version (**extended-vlan-ccc**)—Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**extended-vlan-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC and extended VLAN TCC are not supported.

- Ethernet VPLS (**ethernet-vpls**)—Ethernet interfaces with VPLS enabled can use Ethernet VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices* and the *Junos OS, Release 14.1*.
- Ethernet VLAN VPLS (**vlan-vpls**)—Ethernet interfaces with VLAN tagging and VPLS enabled can use Ethernet VLAN VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices* and the *Junos OS, Release 14.1*.
- Extended VLAN VPLS (**extended-vlan-vpls**)—Ethernet interfaces with VLAN 802.1Q tagging and VPLS enabled can use Ethernet Extended VLAN VPLS encapsulation.

(Ethernet interfaces with standard TPID tagging can use Ethernet VLAN VPLS encapsulation.) Extended Ethernet VLAN VPLS encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices* and the *Junos OS, Release 14.1*.

- Flexible Ethernet services (**flexible-ethernet-services**)—Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) can use flexible Ethernet services encapsulation. Aggregated Ethernet bundles can use this encapsulation type. You use this encapsulation type when you want to configure multiple per-unit Ethernet encapsulations. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.
- Flexible Frame Relay (**flexible-frame-relay**)—IQ and IQE interfaces can use flexible Frame Relay encapsulation. You use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any data-link connection identifier (DLCI) value from 1 through 1022.
- Frame Relay (**frame-relay**)—Defined in RFC 1490, *Multiprotocol Interconnect over Frame Relay*. E1, E3, link services, SONET/SDH, T1, T3, and voice services interfaces can use Frame Relay encapsulation. Five related versions are supported:
 - CCC version (**frame-relay-ccc**)—The same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**frame-relay-tcc**)—Similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
 - Extended CCC version (**extended-frame-relay-ccc**)—This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. The logical interface must have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
 - Extended TCC version (**extended-frame-relay-tcc**)—Similar to extended Frame Relay CCC, this encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC, which is used for circuits with different media on either side of the connection.
 - Port CCC version (**frame-relay-port-ccc**)—Defined in the IETF document *Frame Relay Encapsulation over Pseudo-Wires* (expired December 2002). This encapsulation type allows you to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. The logical interface does not require

an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.

- Frame Relay Ether Type (**frame-relay-ether-type**)—Physical interfaces can use Frame Relay ether type encapsulation for compatibility with Cisco Frame Relay. IETF frame relay encapsulation identifies the payload format using NLPID and SNAP formats. Cisco-compatible Frame Relay encapsulation uses the Ethernet type to identify the type of payload. Two related versions are supported:
 - TCC version (**frame-relay-ether-type-tcc**)—Cisco-compatible Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to TCC. This encapsulation is used for circuits with different media on either side of the connection.
 - Extended TCC version (**extended-frame-relay-ether-type-tcc**)—This encapsulation allows you to dedicate Cisco-compatible Frame Relay TCC for DLCIs 1 through 1022. This encapsulation is used for circuits with different media on either side of the connection.
- Multilink Frame Relay (MLFR) UNI and NNI (**multilink-frame-relay-uni-nni**)—Link services and voice services interfaces functioning as FRF.16 bundles can use multilink Frame Relay UNI NNI encapsulation. This encapsulation is also used on link services and voice services interfaces' constituent T1, E1, or NxDS0 interfaces.
- PPP—Defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation. Two related versions are supported:
 - Circuit cross-connect (CCC) version (**ppp-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
 - Translational cross-connect (TCC) version (**ppp-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.



NOTE: When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

Encapsulation Capabilities

When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one **unit** statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.

Ethernet CCC encapsulation for Ethernet interfaces with standard TPID tagging requires that the physical interface have only a single logical interface. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For Ethernet interfaces in VLAN mode, VLAN IDs are applicable as follows:

- VLAN ID 0 is reserved for tagging the priority of frames.
- For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs. VLAN IDs 512 and above are reserved for VLAN CCCs.
- For encapsulation type **vlan-vpls**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 4094 are reserved for VPLS VLANs. For 4-port Fast Ethernet interfaces, you can use VLAN IDs 512 through 1024 for VPLS VLANs.
- For Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), you can configure flexible Ethernet services encapsulation on the physical interface. For interfaces with **flexible-ethernet-services** encapsulation, all VLAN IDs are valid. VLAN IDs from 1 through 511 are not reserved.
- For encapsulation types **extended-vlan-ccc** and **extended-vlan-vpls**, all VLAN IDs are valid.

The upper limits for configurable VLAN IDs vary by interface type.

When you configure a TCC encapsulation, some modifications are needed to handle VPN connections over unlike Layer 2 and Layer 2.5 links and terminate the Layer 2 and Layer 2.5 protocol locally.

The router performs the following media-specific changes:

- PPP TCC—Both Link Control Protocol (LCP) and Network Control Protocol (NCP) are terminated on the router. Internet Protocol Control Protocol (IPCP) IP address negotiation is not supported. The Junos OS strips all PPP encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to PPP encapsulation.
- Cisco HDLC TCC—Keepalive processing is terminated on the router. The Junos OS strips all Cisco HDLC encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Cisco HDLC encapsulation.
- Frame Relay TCC—All Local Management Interface (LMI) processing is terminated on the router. The Junos OS strips all Frame Relay encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Frame Relay encapsulation.
- ATM—Operation, Administration, and Maintenance (OAM) and Interim Local Management Interface (ILMI) processing is terminated at the router. Cell relay is not supported. The Junos OS strips all ATM encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to ATM encapsulation.

Example: Configuring the Encapsulation on a Physical Interface

Configure PPP encapsulation on a SONET/SDH interface. The second and third **family** statements allow Intermediate System-to-Intermediate System (IS-IS) and MPLS to run on the interface.

```
[edit interfaces]
so-7/0/0 {
  encapsulation ppp;
  unit 0 {
    point-to-point;
    family inet {
      address 192.168.1.113/32 {
        destination 192.168.1.114;
      }
    }
    family iso;
    family mpls;
  }
}
```

- Related Documentation**
- [Configuring Interface Encapsulation on Logical Interfaces](#)
 - [Configuring the Media MTU on page 57](#)

Configuring Interface Encapsulation on PTX Series Packet Transport Routers

This topic describes how to configure interface encapsulation on PTX Series Packet Transport Routers. Use the **flexible-ethernet-services** configuration statement to configure different encapsulation for different logical interfaces under a physical interface. With flexible Ethernet services encapsulation, you can configure each logical interface encapsulation without range restrictions for VLAN IDs.

Supported encapsulations for physical interfaces include:

- **flexible-ethernet-services**
- **ethernet-ccc**
- **ethernet-tcc**

Supported encapsulations for logical interfaces include:

- **ethernet**
- **vlan-ccc**
- **vlan-tcc**



NOTE: PTX Series Packet Transport Routers do not support **extended-vlan-cc** and **extended-vlan-tcc** encapsulation on logical interfaces. Instead, you can configure a tag protocol ID (TPID) value of 0x9100 to achieve the same results.

To configure flexible Ethernet services encapsulation, include the **encapsulation flexible-ethernet-services** statement at the **[edit interfaces et-fpc/pic/port]** hierarchy level. For example:

```

interfaces {
  et-fpc/pic/port {
    vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
      vlan-id 1000;
      family inet {
        address 11.0.0.20/24;
      }
    }
    unit 1 {
      encapsulation vlan-ccc;
      vlan-id 1010;
    }
    unit 2 {
      encapsulation vlan-tcc;
      vlan-id 1020;
      family tcc {
        proxy {
          inet-address 11.0.2.160;
        }
        remote {
          inet-address 11.0.2.10;
        }
      }
    }
  }
}

```

Related Documentation • [Configuring Interface Encapsulation on Physical Interfaces on page 68](#)

Configuring the PPP Challenge Handshake Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP), as defined in RFC 1994, *PPP Challenge Handshake Authentication Protocol (CHAP)*. When you enable CHAP on an interface, the interface can authenticate its peer and can be authenticated by its peer.

By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges. To enable CHAP, you must create an access profile, and you must configure the interfaces to use CHAP.

To configure a CHAP access profile, include the **profile** statement and specify a profile name at the **[edit access]** hierarchy level:

```

[edit access]
profile profile-name {
  client name chap-secret data;
}

```

For more information about configuring access profiles, see the *Junos OS Administration Library for Routing Devices*.

When you configure an interface to use CHAP, you must assign an access profile to the interface. When an interface receives CHAP challenges and responses, the access profile in the packet is used to look up the shared secret, as defined in RFC 1994.

If no matching access profile is found for the CHAP challenge that was received by the interface, the optionally configured default CHAP secret is used. The default CHAP secret is useful if the CHAP name of the peer is unknown, or if the CHAP name changes during PPP link negotiation.

To configure PPP CHAP on an interface with PPP encapsulation, include the **chap** statement at the **[edit interfaces *interface-name* ppp-options]** hierarchy level:

```
[edit interfaces interface-name ppp-options]
chap {
  access-profile name;
  default-chap-secret name;
  local-name name;
  passive;
}
```

On each interface with PPP encapsulation, you can configure the following PPP CHAP properties:

- [Assigning an Access Profile to an Interface on page 76](#)
- [Configuring a Default CHAP Secret on page 76](#)
- [Configuring the Local Name on page 77](#)
- [Configuring Passive Mode on page 77](#)
- [Example: Configuring the PPP Challenge Handshake Authentication Protocol on page 77](#)

When you configure PPP over ATM or Multilink PPP over ATM encapsulation, you can enable CHAP on the logical interface. For more information, see *Configuring PPP over ATM2 Encapsulation*.

Assigning an Access Profile to an Interface

To assign an access profile to an interface, include the **access-profile** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
access-profile name;
```

You must include the **access-profile** statement when you configure the CHAP authentication method. If an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped unless a default CHAP secret has been configured. For information about configuring the default CHAP secret, see [“Configuring a Default CHAP Secret” on page 76](#).

Configuring a Default CHAP Secret

To configure a default CHAP secret for an interface, include the **default-chap-secret** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
```

```
default-chap-secret name;
```

The default CHAP secret is used when no matching CHAP access profile exists, or if the CHAP name changes during PPP link negotiation.

Configuring the Local Name

By default, when CHAP is enabled on an interface, the interface uses the router's system hostname as the name sent in CHAP challenge and response packets.

To configure the name the interface uses in CHAP challenge and response packets, include the **local-name** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
local-name name;
```

The local name is any string from 1 to 250 characters in length, starting with an alphanumeric or underscore character, and including only the following characters:

```
a-z A-Z 0-9 % @ # / \ . _ -
```

Configuring Passive Mode

By default, when CHAP is enabled on an interface, the interface always challenges its peer and responds to challenges from its peer.

You can configure the interface not to challenge its peer, and only respond when challenged. To configure the interface not to challenge its peer, include the **passive** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
passive;
```

Example: Configuring the PPP Challenge Handshake Authentication Protocol

Configure CHAP:

```
[edit access]
profile pe-A-ppp-clients;
client cpe-1 chap-secret "$1$dQYsZ$B5ojUeUjDsUo.yKwcCZ0";
    # SECRET-DATA
client cpe-2 chap-secret "$1$kdAsfaDAfkjDsASxfafdkdFKJ";
    # SECRET-DATA
[edit interfaces so-1/2/0]
encapsulation ppp;
ppp-options {
    chap {
        access-profile pe-A-ppp-clients;
        default-chap-secret "$9$mPafafhdsaiufhyrv1Rxd";
        local-name "pe-A-so-1/1/1";
    }
}
[edit interfaces so-1/1/2]
encapsulation ppp;
ppp-options {
```

```
chap {  
  access-profile pe-A-ppp-clients;  
  default-chap-secret "$9$mPafafhdsaiufhyrv1Rxd";  
  local-name "pe-A-so-1/1/2";  
}  
}
```

Configuring the PPP Password Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the Password Authentication Protocol (PAP), as defined in RFC 1334, *PAP Authentication Protocols*. If authentication is configured, the PPP link negotiates using CHAP or PAP protocol for authentication during the Link Control Protocol (LCP) negotiation phase. PAP is only performed after the link establishment phase (LCP up) portion of the authentication phase.

During authentication, the PPP link sends a PAP authentication-request packet to the peer with an ID and password. The authentication-request packet is sent every 2 seconds, similar to the CHAP challenge, until a response is received (acknowledgment packet, nonacknowledgment packet). If an acknowledgment packet is received, the PPP link transitions to the next state, the network phase. If a nonacknowledgment packet is received, an LCP terminate request is sent, and the PPP link goes back to the link establishment phase. If no response is received, and an optional retry counter is set to **true**, a new request acknowledgment packet is resent. If the retry counter expires, the PPP link transitions to the LCP negotiate phase.

You can configure the PPP link with PAP in passive mode. By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

When both CHAP and PAP authentication are configured on a PPP interface, only CHAP protocol is used for authentication. If CHAP authentication fails, LCP is restarted and the PPP link uses the CHAP protocol again for authentication. Therefore, each time CHAP authentication fails, LCP is restarted.

To enable PAP, you must create an access profile, and you must configure the interfaces to use PAP.

To configure a PAP access profile, include the **profile** statement and specify a profile name at the **[edit access]** hierarchy level:

```
[edit access]  
profile profile-name {  
  client name;  
  pap-password password;  
}
```

For more information about configuring access profiles, see the *Junos OS Administration Library for Routing Devices*.

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password.

If no matching access profile is found for the PAP authentication request that was received by the interface, the optionally configured default PAP password is used. For information about configuring the default PAP password, see *Configuring PPP PAP Authentication*.

To configure PPP PAP on a physical interface with PPP encapsulation, include the **pap** statement at the **[edit interfaces *interface-name* ppp-options]** hierarchy level:

```
[edit interfaces interface-name ppp-options]
pap {
  access-profile name;
  local-name name;
  local-password password;
  passive;
}
```

To configure PPP PAP on a logical interface with PPP encapsulation, include the **pap** statement with options:

```
pap {
  default-pap-password password;
  local-name name;
  local-password password;
  passive;
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

For more information about configuring PAP for logical interfaces, see *Configuring PPP PAP Authentication*. For information about configuring tracing operations for PPP, see [“Tracing Operations of the pppd Process” on page 82](#).

On each physical interface with PPP encapsulation, you can perform one of the following tasks:

- [Configuring the Local Name on page 80](#)
- [Configuring the Local Password on page 80](#)
- [Configuring Passive Mode on page 80](#)
- [Example: Configuring PAP Authentication Protocol on page 80](#)

Configuring the Local Name

By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
local-name name;
```

Configuring the Local Password

You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
local-password password;
```

Configuring Passive Mode

By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
passive;
```

Example: Configuring PAP Authentication Protocol

Configure a PAP access profile, the physical and logical interfaces, and tracing operations for PPP.

For PAP authentication, a username and password for the peer is configured in the access profile, along with a PAP password. Each user can have either a PAP password or a CHAP secret.

```
[edit access]
profile userlist1;
client {
  papuser {
    pap-password "#%@^***"; # SECRET-DATA;
  }
  chapuser {
    chap-secret "#%@^***"; # SECRET-DATA;
  }
}
```



```
}
```

To configure the same name for the PAP password and the CHAP secret, configure the client with two different access profiles:

```
[edit access]
profile chap-profile;
client {
  sjcrouter {
    chap-secret "%@^***"; # SECRET-DATA;
  }
  boston {
    chap-secret "%@^***"; # SECRET-DATA;
  }
}
profile pap-profile;
client {
  sjcrouter {
    pap-password "%@^***"; # SECRET-DATA;
  }
  boston {
    pap-password "%@^***"; # SECRET-DATA;
  }
}
```

Configure the physical interface, including the access profile name to be used for PPP authentication:

```
[edit interfaces so-0/0/0]
ppp-options {
  pap {
    access-profile "pap-profile";
    local-name "rtrnum1";
    local-password "XXXXXXX"; #SECRET-DATA
    passive;
  }
}
```

Configure the logical interface, including the default PAP password to be used, should the access profile not be located during authentication:

```
[edit interfaces so-0/0/0]
encapsulation frame-relay;
unit 0 {
  dlci 100;
  encapsulation frame-relay-ppp;
  ppp-options {
    pap {
      local-name "rtrnum1";
      local-password "XXXXXXX"; #SECRET-DATA
      default-pap-password "XXXXX"; #SECRET-DATA
      passive;
    }
  }
}
```

Include the **pap** statement to trace PPP protocol operations:

```
[edit protocols]
ppp {
  traceoptions {
    flag {
      pap;
    }
  }
}
```

Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **monitor-session** statement.

```
[edit protocols ppp]
user@host# monitor-session (interface-name | all);
```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

Related Documentation *monitor-session*

Tracing Operations of the pppd Process

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code
- **mlppp**—Trace multilink point-to-point protocol code
- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code
- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related Documentation *traceoptions*

Configuring PPP Address and Control Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure compression of the Data Link Layer address and control fields, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. By default, the address and control fields are not compressed. This means PPP-encapsulated packets are transmitted with two 1-byte fields (0xff and 0x03). If you configure address and control field compression (ACFC) and ACFC is successfully negotiated with the local router's peer, the local router transmits packets without these 2 bytes. ACFC allows you to conserve bandwidth by transmitting less data.

On M320, M120, and T Series routers, ACFC is not supported for any ISO family protocols. Do not include the **acfc** statement at the **[edit interfaces *interface-name* ppp-options compression]** hierarchy level when you include the **family iso** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



NOTE: The address and control fields cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure ACFC:

1. In configuration mode, go to the **[edit interfaces *interface-name* ppp-options]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name ppp-options
```

2. Include the **compression** statement at the **[edit interfaces *interface-name* ppp-options]** hierarchy level, and specify **acfc**.

```
[edit interfaces interface-name ppp-options]
compression acfc;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **link flags** field for the physical interface. Successfully negotiated options are displayed in the **flags** field for the logical interface. In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
Physical interface: so-0/1/1, Enabled, Physical link is Up
Interface index: 133, SNMP ifIndex: 27
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: 0C3,
Loopback: None, FCS: 16
Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : No-Keepalives ACFC PFC
LCP state: Opened
```

```

NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
CoS queues      : 4 supported
Last flapped    : 2004-12-29 10:49:32 PST (00:18:35 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : None
SONET defects   : None
Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
  Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255

```

This configuration causes the local router to try to negotiate ACFC with its peer. If ACFC is successfully negotiated, the local router sends packets with compressed address and control fields. When you include the **compression acfc** statement in the configuration, the PPP session restarts, and the local router sends the ACFC option in the LCP Configure-Request packet. The ACFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then ACFC is negotiated. If ACFC is successfully negotiated, the local router can receive packets with or without the address and control bytes included.

Related Documentation

- [ppp-options on page 302](#)
- [compression on page 181](#)
- [acfc on page 145](#)

Configuring the PPP Protocol Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure protocol field compression. By default, the protocol field is not compressed. This means PPP-encapsulated packets are transmitted with a two-byte protocol field. For example, IPv4 packets are transmitted with the protocol field set to 0x0021, and MPLS packets are transmitted with the protocol field set to 0x0281.

For all protocols with identifiers in the range 0x0000 through 0x00ff, you can configure the router to compress the protocol field to one byte, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. Protocol field compression (PFC) allows you to conserve bandwidth by transmitting less data.



NOTE: The protocol field cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure PFC:

1. In configuration mode, go to the `[edit interfaces interface-name ppp-options]` hierarchy level.

`[edit]`

`user@host# edit interfaces interface-name ppp-options`

2. Include the **compression** statement at the `[edit interfaces interface-name ppp-options]` hierarchy level, and specify **pfc**.

`[edit interfaces interface-name ppp-options]`

compression pfc;

To monitor the configuration, issue the **show interfaces *interface-name*** command.

Configured options are displayed in the **link flags** field for the physical interface.

Successfully negotiated options are displayed in the **flags** field for the logical interface.

In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
```

```
Physical interface: so-0/1/1, Enabled, Physical link is Up
```

```
Interface index: 133, SNMP ifIndex: 27
```

```
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, FCS: 16,
```

```
Payload scrambler: Enabled
```

```
Device flags : Present Running
```

```
Interface flags: Point-To-Point SNMP-Traps 16384
```

```
Link flags : No-Keepalives ACFC PFC
```

```
LCP state: Opened
```

```
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
```

```
CHAP state: Not-configured
```

```
CoS queues : 4 supported
```

```
Last flapped : 2004-12-29 10:49:32 PST (00:18:35 ago)
```

```

Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : None
SONET defects   : None
Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
  Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255

```

This configuration causes the local router to try to negotiate PFC with its peer. If PFC is successfully negotiated, the local router sends packets with compressed protocol fields. When you include the **compression pfc** statement in the configuration, the PPP session restarts, and the local router sends the PFC option in the LCP Configure-Request packet. The PFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then PFC is negotiated. If PFC is successfully negotiated, the local router can receive packets with either 2-byte (uncompressed) or 1-byte (compressed) protocol fields.

Related Documentation

- [ppp-options on page 302](#)
- [compression on page 181](#)
- [pfc on page 296](#)

Configuring the Interface Speed

You can configure the interface speed on the following interfaces:

- [Configuring the Speed of Management Ethernet Interfaces on M Series and T Series Routers on page 87](#)
- [Configuring the Speed of Gigabit Ethernet Interfaces on J Series Routers on page 88](#)
- [Configuring the Speed of Fast Ethernet Interfaces on page 88](#)
- [Configuring the Speed of Tri-Rate Ethernet Copper Interfaces on page 89](#)
- [Configuring the Speed of SONET/SDH Interfaces on page 89](#)

Configuring the Speed of Management Ethernet Interfaces on M Series and T Series Routers

M Series routers, MX Series routers, T Series routers, and TX Series routers use one of two management Ethernet interface types, either **em** or **fxp**, dependent on the installed Routing Engine model. For information about management Ethernet interfaces and to determine the management Ethernet interface type for your router, see *Understanding Management Ethernet Interfaces and Supported Routing Engines by Router*.

By default, the M Series and T Series routers management Ethernet interface autonegotiates whether to operate at 10 megabits per second (Mbps) or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the **no-concatenate** statement in the **[edit chassis]** configuration hierarchy, as described in the *Junos OS Administration Library for Routing Devices*).

To configure the management Ethernet interface to operate at 10 Mbps or 100 Mbps, include the **speed** statement at the **[edit interfaces fxp0]** or **[edit interfaces em0]** hierarchy level:

```
[edit interfaces (fxp0 | em0)]
speed (10m | 100m);
```

For information about configuring the link mode, see *Configuring the Link Characteristics on Ethernet Interfaces*.

Configuring the Speed of Gigabit Ethernet Interfaces on J Series Routers

By default, Gigabit Ethernet interfaces (both built-in and PIMs) for J Series routers autonegotiate whether to operate at 10 megabits per second (Mbps), 100 Mbps, or 1000 Mbps.

To configure a J Series Gigabit Ethernet interface to operate at 10 Mbps, 100 Mbps, or 1000 Mbps, include the **speed** statement at the **[edit interfaces ge-pim/0/port]** hierarchy level:

```
[edit interfaces ge-pim/0/port]
speed (10m | 100m | 1g);
```

For information about configuring the link mode, see *Configuring the Link Characteristics on Ethernet Interfaces*.

Configuring the Speed of Fast Ethernet Interfaces

By default, both of the built-in Fast Ethernet ports on the M7i router FIC autonegotiate whether to operate at 10 Mbps or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the **no-concatenate** statement at the **[edit chassis]** hierarchy level, as described in the *Junos OS Administration Library for Routing Devices*).

If the link partner does not support autonegotiation, configure either Fast Ethernet port manually to match its link partner's speed and link mode. When the link mode is configured, autonegotiation is disabled.



NOTE: When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.

To configure a Fast Ethernet port on the FIC to operate at 10 Mbps or 100 Mbps, include the **speed** statement at the **[edit interfaces fe-fpc/pic/port]** hierarchy level:

```
[edit interfaces fe-fpc/pic/port]
speed (10m | 100m);
```

For information about configuring the link mode, see *Configuring the Link Characteristics on Ethernet Interfaces*.

Configuring the Speed of Tri-Rate Ethernet Copper Interfaces

By default, the Tri-Rate Ethernet copper interfaces on MX Series routers operate at 1 Gbps. Tri-Rate Ethernet copper interfaces can also be configured to operate at 10 Mbps, 100 Mbps, or 1 Gbps.



NOTE: When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.



NOTE: Half-duplex mode is not supported on Tri-Rate Ethernet copper interfaces. When you include the `speed` statement, you must include the `link-mode full-duplex` statement at the same hierarchy level.

To configure a Tri-Rate Ethernet copper interface to operate at 10 Mbps, 100 Mbps, or 1 Gbps, include the `speed` statement at the `[edit interfaces ge-fpc/pic/port]` hierarchy level:

```
[edit interfaces ge-fpc/pic/port]
speed (10m | 100m | 1g);
```

For information about configuring the link mode, see *Configuring the Link Characteristics on Ethernet Interfaces*.

Configuring the Speed of SONET/SDH Interfaces

You can configure the speed of SONET/SDH interfaces on next-generation SONET/SDH Type 1 and Type 2 PICs with SFP. The speed you select is dependent upon whether the PIC is in concatenated or nonconcatenated mode. In concatenated mode, the bandwidth of the interface is in a single channel. In nonconcatenated mode, the PIC operates in channelized (multiplexed) mode.

Table 17 on page 89 shows the mode combinations for the next-generation SONET/SDH Type 1 PICs with SFP.

Table 17: Type 1 PIC Mode Combinations

PIC	Mode	Speed Configuration	Default Mode
2-port OC3	2xOC3 concatenated	<code>fpc/pic/0 speed oc3</code>	concatenated
4-port OC3	1xOC12 concatenated	<code>fpc/pic/0 speed oc12</code>	—
	1xOC12 nonconcatenated	<code>fpc/pic/0:0 speed oc3</code>	nonconcatenated
	4xOC3 concatenated	<code>fpc/pic/port speed oc3</code>	concatenated

Table 17: Type 1 PIC Mode Combinations (*continued*)

PIC	Mode	Speed Configuration	Default Mode
1-port OC12	1xOC12 concatenated	<i>fpc/pic/0 speed oc12</i>	concatenated
	1xOC12 nonconcatenated	<i>fpc/pic/0:0 speed oc3</i>	nonconcatenated
	1xOC3 concatenated	<i>fpc/pic/0 speed oc3</i>	—

Table 18 on page 90 shows the mode combinations for the next-generation SONET/SDH Type 2 PICs with SFP.

Table 18: Type 2 PIC Mode Combinations

PIC	Mode	Speed Configuration	Default Mode
1-port OC48, IQ and IQE	1xOC48 concatenated	<i>fpc/pic/0 speed oc48</i>	concatenated
	1xOC48 nonconcatenated	<i>fpc/pic/0:0 speed oc12</i>	nonconcatenated
	1xOC12 concatenated	<i>fpc/pic/0 speed oc12</i>	—
	1xOC12 nonconcatenated	<i>fpc/pic/0 0 speed oc3</i>	—
	1xOC3 concatenated	<i>fpc/pic/0 speed oc3</i>	—
4-port OC12, IQ and IQE	1xOC48 concatenated	<i>fpc/pic/0 speed oc48</i>	—
	1xOC48 nonconcatenated	<i>fpc/pic/0:0 speed oc12</i>	nonconcatenated
	1xOC12 nonconcatenated	<i>fpc/pic/0 speed oc3</i>	—
	4xOC12 concatenated	<i>fpc/pic/port speed oc3 oc12</i>	concatenated
4-port OC3, IQ and IQE	1xOC12 concatenated	<i>fpc/pic/0 speed oc12</i>	—
	1xOC12 nonconcatenated	<i>fpc/pic/0:0 speed oc3</i>	nonconcatenated
	4xOC3 concatenated	<i>fpc/pic/port speed oc3</i>	concatenated

By default, SONET/SDH PICs operate in concatenated mode. To specify interface speed in concatenated mode, include the **speed** statement with options at the **[edit interfaces so-fpc/pic/port]** hierarchy level:

```
[edit interfaces so-fpc/pic/port]
speed (oc3 | oc12 | oc48);
```

For example, each port of the 4-port OC12 PIC can be configured to be in OC3 or OC12 speed independently when this PIC is in 4xOC12 concatenated mode.

To specify interface speed in nonconcatenated mode, include the **speed** statement at the **[edit interfaces so-fpc/pic/port.channel]** hierarchy level:

```
[edit interfaces so-fpc/pic/port.channel]
speed (oc3 | oc12);
```

To configure the PIC to operate in channelized (multiplexed) mode, include the **no-concatenate** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level.

For more information about using the **no-concatenate** statement, see the *Junos OS Administration Library for Routing Devices*.

Configuring Keepalives

By default, physical interfaces configured with Cisco HDLC or PPP encapsulation send keepalive packets at 10-second intervals. The Frame Relay term for keepalives is LMI packets; the Junos OS supports both ANSI T1.617 Annex D LMIs and ITU Q933 Annex A LMIs. On ATM networks, OAM cells perform the same function. You configure OAM cells at the logical interface level; for more information, see *Defining the ATM OAM F5 Loopback Cell Period*.

To disable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces interface-name]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement at the **[edit interfaces interface-name]** hierarchy level.

```
[edit interfaces interface-name]
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with Cisco HDLC encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces interface-name]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation cisco-hdlc-tcc** statement at the **[edit interfaces interface-name]** hierarchy level.

```
[edit interfaces interface-name]
encapsulation cisco-hdlc-tcc;
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with PPP encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces interface-name]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation ppp-tcc** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]  
encapsulation ppp-tcc;  
no-keepalives;
```

For more information about translation cross-connections, see Circuit and Translational Cross-Connects Overview.

When you configure PPP over ATM or Multilink PPP over ATM encapsulation, you can enable or disable keepalives on the logical interface. For more information, see Configuring PPP over ATM2 Encapsulation.

To explicitly enable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]  
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]  
keepalives;
```

To change one or more of the default keepalive values:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]  
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement with the appropriate option as **interval *seconds***, **down-count *number***, and the **up-count *number***.

```
[edit interfaces interface-name]  
keepalives;  
keepalives <interval seconds> <down-count number> <up-count number>;
```

On interfaces configured with Cisco HDLC or PPP encapsulation, you can include the following three keepalive statements; note that Frame Relay encapsulation is not affected by these statements:

- **interval *seconds***—The time in seconds between successive keepalive requests. The range is from 1 second through 32767 seconds, with a default of 10 seconds.
- **down-count *number***—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is from 1 through 255, with a default of 3.
- **up-count *number***—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is from 1 through 255, with a default of 1.



CAUTION: If interface keepalives are configured on an interface that does not support the keepalives configuration statement (for example, 10-Gigabit Ethernet), the link layer may go down when the PIC is restarted. Avoid configuring the keepalives on interfaces that do not support the keepalives configuration statement.

For information about Frame Relay keepalive settings, see *Configuring Frame Relay Keepalives*.

On MX Series routers with Modular Port Concentrators/Modular Interface Cards (MPCs/MICs), the Packet Forwarding Engine on an MPC/MIC processes and responds to Link Control Protocol (LCP) Echo-Request keepalive packets that the PPP subscriber (client) initiates and sends to the router. The mechanism by which LCP Echo-Request packets are processed by the Packet Forwarding Engine instead of by the Routing Engine is referred to as *PPP fast keepalive*. For more information about how PPP fast keepalive works on an MX Series router with MPCs/MICs, see the *Junos OS Subscriber Access Configuration Guide*.

Related Documentation

- *Defining the ATM OAM F5 Loopback Cell Period*
- *Disabling the Sending of PPPoE Keepalive Messages*
- *Understanding How the Router Processes Subscriber-Initiated PPP Fast Keepalive Requests*
- [keepalives on page 240](#)
- [no-keepalives on page 279](#)
- *Configuring Frame Relay Keepalives*
- *Circuit and Translational Cross-Connects Overview*
- *Configuring PPP over ATM2 Encapsulation*

Configuring the Clock Source

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

To set the clock source as external or internal:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **clocking** option as external or internal.

```
[edit interfaces interface-name]
user@host# set clocking (external | internal)
```



NOTE: M7i and M10i routers do not support external clocking of SONET interfaces.



NOTE: On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to external, then you must set the child controller clocks to the default value—that is, internal.

For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to external, then you must not configure the CE1 interface (which is the child controller) clock to external. Instead you must configure the CE1 interface clock to internal.

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120, and M320 routers and on the T Series routers, see *Junos OS Administration Library for Routing Devices, Configuring the Junos OS to Support an External Clock Synchronization Interface for M Series and T Series Routers*.

For information about configuring Synchronous Ethernet on MX80, MX240, MX480, and MX960 3D Universal Edge Routers, see *Junos OS Administration Library for Routing Devices, Synchronous Ethernet Overview* and *Configuring Clock Synchronization Interface on MX Series Routers*.

**Related
Documentation**

- *Configuring an External Synchronization Interface*
- [clocking on page 178](#)
- [Clock Source Overview on page 15](#)
- *Configuring the Junos OS to Support an External Clock Synchronization Interface for M Series and T Series Routers*
- *Synchronous Ethernet Overview*
- *Configuring Clock Synchronization Interface on MX Series Routers*

Configuring the Router as a DCE with Frame Relay Encapsulation

By default, when you configure an interface with Frame Relay encapsulation, the routing platform is assumed to be data terminal equipment (DTE). That is, the routing platform is assumed to be at a terminal point on the network.

When you configure the router to be a data circuit-terminating equipment (DCE), keepalives are disabled by default.

To configure the router to be DCE:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **dce** option to respond to Frame Relay status enquiry messages.

```
[edit interfaces interface-name]
user@host# set dce
```

Perform one of the following tasks for back-to-back Frame Relay connections:

- Disable sending of keepalives on both sides of the connection.
- Configure one side of the connection as a DTE (the default Junos configuration) by removing the **dce** statement from the configuration and the other as a DCE.

Related Documentation

- [dce on page 191](#)

Configuring Receive and Transmit Leaky Bucket Properties

You can configure leaky bucket properties which allow you to limit the amount of traffic received on and transmitted by a particular interface. You can specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.

To configure leaky bucket properties:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **receive-bucket** statement.

```
[edit interfaces interface-name]
user@host# set receive-bucket
```

3. Configure the **overflow** option, the **threshold** option, and the **rate** option for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.

```
[edit interfaces interface-name receive-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

4. Configure the **transmit-bucket** statement.

```
[edit interfaces interface-name]
user@host# set transmit-bucket
```

5. Configure the **overflow** option, the **threshold** option, and the **rate** option for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.

```
[edit interfaces interface-name transmit-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

**Related
Documentation**

- [Receive and Transmit Leaky Bucket Properties Overview on page 16](#)
- [SONET/SDH Physical Interface Properties Overview](#)
- [receive-bucket on page 310](#)
- [transmit-bucket on page 351](#)

Configuring Accounting for the Physical Interface

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management Administration Guide for Routing Devices*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policy Feature Guide for Routing Devices*.

Applying an Accounting Profile to the Physical Interface

To enable accounting on an interface, include the **accounting-profile** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
  accounting-profile name;
```

You can also reference profiles by logical unit; for more information, see *Configuring Accounting for the Logical Interface*.

Example: Applying an Accounting Profile to the Physical Interface

Configure an accounting profile for an interface and apply it to a physical interface:

```
[edit]  
  accounting-options {  
    file if_stats {  
      size 4m files 10 transfer-interval 15;  
      archive-sites {  
        "ftp://login:password@host/path";  
      }  
    }  
  }  
  interface-profile if_profile {  
    interval 15;  
    file if_stats {  
      fields {  
        input-bytes;  
        output-bytes;  
        input-packets;  
        output-packets;  
        input-errors;  
        output-errors;  
      }  
    }  
  }  
}  
[edit interfaces ge-1/0/1]  
  accounting-profile if_profile;
```

Configuring Multiservice Physical Interface Properties

The adaptive services (AS), collector, monitoring services, and monitoring services II interfaces are multiservice interfaces specifically designed to enable IP services. To configure multiservice physical interface properties on the collector, monitoring services, and AS interfaces, include the **multiservice-options** statement:

```
multiservice-options {  
  (core-dump | no-core-dump);  
  (syslog | no-syslog);  
  flow-control-options {  
    down-on-flow-control;  
    dump-on-flow-control;  
    reset-on-flow-control;  
  }  
}
```

```
}
```

You can include these statements at the following hierarchy levels:

- `[edit interfaces cp-fpc/pic/port]`
- `[edit interfaces mo-fpc/pic/port]`
- `[edit interfaces sp-fpc/pic/port]`

For more information about the services interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

Damping Shorter Physical Interface Transitions

By default, when an interface changes from being up to being down, or from down to up, this transition is advertised immediately to the hardware and Junos OS. In some situations—for example, when an interface is connected to an add/drop multiplexer (ADM) or wavelength-division multiplexer (WDM), or to protect against SONET/SDH framer holes—you might want to damp interface transitions. This means not advertising the interface's transition until a certain period of time has passed, called the *hold-time*. When you have damped interface transitions and the interface goes from up to down, the interface is not advertised to the rest of the system as being down until it has remained down for the hold-time period. Similarly, when an interface goes from down to up, it is not advertised as being up until it has remained up for the hold-time period. For information about physical interface damping, see [“Physical Interface Damping Overview” on page 19](#).

This task applies to damping shorter physical interface transitions in milliseconds. To damp longer physical interface transitions in seconds, see [“Damping Longer Physical Interface Transitions” on page 99](#).

To configure damping of shorter physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port*:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the hold-time for link up and link down.

```
[edit interfaces interface-name]
user@host# set hold-time up milliseconds down milliseconds
```

The hold time can be a value from 0 through 4,294,967,295 milliseconds. The default value is 0, which means that interface transitions are not damped. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

For most Ethernet interfaces, hold timers are implemented using a one-second polling algorithm. For 1-port, 2-port, and 4-port Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs), hold timers are interrupt-driven.



NOTE: The *hold-time* option is not available for controller interfaces.

- Related Documentation**
- [Physical Interface Damping Overview on page 19](#)
 - [Damping Longer Physical Interface Transitions on page 99](#)
 - [SONET/SDH Defect Hold Times Overview](#)
 - [Configuring SONET/SDH Defect Triggers](#)
 - [hold-time on page 227](#)

Damping Longer Physical Interface Transitions

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. An unstable link between a router interface and the transport devices can lead to periodic flapping. Longer flaps occur with a period of about five seconds or more, with an up-and-down duration of one second. For these longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level **max-suppress**, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.



NOTE: The system does not indicate whether an interface is down due to suppression or the actual state of the physical interface.

You can view the damping parameters with the **show interfaces extensive** command.

To configure damping of longer physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port* or an interface range:

```
[edit]
user@host# edit interfaces interface-name
```

2. Enable longer interface transition damping on a physical interface:

```
[edit interfaces interface-name damping]
user@host# set enable
```

3. (Optional) Set the maximum time in seconds that an interface can be suppressed no matter how unstable the interface has been.



NOTE: Configure **max-suppress** to a value that is greater than the value of **half-life**; otherwise, the configuration is rejected.

```
[edit interfaces interface-name damping]
user@host# set max-suppress maximum-seconds
```

4. (Optional) Set the decay half-life in seconds, which is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.



NOTE: Configure `max-suppress` to a value that is greater than the value of `half-life`; otherwise, the configuration is rejected.

[edit interfaces *interface-name* damping]
user@host# **set half-life seconds**

5. (Optional) Set the reuse threshold (no units). When the accumulated interface penalty counter falls below this value, the interface is no longer suppressed.

[edit interfaces *interface-name* damping]
user@host# **set reuse number**

6. (Optional) Set the suppression threshold (no units). When the accumulated interface penalty counter exceeds this value, the interface is suppressed.

[edit interfaces *interface-name* damping]
user@host# **set suppress number**

**Related
Documentation**

- [Physical Interface Damping Overview on page 19](#)
- [show interfaces extensive on page 728](#)
- [Damping Shorter Physical Interface Transitions on page 98](#)
- [damping on page 187](#)

Example: Configuring Interface Damping

This example shows how to configure damping for a physical interface on a PTX Series Packet Transport Router.

- [Requirements on page 100](#)
- [Overview on page 101](#)
- [Configuration on page 101](#)
- [Verification on page 102](#)

Requirements

This example uses the following hardware and software components:

- One PTX Series Packet Transport Router
- One or more routers that provide input packets and receive output packets
- Junos OS Release 14.1 or later

Overview

Physical interface damping provides a smoothing of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into these categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds). For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the interface is not advertised to the rest of the system as being down until it has remained down for the hold-down timer period. Similarly, when a hold-up timer is configured and an interface goes from down to up, it is not advertised as being up until it has remained up for the hold-up timer period.
- Periodic flaps of long duration (seconds). For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface state up transitions are not reported to the upper-level protocols.

Configuration

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set interfaces xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333 suppress
4444
```

Step-by-Step Procedure To configure damping on the PTX Series Packet Transport Router:

1. Enable damping on the interface, set the half-life interval, maximum suppression, reuse, and suppress values:

```
[edit interface]
user@router# set xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333
suppress 4444
```

2. Commit configuration:

```
[edit]
user@router# commit
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@router# show interfaces
xe-6 {
  damping {
    half-life 11;
    max-suppress 2222;
    reuse 3333;
    suppress 4444;
  }
}
```

Verification

To confirm that the configuration is working properly, perform this task:

- [Verifying Interface Damping on xe6 on page 102](#)

Verifying Interface Damping on xe6

Purpose Verify that damping is enabled on the interface and that the damping parameter values are correctly set.

Action From operational mode, run the **show interfaces extensive** command.

```
user@router# run show interfaces xe-6/0/0 extensive
Physical interface: xe-6/0/0, Enabled, Physical link is Up
  Interface index: 158, SNMP ifIndex: 535, Generation: 161
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 11 sec, max-suppress: 2222 sec, reuse: 3333,
suppress: 4444, state: unsuppressed
```

Meaning Damping is enabled and configured successfully on the xe-6 interface.

Related Documentation

- [Physical Interface Damping Overview on page 19](#)
- [damping on page 187](#)

Enabling or Disabling SNMP Notifications on Physical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. You can enable or disable these notification based on you requirements.

To explicitly enable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **traps** option to enable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set traps
```

To disable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **no-traps** option to disable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set no-traps
```



NOTE: Gigabit Ethernet interfaces on J Series routers do not support SNMP.

Related
Documentation

- [traps on page 353](#)

Enabling Unidirectional Traffic Flow on Physical Interfaces

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

To enable unidirectional link mode on a physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
```

```
user@host# edit interfaces interface-name
```

2. Configure the **unidirectional** option to create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface.

```
[edit interfaces interface-name]
user@host# set unidirectional
```



NOTE: Unidirectional link mode is currently supported on only the following hardware:

- 4–port 10–Gigabit Ethernet DPC on the MX960 router
- 10–Gigabit Ethernet IQ2 PIC and 10–Gigabit Ethernet IQ2E PIC on the T Series router

Related
Documentation

- [unidirectional on page 356](#)
- [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 17](#)

Disabling a Physical Interface

You can disable a physical interface, marking it as being down, without removing the interface configuration statements from the configuration. To do this, include the **disable** statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]
disable;
```



CAUTION: Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.



NOTE: On the router, when you use the **disable** statement at the `edit interfaces` hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet PICs with SFP and XFP transceivers do support it and the laser will be turned off when the interface is disabled.

Table 19: Effect of `set interfaces disable <interface_name>` on T series PICs

PIC Model Number	PIC Description	Type of PIC	Behaviour
PF-12XGE-SFP	10-Gigabit Ethernet LAN/WAN PIC with SFP+ (T4000 Router)	5	Tx laser disabled

Table 19: Effect of set interfaces disable <interface_name> on T series PICs (*continued*)

PIC Model Number	PIC Description	Type of PIC	Behaviour
PF-24XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with Oversubscription and SFP+ (T4000 Router)	5	Tx laser disabled
PF-1CGE-CFP	100-Gigabit Ethernet PIC with CFP (T4000 Router)	5	Tx laser disabled
PD-4XGE-XFP	10-Gigabit Ethernet, 4-port LAN/WAN XFP	4	Tx laser disabled
PD-5-10XGE-SFPP	10-Gigabit LAN/WAN with SFP+	4	Tx laser disabled
PD-1XLE-CFP	40-Gigabit with CFP	4	Tx laser disabled
PD-1CE-CFP-FPC4	100-Gigabit with CFP	4	Tx laser disabled
PD-TUNNEL	40-Gigabit Tunnel Services	4	NA
PD-4OC192-SON-XFP	OC192/STM64, 4-port XFP	4	Tx laser not disabled
PD-1OC768-SON-SR	OC768c/STM256, 1-port	4	Tx laser not disabled



WARNING: Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

Example: Disabling a Physical Interface

Sample interface configuration:

```
[edit interfaces]
user@host# show
ge-0/3/2 {
  unit 0 {
    description CE2-to-PE1;
    family inet {
      address 20.1.1.6/24;
    }
  }
}
```

Disabling the interface:

```
[edit interfaces]
user@host# set ge-0/3/2 disable
```

Verifying the interface configuration:

```
[edit interfaces]
user@host# show
```

```
ge-0/3/2 {  
  disable; # Interface is marked as disabled.  
  unit 0 {  
    description CE2-to-PE1;  
    family inet {  
      address 20.1.1.6/24;  
    }  
  }  
}
```

Example: Adding an Interface Alias Name

This example shows how to add an alias name to the logical unit of an interface. Adding an alias name enables effective, streamlined identification of interfaces in the operational mode commands that are run on the controller and satellites in a JNU management network.

- [Requirements on page 106](#)
- [Overview on page 106](#)
- [Configuration on page 106](#)
- [Verification on page 109](#)

Requirements

This example uses the following hardware and software components:

- One MX Series router that acts as a controller
- One EX4200 switch that acts as a satellite device
- Junos OS Release 13.3R1 or later

Overview

You can include an alias name of each logical unit on a physical interface in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands. Configuring an alias for a logical unit of an interface has no effect on how the interface on the router or switch operates.

Configuration

Consider a scenario in which alias names are configured on the interfaces of a JNU controller that are connected to a satellite, sat1, in the downlink direction in the JNU management network by using two links. The alias names enable effective, streamlined identification of these interfaces in the operational mode commands that are run on the controller and satellites.

- [Configuring Alias Names for the Controller Interfaces on page 107](#)
- [Results on page 108](#)

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network

configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

```
set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 10.0.0.1/24
set interfaces ae1 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 192.0.2.128/25
set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
set interfaces ge-0/0/0.0 vlan-id 101
set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
set interfaces ge-0/1/0 gigether-options 802.3ad ae0
set interfaces ge-0/1/1 gigether-options 802.3ad ae0
set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

Configuring Alias Names for the Controller Interfaces

Step-by-Step Procedure The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To add an alias name to the controller interfaces that are used to connect to the satellite devices in the downlink direction:

1. Configure an alias name for the logical unit of an aggregated Ethernet interface that is used to connect to a satellite, sat1, in the downlink direction. Configure **inet** family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
user@host# set interfaces ae0.0 family inet address 10.0.0.1/24
```

2. Configure an alias name for the logical unit of another aggregated Ethernet interface that is used to connect to the same satellite, sat1, in downlink direction. Configure **INET** family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 1 alias "controller-sat1-downlink2"
user@host# set interfaces ae0.0 family inet address 10.0.0.3/24
```

3. Configure an alias name for the Gigabit Ethernet interface on the controller and configure its parameters.

```
[edit]
user@host# set interfaces ge-0/0/0 vlan-tagging
user@host# set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
user@host# set interfaces ge-0/0/0.0 vlan-id 101
user@host# set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
```

4. Configure Gigabit Ethernet interfaces to be member links of an **ae-** logical interface.

```
[edit]
user@host# set interfaces ge-0/1/0 gigether-options 802.3ad ae0
user@host# set interfaces ge-0/1/1 gigether-options 802.3ad ae0
```

5. Configure RIP in the network between the controller and the firewall gateway.

```
[edit]
```

```
user@host# set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

Results

In configuration mode, confirm your configuration by entering the **show** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
interfaces {
  ae0 {
    unit 0 {
      alias "controller-sat1-downlink1";
      family inet {
        address 10.0.0.1/24;
      }
    }
    unit 1 {
      alias "controller-sat1-downlink2";
      family inet {
        address 10.0.0.3/24;
      }
    }
  }
  ge-0/0/0 {
    vlan-tagging;
    unit 0 {
      alias "ge-to-corp-gw1";
      vlan-id 101;
      family inet {
        address 1.1.1.1/23;
      }
    }
  }
  ge-0/1/0 {
    gigether-options {
      802.3ad ae0;
    }
  }
  ge-0/1/1 {
    gigether-options {
      802.3ad ae0;
    }
  }
}
protocols rip {
  group corporate-firewall {
    neighbor ge-to-corp-gw1;
  }
}
```

After you have confirmed that the interfaces are configured, enter the **commit** command in configuration mode.

Verification

To verify that the alias name is displayed instead of the interface name, perform these steps:

- [Verifying the Configuration of the Alias Name for the Controller Interfaces on page 109](#)

Verifying the Configuration of the Alias Name for the Controller Interfaces

Purpose Verify that the alias name is displayed instead of the interface name.

Action Display information about all RIP neighbors.

```
user@router> show rip neighbor
```

Neighbor	Local State	Source Address	Destination Address	Send Mode	Receive Mode	In Met
ge-to-corp-gw1	DN	(null)	255.255.255.255	mcast	both	1

Meaning The output displays the details of the benchmarking test that was performed. For more information about the **show rip neighbor** operational command, see **show rip neighbor** in the [CLI Explorer](#).

Related Documentation

- [Interface Alias Names Overview on page 18](#)
- [alias on page 152](#)

CHAPTER 3

Network Interfaces Configuration Statements and Hierarchy

- [\[edit interfaces\] Hierarchy Level on page 111](#)
- [\[edit logical-systems\] Hierarchy Level on page 127](#)
- [\[edit protocols ppp\] Hierarchy Level on page 132](#)
- [\[edit protocols pppoe\] Hierarchy Level on page 132](#)

[\[edit interfaces\] Hierarchy Level](#)

The statements at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level can also be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.



NOTE: The `accounting-profile` statement is an exception to this rule. The `accounting-profile` statement can be configured at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level, but it cannot be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
        }
        (revertive | non-revertive);
        periodic interval;
        system-priority priority;
      }
    }
  }
}
```

```
}
link-protection;
link-speed speed;
(loopback | no-loopback);
mc-ae{
    chassis-id chassis-id;
    mc-ae-id mc-ae-id;
    mode (active-active | active-standby);
    redundancy-group group-id;
    status-control (active | standby);
}
minimum-links number;
source-address-filter {
    mac-address;
}
(source-filtering | no-source-filtering);
}
shared-scheduler;
aggregated-sonet-options {
    link-speed speed | mixed;
    minimum-links number;
}
atm-options {
    cell-bundle-size cells;
    ilmi;
    linear-red-profiles profile-name {
        high-plp-max-threshold percent;
        low-plp-max-threshold percent;
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;
    }
}
mpls {
    pop-all-labels {
        required-depth number;
    }
}
pic-type (atm1 | atm2);
plp-to-clp;
promiscuous-mode {
    vpi vpi-identifier;
}
scheduler-maps map-name {
    forwarding-class class-name {
        epd-threshold cells plp1 cells;
        linear-red-profile profile-name;
        priority (high | low);
        transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
}
}
use-null-cw;
vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
        down-count cells;
        up-count cells;
    }
}
```



```

oam-period (seconds | disable);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
}
clocking clock-source;
damping {
    enable;
    half-life seconds;
    max-suppress seconds;
    reuse number;
    suppress number;
}
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;

```

```
}
description text;
alias alias-name;
dialer-options {
    pool pool-name <priority priority>;
}
disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
```

```

    pop-all-labels {
        required-depth number;
    }
}
source-address-filter {
    mac-address;
}
(source-filtering | no-source-filtering);
}
flexible-vlan-tagging;
gigether-options {
    802.3ad aex;
    (asynchronous-notification | no-asynchronous-notification);
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
    auto-reconnect seconds;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
}
no-auto-mdix;
source-address-filter {
    mac-address;
}
(source-filtering | no-source-filtering);
ethernet-switch-profile {
    (mac-learn-enable | no-mac-learn-enable);
    tag-protocol-id [ tpids ];
    ethernet-policer-profile {
        input-priority-map {
            ieee802.1p premium [ values ];
        }
        output-priority-map {
            classifier {
                premium {
                    forwarding-class class-name {
                        loss-priority (high | low);
                    }
                }
            }
        }
    }
}
policer cos-policer-name {
    aggregate {
        bandwidth-limit bps;
        burst-size-limit bytes;
    }
    premium {
        bandwidth-limit bps;
        burst-size-limit bytes;
    }
}
}
}

```

```

    }
  }
  (gratuitous-arp-reply | no-gratuitous-arp-reply);
  hold-time up milliseconds down milliseconds;
  ima-group-options {
    differential-delay number;
    frame-length (32 | 64 | 128 | 256);
    frame-synchronization {
      alpha number;
      beta number;
      gamma number;
    }
    minimum-links number;
    symmetry (symmetrical-config-and-operation |
      symmetrical-config-asymmetrical-operation);
    test-procedure {
      ima-test-start;
      ima-test-stop;
      interface name;
      pattern number;
      period number;
    }
    transmit-clock (common | independent);
    version (1.0 | 1.1);
  }
  ima-link-options group-id group-id;
  interface-set interface-set-name {
    interface ethernet-interface-name {
      (unit unit-number | vlan-tags-outer vlan-tag);
    }
    interface interface-name {
      (unit unit-number);
    }
  }
  isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
  }
  keepalives <down-count number> <interval seconds> <up-count number>;
  link-mode mode;
  lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
  }

```

```

}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    drop-timeout milliseconds;
    fragment-threshold bytes;
    cisco-interoperability send-lip-remove-link-for-link-reject;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multi-chassis-protection {
    peer a.b.c.d {
        interface interface-name;
    }
}
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
no-vpivci-swapping;
otn-options {
    fec (efec | gfec | none);
    (laser-enable | no-laser-enable);
    (line-loopback | no-line-loopback);
    pass-thru;
    rate (fixed-stuff-bytes | no-fixed-stuff-bytes | pass-thru);
    transmit-payload-type number;
    trigger (oc-lof | oc-lom | oc-los | oc-wavelength-lock | odu-ais | odu-bbe-th | odu-bdi
        | odu-es-th | odu-lck | odu-oci | odu-sd | odu-ses-th | odu-ttim | odu-uas-th |

```

```

    opu-ptm | otu-ais | otu-bbe-th | otu-bdi | otu-es-th | otu-fec-deg | otu-fec-exe |
    otu-iae | otu-sd | otu-ses-th | otu-ttim | otu-uas-th);
tti;
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        compression;
    }
}
psn-vcip psn-vci-identifier;
psn-vpip psn-vpi-identifier;
receive-bucket {
    overflow (discard | tag);
    rate percentage;
    threshold bytes;
}
redundancy-options {
    priority sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
    hot-standby;
}
satop-options {
    payload-size n;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);

```

```

control-polarity (negative | positive);
cts-polarity (negative | positive);
dcd-polarity (negative | positive);
dce-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
}
dsr-polarity (negative | positive);
dte-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
}
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
    session-limit {
        maximum number;
        rate new-sessions-per-second;
    }
    syslog {
        host hostname {
            facility-override facility-name;
            log-prefix prefix-number;
            services priority-level;
        }
    }
}
shdsl-options {
    annex (annex-a | annex-b);
    line-rate line-rate;
    loopback (local | remote);
    snr-margin {

```

```
    current margin;  
    snext margin;  
  }  
}  
sonet-options {  
  aggregate asx;  
  aps {  
    advertise-interval milliseconds;  
    annex-b;  
    authentication-key key;  
    fast-aps-switch;  
    force;  
    hold-time milliseconds;  
    lockout;  
    neighbor address;  
    paired-group group-name;  
    preserve-interface;  
    protect-circuit group-name;  
    request;  
    revert-time seconds;  
    switching-mode (bidirectional | unidirectional);  
    working-circuit group-name;  
  }  
  bytes {  
    c2 value;  
    e1-quiet value;  
    f1 value;  
    f2 value;  
    s1 value;  
    z3 value;  
    z4 value;  
  }  
  fcs (16 | 32);  
  loopback (local | remote);  
  mpls {  
    pop-all-labels {  
      required-depth number;  
    }  
  }  
  }  
  path-trace trace-string;  
  (payload-scrambler | no-payload-scrambler);  
  rfc-2615;  
  trigger {  
    defect ignore;  
    hold-time up milliseconds down milliseconds;  
  }  
  vtmapping (itu-t | klm);  
  (z0-increment | no-z0-increment);  
}  
speed (10m | 100m | 1g | oc3 | oc12 | oc48);  
stacked-vlan-tagging;  
switch-options {  
  switch-port port-number {  
    (auto-negotiation | no-auto-negotiation);  
    speed (10m | 100m | 1g);  
    link-mode (full-duplex | half-duplex);  
  }  
}
```



```

    }
  }
  t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
  }
  t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
      value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
  }
  traceoptions {
    flag flag <flag-modifier> <disable>;
  }
  transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
  }
  (traps | no-traps);
  unidirectional;
  vlan-tagging;
  vlan-vci-tagging;
  unit logical-unit-number {
    accept-source-mac {
      mac-address mac-address {
        policer {
          input cos-policer-name;

```

```
        output cos-policer-name;
    }
}
}
accounting-profile name;
advisory-options {
    downstream-rate rate;
    upstream-rate rate;
}
allow-any-vci;
atm-scheduler-map (map-name | default);
backup-options {
    interface interface-name;
}
bandwidth rate;
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        maximum-contexts number <force>;
        queues [ queue-numbers ];
        port {
            minimum port-number;
            maximum port-number;
        }
    }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
    underlying-interface interface-name;
}
description text;
alias alias-name;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    incoming-map {
        caller (caller-id | accept-all);
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
```

```

        [ routes ];
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    down-count cells;
    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {

```

```
    access-profile name;  
    default-chap-secret name;  
    local-name name;  
    passive;  
}  
compression {  
    acfc;  
    pfc;  
    pap;  
    default-pap-password password;  
    local-name name;  
    local-password password;  
    passive;  
}  
dynamic-profile profile-name;  
lcp-max-conf-req number;  
lcp-restart-timer milliseconds;  
loopback-clear-timer seconds;  
ncp-max-conf-req number;  
ncp-restart-timer milliseconds;  
}  
pppoe-options {  
    access-concentrator name;  
    auto-reconnect seconds;  
    (client | server);  
    service-name name;  
    underlying-interface interface-name;  
}  
proxy-arp;  
service-domain (inside | outside);  
shaping {  
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate  
    burst length);  
    queue-length number;  
}  
short-sequence;  
transmit-weight number;  
(traps | no-traps);  
trunk-bandwidth rate;  
trunk-id number;  
tunnel {  
    backup-destination address;  
    destination address;  
    key number;  
    routing-instance {  
        destination routing-instance-name;  
    }  
    source source-address;  
    ttl number;  
}  
vci vpi-identifier.vci-identifier;  
vci-range start start-vci end end-vci;  
vpi vpi-identifier;  
vlan-id number;  
vlan-id-list [vlan-id vlan-id-vlan-id];  
vlan-id-range number-number;
```

```

vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];
family family {
  accounting {
    destination-class-usage;
    source-class-usage {
      direction;
    }
  }
  access-concentrator name;
  address address {
    destination address;
  }
  bundle ml-fpc/pic/port | ls-fpc/pic/port);
  direct-connect;
  duplicate-protection;
  dynamic-profile profile-name;
  filter {
    group filter-group-number;
    input filter-name;
    input-list {
      [filter-names ];
      output filter-name;
    }
    output-list {
      [filter-names ];
    }
  }
  ipsec-sa sa-name;
  keep-address-and-control;
  max-sessions number;
  max-sessions-vs-a-ignore;
  mtu bytes;
  multicast-only;
  negotiate-address;
  no-redirects;
  policer {
    arp policer-template-name;
    disable-arp-policer
    input policer-template-name;
    output policer-template-name;
  }
  primary;
  proxy inet-address address;
  receive-options-packets;
  receive-ttl-exceeded;
  remote (inet-address address | mac-address address);
  rpf-check {
    fail-filter filter-name;
    mode loose;
  }
  sampling {
    direction;
  }
  service {
    input {

```

```

    service-set service-set-name <service-filter filter-name>;
    post-service-filter filter-name;
  }
  output {
    service-set service-set-names <service-filter filter-name>;
  }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
  maximum-seconds>;
targeted-broadcast {
  forward-and-send-to-re;
  forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
  profile-name | preferred-source-address address>;
address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
  multipoint-destination address {
    epd-threshold cells plp1 cells;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (seconds | disable);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
        rate burst length);
      queue-length number;
    }
  }
  vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
  (accept-data | no-accept-data);
  advertise-interval seconds;
  authentication-type authentication;
  authentication-key key;
  fast-interval milliseconds;
  (preempt | no-preempt) {
    hold-time seconds;
  }
}
priority-number number;
track {
  priority-cost seconds;
  priority-hold-time interface-name {

```

```

        bandwidth-threshold bits-per-second {
            priority;
        }
        interface priority;
    }
    route ip-address/mask routing-instance instance-name priority-cost cost;
}
virtual-address [ addresses ];
}
}
}
}
}
}
}
}

```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
 - *Ethernet Interfaces*
 - *Junos OS Network Interfaces Library for Routing Devices*

[\[edit logical-systems\] Hierarchy Level](#)

The following lists the statements that can be configured at the **[edit logical-systems]** hierarchy level that are also documented in this manual. For more information about logical systems, see the *Logical Systems Feature Guide for Routing Devices*.

```

logical-systems logical-system-name {
    interfaces interface-name {
        unit logical-unit-number {
            accept-source-mac {
                mac-address mac-address {
                    policer {
                        input cos-policer-name;
                        output cos-policer-name;
                    }
                }
            }
        }
        allow-any-vci;
        atm-scheduler-map (map-name | default);
        bandwidth rate;
        backup-options {
            interface interface-name;
        }
        cell-bundle-size cells;
        clear-dont-fragment-bit;
        compression {
            rtp {
                f-max-period number;
                port {
                    minimum port-number;
                    maximum port-number;
                }
            }
            queues [ queue-numbers ];
        }
    }
}

```

```
}
compression-device interface-name;
description text;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    initial-route-check seconds;
    load-threshold number;
    pool pool;
    remote-name remote-callers;
    watch-list {
        [ routes ];
    }
}
disable;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
```



```

oam-period (seconds | disable);
output-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
}
dynamic-profile profile-name;
pap {
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
}
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vlan-id number;

```

```
vlan-id-list [vlan-id vlan-id-vlan-id]  
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;  
vlan-tags outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id]  
vpi vpi-identifier;  
family family {  
    accounting {  
        destination-class-usage;  
        source-class-usage {  
            direction;  
        }  
    }  
}  
bundle interface-name;  
filter {  
    group filter-group-number;  
    input filter-name;  
    input-list {  
        [ filter-names ];  
    }  
    output filter-name;  
    output-list {  
        [ filter-names ];  
    }  
}  
ipsec-sa sa-name;  
keep-address-and-control;  
mtu bytes;  
multicast-only;  
no-redirects;  
policer {  
    arp policer-template-name;  
    input policer-template-name;  
    output policer-template-name;  
}  
primary;  
proxy inet-address address;  
receive-options-packets;  
receive-ttl-exceeded;  
remote (inet-address address | mac-address address);  
rpf-check <fail-filter filter-name> {  
    <mode loose>;  
}  
sampling {  
    direction;  
}  
service {  
    input {  
        service-set service-set-name <service-filter filter-name>;  
        post-service-filter filter-name;  
    }  
    output {  
        service-set service-set-name <service-filter filter-name>;  
    }  
}  
(translate-discard-eligible | no-translate-discard-eligible);  
(translate-fecn-and-becn | no-translate-fecn-and-becn);
```

```

unnumbered-address interface-name destination address destination-profile
    profile-name;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                interface priority;
                bandwidth-threshold bits-per-second {
                    priority;
                }
            }
        }
        route ip-address/mask routing-instance instance-name priority-cost cost;
    }
}
virtual-address [ addresses ];
}
}
}
}
}

```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
 - *Ethernet Interfaces*
 - *Junos OS Network Interfaces Library for Routing Devices*

[\[edit protocols ppp\] Hierarchy Level](#)

```
monitor-session (interface-name | all);
tracoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable> ;
  flag flag <disable>;
}
```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
 - *Ethernet Interfaces*
 - *Junos OS Network Interfaces Library for Routing Devices*

[\[edit protocols pppoe\] Hierarchy Level](#)

```
pppoe {
  no-send-pads-error;
  no-send-pads-ac-info;
  pado-advertise;
  service-name-tables table-name {
    service service-name {
      drop;
      delay seconds;
      terminate;
      dynamic-profile profile-name;
      routing-instance routing-instance-name;
      max-sessions number;
      agent-specifier {
        aci circuit-id-string ari remote-id-string {
          drop;
          delay seconds;
          terminate;
          dynamic-profile profile-name;
          routing-instance routing-instance-name;
          static-interface interface-name;
        }
      }
    }
  }
  tracoptions {
    file <filename> <files number> <match regular-expression> <size maximum-file-size>
      <world-readable | no-world-readable>;
    filter {
      aci regular-expression;
      ari regular-expression;
      service-name regular-expression;
    }
  }
}
```

```
    underlying-interface interface-name;  
  }  
  flag flag;  
  level (all | error | info | notice | verbose | warning);  
  no-remote-trace;  
}  
}
```


CHAPTER 4

Statement Summary

- 802.3ad on page 143
- access-profile on page 144
- accounting-profile on page 145
- acfc on page 145
- acknowledge-retries on page 146
- acknowledge-timer on page 147
- action-red-differential-delay on page 147
- advertise-interval on page 148
- aggregated-ether-options on page 149
- aggregate-ports on page 150
- aggregated-sonet-options on page 150
- aggregate (Gigabit Ethernet CoS Policer) on page 151
- aggregate (SONET/SDH) on page 151
- alarm (optics-options) on page 152
- alias (Interfaces) on page 152
- annex on page 153
- aps on page 154
- asynchronous-notification on page 155
- atm-encapsulation on page 155
- atm-options on page 156
- authentication-key on page 157
- auto-negotiation on page 158
- auto-reconnect on page 159
- backup-interface on page 160
- bandwidth-limit (Policer for Gigabit Ethernet Interfaces) on page 160
- bchannel-allocation on page 161
- bert-algorithm on page 162
- bert-error-rate on page 164

- [bert-period](#) on page 166
- [buildout \(E3 or T3 over ATM Interfaces\)](#) on page 167
- [buildout \(T1 Interfaces\)](#) on page 168
- [burst-size-limit \(Policer for Gigabit Ethernet Interfaces\)](#) on page 169
- [byte-encoding](#) on page 170
- [bytes](#) on page 171
- [calling-number](#) on page 172
- [cbit-parity](#) on page 172
- [cbr](#) on page 173
- [cell-bundle-size](#) on page 174
- [chap](#) on page 175
- [classifier](#) on page 176
- [clock-rate](#) on page 177
- [clocking](#) on page 178
- [clocking-mode](#) on page 179
- [compatibility-mode](#) on page 180
- [compression \(PPP Properties\)](#) on page 181
- [control-polarity](#) on page 181
- [control-signal](#) on page 182
- [core-dump](#) on page 182
- [crc-major-alarm-threshold](#) on page 183
- [crc-minor-alarm-threshold](#) on page 184
- [cts](#) on page 185
- [cts-polarity](#) on page 185
- [current](#) on page 186
- [damping \(Interfaces\)](#) on page 187
- [data-input](#) on page 189
- [dcd](#) on page 190
- [dcd-polarity](#) on page 190
- [dce](#) on page 191
- [dce-options](#) on page 191
- [default-chap-secret](#) on page 192
- [description \(Interfaces\)](#) on page 193
- [dialin](#) on page 194
- [disable \(Interface\)](#) on page 195
- [drop-timeout](#) on page 196
- [ds0-options](#) on page 197

- [dsr on page 198](#)
- [dsr-polarity on page 198](#)
- [dte-options on page 199](#)
- [dtr-circuit on page 199](#)
- [dtr on page 200](#)
- [dtr-polarity on page 201](#)
- [dump-on-flow-control on page 201](#)
- [dynamic-profile \(PPP\) on page 202](#)
- [e1-options on page 203](#)
- [e3-options on page 204](#)
- [encapsulation \(Physical Interface\) on page 205](#)
- [encoding on page 209](#)
- [epd-threshold \(Physical Interface\) on page 210](#)
- [es-options on page 210](#)
- [ethernet-policer-profile on page 211](#)
- [ethernet-switch-profile on page 212](#)
- [facility-override on page 213](#)
- [fastether-options on page 214](#)
- [fast-aps-switch on page 215](#)
- [fcs on page 216](#)
- [feac-loop-respond on page 217](#)
- [flexible-vlan-tagging on page 218](#)
- [flow-control on page 219](#)
- [force on page 220](#)
- [forwarding-class \(ATM2 IQ Scheduler Maps\) on page 220](#)
- [forwarding-class \(Gigabit Ethernet IQ Classifier\) on page 221](#)
- [fragment-threshold on page 221](#)
- [framing \(E1, E3, and T1 Interfaces\) on page 222](#)
- [gether-options on page 223](#)
- [gratuitous-arp-reply on page 224](#)
- [hello-timer on page 225](#)
- [high-plp-max-threshold on page 225](#)
- [high-plp-threshold on page 226](#)
- [hold-time \(APS\) on page 226](#)
- [hold-time \(Physical Interface\) on page 227](#)
- [hold-time \(SONET/SDH Defect Triggers\) on page 229](#)
- [host \(Interfaces\) on page 230](#)

- [idle-cycle-flag](#) on page 231
- [ieee802.1p](#) on page 232
- [ignore-all](#) on page 232
- [ignore-l3-incompletes](#) on page 233
- [ilmi](#) on page 233
- [inactivity-timeout](#) on page 234
- [indication](#) on page 234
- [indication-polarity](#) on page 235
- [ingress-rate-limit](#) on page 235
- [input-priority-map](#) on page 236
- [interface \(Hierarchical CoS Schedulers\)](#) on page 236
- [interfaces](#) on page 237
- [interface-shared-with](#) on page 237
- [interface-type \(Interfaces\)](#) on page 238
- [invert-data](#) on page 239
- [keepalives](#) on page 240
- [lacp \(Aggregated Ethernet\)](#) on page 241
- [line-encoding](#) on page 243
- [line-protocol](#) on page 244
- [line-rate](#) on page 244
- [linear-red-profile](#) on page 245
- [linear-red-profiles](#) on page 246
- [link-layer-overhead](#) on page 246
- [link-mode](#) on page 247
- [link-protection](#) on page 249
- [link-speed \(Aggregated Ethernet\)](#) on page 250
- [link-speed \(Aggregated SONET/SDH\)](#) on page 251
- [lmi \(Frame Relay\)](#) on page 252
- [lmi-type](#) on page 253
- [local-name](#) on page 254
- [local-password](#) on page 255
- [lockout](#) on page 255
- [log-prefix \(Interfaces\)](#) on page 256
- [long-buildout](#) on page 256
- [loop-timing](#) on page 257
- [loopback \(ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3\)](#) on page 258
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\)](#) on page 260

- [loopback \(Serial\) on page 261](#)
- [loss-priority on page 261](#)
- [low-plp-max-threshold on page 262](#)
- [low-plp-threshold on page 263](#)
- [mac on page 264](#)
- [mac-learn-enable on page 265](#)
- [minimum-links on page 266](#)
- [mlfr-uni-nni-bundle-options on page 267](#)
- [modem-options on page 268](#)
- [mpls \(Interfaces\) on page 268](#)
- [mrru on page 269](#)
- [mtu on page 270](#)
- [multicast-statistics on page 272](#)
- [multiservice-options on page 273](#)
- [n391 on page 274](#)
- [n392 on page 275](#)
- [n393 on page 276](#)
- [native-vlan-id on page 277](#)
- [neighbor \(Automatic Protection Switching for SONET/SDH\) on page 278](#)
- [no-gratuitous-arp-request on page 278](#)
- [no-keepalives on page 279](#)
- [non-revertive \(Interfaces\) on page 279](#)
- [no-partition on page 280](#)
- [no-termination-request on page 281](#)
- [oam-liveness on page 282](#)
- [oam-period on page 283](#)
- [oc-slice on page 284](#)
- [open-timeout on page 284](#)
- [optics-options on page 285](#)
- [output-priority-map on page 286](#)
- [overflow \(Receive Bucket\) on page 286](#)
- [overflow \(Transmit Bucket\) on page 287](#)
- [paired-group on page 287](#)
- [pap on page 288](#)
- [partition on page 289](#)
- [passive \(CHAP\) on page 290](#)
- [passive \(PAP\) on page 290](#)

- [passive-monitor-mode](#) on page 291
- [path-trace](#) on page 292
- [payload-scrambler](#) on page 293
- [periodic](#) on page 294
- [per-unit-scheduler](#) on page 295
- [pfc](#) on page 296
- [pic-type](#) on page 296
- [plp1](#) on page 297
- [plp-to-clp](#) on page 298
- [policer \(CoS\)](#) on page 299
- [pool](#) on page 300
- [pop-all-labels](#) on page 301
- [ppp-options](#) on page 302
- [premium \(Output Priority Map\)](#) on page 303
- [premium \(Policer\)](#) on page 304
- [preserve-interface](#) on page 305
- [primary \(AS PIC or Multiservices PIC Interfaces\)](#) on page 305
- [priority \(Schedulers\)](#) on page 306
- [promiscuous-mode](#) on page 307
- [protect-circuit](#) on page 308
- [queue-depth](#) on page 308
- [queue-length](#) on page 309
- [rate](#) on page 310
- [receive-bucket](#) on page 310
- [red-differential-delay](#) on page 311
- [redundancy-options](#) on page 312
- [remote-loopback-respond](#) on page 313
- [request](#) on page 314
- [required-depth](#) on page 315
- [revert-time \(Interfaces\)](#) on page 316
- [revertive](#) on page 316
- [rfc-2615](#) on page 317
- [rts](#) on page 317
- [rts-polarity](#) on page 318
- [rtvbr](#) on page 319
- [scheduler-maps \(For ATM2 IQ Interfaces\)](#) on page 320
- [secondary](#) on page 320

- [serial-options on page 321](#)
- [services \(Priority Level\) on page 322](#)
- [services-options on page 323](#)
- [shaping on page 324](#)
- [shared-interface on page 325](#)
- [shdsl-options on page 325](#)
- [snext on page 326](#)
- [snr-margin on page 327](#)
- [sonet-options on page 328](#)
- [source-address-filter on page 330](#)
- [source-filtering on page 331](#)
- [speed \(Ethernet\) on page 332](#)
- [speed \(MX Series DPC\) on page 333](#)
- [speed \(SONET/SDH\) on page 334](#)
- [spid1 on page 334](#)
- [spid2 on page 335](#)
- [stacked-vlan-tagging on page 335](#)
- [start-end-flag on page 336](#)
- [static-tei-val on page 337](#)
- [switching-mode on page 337](#)
- [switch-options on page 338](#)
- [switch-port on page 339](#)
- [switch-type on page 340](#)
- [syslog \(Monitoring\) on page 340](#)
- [system-priority on page 341](#)
- [t1-options on page 342](#)
- [t310 on page 343](#)
- [t391 on page 343](#)
- [t392 on page 344](#)
- [t3-options on page 345](#)
- [tag-protocol-id \(TPIDs Expected to Be Sent or Received\) on page 346](#)
- [tei-option on page 347](#)
- [threshold on page 347](#)
- [timeslots on page 348](#)
- [tm on page 349](#)
- [tm-polarity on page 349](#)
- [traceoptions \(Individual Interfaces\) on page 350](#)

- [transmit-bucket on page 351](#)
- [transmit-clock on page 352](#)
- [transmit-weight \(ATM2 IQ CoS Forwarding Class\) on page 352](#)
- [traps on page 353](#)
- [trigger on page 354](#)
- [trigger-link-failure on page 355](#)
- [unframed on page 355](#)
- [unidirectional on page 356](#)
- [unit on page 357](#)
- [vbr on page 364](#)
- [vc-cos-mode on page 365](#)
- [vlan-tagging on page 366](#)
- [vlan-tags-outer on page 366](#)
- [vlan-vci-tagging on page 367](#)
- [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 367](#)
- [vtmapping on page 368](#)
- [warning on page 369](#)
- [wavelength on page 370](#)
- [working-circuit on page 374](#)
- [yellow-differential-delay on page 374](#)
- [z0-increment on page 375](#)

802.3ad

Syntax	<pre>802.3ad { ae <i>interface-number</i> (primary backup); lacp { port-priority; } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. primary and backup options added in Junos OS Release 8.3.
Description	Specify aggregated Ethernet logical interface number.
Options	<p>ae <i>interface-number</i>—Aggregated Ethernet logical interface number. Range: 0 through 15</p> <p>primary—For link protection configurations, specify the primary link for egress traffic.</p> <p>backup—For link protection configurations, specify the backup link for egress traffic.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an Aggregated Ethernet Interface</i> • <i>Configuring Aggregated Ethernet Link Protection</i>

access-profile

Syntax	<code>access-profile name;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> auto-configure vlan-ranges],</code> <code>[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges],</code> <code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> ppp-options pap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>ppp-options pap]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Support for PAP added in Junos OS Release 8.3. Support for VLAN and stacked VLAN ranges added in Junos OS Release 10.0.
Description	<p>For CHAP authentication, the mapping between peer names (or “clients”) and the secrets associated with their respective links. For PAP authentication, the peer's username and password.</p> <p>For Asynchronous Transfer Mode 2 (ATM2) IQ interfaces only, you can configure a Challenge Handshake Authentication Protocol (CHAP) access profile on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• atm-ppp-llc—PPP over AAL5 logical link control (LLC) encapsulation.• atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation. <p>For VLAN and stacked VLAN authentication, the access profile containing the RADIUS accounting and authentication information for the VLAN or stacked VLAN ranges.</p>
Options	name —Name of the access profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the PPP Challenge Handshake Authentication Protocol on page 75• Configuring the PPP Password Authentication Protocol on page 78• default-chap-secret on page 192• <i>Junos OS Administration Library for Routing Devices</i>

accounting-profile

Syntax	<code>accounting-profile <i>name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces interface-range <i>name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Enable collection of accounting data for the specified physical or logical interface or interface range.
Options	<i>name</i> —Name of the accounting profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Applying an Accounting Profile to the Physical Interface on page 97 • Applying an Accounting Profile to the Logical Interface

acfc

Syntax	<code>acfc;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options compression], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options compression], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options compression]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For interfaces with PPP encapsulation, configure compression of the Data Link Layer address and control fields. The acfc option is not supported with frame-relay-ppp encapsulation.</p> <p>On M320, M120, and T Series routers, address and control field compression (ACFC) is not supported for any ISO family protocols. Do not include the acfc statement at the [edit interfaces <i>interface-name</i> ppp-options compression] hierarchy level when you include the family iso statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring PPP Address and Control Field Compression on page 84

acknowledge-retries

Syntax	<code>acknowledge-retries <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the number of retransmission attempts to be made for consecutive hello or remove link messages following the expiration of the acknowledgment timer.
Options	<p><i>number</i>—Number of retransmission attempts to be made following the expiration of the acknowledgment timer.</p> <p>Range: 1 through 5</p> <p>Default: 2</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• action-red-differential-delay on page 147• hello-timer on page 225

acknowledge-timer

Syntax	<code>acknowledge-timer <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the maximum time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.
Options	<p>milliseconds—Time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.</p> <p>Range: 1 through 10 milliseconds</p> <p>Default: 4 milliseconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • address, hello-timer on page 225 • hello-timer on page 225

action-red-differential-delay

Syntax	<code>action-red-differential-delay (disable-tx remove-link);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the action to be taken when the differential delay exceeds the red limit.
Options	<p>disable-tx—Disable transmission on the bundle link.</p> <p>remove-link—Remove bundle link from service.</p> <p>Default: disable-tx</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • remote • yellow-differential-delay on page 374

advertise-interval

Syntax	<code>advertise-interval <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Modify the Automatic Protection Switching (APS) interval at which the protect and working routers send packets to their neighbors to advertise that they are operational. A router considers its neighbor to be operational for a period, called the hold time, that is, by default, three times the advertisement interval.
Options	<i>milliseconds</i> —Interval between advertisement packets. Range: 1 through 65,534 milliseconds Default: 1000 milliseconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring APS Timers</i>

aggregated-ether-options

```

Syntax  aggregated-ether-options {
        ethernet-switch-profile {
            ethernet-policer-profile {
                input-priority-map {
                    ieee802.1p premium [ values ];
                }
                output-priority-map {
                    classifier {
                        premium {
                            forwarding-class class-name {
                                loss-priority (high | low);
                            }
                        }
                    }
                }
            }
            policer cos-policer-name {
                aggregate {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
                premium {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
            }
        }
        (mac-learn-enable | no-mac-learn-enable);
    }
    (flow-control | no-flow-control);
    lacp {
        (active | passive);
        link-protection {
            disable;
            (revertive | non-revertive);
            periodic interval;
            system-priority priority;
            system-id system-id;
        }
        link-protection;
        load-balance;
        link-speed speed;
        logical-interface-chassis-redundancy;
        logical-interface-fpc-redundancy;
        (loopback | no-loopback);
        minimum-links number;
        rebalance-periodic time hour:minute <interval hours>;
        source-address-filter {
            mac-address;
            (source-filtering | no-source-filtering);
        }
    }
}

```

Hierarchy Level	[edit interfaces aex]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure aggregated Ethernet-specific interface properties. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Interfaces Overview</i>

aggregate-ports

Syntax	aggregate-ports;
Hierarchy Level	[edit chassis fpc slot-number pic pic-number]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	For T Series routers only, specify OC768-over-OC192 mode on the 4-port OC192C PIC. Four OC192 links are aggregated into one OC768 link with one logical interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode on page 54

aggregated-sonet-options

Syntax	aggregated-sonet-options { link-speed speed; minimum-links number; }
Hierarchy Level	[edit interfaces asx]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure aggregated SONET/SDH-specific interface properties. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Aggregated SONET/SDH Interfaces</i>

aggregate (Gigabit Ethernet CoS Policer)

Syntax	aggregate { bandwidth-limit <i>bps</i> ; burst-size-limit <i>bytes</i> ; }
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Gigabit Ethernet Policers</i> • <i>premium (Hierarchical Policer)</i> • ieee802.1p on page 232

aggregate (SONET/SDH)

Syntax	aggregate <i>asx</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify aggregated SONET/SDH logical interface number.
Options	asx —Aggregated SONET/SDH logical interface number. Range: 0 through 15
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Aggregated SONET/SDH Interfaces</i>

alarm (optics-options)

Syntax	<code>alarm low-light-alarm { (link-down syslog); }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> optics-options]
Release Information	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.1 for EX Series switches.
Description	Specify the action to take if the receiving optics signal is below the optics low-light alarm threshold.
Options	link-down —Drop the 10-Gigabit Ethernet link and marks link as down. syslog —Write the optics information to the system log.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i>

alias (Interfaces)

Syntax	<code>alias <i>alias-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 13.3.
Description	Configure a textual description of a physical interface or the logical unit of an interface to be the alias of an interface name. The alias name can be a single line of text. If the text contains spaces, enclose it in quotation marks. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all show , show interfaces , and other operational mode commands.
Options	alias-name —Text to denote an easily identifiable, meaningful alias name for the interface. If the text includes spaces, enclose the entire text in quotation marks.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Example: Adding an Interface Alias Name on page 106• <i>Junos OS Network Interfaces Library for Routing Devices</i>

annex

Syntax	<code>annex (annex-a annex-b);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> shdsl-options]</code> , <code>[edit interfaces <i>interface-name</i> sonet-options aps]</code> , <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options]</code>
Release Information	Statement introduced in Junos OS Release 7.4.
Description	<p>For J Series Services Routers only, configure the type of SHDSL annex.</p> <p>For M320 and M120 routers only, for Multiplex Section Protection (MSP) switching on SDH interfaces, set annex-b. You must also configure the working protection circuit under the <code>[edit interfaces <i>so-fpc/pic/port</i> sonet-options aps]</code> hierarchy level.</p>
Default	annex-b
Options	<p>annex-a—Use for North American SHDSL network implementations.</p> <p>annex-b—Use for European SHDSL network implementations.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>ATM-over-SHDSL Overview</i>

aps

Syntax `aps {
 advertise-interval milliseconds;
 annex-b
 authentication-key key;
 (break-before-make | no-break-before-make);
 fast-aps-switch;
 force;
 hold-time milliseconds;
 lockout;
 neighbor address;
 paired-group group-name;
 preserve-interface;
 protect-circuit group-name;
 request;
 revert-time seconds;
 switching-mode (bidirectional | unidirectional);
 working-circuit group-name;
 }`

Hierarchy Level [edit interfaces *interface-name* **sonet-options**]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure Automatic Protection Switching (APS) on the router.

For DS3 channels on a channelized OC12 interface, configure APS on channel 0 only. If you configure APS on channels 1 through 11, it is ignored.

The statements are explained separately.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Automatic Protection Switching and Multiplex Section Protection Overview*

asynchronous-notification

Syntax	(asynchronous-notification no-asynchronous-notification);
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/port</i> gigether-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For all 10-Gigabit Ethernet interfaces, M120, M320, and T Series routers, configure support for notification of link down alarm generation and transfer. <ul style="list-style-type: none"> • asynchronous-notification—Support notification of link down alarm generation and transfer. • no-asynchronous-notification—Prohibit notification of link down alarm generation and transfer.
Default	Support for notification of link down alarm generation and transfer is not enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>10-Gigabit Ethernet Notification of Link Down Alarm Overview</i>

atm-encapsulation

Syntax	atm-encapsulation (direct plcp);
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> e3-options], [edit interfaces <i>at-fpc/pic/port</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure encapsulation for E3 and T3 traffic over ATM interfaces.
Default	Physical Layer Convergence Protocol (PLCP) encapsulation is the default for T3 traffic and for E3 traffic using G.751 framing.
Options	direct —Use direct encapsulation. G.832 framing on E3 interfaces requires direct encapsulation. plcp —Use PLCP encapsulation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • encapsulation (Physical Interface) on page 205

atm-options

```
Syntax  atm-options {
        cell-bundle-size cells;
        ilmi;
        linear-red-profiles profile-name {
            high-plp-max-threshold percent;
            low-plp-max-threshold percent;
            queue-depth cells high-plp-threshold percent low-plp-threshold percent;
        }
        mpls {
            pop-all-labels {
                required-depth number;
            }
        }
        pic-type (atm1 | atm2);
        plp-to-clp;
        promiscuous-mode {
            vpi vpi-identifier;
        }
        scheduler-maps map-name {
            forwarding-class class-name {
                epd-threshold cells plp1 cells;
                linear-red-profile profile-name;
                priority (high | low);
                transmit-weight (cells number | percent number);
            }
            vc-cos-mode (alternate | strict);
        }
        use-null-cw;
        vpi vpi-identifier {
            maximum-vcs maximum-vcs;
            oam-liveness {
                up-count cells;
                down-count cells;
            }
            oam-period (disable | seconds);
            shaping {
                (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
                 length);
                queue-length number;
            }
        }
    }
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.

Description Configure ATM-specific physical interface properties.

The statements are explained separately.



NOTE: Certain options apply only to specific platforms.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Interface Encapsulations Overview*
- *multipoint-destination*
- [shaping on page 324](#)
- *vci*

authentication-key

Syntax authentication-key *key*;

Hierarchy Level [edit interfaces *interface-name* sonet-options [aps](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure the Automatic Protection Switching (APS) authentication key (password).

Options *key*—Authentication password. It can be 1 through 8 characters long. Configure the same key for both the working and protect routers.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Basic Automatic Protect Switching*
- For information about the **authentication-key** statement at the [edit interfaces *interface-name* unit *unit-number* family inet address *address* (vrrp-group | vrrp-inet6-group) *group-number*] or [edit logical-systems *logical-system-name* interfaces *interface-name* unit *unit-number* family (inet | inet6) address *address* (vrrp-group | vrrp-inet6-group) *group-number*] hierarchy level, see the *Junos OS High Availability Library for Routing Devices*.

auto-negotiation

Syntax	(auto-negotiation no-auto-negotiation) <remote-fault (local-interface-online local-interface-offline)>;
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>ge-pim</i> /0/0 switch-options switch-port <i>port-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 8.4 for J Series Services Routers. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches and J Series Services Routers, explicitly enable autonegotiation only.

- **auto-negotiation**—Enables autonegotiation. This is the default.
- **no-auto-negotiation**—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed.

When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.



NOTE: On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On J Series Services Routers with universal Physical Interface Modules (uPIMs) and on EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



NOTE: On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.

Default	Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.
Options	remote-fault (local-interface-online local-interface-offline) —(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface. Default: local-interface-online
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Gigabit Ethernet Autonegotiation Overview</i> • <i>Configuring J Series Services Router Switching Interfaces</i> • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>

auto-reconnect

Syntax	auto-reconnect <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers with PPP over Ethernet interfaces, configure the amount of time to wait before reconnecting after a session has terminated.
Options	seconds —Time to wait before reconnecting after a session has terminated. Range: 0 through 4,294,967,295 seconds Default: 0 (immediately)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the PPPoE Automatic Reconnect Wait Timer</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

backup-interface

Syntax	<code>backup-interface es-fpc/pic/port;</code>
Hierarchy Level	[edit interfaces es-fpc/pic/port es-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a backup ES Physical Interface Card (PIC). If the primary ES PIC fails, the backup becomes active, inherits all the tunnels and security associations (SAs), and acts as the new next hop for IP Security (IPsec) traffic.
Options	<code>es-fpc/pic/port</code> —Name of ES interface to serve as the backup.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

bandwidth-limit (Policer for Gigabit Ethernet Interfaces)

Syntax	<code>bandwidth-limit bps;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> aggregate], [edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> premium]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic.
Options	bps —Bandwidth limit, in bits per second. Specify either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 32 Kbps through 32 gigabits per second (Gbps). For IQ2 and IQ2-E interfaces 65,536 bps through 1 Gbps. For 10-Gigabit IQ2 and IQ2-E interfaces 65,536 bps through 10 Gbps.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gigabit Ethernet Policers</i>• burst-size-limit (Policer for Gigabit Ethernet Interfaces) on page 169

bchannel-allocation

Syntax	bchannel-allocation (ascending descending);
Hierarchy Level	[edit interfaces <i>interface-name</i> isdn-options]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	(J Series Services Routers equipped with a Dual-Port Channelized T1/E1 PIM) For Integrated Services Digital Network Primary Rate Interfaces (ISDN PRI), allocate PRI dialout B-channels in ascending or descending order.
Options	(ascending descending)—Allocate the B-channels in ascending (from low to high) or descending (from high to low) order. Default: Descending order
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Allocating B-Channels for Dialout</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

bert-algorithm

Syntax	<code>bert-algorithm <i>algorithm</i>;</code>
Hierarchy Level	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
Description	Configure the pattern to send in the bit stream during a bit error rate test (BERT). Applies to T1, E3, T3, and multichannel DS3 interfaces, the channelized interfaces (DS3, OC12, STM1), and channelized IQ and IQE interfaces (E1, E3 and DS3).



NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `bert-algorithm` statement must be included at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

Options	<p><i>algorithm</i>—Pattern to send in the bit stream. There are two categories of test patterns: pseudorandom and repetitive. Both patterns conform to CCITT/ITU O.151, O.152, O.153, and O.161 standards. The algorithm can be one of the following patterns:</p> <ul style="list-style-type: none"> • all-ones-repeating—Pattern is all ones. • all-zeros-repeating—Pattern is all zeros. • alternating-double-ones-zeros—Pattern is alternating pairs of ones and zeros. • alternating-ones-zeros—Pattern is alternating ones and zeros. • pseudo-2e3—Pattern is $2^3 - 1$. • pseudo-2e4—Pattern is $2^4 - 1$. • pseudo-2e5—Pattern is $2^5 - 1$. • pseudo-2e6—Pattern is $2^6 - 1$. • pseudo-2e7—Pattern is $2^7 - 1$. • pseudo-2e9-o153—Pattern is $2^9 - 1$, as defined in the O153 standard. • pseudo-2e10—Pattern is $2^{10} - 1$. • pseudo-2e11-o152—Pattern is $2^{11} - 1$, as defined in the O152 standard.
----------------	---

- **pseudo-2e15-o151**—Pattern is $2^{15} - 1$, as defined in the O151 standard.
- **pseudo-2e17**—Pattern is $2^{17} - 1$.
- **pseudo-2e18**—Pattern is $2^{18} - 1$.
- **pseudo-2e20-o151**—Pattern is $2^{20} - 1$, as defined in the O151 standard.
- **pseudo-2e20-o153**—Pattern is $2^{20} - 1$, as defined in the O153 standard.
- **pseudo-2e21**—Pattern is $2^{21} - 1$.
- **pseudo-2e22**—Pattern is $2^{22} - 1$.
- **pseudo-2e23-o151**—Pattern is $2^{23} - 1$, as defined in the O151 standard.
- **pseudo-2e25**—Pattern is $2^{25} - 1$.
- **pseudo-2e28**—Pattern is $2^{28} - 1$.
- **pseudo-2e29**—Pattern is $2^{29} - 1$.
- **pseudo-2e31**—Pattern is $2^{31} - 1$.
- **pseudo-2e32**—Pattern is $2^{32} - 1$.
- **repeating-1-in-4**—One bit in four is set to 1; the others are set to 0.
- **repeating-1-in-8**—One bit in eight is set to 1; the others are set to 0.
- **repeating-3-in-24**—Three bits in twenty four are set to 1; the others are set to 0.

Default: pseudo-2e3

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Interface Diagnostics</i> • <i>Configuring E1 BERT Properties</i> • <i>Configuring E3 BERT Properties</i> • <i>Configuring T1 BERT Properties</i> • <i>Configuring T3 BERT Properties</i> • <i>Examples: Configuring T3 Interfaces</i> • bert-error-rate on page 164 • bert-period on page 166

bert-error-rate

Syntax	<code>bert-error-rate rate;</code>
Hierarchy Level	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
Description	Configure the bit error rate to use in a BERT procedure. Applies to E1, E3, T1, or T3 interfaces, and to the channelized interfaces (DS3, OC3, OC12, and STM1).




NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `bert-error-rate` statement must be included at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

When configuring `t3-options bert-error-rate` on J Series routers, only 0 and 3 through 7 are valid values. If you enter 1 or 2, Junos OS will return the error message `configuration check-out failed`.

Options	<p>rate—Bit error rate.</p> <p>Range: 0 through 7, which corresponds to 10^{-1} (1 error per bit) to 10^{-7} (1 error per 10 million bits)</p> <p>Default: 0</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • bert-algorithm on page 162 • bert-period on page 166 • ds0-options on page 197 • e1-options on page 203 • e3-options on page 204 • t1-options on page 342 • t3-options on page 345

- *Interface Diagnostics*
- *Configuring E1 BERT Properties*
- *Configuring E3 BERT Properties*
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- *Examples: Configuring T3 Interfaces*

bert-period

Syntax	<code>bert-period seconds;</code>
Hierarchy Level	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	<p>Configure the duration of a BERT test. Applies to E1, E3, T1, and T3 interfaces, and to E1, E3, T1, and T3 partitions on the channelized interfaces (CE1, CT1, DS3, OC3, OC12, OC48, STM1, STM4, and STM16).</p> <p>E1 and T1 IQ, IQE, and standard interfaces support an extended BERT period range, up to 86,400 seconds (24 hours).</p>
	<div> NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-period</code> statement must be included at the <code>[edit interfaces ce1-fpc/pic/port]</code> or <code>[edit interfaces ct1-fpc/pic/port]</code> hierarchy level as appropriate.</div>
Options	<p>seconds—Test duration. Range and default values vary by interface type.</p> <p>Range:</p> <ul style="list-style-type: none">• PIC-dependent—Normal BERT period: either 1 through 239 seconds or 1 through 240 seconds• PIC-dependent—Extended BERT period: from 1 through 86,400 seconds <p>Default:</p> <ul style="list-style-type: none">• Normal BERT period: 10 seconds• Extended BERT period (on supported E1 interfaces): 10 seconds• Extended BERT period (on supported T1 interfaces): 240 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Interface Diagnostics</i>• <i>Configuring E1 BERT Properties</i>

- *Configuring E3 BERT Properties*
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- [bert-algorithm on page 162](#)
- [bert-error-rate on page 164](#)

buildout (E3 or T3 over ATM Interfaces)

Syntax	<code>buildout feet;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces at- <i>fpc/pic/port</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E3 and T3 traffic over ATM interfaces, set the buildout value.
Options	<p>feet—The buildout value in feet.</p> <p>Range: 0 through 450 feet (137 meters)</p> <p>Default: 10 feet (3 meters)</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i>

buildout (T1 Interfaces)

Syntax	<code>buildout value;</code>
Hierarchy Level	[edit interfaces <i>ct1-fpc/pic/port</i>] [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	For T1 interfaces, set the buildout value.



NOTE: When configuring CT1 interfaces on 10-port Channelized E1/T1 IQE PICs and 16-Port Channelized E1/T1 Circuit Emulation MICs, the **buildout** statement must be included at the hierarchy level.

Default	The default buildout value is 0 through 132 feet.
Options	<p>You can set the buildout value to one of the following:</p> <ul style="list-style-type: none"> • 0-132—0 through 132 feet (0 through 40 meters) • 133-265—133 through 265 feet (40 through 81 meters) • 266-398—266 through 398 feet (81 through 121 meters) • 399-531—399 through 531 feet (121 through 162 meters) • 532-655—532 through 655 feet (162 through 200 meters) • long-0db—For J Series routers only, long buildout with 0 decibel (dB) transmit attenuation • long-7.5db—For MX Series and J Series routers only, long buildout with 7.5 dB transmit attenuation • long-15db—For MX Series and J Series routers only, long buildout with 15 dB transmit attenuation • long-22.5db—For MX Series and J Series routers only, long buildout with 22.5 dB transmit attenuation
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the T1 Buildout</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

burst-size-limit (Policer for Gigabit Ethernet Interfaces)

Syntax	<code>burst-size-limit bytes;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> aggregate],</code> <code>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> premium]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic.
Options	bytes —Burst length. Range: 1500 through 100,000,000 bytes
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Gigabit Ethernet Policers• bandwidth-limit (Policer for Gigabit Ethernet Interfaces) on page 160

byte-encoding

Syntax	byte-encoding (nx56 nx64);
Hierarchy Level	[edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Set the byte encoding on a DS0 or T1 interface to use 7 bits per byte or 8 bits per byte.



NOTE: When configuring T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the byte-encoding statement must be included at the [edit interfaces t1-*fpc/pic/port*] hierarchy level.

Default	The default byte encoding is 8 bits per byte (nx64).
Options	nx56—Use 7 bits per byte. nx64—Use 8 bits per byte.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring T1 Byte Encoding</i>

bytes

Syntax	<pre>bytes { c2 <i>value</i>; e1-quiet <i>value</i>; f1 <i>value</i>; f2 <i>value</i>; s1 <i>value</i>; z3 <i>value</i>; z4 <i>value</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set values in some SONET/SDH header bytes.
Options	<p>c2 <i>value</i>—Path signal label SONET/SDH overhead byte. SONET/SDH frames use the C2 byte to indicate the contents of the payload inside the frame. SONET/SDH interfaces use the C2 byte to indicate whether the payload is scrambled.</p> <p>Range: 0 through 255</p> <p>Default: 0xCF</p> <p>e1-quiet <i>value</i>—Default idle byte sent on the orderwire SONET/SDH overhead bytes. The router does not support the orderwire channel, and hence sends this byte continuously.</p> <p>Range: 0 through 255</p> <p>Default: 0x7F</p> <p>f1 <i>value</i>, f2 <i>value</i>, z3 <i>value</i>, z4 <i>value</i>—SONET/SDH overhead bytes.</p> <p>Range: 0 through 255</p> <p>Default: 0x00</p> <p>s1 <i>value</i>—Synchronization message SONET overhead byte. This byte is normally controlled as a side effect of the system reference clock configuration and the state of the external clock coming from an interface if the system reference clocks have been configured to use an external reference.</p> <p>Range: 0 through 255</p> <p>Default: 0xCC</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring SONET/SDH Header Byte Values no-concatenate

calling-number

Syntax	<code>calling-number <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>br-pim</i> /0/ <i>port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, configure the calling number to include in outgoing calls.
Options	<i>number</i> —Calling number.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ISDN Physical Interface Properties</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

cbit-parity

Syntax	<code>(cbit-parity no-cbit-parity);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For T3 interfaces only, enable or disable C-bit parity mode, which controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the far-end block error (FEBE), far-end alarm and control (FEAC), terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. For ATM and ATM2 IQ2 and IQ2-E interfaces, M23 framing is used when the no-cbit-parity statement is included. For all other interfaces, M13 framing is used when the no-cbit-parity statement is included.
Default	C-bit parity mode is enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i>• <i>Disabling T3 C-Bit Parity Mode</i>


cbr

Syntax	<code>cbr rate;</code>
Hierarchy Level	<p>[edit interfaces at-<i>fpc/pic/port</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces at-<i>fpc/pic/ port</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM encapsulation only, define a constant bit rate bandwidth utilization in the traffic-shaping profile.
Default	Unspecified bit rate (UBR); that is, bandwidth utilization is unlimited.
Options	<p>rate—Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p> <p>For ATM1 and ATM2 OC3 interfaces, the maximum available rate is 100 percent of <i>line-rate</i>, or 135,600,000 bps. For ATM1 OC12 interfaces, the maximum available rate is 50 percent of <i>line-rate</i>, or 271,263,396 bps. For ATM2 IQ interfaces, the maximum available rate is 542,526,792 bps.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Defining the ATM Traffic-Shaping Profile • rtvbr on page 319 • shaping on page 324 • vbr on page 364

cell-bundle-size

Syntax	<code>cell-bundle-size <i>cells</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode only, configure the maximum number of ATM cells per frame.
Options	<i>cells</i> —Maximum number of cells. Default: 1 cell Range: 1 through 176 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum</i>

chap

Syntax	<pre> chap { access-profile <i>name</i>; challenge-length minimum <i>minimum-length</i> maximum <i>maximum-length</i>; default-chap-secret <i>name</i>; local-name <i>name</i>; passive; } </pre>
Hierarchy Level	<pre> [edit interfaces <i>interface-name</i> ppp-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options] </pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Allow each side of a link to challenge its peer, using a “secret” known only to the authenticator and that peer. The secret is not sent over the link.</p> <p>By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> • atm-ppp-llc—PPP over AAL5 LLC encapsulation. • atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
	<div>  <p>BEST PRACTICE: On inline service (si) interfaces for L2TP, only the chap statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p> </div>
	The remaining statements are explained separately.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Challenge Handshake Authentication Protocol on page 75 • Applying PPP Attributes to L2TP LNS Subscribers with a User Group Profile • Applying PPP Attributes to L2TP LNS Subscribers Per Inline Service Interface

classifier

Syntax	<pre>classifier { per-unit-scheduler { forwarding-class <i>class-name</i> { loss-priority (high low); } } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the classifier for the output priority map to be applied to outgoing frames on this interface.</p> <p>The statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Output Priority Map</i>• input-priority-map on page 236

clock-rate

Syntax	<code>clock-rate rate;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces, configure the interface speed, in megahertz (MHz).
Options	<p>rate—You can specify one of the following rates:</p> <ul style="list-style-type: none">• 2.048 MHz• 2.341 MHz• 2.731 MHz• 3.277 MHz• 4.096 MHz• 5.461 MHz• 8.192 MHz• 16.384 MHz <p>Default: 16.384 MHz</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Clocking Mode</i>

clocking

Syntax	clocking (external [interface <i>interface-name</i>] internal);
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. interface option added in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	For interfaces that can use various clock sources, configure the source of the transmit clock on each interface.



NOTE: On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to **external**, then you must set the child controller clocks to the default value—that is, **internal**.



For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to **external**, then you must not configure the CE1 interface (which is the child controller) clock to **external**. Instead you must configure the CE1 interface clock to **internal**.

Options	external —The clock source is provided by the data communication equipment (DCE). interface <i>interface-name</i> —For interfaces operating on T1/E1 PIMs for J Series Services Routers only, configure clocking for the drop-and insert feature. When configuring this feature, both ports must use the same clock source: either the router's internal clock or an external clock on one of the interfaces. If an external clock source is required, one interface must specify clocking external and the other must specify the same clock. internal —Use the internal stratum 3 clock as the reference clock. Default: internal
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Clock Source on page 93• Configuring the Clock Source on SONET/SDH Interfaces• Clock Sources on Channelized Interfaces• Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots• loop-timing on page 257

clocking-mode

Syntax	clocking-mode (dce internal loop);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces, configure the clock mode. You cannot configure clocking-mode dce on a DTE router using an X.21 serial line protocol (detected automatically when an X.21 cable is plugged into the serial interface).
Options	dce —DCE timing (DTE mode only, not valid for X.21). internal —Internal baud timing. loop —Loop timing. Default: loop
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Clocking Mode</i>

compatibility-mode

Syntax	<code>compatibility-mode (adtran digital-link kentrox larscom verilink) <subrate value>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the E3 or T3 interface to be compatible with the channel service unit (CSU) at the remote end of the line.
<div>  NOTE: The <code>compatibility-mode</code> statement at the [edit interfaces <i>interface-name</i> e3-options] hierarchy level is not valid for IQE PICs. </div>	
Default	If you omit this option, the full E3 or T3 rate is used.
Options	<p>adtran—For T3 IQ interfaces only, configure compatibility with Adtran CSUs.</p> <p>digital-link—Configure compatibility with Digital Link CSUs. If you include this option on an E3 interface, you must also disable payload scrambling.</p> <p>kentrox—Configure compatibility with Kentrox CSUs. Kentrox subrate is valid for E3 IQ and T3 IQ interfaces only.</p> <p>larscom—For T3 and T3 IQ interfaces only, configure compatibility with Larscom CSUs.</p> <p>verilink—For T3 IQ and T3 IQE interfaces only, configure compatibility with Verilink CSUs.</p>
<div>  NOTE: Verilink configuration is not functional if an IQ interface is paired with an IQE interface. </div>	
	<p>subrate value—Subrate of the E3 or T3 line.</p> <p>Range: For Kentrox CSUs on E3 IQ interfaces and T3 IQ interfaces the subrate value must match the value configured on the CSU. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring the E3 CSU Compatibility Mode Configuring the T3 CSU Compatibility Mode payload-scrambler on page 293

compression (PPP Properties)

Syntax	compression { acfc; pfc; }
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation, set Link Control Protocol (LCP) compression options. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring PPP Address and Control Field Compression on page 84 • Configuring the PPP Protocol Field Compression on page 86

control-polarity

Syntax	control-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the control signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Serial Signal Polarities

control-signal

Syntax	control-signal (assert de-assert normal);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the to-DCE signal.
Options	assert —The to-DCE signal must be asserted. de-assert —The to-DCE signal must be deasserted. normal —Normal request-to-send (RTS) signal handling, as defined by ITU-T Recommendation X.21. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

core-dump

Syntax	(core-dump no-core-dump);
Hierarchy Level	[edit interfaces <i>mo-fpc/pic/port</i> multiservice-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory /var/tmp contains core files. The Junos OS saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest): <ul style="list-style-type: none">• core-dump—Enable the core dumping operation.• no-core-dump—Disable the core dumping operation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 97• <i>Junos OS Services Interfaces Library for Routing Devices</i>

crc-major-alarm-threshold

Syntax	crc-major-alarm-threshold (1e-3 5e-4 1e-4 5e-5 1e-5);
Hierarchy Level	[edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Major alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
Default	10-second monitoring period for all settings except 1e-5. The 1e-5 value uses a 50-second monitoring period.
Options	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in 10^3 bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in 10^4 bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^5 bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in 10^4 bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^5 bits.</p> <p>Default: 5e-5</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring T1 CRC Error Major Alarm Thresholds</i>

crc-minor-alarm-threshold

Syntax	crc-minor-alarm-threshold (1e-3 5e-4 1e-4 5e-5 1e-5 5e-6 1e-6);
Hierarchy Level	[edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Minor alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
Default	10-second monitoring period for values 1e-3 , 5e-4 , 1e-4 , and 5e-5 . The 1e-5 value uses a 50-second monitoring period. The 5e-6 value uses a 100-second monitoring period. The 1e-6 value uses a 500-second monitoring period.
Options	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in 10^3 bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in 10^4 bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^5 bits.</p> <p>1e-6—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^6 bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in 10^4 bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^5 bits.</p> <p>5e-6—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^6 bits.</p> <p>Default: 5e-6</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring T1 CRC Error Minor Alarm Thresholds

cts

Syntax	cts (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, clear-to-send (CTS).
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal CTS signal handling as defined by the TIA/EIA Standard 530.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Serial Signal Handling</i>



cts-polarity

Syntax	cts-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure CTS signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Serial Signal Polarities</i>

current

Syntax	<code>current margin;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options snr-margin], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options snr-margin]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure the current target signal-to-noise ratio (SNR) margin to be used when training the SHDSL line. The current margin is the difference between desired SNR and the actual SNR. When configured, the line trains at higher than the current margin plus SNR threshold.
Options	margin —Desired current SNR margin. Specify either disabled or a value from 0 dB through 10 dB. Default: 0 dB
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM-over-SHDSL Overview</i>

damping (Interfaces)

Syntax	<pre>damping { enable; half-life <i>seconds</i>; max-suppress <i>seconds</i>; reuse <i>number</i>; suppress <i>number</i>; }</pre>
Hierarchy Level	[edit interfaces on page 111 interface--name] , [edit interfaces on page 111 interface--range]
Release Information	Statement introduced in Junos OS Release 14.1 for PTX Series Packet Transport Routers and T Series routers.
Description	<p>Limit the number of advertisements of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level max-suppress, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.</p>
Options	<p>enable—Enable damping on a per-interface basis. If damping is enabled on an interface, it is suppressed during interface flaps that match the configuration settings.</p> <p>Default: Disabled</p> <p>half-life <i>seconds</i>—Decay half-life. <i>seconds</i> is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.</p> <hr/> <div>  <p>NOTE: For the half-life, configure a value that is less than the max-suppress value. If you do not, the configuration is rejected.</p> </div> <hr/> <p>Range: 1 through 30</p> <p>Default: 5</p> <p>max-suppress <i>seconds</i>—Maximum hold-down time. <i>seconds</i> is the maximum time that an interface can be suppressed no matter how unstable the interface has been.</p> <hr/> <div>  <p>NOTE: For max-suppress, configure a value that is greater than the half-life. If you do not, the configuration is rejected.</p> </div> <hr/> <p>Range: 1 through 20,000</p> <p>Default: 20</p>

reuse *number*—Reuse threshold. When the accumulated interface penalty counter falls below *number*, the interface is no longer suppressed.

Range: 1 through 20,000

Default: 1000

suppress *number*—Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds *number*, the interface is suppressed.

Range: 1 through 20,000

Default: 2000

Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none">• Physical Interface Damping Overview on page 19• Damping Shorter Physical Interface Transitions on page 98• Damping Longer Physical Interface Transitions on page 99• show interfaces extensive on page 728• hold-time on page 227
------------------------------	---

data-input

Syntax	<code>data-input (system interface <i>interface-name</i>);</code>
Hierarchy Level	<code>[edit interfaces <i>ds-pim</i>/0/<i>port:channel</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.2.
Description	<p>For interfaces operating on T1/E1 PIMs for J Series Services Routers only, configure whether an interface should send and receive data from the Routing Engine or from a given interface name. On channelized T1/E1 interfaces partitioned into channels, you can insert time slots from one port directly into the other port on the same PIM, to replace time slots coming through the Routing Engine.</p> <p>To avoid slips, both ports must use the same clock source: either the router's internal clock or an external clock on one of the interfaces. If an external clock source is required, one interface must specify clocking external and the other must specify the same clock by including the clocking external interface <i>interface-name</i> statement at the <code>[edit interfaces <i>interface-name</i>]</code> hierarchy level.</p>
Options	<p>system—Interface sends and receives data from the Routing Engine.</p> <p>interface <i>interface-name</i>—Interface sends and receives data from a specific interface.</p> <p>Default: Data is sent and received from the Routing Engine (system).</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i> • clocking on page 178

dcd

Syntax	dcd (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-carrier-detect (DCD).
Options	ignore —The from-DCE signal is ignored. normal —Normal DCD signal handling as defined by the TIA/EIA Standard 530. require —The from-DCE signal must be asserted. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

dcd-polarity

Syntax	dcd-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DCD signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Serial Signal Polarities</i>

dce

Syntax	dce;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> serial-options clocking-mode]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Frame Relay only, respond to status enquiry message keepalives. When you configure the router to be a DCE, keepalives are disabled by default.
Default	The router operates in DTE mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the Router as a DCE with Frame Relay Encapsulation on page 95

dce-options

Syntax	<pre>dce-options { control-signal (assert de-assert normal); cts (ignore normal require); dcd (ignore normal require); dsr (ignore normal require); dtr signal-handling-option; ignore-all; indication (ignore normal require); rts (assert de-assert normal); tm (ignore normal require); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement previously known as control-leads .
Description	For J Series Services Routers, configure the serial interface signal characteristics. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the Serial Signal Handling

default-chap-secret

Syntax	<code>default-chap-secret name;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap]</code>
Release Information	Statement introduced in Junos OS Release 8.0.
Description	<p>Define the default CHAP secret to be used when no matching CHAP access profile exists.</p> <p>For ATM2 IQ interfaces only, you can configure a default CHAP secret on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• atm-ppp-llc—PPP over AAL5 LLC encapsulation.• atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Default	If you do not include the default-chap-secret statement in the configuration, and an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Default CHAP Secret on page 76• access-profile on page 144

description (Interfaces)

Syntax	<code>description text;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p>
Description	<p>Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the show interfaces commands, and is also exposed in the ifAlias Management Information Base (MIB) object. It has no effect on the operation of the interface on the router or switch.</p> <p>The textual description can also be included in the extended DHCP relay option 82 Agent Circuit ID suboption.</p>
Options	text —Text to describe the interface. If the text includes spaces, enclose the entire text in quotation marks.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Interface Description on page 55 • <i>Adding a Logical Unit Description to the Configuration</i> • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> • <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces</i> • <i>Using DHCP Relay Agent Option 82 Information</i> • <i>Junos OS Network Interfaces Library for Routing Devices</i> • <i>Example: Connecting Access Switches to a Distribution Switch</i>

dialin

Syntax	dialin (console routable);
Hierarchy Level	[edit interfaces umd0 modem-options]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	For J Series Services Routers, configure a USB modem port to act as a dial-in console or WAN backup port.
Options	console —Configure the USB modem port to operate as a dial-in console for management. routable —Configure the USB modem port to operate as a dial-in WAN backup interface. Default: console
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying a USB Modem Interface on J Series Routers</i>

disable (Interface)

Syntax	disable;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	Disable a physical or a logical interface, effectively unconfiguring it.



CAUTION:

- Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.
- If aggregated SONET links are configured between a T1600 router and a T4000 router, interface traffic is disrupted when you disable the physical interface configured on the T1600 router. If you want to remove the interface, we recommend that you deactivate the interface instead of disabling it.



NOTE:

- When you use the disable statement at the [edit interfaces] hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet (GE) PICs with SFP and XFP transceivers and ATM MIC with SFP do support it and the laser will be turned off when the interface is disabled. If the ATM MIC with SFP is part of an APS group, then the laser will not be turned off when you use the disable statement at the [edit interfaces] hierarchy level..
- When you disable or deactivate an interface, then all the references made to the deactivated interface must be removed from the routing instance.



WARNING: Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Disabling a Physical Interface on page 104• <i>Disabling a Logical Interface</i>

drop-timeout

Syntax	<code>drop-timeout <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services, multilink, and voice services interfaces only, configure the drop timeout period, in milliseconds.
Options	<i>milliseconds</i> —Drop timeout period. Range: 0 through 2000 milliseconds Default: 0 ms (disabled)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

ds0-options

Syntax	<pre>ds0-options { bert-algorithm <i>algorithm</i>; bert-error-rate <i>rate</i>; bert-period <i>seconds</i>; byte-encoding (nx56 nx64); fcs (16 32); idle-cycle-flag (flags ones); invert-data; loopback <i>payload</i>; start-end-flag (filler shared); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure DS0-specific physical interface properties.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Channelized DS3-to-DS0 Interfaces</i>

dsr

Syntax	<code>dsr (ignore normal require);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-set-ready (DSR).
Options	ignore —The from-DCE signal is ignored. normal —Normal DSR signal handling as defined by the TIA/EIA Standard 530. require —The from-DCE signal must be asserted. Default: normal
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

dsr-polarity

Syntax	<code>dsr-polarity (negative positive);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DSR signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Serial Signal Polarities</i>

dte-options

Syntax	<pre>dte-options { control-signal (assert de-assert normal); cts (ignore normal require); dcd (ignore normal require); dsr (ignore normal require); dtr signal-handling-option; ignore-all; indication (ignore normal require); rts (assert de-assert normal); tm (ignore normal require); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement previously known as control-leads .
Description	For M Series and T Series routers, configure the serial interface signal characteristics. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Serial Signal Handling</i>

dtr-circuit

Syntax	dtr-circuit (balanced unbalanced);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure a DTR circuit.
Options	balanced —Balanced DTR signal. unbalanced —Unbalanced DTR signal. Default: balanced
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Serial DTR Circuit</i>

dtr

Syntax	<code>dtr <i>signal-handling-option</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, data-transmit-ready (DTR).
Options	<p><i>signal-handling-option</i>—Signal handling for the DTR signal. The signal handling can be one of the following:</p> <p>assert—The to-DCE signal must be asserted.</p> <p>auto-synchronize—Normal DTR signal with automatic synchronization. This statement has two substatements:</p> <p>duration <i>milliseconds</i>—Pulse duration of resynchronization. Range: 1 through 1000 milliseconds Default: 1000 milliseconds</p> <p>interval <i>seconds</i>—Offset interval for resynchronization. Range: 1 through 31 seconds Default: 15 seconds</p> <p>de-assert—The to-DCE signal must be deasserted.</p> <p>normal—Normal DTR signal handling as defined by the TIA/EIA Standard 530. Default: normal</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

dtr-polarity

Syntax	dtr-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DTR signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Serial Signal Polarities

dump-on-flow-control

Syntax	dump-on-flow-control;
Hierarchy Level	[edit interfaces <i>interface-name</i> multiservice-options]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	This option supports high availability functionality and can be used with various service interfaces, including rsp , rms , lsq , and rlsq .
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Multiservice Physical Interface Properties on page 97 • Junos OS Services Interfaces Library for Routing Devices • passive-monitor-mode on page 291

dynamic-profile (PPP)

Syntax	<code>dynamic-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced in Junos OS Release 9.5. Support for MLPPP on LSQ interfaces introduced in Junos OS Release 10.2.
Description	Specify the dynamic profile that is attached to the interface. On the MX Series routers, this statement is currently supported on PPPoE interfaces only. On the M120 and M320 routers, this statement is supported for MLPPP bundles only on LSQ interfaces on Adaptive Services PICs and Multiservices PICs.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Dynamic Profiles Overview</i>• <i>Configuring a Basic Dynamic Profile</i>• <i>Attaching Dynamic Profiles to Static PPP Subscriber Interfaces</i>• <i>Attaching Dynamic Profiles to MLPPP Bundles</i>• For hardware requirements, see <i>Hardware Requirements for PPP Subscriber Services on Non-Ethernet Interfaces</i>

e1-options

Syntax	<pre>e1-options { bert-algorithm <i>algorithm</i>; bert-error-rate <i>rate</i>; bert-period <i>seconds</i>; fcs (16 32); framing (g704 g704-no-crc4 unframed); idle-cycle-flag (flags ones); invert-data; loopback (local remote); start-end-flag (filler shared); timeslots <i>time-slot-range</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
Description	<p>Configure E1-specific physical interface properties.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Channelized E1 IQ and IQE Interfaces Overview</i> • <i>Channelized STM1 Interfaces Overview</i> • <i>E1 Interfaces Overview</i> • <i>T1 Interfaces Overview</i>

e3-options

Syntax e3-options {
 atm-encapsulation (direct | plcp);
 bert-algorithm *algorithm*;
 bert-error-rate *rate*;
 bert-period *seconds*;
 buildout *feet*;
 compatibility-mode (digital-link | kentrox | larscom) <subrate *value*>;
 fcs (16 | 32);
 framing (g.751 | g.832);
 idle-cycle-flag *value*;
 invert-data;
 loopback (local | remote);
 (payload-scrambler | no-payload-scrambler);
 start-end-flag *value*;
 (unframed | no-unframed);
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure E3-specific physical interface properties.

For ATM1 interfaces, you can configure a subset of E3 options statements.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- [E3 Interfaces Overview](#)
- [T3 Interfaces Overview](#)
- [atm-options on page 156](#)

encapsulation (Physical Interface)

Syntax	encapsulation (atm-ccc-cell-relay atm-pvc cisco-hdlc cisco-hdlc-ccc cisco-hdlc-tcc ethernet-bridge ethernet-ccc ethernet-over-atm ethernet-tcc ethernet-vpls ethernet-vpls-fr ether-vpls-over-atm-llc ethernet-vpls-ppp extended-frame-relay-ccc extended-frame-relay-ether-type-tcc extended-frame-relay-tcc extended-vlan-bridge extended-vlan-ccc extended-vlan-tcc extended-vlan-vpls flexible-ethernet-services flexible-frame-relay frame-relay frame-relay-ccc frame-relay-ether-type frame-relay-ether-type-tcc frame-relay-port-ccc frame-relay-tcc generic-services multilink-frame-relay-uni-nni ppp ppp-ccc ppp-tcc vlan-ccc vlan-vci-ccc vlan-vpls);
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces rlsq <i>number:number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for EX Series switches. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers (flexible-ethernet-services , ethernet-ccc , and ethernet-tcc options only).
Description	Specify the physical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.
Default	ppp —Use serial PPP encapsulation.
Options	<p>atm-ccc-cell-relay—Use ATM cell-relay encapsulation.</p> <p>atm-pvc—Use ATM PVC encapsulation.</p> <p>cisco-hdlc—Use Cisco-compatible High-Level Data Link Control (HDLC) framing.</p> <p>cisco-hdlc-ccc—Use Cisco-compatible HDLC framing on CCC circuits.</p> <p>cisco-hdlc-tcc—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.</p> <p>ethernet-bridge—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.</p> <p>ethernet-ccc—Use Ethernet CCC encapsulation on Ethernet interfaces that must accept packets carrying standard Tag Protocol ID (TPID) values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, CCC is not supported.</p> <p>ethernet-over-atm—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, <i>Multiprotocol Encapsulation over ATM Adaptation Layer 5</i>, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDU packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination</p>

IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.

ethernet-tcc—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

ethernet-vpls—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

ethernet-vpls-fr—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

ethernet-vpls-ppp—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.

ether-vpls-over-atm-llc—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

extended-frame-relay-ccc—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC.

extended-frame-relay-ether-type-tcc—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.

extended-frame-relay-tcc—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.

extended-vlan-bridge—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

extended-vlan-ccc—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.

extended-vlan-tcc—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

extended-vlan-vpls—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



NOTE: The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

flexible-ethernet-services—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.

flexible-frame-relay—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.

frame-relay—Use Frame Relay encapsulation.

frame-relay-ccc—Use Frame Relay encapsulation on CCC circuits.

frame-relay-ether-type—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay.

frame-relay-ether-type-tcc—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media.

frame-relay-port-ccc—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. When you use this encapsulation type, you can configure the **ccc** family only.

frame-relay-tcc—Use Frame Relay encapsulation on TCC circuits to connect different media.

generic-services—Use generic services encapsulation for services with a hierarchical scheduler.

multilink-frame-relay-uni-nni—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

ppp—Use serial PPP encapsulation.

ppp-ccc—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

ppp-tcc—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

vlan-ccc—Use Ethernet VLAN encapsulation on CCC circuits.

vlan-vci-ccc—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.

vlan-vpls—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



NOTE:

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
 - Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.
-

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none"> • Configuring Interface Encapsulation on Physical Interfaces on page 68 • <i>Configuring CCC Encapsulation for Layer 2 VPNs</i> • <i>Configuring Layer 2 Switching Cross-Connects Using CCC</i> • <i>Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits</i> • <i>Configuring ATM Interface Encapsulation</i> • <i>Configuring ATM-to-Ethernet Interworking</i> • <i>Configuring VLAN Encapsulation</i> • <i>Configuring Extended VLAN Encapsulation</i> • <i>Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces</i> • <i>Configuring Interfaces for Layer 2 Circuits</i> • Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 74 • <i>Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)</i> • <i>Configuring MPLS LSP Tunnel Cross-Connects Using CCC</i> • <i>Configuring TCC</i> • <i>Configuring VPLS Interface Encapsulation</i> • <i>Configuring Interfaces for VPLS Routing</i> • <i>Defining the Encapsulation for Switching Cross-Connects</i> • <i>Configuring Q-in-Q Tunneling (CLI Procedure)</i>
------------------------------	---

encoding

Syntax	encoding (nrz nrzi);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For serial interfaces, set the line encoding format.
Default	The default line encoding is non-return to zero (NRZ).
Options	nrz—Use NRZ line encoding. nrzi—Use non-return to zero inverted (NRZI) line encoding.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Serial Line Encoding</i>

epd-threshold (Physical Interface)

Syntax	<code>epd-threshold cells plp1 cells;</code>
Hierarchy Level	<code>[edit interfaces at-<i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	cells —Maximum number of cells. Range: For 1-port and 2-port OC12 interfaces, 48 through 425,984 cells. For 1-port OC48 interfaces, 48 through 425,984 cells. For 2-port OC3, DS3, and E3 interfaces, 48 through 212,992 cells. For 4-port DS3 and E3 interfaces, 48 through 106,496 cells. The plp1 statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an ATM Scheduler Map</i>• linear-red-profile on page 245

es-options

Syntax	<code>es-options { backup-interface <i>interface-name</i>; }</code>
Hierarchy Level	<code>[edit interfaces es-<i>fpc/pic/port</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On ES interfaces, configure ES interface-specific interface properties. The backup-interface statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

ethernet-policer-profile

```
Syntax ethernet-policer-profile {
    input-priority-map {
        ieee802.1p premium [ values ];
    }
    output-priority-map {
        classifier {
            premium {
                forwarding-class class-name {
                    loss-priority (high | low);
                }
            }
        }
    }
    policer cos-policer-name {
        aggregate {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
        premium {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
    }
}
```

Hierarchy Level [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#)],
[edit interfaces *interface-name* aggregated-ether-options [ethernet-switch-profile](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description



NOTE: On QFX Series standalone switches, this statement hierarchy is only supported on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet, Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, configure a class of service (CoS)-based policer. Policing applies to the inner VLAN identifiers, not to the outer tag. For Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), the **premium** policer is not supported.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Gigabit Ethernet Policers*

ethernet-switch-profile

Syntax

```

ethernet-switch-profile {
  ethernet-policer-profile {
    input-priority-map {
      ieee802.1p premium [values];
    }
    output-priority-map {
      classifier {
        premium {
          forwarding-class class-name {
            loss-priority (high | low);
          }
        }
      }
    }
  }
  policer cos-policer-name {
    aggregate {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
    premium {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
  }
  tag-protocol-id tpid;
}
(mac-learn-enable | no-mac-learn-enable);

```

Hierarchy Level [edit interfaces *interface-name* *gigether-options*],
 [edit interfaces *interface-name* *aggregated-ether-options*],
 [edit interfaces *interface-name* *aggregated-ether-options*],
 [edit interfaces *interface-name* *ether-options*]

Release Information Statement introduced before Junos OS Release 7.4.
 Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
 Statement introduced in Junos OS Release 13.2 for the QFX Series.
 Statement introduced in Junos OS Release 13.2X50-D15 for the EX Series switches.

Description



NOTE: On QFX Series standalone switches, the `ethernet-policer-profile` CLI hierarchy and the `mac-learn-enable` statement are supported only on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, aggregated Ethernet with Gigabit Ethernet IQ interfaces, the built-in Gigabit Ethernet port on the M7i router); 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit

Ethernet, and aggregated Ethernet interfaces on EX Series switches, configure VLAN tag and MAC address accounting and filtering properties.

The remaining statements are explained separately.



NOTE: When you gather interfaces into a bridge domain, the `no-mac-learn-enable` statement at the [edit interfaces *interface-name* *gather-options* ethernet-switch-profile] hierarchy level is not supported. You must use the `no-mac-learning` statement at the [edit bridge-domains *bridge-domain-name* bridge-options interface *interface-name*] hierarchy level to disable MAC learning on an interface in a bridge domain. For information on disabling MAC learning for a bridge domain, see the *MX Series Layer 2 Configuration Guide*.

Default	If the ethernet-switch-profile statement is not configured, Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) behave like Gigabit Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Gigabit Ethernet Policers</i> • <i>Configuring MAC Address Filtering</i> • <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i> • <i>Configuring Q-in-Q Tunneling (CLI Procedure)</i>

facility-override

Syntax	<code>facility-override <i>facility-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options sysloghost <i>hostname</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Override default facility for system log reporting.
Options	<i>facility-name</i> —Name of facility that overrides the default assignment.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

fastether-options

Syntax fastether-options {
 802.3ad {
 aex (primary | backup);
 lACP {
 port-priority;
 }
 }
 (flow-control | no-flow-control);
 ignore-l3-incompletes;
 ingress-rate-limit *rate*;
 (loopback | no-loopback);
 mpls {
 pop-all-labels {
 required-depth *number*;
 }
 }
 source-address-filter {
 mac-address;
 }
 (source-filtering | no-source-filtering);
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure Fast Ethernet-specific interface properties.

 The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • *Ethernet Interfaces Overview*

fast-aps-switch

Syntax	fast-aps-switch;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only and EX Series switches) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.




NOTE:

- Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.
- When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.
- To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.
- The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.
- The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Reducing APS Switchover Time in Layer 2 Circuits</i>

fcs

Syntax	fcs (16 32);
Hierarchy Level	[edit interfaces e1- <i>fpc/pic/port</i>], [edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	<p>For E1/E3, SONET/SDH, and T1/T3 interfaces, configure the frame checksum (FCS) on the interface. The checksum must be the same on both ends of the interface.</p> <p>On a channelized OC12 interface, the SONET/SDH fcs statement is not supported. To configure FCS on each DS3 channel, you must include the t3-options fcs statement in the configuration for each channel. For SONET/SDH, the channelized OC12 interface supports DS3 to STS-1 to OC12. For SDH, the channelized OC12 interface supports NxDS3 to NxVC3 to AU3 to STM.</p>
	<div>  <p>NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the fcs statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>
Options	<p>16—Use a 16-bit frame checksum on the interface.</p> <p>32—Use a 32-bit frame checksum on the interface. Using a 32-bit checksum provides more reliable packet verification, but some older equipment might not support 32-bit checksums.</p> <p>Default: 16</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring the E1 Frame Checksum Configuring the E3 Frame Checksum Configuring the SONET/SDH Frame Checksum Configuring the T1 Frame Checksum Configuring the T3 Frame Checksum


feac-loop-respond

Syntax	(feac-loop-respond no-feac-loop-respond);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For T3 interfaces only, configure the router so a remote CSU can place the local router into loopback.</p> <p>If you configure remote or local loopback with the T3 loopback statement, the router does not respond to FEAC requests from the CSU even if you include the feac-loop-respond statement in the configuration. For the router to respond, you must delete the loopback statement from the configuration.</p> <p>You must rollback the setting done on the remote CSU prior to deactivating the feac-loop-respond statement. If the remote CSU cannot comply, clear the remote loop through local configuration to achieve the cleanup. For example, configure remote loopback on the interface and then delete the remote loopback.</p>
Default	The router does not respond to FEAC requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the T3 FEAC Response</i>• loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 258• remote-loopback-respond on page 313

flexible-vlan-tagging

Syntax	flexible-vlan-tagging;
Hierarchy Level	[edit interfaces aex], [edit interfaces ge- <i>fpc/pic/port</i>], [edit interfaces et- <i>fpc/pic/port</i>], [edit interfaces ps0], [edit interfaces xe- <i>fpc/pic/port</i>]
Release Information	Statement introduced in Junos OS Release 8.1. Support for aggregated Ethernet added in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.
Description	<p>Support simultaneous transmission of 802.1Q VLAN single-tag and dual-tag frames on logical interfaces on the same Ethernet port, and on pseudowire logical interfaces.</p> <p>This statement is supported on M Series and T Series routers, for Fast Ethernet and Gigabit Ethernet interfaces only on Gigabit Ethernet IQ2 and IQ2-E, IQ, and IQE PICs, and for aggregated Ethernet interfaces with member links in IQ2, IQ2-E, and IQ PICs or in MX Series DPCs, or on Ethernet interfaces for PTX Series Packet Transport Routers or 100-Gigabit Ethernet Type 5 PIC with CFP. This statement is supported on Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Mixed Tagging</i>• <i>Configuring Flexible VLAN Tagging on PTX Series Packet Transport Routers</i>• <i>Configuring Q-in-Q Tunneling (CLI Procedure)</i>

flow-control

Syntax	(flow-control no-flow-control);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>interface-name</i> multiservice-options], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> ether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.
<div style="display: flex; align-items: center;">  <div> <p>NOTE: On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.</p> </div> </div>	
Default	Flow control is enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Flow Control • Configuring Gigabit Ethernet Interfaces (CLI Procedure) • Configuring Gigabit Ethernet Interfaces (CLI Procedure)

force

Syntax	<code>force (protect working);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Perform a forced switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch. It can be overridden by a signal failure on the protect circuit, thus causing a switch to the working circuit.
Options	protect —Request the circuit to become the protect circuit. working —Request the circuit to become the working circuit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Switching Between the Working and Protect Circuits</i>• request on page 314

forwarding-class (ATM2 IQ Scheduler Maps)

Syntax	<pre>forwarding-class <i>class-name</i> { epd-threshold <i>cells plp1 cells</i>; linear-red-profile <i>profile-name</i>; priority (high low); transmit-weight (<i>cells number</i> percent <i>number</i>); }</pre>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define forwarding class name and option values.
Options	class-name —Name of forwarding class. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>• <i>Configuring Scheduler Maps on ATM Interfaces</i>

forwarding-class (Gigabit Ethernet IQ Classifier)

Syntax	<code>forwarding-class class-name { loss-priority (high low); }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map classifier premium]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Gigabit Ethernet IQ interfaces only, define forwarding class name and option values.
Options	<i>class-name</i> —Name of forwarding class. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Specifying an Output Priority Map</i> • input-priority-map on page 236 • forwarding-class statement in the <i>Junos OS Class of Service Library for Routing Devices</i>

fragment-threshold

Syntax	<code>fragment-threshold bytes;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For multilink, link services, and voice services interfaces, and for J Series Services Routers ISDN interfaces, set the fragmentation threshold.
Options	<i>bytes</i> —Maximum size, in bytes, for multilink packet fragments. Any nonzero value must be a multiple of 64 bytes. Range: 128 through 16,320 bytes Default: 0 bytes (no fragmentation)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Logical Interface Properties</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

framing (E1, E3, and T1 Interfaces)

Syntax	<code>framing (g704 g704-no-crc4 g.751 g.832 unframed sf esf);</code>
Hierarchy Level	[edit interfaces <i>ce1-fpc/pic/port</i>], [edit interfaces <i>ct1-fpc/pic/port</i>], [edit interfaces <i>at-fpc/pic/port</i> e3-options], [edit interfaces <i>e1-fpc/pic/port</i> e1-options], [edit interfaces <i>t1-fpc/pic/port</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Configure the framing format.



NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `framing` statement must be included at the [edit interfaces *ce1-fpc/pic/port*] or [edit interfaces *ct1-fpc/pic/port*] hierarchy level as appropriate.

Default	<code>esf</code> for T1 interfaces; <code>g704</code> for E1 interfaces. There is no default value for E3 over ATM interfaces.
Options	<p><code>esf</code>—Extended superframe (ESF) mode for T1 interfaces.</p> <p><code>g704</code>—G.704 framing format for E1 interfaces.</p> <p><code>g704-no-crc4</code>—G.704 framing with no cyclic redundancy check 4 (CRC4) for E1 interfaces.</p> <p><code>g.751</code>—G.751 framing format for E3 over ATM interfaces.</p> <p><code>g.832</code>—G.832 framing format for E3 over ATM interfaces.</p> <p><code>sf</code>—Superframe (SF) mode for T1 interfaces.</p> <p><code>unframed</code>—Unframed mode for E1 interfaces.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E1 Framing</i> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • <i>Configuring T1 Framing</i>

gigether-options

```
Syntax  gigether-options {
        802.3ad {
            aex (primary | backup);
            lacp {
                port-priority;
            }
        }
        (asynchronous-notification | no-asynchronous-notification);
        (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
        (flow-control | no-flow-control);
        ignore-l3-incompletes;
        (loopback | no-loopback);
        mpls {
            pop-all-labels {
                required-depth number;
            }
        }
        no-auto-mdix
        source-address-filter {
            mac-address;
        }
        (source-filtering | no-source-filtering);
        speed
        ethernet-switch-profile {
            (mac-learn-enable | no-mac-learn-enable);
            tag-protocol-id [ tpids ];
            ethernet-policer-profile {
                input-priority-map {
                    ieee802.1p premium [ values ];
                }
                output-priority-map {
                    classifier {
                        premium {
                            forwarding-class class-name {
                                loss-priority (high | low);
                            }
                        }
                    }
                }
            }
            policer cos-policer-name {
                aggregate {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
                premium {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
            }
        }
    }
```

```
}
```

Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure Gigabit Ethernet specific interface properties. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Interfaces Overview</i>• <i>gether-options (ACX Series)</i>

gratuitous-arp-reply

Syntax	(gratuitous-arp-reply no-gratuitous-arp-reply);
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.
Default	Updating of the ARP cache is disabled on all Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gratuitous ARP</i>• no-gratuitous-arp-request on page 278

hello-timer

Syntax	<code>hello-timer <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the rate at which hello messages are sent. A hello message is transmitted after a period defined in milliseconds has elapsed.
Options	<p>milliseconds—The rate at which hello messages are sent.</p> <p>Range: 1 through 180 milliseconds</p> <p>Default: 10 milliseconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • acknowledge-timer on page 147 • <i>address</i>

high-plp-max-threshold

Syntax	<code>high-plp-max-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the high PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	percent —Fill-level percentage when linear random early discard (RED) is applied to cells with PLP.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM2 IQ VC Tunnel CoS Components</i> • low-plp-max-threshold on page 262 • low-plp-threshold on page 263 • queue-depth on page 308

high-plp-threshold

Syntax	<code>high-plp-threshold percent;</code>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options linear-red-profiles profile-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
Options	percent —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>• high-plp-max-threshold on page 225• low-plp-max-threshold on page 262• low-plp-threshold on page 263• queue-depth on page 308

hold-time (APS)

Syntax	<code>hold-time milliseconds;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Hold-time value to use to determine whether a neighbor APS router is operational.
Options	milliseconds —Hold-time value. Range: 1 through 65,534 milliseconds Default: 3000 milliseconds (3 times the advertisement interval)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring APS Timers</i>• advertise-interval on page 148

hold-time (Physical Interface)

Syntax	<code>hold-time up <i>milliseconds</i> down <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces interface-range <i>interface-range-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 10.4R5 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	Specify the hold-time value to use to damp shorter interface transitions milliseconds. When an interface goes from up to down, it is not advertised to the rest of the system as being down until it has remained down for the hold-time period. Similarly, an interface is not advertised as being up until it has remained up for the hold-time period.



NOTE:

- We recommend that you configure the hold-time value after determining an appropriate value by performing repeated tests in the actual hardware environment. This is because the appropriate value for hold-time depends on the hardware (XFP, SFP, SR, ER, or LR) used in the networking environment.
- The hold-time option is not available for controller interfaces.

Default	Interface transitions are not damped.
Options	<p>down <i>milliseconds</i>—Hold time to use when an interface transitions from up to down. Junos OS advertises the transition within 100 milliseconds of the time value you specify.</p> <p>Range: 0 through 4,294,967,295</p> <p>Default: 0 (interface transitions are not damped)</p> <p>up <i>milliseconds</i>—Hold time to use when an interface transitions from down to up. Junos OS advertises the transition within 100 milliseconds of the time value you specify.</p> <p>Range: 0 through 4,294,967,295</p> <p>Default: 0 (interface transitions are not damped)</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • advertise-interval on page 148 • interfaces (for EX Series switches) • Physical Interface Damping Overview on page 19

- [Damping Shorter Physical Interface Transitions on page 98](#)
- [Damping Longer Physical Interface Transitions on page 99](#)

hold-time (SONET/SDH Defect Triggers)

Syntax	hold-time up <i>milliseconds</i> down <i>milliseconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options trigger defect]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM over SONET/SDH and SONET/SDH interfaces only, apply up and down hold times to SONET/SDH defect triggers. When you apply a down hold time to a defect, the defect must remain present for at least the hold-time period before the interface is marked down. When you apply an up hold time to a defect, the defect must remain absent for at least the hold-time period before the interface is marked up, assuming no other defect is outstanding.



NOTE:

- When up or down hold times are applied to SONET defect triggers of a 10-Gigabit Ethernet WAN-PHY interface, only the defects generated in the WAN Interface Sublayer (WIS) are damped. Therefore, if the hold times are applied to SONET defect triggers only, a 10-Gigabit Ethernet WAN-PHY interface might be marked up or down because of the faults that are generated in other layers, such as the Physical Coding Sublayer (PCS) or Physical Medium Attachment Sublayer (PMA), 10 Gigabit Media Independent Interface (XGMII) Extender Sublayer (XGXS), and Media Access Control (MAC). To damp the interface up or down events of a 10-Gigabit Ethernet WAN-PHY interface, you need to apply up or down hold-times for the interface at the [edit interfaces *interface-name*] hierarchy level.
- On M Series and T Series platforms with Channelized SONET IQ PICs and Channelized SONET IQE PICs, the SONET defect alarm trigger hold-time statement is not supported.

Default	If you do not include this statement, when a defect is detected the interface is marked down immediately, and when the defect becomes absent the interface is marked up immediately.
Options	<p>down <i>milliseconds</i>—Hold time to wait before the interface is marked down.</p> <p>Range: 1 through 65,534 milliseconds</p> <p>Default: No hold time</p> <p>up <i>milliseconds</i>—Hold time to wait before the interface is marked up.</p> <p>Range: 1 through 65,534 milliseconds</p> <p>Default: No hold time</p>

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring SONET/SDH Defect Triggers*
- [hold-time \(Physical Interface\) on page 227](#)

host (Interfaces)

Syntax

```
host hostname {  
    services severity-level;  
    facility-override facility-name;  
    log-prefix prefix-value;  
    port port-number;  
}
```

Hierarchy Level [edit interfaces *interface-name* services-options syslog]

Release Information Statement introduced before Junos OS Release 7.4.

Description Specify the hostname for the system logging utility.

Options *hostname*—Name of the system logging utility host machine. This can be the local Routing Engine or an external server address.


The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Applying Filters and Services to Interfaces*

idle-cycle-flag

Syntax	<code>idle-cycle-flag value;</code>
Hierarchy Level	<code>[edit interfaces e1-fpc/pic/port],</code> <code>[edit interfaces t1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name serial-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
Description	Configure the value that the DS0, E1, E3, T1, or T3 interface transmits during idle cycles.
<div>  <p>NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>idle-cycle-flag</code> statement must be included at the <code>[edit interfaces e1-fpc/pic/port]</code> or <code>[edit interfaces t1-fpc/pic/port]</code> hierarchy level as appropriate.</p> </div>	
Options	<p>value—Value to transmit in the idle cycles:</p> <ul style="list-style-type: none"> flags—Transmit the value 0x7E. ones—Transmit the value 0xFF (all ones). <p>Default: Flags</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the E1 Idle Cycle Flag</i> <i>Configuring the E3 Idle Cycle Flag</i> <i>Configuring the T1 Idle Cycle Flag</i> <i>Configuring the T3 Idle Cycle Flag</i>

ieee802.1p

Syntax	ieee802.1p premium [<i>values</i>];
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile input-priority-map] [edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile ethernet-policer-profile input-priority-map]
Release Information	Statement introduced before Junos Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
Description	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, configure premium priority values for IEEE 802.1p input traffic.
Options	values —Define IEEE 802.1p priority values to be treated as premium. Range: 0 through 7
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Input Priority Map</i>

ignore-all

Syntax	ignore-all;
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Ignore all control leads. You can include the ignore-all statement in the configuration only if you do not explicitly enable other signal handling options at the dte-options hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

ignore-l3-incompletes

Syntax	ignore-l3-incompletes;
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	Ignore the counting of Layer 3 incomplete errors on Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Ignoring Layer 3 Incomplete Errors</i>

ilmi

Syntax	ilmi;
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Enable the router to communicate with directly attached ATM switches and routers. The router uses the VC 0.16 to communicate with the ATM switch or router. Once configured, you can display the IP address and port number of an ATM switch or router using the show interfaces <i>interface-name</i> switch-id command.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Communication with Directly Attached ATM Switches and Routers</i> • <i>show ilmi</i> • <i>show ilmi statistics</i>

inactivity-timeout

Syntax	<code>inactivity-timeout</code> <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For adaptive services interfaces, configure the inactivity timeout period for established flows. The timeout configured in the application protocol definition overrides this value.
Options	<i>seconds</i> —Timeout period, in seconds. Range: 4 through 86,400 seconds Default: 30 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

indication

Syntax	<code>indication</code> (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the from-DCE signal indication.
Options	ignore —The from-DCE signal is ignored. normal —Normal indication signal handling as defined by ITU-T Recommendation X.21. require —The from-DCE signal must be asserted. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Signal Handling</i>

indication-polarity

Syntax	indication-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the indication signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Serial Signal Polarities</i>

ingress-rate-limit

Syntax	ingress-rate-limit <i>rate</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Perform port-based rate limiting on ingress traffic arriving on Fast Ethernet 8-port, 12-port, and 48-port PICs.
Options	<p>rate—Traffic rate, in megabits per second (Mbps).</p> <p>Range: 1 through 100 Mbps</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Ingress Rate Limit</i>

input-priority-map

Syntax	input-priority-map { ieee802.1p premium [<i>values</i>]; }
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile] [edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile ethernet-policer-profile]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
Description	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the input policer priority map to be applied to incoming frames on this interface. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Input Priority Map</i>• output-priority-map on page 286

interface (Hierarchical CoS Schedulers)

Syntax	interface <i>interface-name</i> ;
Hierarchy Level	[edit interfaces interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Specify an interface that is a member of the interface set. Supported on Ethernet interfaces on an MX Series router, Ethernet interfaces on IQ2E PIC on M Series and T Series routers, and IP demux interfaces on an MX Series router.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Class of Service Library for Routing Devices</i>

interfaces

Syntax	<code>interfaces { ... }</code>
Hierarchy Level	[edit]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure interfaces on the router or switch.
Default	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Physical Interface Configuration Statements Overview on page 5 • <i>Configuring Aggregated Ethernet Link Protection</i>

interface-shared-with

Syntax	<code>interface-shared-with psdn;</code>
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/slot</i> unit <i>logical-unit-number</i>], [edit interfaces <i>so-fpc/pic/slot</i> unit <i>logical-unit-number</i>], [edit interfaces <i>xe-fpc/pic/slot</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Assign a logical interface under a shared physical interface to a Protected System Domain (PSD).
Options	<i>n</i> —PSD identification as a numeric value. Range: 1 through 31
Required Privilege Level	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
Related Documentation	

interface-type (Interfaces)

Syntax	<code>interface-type (bc coc1 ct1 ct3 dc ds so t1 t3);</code>
Hierarchy Level	[edit interfaces <i>interface-range</i> name no-partition], [edit interfaces <i>interface-range</i> name partition <i>partition-number</i>], [edit interfaces <i>interface-range</i> name partition <i>partition-number</i> oc-slice <i>oc-slice-range</i>], [edit interfaces <i>interface-range</i> name partition <i>partition-number</i> timeslot <i>timeslot-range</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IQ and IQE interfaces only, configure the sublevel interface type.
Options	<p>bc—Dual—Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>] hierarchy level to create a bearer (B) channel bc-pim/0/port:channel interface for each time you want to function as an ISDN PRI B-channel.</p> <p>coc1—Channelized OC1 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port] hierarchy level.</p> <p>ct1—Channelized T1 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type ct3-fpc/pic/port<:channel>] hierarchy level.</p> <p>ct3—Channelized T3 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc1-fpc/pic/port:channel no-partition] hierarchy level.</p> <p>dc—Dual-Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>] hierarchy level to create a (D) channel dc-pim/0/port to control the B-channels.</p> <p>ds—DS0 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type (ce1-fpc/pic/port ct1-fpc/pic/port<:channel>)] hierarchy level.</p> <p>so—SONET/SDH interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port] hierarchy level.</p> <p>t1—T1 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type (coc12-fpc/pic/port coc1-fpc/pic/port)] hierarchy level.</p> <p>t3—T3 interface type. You can specify this interface type at the [edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type (coc12-fpc/pic/port coc1-fpc/pic/port:channel no-partition)] hierarchy level.</p>

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Channelized E1 IQ and IQE Interfaces Overview</i> • <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i> • <i>Configuring Channelized T3 IQ Interfaces</i>

invert-data

Syntax	invert-data;
Hierarchy Level	[edit interfaces e1- <i>fpc/pic/port</i>], [edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> e3-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Invert the transmission of unused data bits on the DS0, E1, E3, and T1 interface.




NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the invert-data statement must be included at the [edit interfaces e1-*fpc/pic/port*] or [edit interfaces t1-*fpc/pic/port*] hierarchy level as appropriate.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E1 Data Inversion</i> • <i>Configuring E3 Data Inversion</i> • <i>Configuring T1 Data Inversion</i>

keepalives

Syntax	<code>keepalives <interval seconds> <down-count number> <up-count number>;</code>
Hierarchy Level	<code>[edit interfaces interface-name],</code> <code>[edit interfaces interface-name unit logical-unit-number],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation.</p> <p>For ATM2 IQ interfaces only, you can enable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• <code>atm-ppp-llc</code>—PPP over AAL5 LLC encapsulation.• <code>atm-ppp-vc-mux</code>—PPP over AAL5 multiplex encapsulation.
Default	Sending of keepalives is enabled by default. The default keepalive interval is 10 seconds for PPP, Frame Relay, or Cisco HDLC. The default down-count is 3 and the default up-count is 1 for PPP or Cisco HDLC.
Options	<p>down-count <i>number</i>—The number of keepalive packets a destination must fail to receive before the network takes down a link.</p> <p>Range: 1 through 255</p> <p>Default: 3</p> <p>interval <i>seconds</i>—The time in seconds between successive keepalive requests.</p> <p>Range: 1 through 32767 seconds</p> <p>Default: 10 seconds</p> <p>up-count <i>number</i>—The number of keepalive packets a destination must receive to change a link's status from down to up.</p> <p>Range: 1 through 255</p> <p>Default: 1</p>
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Keepalives on page 91• Configuring Frame Relay Keepalives• Applying PPP Attributes to L2TP LNS Subscribers Per Inline Service Interface

lACP (Aggregated Ethernet)

Syntax	<pre>lACP { (active passive); admin-key key; accept-data; fast-failover; link-protection { disable; (revertive non-revertive); } periodic interval; system-id mac-address; system-priority priority; }</pre>
Hierarchy Level	<p>[edit interfaces aeX aggregated-ether-options] [edit logical-systems <i>logical-system-name</i> interfaces aeX aggregated-ether-options]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. fast-failover option introduced in Junos OS Release 12.2. Support for logical systems introduced in Junos OS Release 14.1.</p>
Description	<p>Configure the Link Aggregation Control Protocol (LACP) for aggregated Ethernet interfaces only.</p> <p>When you configure the accept-data statement at the [edit interfaces aeX aggregated-ether-options lACP] hierarchy level, the router processes packets received on a member link irrespective of the LACP state if the aggregated Ethernet bundle is up.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> NOTE: When you configure the accept-data statement at the [edit interfaces aeX aggregated-ether-options lACP] hierarchy level, this behavior occurs:</p> <ul style="list-style-type: none"> • By default, the accept-data statement is not configured when LACP is enabled. • You can configure the accept-data statement to improve convergence and reduce the number of dropped packets when member links in the bundle are enabled or disabled. • When LACP is down and a member link receives packets, the router or switch does not process packets as defined in the IEEE 802.1ax standard. According to this standard, the packets should be dropped, but they are processed instead because the accept-data statement is configured. </div>
Default	If you do not specify LACP as either active or passive , LACP remains passive.
Options	active —Initiate transmission of LACP packets.

admin-key *number*—Specify an administrative key for the router or switch.



NOTE: You must also configure multichassis link aggregation (MC-LAG) when you configure the **admin-key**.

fast-failover—Specify to override the IEEE 802.3ad standard and allow the standby link to receive traffic. Overriding the default behavior facilitates subsecond failover.

passive—Respond to LACP packets.

The remaining statements are explained separately.

**Required Privilege
Level**

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

**Related
Documentation**

- *Configuring Aggregated Ethernet LACP*
- *Configuring Aggregated Ethernet LACP (CLI Procedure)*
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

line-encoding

Syntax	line-encoding (ami b8zs);
Hierarchy Level	[edit interfaces <i>ct1-fpc/pic/port</i>], [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Set the line encoding format on the T1 interface.



NOTE: When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the `line-encoding` statement must be included at the [edit interfaces *ct1-fpc/pic/port*] hierarchy level.

Default	The default line encoding is B8ZS.
Options	ami —Use Alternate Mark Inversion (AMI) line encoding. b8zs —Use bipolar with 8-zeros substitution (B8ZS) line encoding.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring T1 Line Encoding</i>

line-protocol

Syntax	<code>line-protocol <i>protocol</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For serial interfaces only, configure the line protocol.
Options	<i>protocol</i> —You can specify the one of the following line protocols: <ul style="list-style-type: none">• eia530—Line protocol EIA-530• v.35—Line protocol V.35• x.21—Line protocol X.21
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Line Protocol</i>

line-rate

Syntax	<code>line-rate <i>line-rate</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure the SHDSL line rate.
Options	<i>line-rate</i> —SHDSL line rate, in Kbps. Possible values are: 2-wire (Kbps): 192, 256, 320, 384, 448, 512, 576, 640, 704, 768, 832, 896, 960, 1024, 1088, 1152, 1216, 1280, 1344, 1408, 1472, 1536, 1600, 1664, 1728, 1792, 1856, 1920, 1984, 2048, 2112, 2176, 2240, 2304, auto 4-wire (Kbps): 384, 512, 640, 768, 896, 1024, 1152, 1280, 1408, 1536, 1664, 1792, 1920, 2048, 2176, 2304, 2432, 2560, 2688, 2816, 2944, 3072, 3200, 3328, 3456, 3584, 3712, 3840, 3968, 4096, 4224, 4352, 4480, 4608 Default: For 2-wire mode, auto ; for 4-wire mode, 4608 Kbps
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM-over-SHDSL Overview</i>

linear-red-profile

Syntax	<code>linear-red-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a linear RED profile to a specified forwarding class. To define the linear RED profiles, include the linear-red-profiles statement at the [edit interfaces at- <i>fpc/pic/port</i> atm-options] hierarchy level.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	<i>profile-name</i> —Name of the linear RED profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an ATM Scheduler Map</i> • linear-red-profiles on page 246 • <i>Configuring Scheduler Maps on ATM Interfaces</i> • <i>epd-threshold</i>

linear-red-profiles

Syntax	<code>linear-red-profiles <i>profile-name</i> { <i>high-plp-threshold percent</i>; <i>low-plp-threshold percent</i>; <i>queue-depth cells</i>; }</code>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS virtual circuit drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
Options	<i>profile-name</i> —Name of the drop profile. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring ATM2 IQ VC Tunnel CoS Components</i><i>Configuring Linear RED Profiles on ATM Interfaces</i>

link-layer-overhead

Syntax	<code>link-layer-overhead <i>percent</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For AS PIC or MultiServices PIC link services IQ interfaces (lsq) only, configure the percentage of total bundle bandwidth to be set aside for link-layer overhead.
Options	<i>percent</i> —Percentage of total bundle bandwidth to be set aside for link-layer overhead. Range: 0 through 50 percent Default: 4 percent
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Junos OS Services Interfaces Library for Routing Devices</i>

link-mode

Syntax	<code>link-mode mode;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>ge-pim</i> /0/0 <i>switch-options</i> <i>switch-port</i> <i>port-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	Set the device's link connection characteristic.
Options	<p><i>mode</i>—Link characteristics:</p> <ul style="list-style-type: none"> • automatic—Link mode is negotiated. This is the default for EX Series switches. • full-duplex—Connection is full duplex. • half-duplex—Connection is half duplex. <p>Default: Fast Ethernet interfaces, except the J Series ePIM Fast Ethernet interfaces, can operate in either full-duplex or half-duplex mode. The router's management Ethernet interface, fxp0 or em0, the built-in Fast Ethernet interfaces on the FIC (M7i router), and the Gigabit Ethernet ports on J Series Services Routers with uPIMs installed and configured for access switching mode autonegotiate whether to operate in full-duplex or half-duplex mode. Unless otherwise noted here, all other interfaces operate only in full-duplex mode.</p>



NOTE: On J Series ePIM Fast Ethernet interfaces, if you specify half-duplex (or if full-duplex mode is not autonegotiated), the following message is written to the system log: "Half-duplex mode not supported on this PIC, forcing full-duplex mode."



NOTE: On EX Series switches, if no-auto-negotiation is specified in [edit interfaces *interface-name* ether-options], you can select only full-duplex or half-duplex. If auto-negotiation is specified, you can select any mode.



NOTE: Member links of an aggregated Ethernet bundle must not be explicitly configured with a link mode. You must remove any such link-mode configuration before committing the aggregated Ethernet configuration.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Link Characteristics on Ethernet Interfaces</i>• <i>Understanding Management Ethernet Interfaces</i>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>

link-protection

Syntax	<pre>link-protection { disable; (revertive non-revertive); }</pre>
Hierarchy Level	<p>[edit interfaces aex aggregated-ether-options] [edit interfaces aex aggregated-ether-options <i>lACP</i>]</p>
Release Information	<p>Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 9.0 for EX Series switches. Support for disable, revertive, and non-revertive statements added in Junos OS Release 9.3.</p>
Description	<p>On the router, for aggregated Ethernet interfaces only, configure link protection. In addition to enabling link protection, a primary and a secondary (backup) link must be configured to specify what links egress traffic should traverse. To configure primary and secondary links on the router, include the primary and backup statements at the [edit interfaces <i>ge-fpc/pic/port</i> gigether-options 802.3ad aex] hierarchy level or the [edit interfaces <i>fe-fpc/pic/port</i> fastether-options 802.3ad aex] hierarchy level.</p> <p>On the switch, you can configure either Junos OS link protection for aggregated Ethernet interfaces or the LACP standards link protection for aggregated Ethernet interfaces.</p> <p>For Junos OS link protection, specify link-protection at the following hierarchy levels:</p> <ul style="list-style-type: none"> • [edit interfaces <i>ge-fpc/pic/port</i> ether-options 802.3ad aex] • [edit interfaces <i>xe-fpc/pic/port</i> ether-options 802.3ad aex] <p>For LACP standards link protection, specify link-protection at the following hierarchy levels:</p> <ul style="list-style-type: none"> • For global LACP link protection, specify at [edit chassis aggregated-devices ethernet lACP] • For a specific aggregated Ethernet interface, specify at [edit interfaces aeX aggregated-ether-options lACP] <p>To disable link protection, use the delete interface ae aggregated-ether-options link-protection statement at the [edit interfaces aex aggregated-ether-options] hierarchy level or the [edit interfaces aex aggregated-ether-options <i>lACP</i>] hierarchy level.</p>
Options	The statements are explained separately.
Required Privilege Level	<p>interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</i>

link-speed (Aggregated Ethernet)

Syntax	link-speed <i>speed</i> ;
Hierarchy Level	[edit interfaces aex aggregated-ether-options], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> aggregated-sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	For aggregated Ethernet interfaces only, set the required link speed.
Options	<p>speed—For aggregated Ethernet links, you can specify speed in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Aggregated Ethernet links on the M120 router can have one of the following speeds:</p> <ul style="list-style-type: none">• 100m—Links are 100 Mbps.• 10g—Links are 10 Gbps.• 1g—Links are 1 Gbps.• oc192—Links are OC192 or STM64c. <p>Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none">• 10m—Links are 10 Mbps.• 100m—Links are 100 Mbps.• 1g—Links are 1 Gbps.• 10g—Links are 10 Gbps. <p>Aggregated Ethernet links on T Series routers can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none">• 100g—Links are 100 Gbps.• 100m—Links are 100 Mbps.• 10g—Links are 10 Gbps.• 1g—Links are 1 Gbps.• 40g—Links are 40 Gbps.• 50g—Links are 50 Gbps.• 80g—Links are 80 Gbps.• 8g—Links are 8 Gbps.

- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Aggregated Ethernet Interfaces Overview*
- *Configuring Aggregated Ethernet Link Speed*
- *Configuring Mixed Aggregated Ethernet Links*
- *Configuring Aggregated Ethernet Links (CLI Procedure)*
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

link-speed (Aggregated SONET/SDH)

Syntax link-speed (*speed* | mixed);

Hierarchy Level [edit interfaces asx aggregated-sonet-options]

Release Information Statement introduced before Junos OS Release 7.4.
mixed option added in Release 8.0.

Description For aggregated SONET/SDH interfaces only, set the required link speed.

Options **speed**—Aggregated SONET/SDH links can have one of the following speed values.

- **oc3**—Links are OC3c or STM1c.
- **oc12**—Links are OC12c or STM4c.
- **oc48**—Links are OC48c or STM16c.
- **oc192**—Links are OC192c or STM64c.
- **oc768**—Links are OC768c or STM256c.

mixed—For aggregated SONET/SDH links on T Series routers, you can mix interface speeds in SONET/SDH aggregation bundles. Interface speeds from OC3 through OC768 are supported.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Aggregated Ethernet Link Speed*
- *Configuring Aggregated SONET/SDH Interfaces*

lmi (Frame Relay)

Syntax lmi {
 lmi-type (ansi | itu | c-lmi);
 n391dte *number*;
 n392dce *seconds*;
 n392dte *number*;
 n393dce *number*;
 n393dte *number*;
 t391dte *number*;
 t392dce *seconds*;
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Set Frame Relay keepalive parameters.

Options n391dte—DTE full status polling interval.
 Range: 1 through 255
 Default: 6

 n392dce—DCE error threshold, in number of errors.
 Range: 1 through 10
 Default: 3

 n392dte—DTE error threshold, in number of errors.
 Range: 1 through 10
 Default: 3

 n393dce—DCE monitored event-count.
 Range: 1 through 10
 Default: 4

 n393dte—DTE monitored event-count.
 Range: 1 through 10
 Default: 4


 t391dte—DTE polling timer.
 Range: 5 through 30 seconds
 Default: 10 seconds

 t392dce—DCE polling timer.
 Range: 5 through 30 seconds
 Default: 15 seconds

 The remaining statements are explained separately.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Tunable Keepalives for Frame Relay LMI</i> • lmi-type on page 253 • mlfr-uni-nni-bundle-options on page 267

lmi-type

Syntax	lmi-type (ansi itu c-lmi);
Hierarchy Level	[edit interfaces <i>interface-name</i> lmi], [edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set Frame Relay Local Management Interface (LMI) type.
<div>  NOTE: Consortium LMI is supported on all MPCs and I-chip based FPCs. </div>	
Options	ansi—Use ANSI T1.167 Annex D LMIs. itu—Use ITU Q933 Annex A LMIs. c-lmi—Use Consortium LMI. Default: ansi
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Frame Relay Keepalives</i> • mlfr-uni-nni-bundle-options on page 267 • lmi (Frame Relay) on page 252 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

local-name

Syntax	local-name <i>name</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options chap], [edit interfaces <i>interface-name</i> ppp-options pap], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]
Release Information	Statement introduced before Junos OS Release 7.4. Support for PAP added in Junos OS Release 8.3.
Description	<p>For CHAP authentication, the value sent in CHAP challenge and response packets on a per interface basis. For PAP authentication, the local hostname for sending PAP authentication requests.</p> <p>For ATM2IQ interfaces only, you can configure a CHAP local name on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• atm-ppp-llc—PPP over AAL5 LLC encapsulation.• atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Default	For CHAP authentication, if you do not include the local-name statement in the configuration, the interface sends the router's system hostname in CHAP challenge and response packets.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the PPP Challenge Handshake Authentication Protocol on page 75• Configuring the PPP Password Authentication Protocol on page 78• <i>Junos OS Administration Library for Routing Devices</i>

local-password

Syntax	<code>local-password password;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options pap], [edit interfaces <i>interface-name</i> unit logical-unit-number ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number ppp-options pap]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Configure the host password for sending PAP requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Local Password</i> • Configuring the PPP Password Authentication Protocol on page 78

lockout

Syntax	<code>lockout;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a lockout of protection, forcing the use of the working circuit and locking out the protect circuit regardless of anything else.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Switching Between the Working and Protect Circuits</i>

log-prefix (Interfaces)

Syntax	<code>log-prefix <i>prefix-value</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options syslog host <i>hostname</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set the system logging prefix value.
Options	<i>prefix-value</i> —System logging prefix value.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• <i>Configuring System Logging for Services Interfaces</i>

long-buildout

Syntax	<code>(long-buildout no-long-buildout);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure the T3 line buildout. A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (68 meters), and a long setting, which is greater than 255 feet and shorter than 450 feet (137 meters).</p> <p>This statement applies to copper-cable-based T3 interfaces only. You cannot configure a line buildout for a DS3 channel on a channelized OC12 interface, which runs over fiber-optic cable.</p>
Default	A T3 interface uses the short line buildout setting (no-long-buildout) for wires shorter than 255 feet (68 meters).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the T3 Line Buildout</i>

loop-timing



Syntax	(loop-timing no-loop-timing);
Hierarchy Level	[edit interfaces ct3- <i>fpc/pic/port</i> t3-options], [edit interfaces e1- <i>fpc/pic/port:0</i> sonet-options], [edit interfaces stm1- <i>fpc/pic/port</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For channelized IQ interfaces and non-IQ channelized STM1 interfaces only, configure the SONET/SDH or DS3-level clocking source.



NOTE: On M Series, MX Series, and T Series routers, under E1 channels, loop timing can be configured only at channel 0. When you configure on channel 0, it is applicable on all channels as internal by default.

Options	loop-timing —Configure loop timing (external) clocking. no-loop-timing —Configure line timing (internal) clocking. Default: no-loop-timing
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Channelized IQ and IQE SONET/SDH Loop Timing</i> • <i>Configuring the Channelized T3 Loop Timing</i> • clocking on page 178

loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)

Syntax	loopback (local payload remote);
Hierarchy Level	[edit interfaces ce1- <i>fpc/pic/port</i>], [edit interfaces ct1- <i>fpc/pic/port</i>], [edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> dsl-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> shdsl-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	Configure a loopback connection. To turn off the loopback capability, remove the loopback statement from the configuration.
<div>  <p>NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the local or remote option at the [edit interfaces ce1-<i>fpc/pic/port</i>] or [edit interfaces ct1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> <p>When configuring T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the payload option at the [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level.</p> </div>	
<div>  <p>NOTE: When configuring CE1 or CT1 interfaces on the 16-port Channelized E1/T1 MIC (MIC-3D-16CHE1-T1-CE), you must include the loopback statement at the [edit interfaces ce1-<i>fpc/pic/port</i>] hierarchy level, or [edit interfaces ct1-<i>fpc/pic/port</i>]</p> </div>	
<p>To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the sonet-options loopback statement local and remote options at the controller interface (coc48, cstm16, coc12, cstm4, coc3, cstm1). It is ignored for path-level interfaces so-fpc/pic/port or so-fpc/pic/port:channel.</p>	
Options	local —Loop packets, including both data and timing information, back on the local router's PIC. NxDS0 IQ interfaces do not support local loopback.

payload—For channelized T3, T1, and NxDS0 IQ interfaces only, loop back data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated. Neither ATM-over-asymmetrical digital subscriber line (ADSL) interfaces nor ATM-over-SHDSL interfaces support payload loopback.

remote—Loop packets, including both data and timing information, back on the remote router's interface card. NxDS0 IQ interfaces do not support remote loopback.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i>• <i>Configuring E1 Loopback Capability</i>• <i>Configuring E3 Loopback Capability</i>• <i>Configuring SONET/SDH Loopback Capability</i>• <i>Configuring SHDSL Operating Mode on an ATM Physical Interface</i>• <i>Configuring T1 Loopback Capability</i>• <i>Configuring T3 Loopback Capability</i>• feac-loop-respond on page 217

loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

Syntax	(loopback no-loopback);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces interface-range <i>name</i> ether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.



NOTE:

- By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system.
- IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces *ge-fpc/pic/port* gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces *ge-fpc/pic/port* unit *logical-unit-number* family inet6 address] hierarchy level.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Ethernet Loopback Capability</i>

loopback (Serial)

Syntax	<code>loopback mode;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a loopback connection.
Default	If you do not include this statement, there is no loopback connection.
Options	<p>mode—You can specify the one of the following loopback modes:</p> <ul style="list-style-type: none"> • dce-local—For EIA-530 interfaces only, loop packets back on the local DCE. • dce-remote—For EIA-530 interfaces only, loop packets back on the remote DCE. • local—Loop packets back on the local router's PIC. • remote—Loop packets back on the line interface unit (LIU).
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Serial Loopback Capability</i>

loss-priority

Syntax	<code>loss-priority (high low);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map classifier premium forwarding-class class-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the packet loss priority value.
Options	<p>high—Packet has high loss priority.</p> <p>low—Packet has low loss priority.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Specifying an Output Priority Map</i>

low-plp-max-threshold

Syntax	<code>low-plp-max-threshold percent;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles profile-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the low PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>• high-plp-max-threshold on page 225• low-plp-threshold on page 263• <i>Configuring Linear RED Profiles on ATM Interfaces</i>• <i>high-plp-max-threshold</i>• queue-depth on page 308


low-plp-threshold

Syntax	<code>low-plp-threshold percent;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the CoS VC drop profile fill-level percentage when linear RED is applied to cells with low PLP. When the fill level exceeds the defined percentage, packets with low PLP are randomly dropped by RED. This statement is mandatory.
Options	percent —Fill-level percentage when linear RED is applied to cells with low PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM2 IQ VC Tunnel CoS Components</i> • high-plp-max-threshold on page 225 • high-plp-threshold on page 226 • <i>Configuring Linear RED Profiles on ATM Interfaces</i> • <i>high-plp-max-threshold</i> • <i>high-plp-threshold</i> • low-plp-max-threshold on page 262 • queue-depth on page 308

mac

Syntax	<code>mac mac-address;</code>
Hierarchy Level	<code>[edit interfaces interface-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Set the MAC address of the interface.</p> <p>Use this statement at the [edit interfaces ... ps0] hierarchy level to configure the MAC address for a pseudowire logical device that is used for subscriber interfaces over point-to-point MPLS pseudowires.</p>
Options	<p>mac-address—MAC address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i>. For example, 0011.2233.4455 or 00:11:22:33:44:55.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the MAC Address on the Management Ethernet Interface</i>• <i>Configuring a Pseudowire Subscriber Logical Interface Device</i>

mac-learn-enable

Syntax	(mac-learn-enable no-mac-learn-enable);
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP configure whether source and destination MAC addresses are dynamically learned:</p> <ul style="list-style-type: none"> • mac-learn-enable—Allow the interface to dynamically learn source and destination MAC addresses. • no-mac-learn-enable—Prohibit the interface from dynamically learning source and destination MAC addresses. <p>MAC address learning is based on source addresses. You can start accounting for traffic after there has been traffic sent from the MAC address. Once the MAC address is learned, the frames and bytes transmitted to or received from the MAC address can be tracked.</p>
	<p> NOTE: When you gather interfaces into a bridge domain, the no-mac-learn-enable statement at the [edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile] hierarchy level is not supported. You must use the no-mac-learning statement at the [edit bridge-domains <i>bridge-domain-name</i> bridge-options interface <i>interface-name</i>] hierarchy level to disable MAC learning on an interface in a bridge domain. For information on disabling MAC learning for a bridge domain, see <i>MX Series Layer 2 Configuration Guide</i>.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring MAC Address Filtering</i>

minimum-links

Syntax	<code>minimum-links <i>number</i>;</code>
Hierarchy Level	<p>[edit interfaces aex aggregated-ether-options], [edit interfaces aex aggregated-sonet-options], [edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit logical-unit-number], [edit interfaces interface-range <i>range</i> aggregated-ether-options], [edit interfaces interface-range <i>range</i> aggregated-sonet-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	For aggregated Ethernet, SONET/SDH, multilink, link services, and voice services interfaces only, set the minimum number of links that must be up for the bundle to be labeled up.
Options	<p><i>number</i>—Number of links.</p> <p>Range: On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, the valid range for minimum-links number is 1 through 64. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX8200 switches, the range of valid values for minimum-links number is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled up.</p> <p>Default: 1</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Aggregated Ethernet Minimum Links</i> • <i>Configuring Aggregated SONET/SDH Interfaces</i> • <i>Configuring Aggregated Ethernet Links (CLI Procedure)</i> • <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

mlfr-uni-nni-bundle-options

Syntax	<pre>mlfr-uni-nni-bundle-options { acknowledge-retries <i>number</i>; acknowledge-timer <i>milliseconds</i>; action-red-differential-delay (disable-tx remove-link); drop-timeout <i>milliseconds</i>; fragment-threshold <i>bytes</i>; hello-timer <i>milliseconds</i>; link-layer-overhead <i>percent</i>; lmi-type (ansi itu c-lmi); minimum-links <i>number</i>; mrru <i>bytes</i>; n391 <i>number</i>; n392 <i>number</i>; n393 <i>number</i>; red-differential-delay <i>milliseconds</i>; t391 <i>seconds</i>; t392 <i>number</i>; yellow-differential-delay <i>milliseconds</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure link services and voice services interface management properties.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Frame Relay Keepalives</i> • lmi (Frame Relay) on page 252 • lmi-type on page 253 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

modem-options

Syntax	<pre>modem-options { dialin (console routable); init-command-string <i>initialization-command-string</i>; }</pre>
Hierarchy Level	[edit interfaces umd0]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	<p>For J Series Services Routers, configure a USB port to act as a USB modem.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying a USB Modem Interface on J Series Routers</i>

mpls (Interfaces)

Syntax	<pre>mpls { pop-all-labels { required-depth <i>number</i>; } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For passive monitoring on ATM and SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, process incoming IP packets that have MPLS labels.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Removing MPLS Labels from Incoming Packets</i>• <i>Enabling Passive Monitoring on SONET/SDH Interfaces</i>• <i>Junos OS Services Interfaces Library for Routing Devices</i>

mrru

Syntax	<code>mrru bytes;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit logical-unit-number], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For multilink, link services, voice services, and J Series Services Routers ISDN interfaces only, set the maximum received reconstructed unit (MRRU). The MRRU is similar to the MTU, but is specific to multilink interfaces.
Options	bytes —MRRU size. Range: 1500 through 4500 bytes Default: 1500 bytes
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Logical Interface Properties</i> • mtu on page 270 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

mtu

Syntax	<code>mtu bytes;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit interfaces <i>interface-range name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vpls],</p> <p>[edit protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>],</p> <p>[edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>],</p> <p>[edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols vpls]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for Layer 2 VPNs and VPLS introduced in Junos OS Release 10.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Support at the [set interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>] hierarchy level introduced in Junos OS Release 12.3R3 for MX Series routers.</p>
Description	<p>Specify the maximum transmission unit (MTU) size for the media or protocol. The default MTU size depends on the device type. Changing the media MTU or protocol MTU causes an interface to be deleted and added again.</p> <p>To route jumbo data packets on an integrated routing and bridging (IRB) interface or routed VLAN interface (RVI) on EX Series switches, you must configure the jumbo MTU size on the member physical interfaces of the VLAN that you have associated with the IRB interface or RVI, as well as on the IRB interface or RVI itself (the interface named <i>irb</i> or <i>vlan</i>, respectively).</p>



CAUTION: For EX Series switches, setting or deleting the jumbo MTU size on an IRB interface or RVI while the switch is transmitting packets might cause packets to be dropped.



NOTE:

The MTU for an IRB interface is calculated by removing the Ethernet header overhead $[6(\text{DMAC}) + 6(\text{SMAC}) + 2(\text{EtherType})]$. Because, the MTU is the lower value of the MTU configured on the IRB interface and the MTU configured on the IRB's associated bridge domain IFDs or IFLs, the IRB MTU is calculated as follows:

- In case of Layer 2 IFL configured with the `flexible-vlan-tagging` statement, the IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
- In case of Layer 2 IFL configured with the `vlan-tagging` statement, the IRB MTU is calculated by including a single VLAN 4 bytes overhead.



NOTE:

- If a packet whose size is larger than the configured MTU size is received on the receiving interface, the packet is eventually dropped. The value considered for MRU (maximum receive unit) size is also the same as the MTU size configured on that interface.
- Not all devices allow you to set an MTU value, and some devices have restrictions on the range of allowable MTU values. You cannot configure an MTU for management Ethernet interfaces (fxp0, em0, or me0) or for loopback, multilink, and multicast tunnel devices.
- On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family inet]` or `[edit interfaces interface-name unit logical-unit-number family inet6]` hierarchy level.
 - If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
 - If you are configuring the protocol MTU for both `inet` and `inet6` families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for `inet` and `inet6` families that are configured on the same logical interface.

For more information about configuring MTU for specific interfaces and router or switch combinations, see [“Configuring the Media MTU” on page 57](#).

Options	bytes —MTU size. Range: 256 through 9192 bytes, 256 through 9216 (EX Series switch interfaces), 256 through 9500 bytes (Junos OS 12.1X48R2 for PTX Series routers) Default: 1500 bytes (INET, INET6, and ISO families), 1448 bytes (MPLS), 1514 bytes (EX Series switch interfaces)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>• <i>Configuring Routed VLAN Interfaces (CLI Procedure)</i>• <i>Configuring Integrated Routing and Bridging Interfaces (CLI Procedure)</i>• Configuring the Media MTU on page 57• <i>Configuring the MTU for Layer 2 Interfaces</i>• <i>Setting the Protocol MTU</i>

multicast-statistics

Syntax	multicast-statistics;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 10.2.
Description	For Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces in T Series or TX Matrix routers, specify support for multicast statistics on a physical interface to enable multicast accounting for all the logical interfaces below the physical interface.
Default	not enabled—must be configured to enable
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces</i>• <i>Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</i>• <i>Configuring Multicast Statistics Collection on Ethernet Interfaces</i>• <i>Configuring Multicast Statistics Collection on SONET Interfaces</i>

multiservice-options

Syntax	<pre>multiservice-options { (syslog no-syslog); (core-dump no-core-dump); (dump-on-flow-control); flow-control-options { down-on-flow-control; dump-on-flow-control; reset-on-flow-control; } }</pre>
Hierarchy Level	[edit interfaces <i>mo-fpc/pic/port</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For monitoring services interfaces only, configure multiservice-specific interface properties.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 97• <i>Junos OS Services Interfaces Library for Routing Devices</i>• passive-monitor-mode on page 291

n391

Syntax	n391 <i>number</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, set the Frame Relay full status polling interval.
Options	<i>number</i> —Polling interval. Range: 1 through 255 Default: 6
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n392 on page 275• n393 on page 276• timeslots on page 348• t392 on page 344

n392

Syntax	n392 <i>number</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set the Frame Relay error threshold, in number of errors.
Options	<i>number</i> —Error threshold. Range: 1 through 10 Default: 3
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n391 on page 274• n393 on page 276• timeslots on page 348• t392 on page 344

n393

Syntax	n393 <i>number</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set the Frame Relay monitored event count.
Options	<i>number</i> —Number of event count. Range: 1 through 10 Default: 4
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n391 on page 274• n392 on page 275• timeslots on page 348• t392 on page 344

native-vlan-id

Syntax	<code>native-vlan-id <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/port</i>], [edit interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>Configure mixed tagging support for untagged packets on a port for the following:</p> <ul style="list-style-type: none"> • M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging • MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging • T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP • EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces <p>When the native-vlan-id statement is included with the flexible-vlan-tagging statement, untagged packets are accepted on the same mixed VLAN-tagged port.</p> <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface. To configure the logical interface, include the vlan-id statement (matching the native-vlan-id statement on the physical interface) at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level.</p> <p>When the native-vlan-id statement is included with the <i>interface-mode</i> statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.</p>
Options	<p><i>number</i>—VLAN ID number.</p> <p>Range: (ACX Series routers and EX Series switches) 0 through 4094.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Mixed Tagging Support for Untagged Packets</i> • <i>Configuring a Logical Interface for Access Mode</i> • <i>Configuring the Native VLAN Identifier (CLI Procedure)</i> • <i>Understanding Bridging and VLANs on EX Series Switches</i> • flexible-vlan-tagging on page 218

- *Understanding Q-in-Q Tunneling on EX Series Switches*

neighbor (Automatic Protection Switching for SONET/SDH)

Syntax	<code>neighbor address;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>If you are configuring one router to be the working router and a second to be the protect router, configure the address of the remote interface. You configure this on one or both of the interfaces.</p> <p>The address you specify for the neighbor must never be routed through the interface on which APS is configured, or instability will result. We strongly recommend that you directly connect the working and protect routers and that you configure the interface address of this shared network as the neighbor address.</p>
Options	<i>address</i> —Neighbor's address.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Basic Automatic Protect Switching</i>

no-gratuitous-arp-request

Syntax	<code>no-gratuitous-arp-request;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 9.6 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	For Ethernet interfaces and pseudowire logical interfaces, do not respond to gratuitous ARP requests.
Default	Gratuitous ARP responses are enabled on all Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gratuitous ARP</i>• gratuitous-arp-reply on page 224

no-keepalives

Syntax	no-keepalives;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Disable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation. The default keepalive interval is 10 seconds.</p> <p>For ATM2 IQ interfaces only, you can disable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> • atm-ppp-llc—PPP over AAL5 LLC encapsulation. • atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Keepalives on page 91 • <i>Disabling the Sending of PPPoE Keepalive Messages</i> • <i>Configuring Frame Relay Keepalives</i>

non-revertive (Interfaces)

Syntax	non-revertive;
Hierarchy Level	[edit interfaces aeX aggregated-ether-options lacp link-protection]
Release Information	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 11.4 for EX Series switches.</p>
Description	Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • link-protection on page 249 • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</i>

no-partition

Syntax	no-partition interface-type (e1 (cau4 so) (ct3 t3) so t3);
Hierarchy Level	[edit interfaces ce1-fpc/pic/port], [edit interfaces coc1-fpc/pic/port:channel], [edit interfaces coc12-fpc/pic/port], [edit interfaces cstm1-fpc/pic/port], [edit interfaces ct3-fpc/pic/port]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Channelized E1 IQ PICs only, configure the channelized E1 interface as an unpartitioned, clear channel.</p> <p>For Channelized OC12 PIC only, convert the channelized OC1 IQ interface into a channelized T3 interface or a T3 interface. You perform this configuration task for C-bit parity and M13-mapped configurations.</p> <p>For Channelized OC12 IQ PICs only, configure the channelized OC12 interface as an unpartitioned, clear channel.</p> <p>For Channelized STM1 PIC only, convert the channelized STM1 IQ interface into a channelized Administrative Unit 4 (AU-4) interface or a SONET/SDH STM1 interface.</p> <p>For Channelized DS3 PIC only, configure the channelized T3 interface as an unpartitioned, clear channel.</p>
Default	If you do not include either this statement or the partition statement, the Channelized IQ PIC is not partitioned, and no data channels are configured.
Options	<p>The option used must correspond to the physical interface type:</p> <p>e1—E1 interface type.</p> <p>coc12 so—Channelized OC12 interface type, in SONET mode.</p> <p>cau4—Channelized AU-4 interface type.</p> <p>cstm1—SONET/SDH STM1 interface type, in SDH mode.</p> <p>ct3—Channelized T3 interface type.</p> <p>t3—T3 interface type.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Channelized E1 IQ and IQE Interfaces Overview</i>• <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i>• <i>Configuring an OC12/STM4 Interface</i>

- *Configuring Channelized STM1 IQ and IQE Interfaces*
- *Configuring T3 IQ Interfaces*
- [partition on page 289](#)
- *no-partition*

no-termination-request

Syntax	no-termination-request;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options], [edit interfaces lsq- <i>fpc/pic/port</i> lsq-failure-options]
Release Information	Statement introduced in Junos OS Release 7.4. Support at the [edit interfaces <i>interface-name</i> ppp-options] hierarchy level added in Junos OS Release 8.3.
Description	For LSQ PICs or link PICs in redundant LSQ configurations, you can inhibit the router from sending PPP termination-request messages to the remote host if the PIC fails.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Link PIC Failover on Channelized OC3 IQ and IQE Interfaces</i> • <i>Configuring Link PIC Failover on Channelized OC12/STM4 IQ and IQE Interfaces</i> • <i>Configuring Link PIC Failover on Channelized STM1 Interfaces</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

oam-liveness

Syntax	<pre>oam-liveness { down-count <i>cells</i>; up-count <i>cells</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. Not supported on ATM-over-SHDSL interfaces. For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.
Options	down-count <i>cells</i> —Minimum number of consecutive OAM F4 or F5 loopback cells lost before a VC is declared down. Range: 1 through 255 Default: 5 cells up-count <i>cells</i> —Minimum number of consecutive OAM F4 or F5 loopback cells received before a VC is declared up. Range: 1 through 255 Default: 5 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring the ATM OAM F5 Loopback Cell Threshold

oam-period

Syntax	<code>oam-period (disable seconds);</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>For ATM encapsulation only, configure the OAM F5 loopback cell period. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure the OAM F4 loopback cell period at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.</p>
Default	If you omit this statement, OAM F5 loopback cells are not initiated, but the interface still responds if it receives OAM F5 loopback cells.
Options	<p>disable—Disable the OAM loopback cell transmit feature.</p> <p>seconds—OAM loopback cell period.</p> <p>Range: 1 through 900 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Defining the ATM OAM F5 Loopback Cell Period

oc-slice

Syntax	<code>oc-slice <i>oc-slice-range</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> partition <i>partition-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For channelized OC12 IQ interfaces only, configure the range of SONET/SDH slices.
Default	If you do not include either this statement or the no-partition statement, the Channelized OC12 IQ PICs not partitioned, and no data channels are configured.
Options	<p>oc-slice-range—Range of SONET/SDH slices. OC3 interfaces must occupy three consecutive OC slices per interface, in the form 1–3, 4–6, 7–9, or 10–12. The T3, T1, and DS0 interface types each occupy one OC slice per interface.</p> <p>Range: For OC3 interfaces, 1–3, 4–6, 7–9, or 10–12; for SONET/SDH and T3 interfaces, 1–12</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i>

open-timeout

Syntax	<code>open-timeout <i>seconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure timeout period for Transmission Control Protocol (TCP) session establishment.
Options	<p>seconds—Timeout period in seconds.</p> <p>Range: 4 through 224 seconds</p> <p>Default: 30 seconds</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

optics-options

Syntax	<pre> optics-options { alarm low-light-alarm { (link-down syslog); } tx-power <i>dbm</i>; warning low-light-warning { (link-down syslog); } wavelength <i>nm</i>; } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>alarm option and warning options introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement and tx-power option introduced in Junos OS Release 13.2 for PTX Series routers.</p>
Description	For 10-Gigabit Ethernet or 100-Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces only, configure full C-band International Telecommunication Union (ITU)-Grid tunable optics.
Options	The remaining statements are explained separately.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Ethernet DWDM Interface Wavelength Overview</i> <i>100-Gigabit Ethernet OTN Options Configuration Overview</i>

output-priority-map

Syntax	<pre>output-priority-map { classifier { premium { forwarding-class <i>class-name</i> { loss-priority (high low); } } } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile] [edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile ethernet-policer-profile]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
Description	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the output policer priority map to be applied to outgoing frames on this interface. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Output Priority Map</i>• input-priority-map on page 236

overflow (Receive Bucket)

Syntax	<pre>overflow (discard tag);</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> receive-bucket]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify how to handle packets that exceed the threshold for the receive leaky bucket.
Options	tag —Tag, count, and process received packets that exceed the threshold. discard —Discard received packets that exceed the threshold. No counting is done.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Receive and Transmit Leaky Bucket Properties on page 95


overflow (Transmit Bucket)

Syntax	overflow discard;
Hierarchy Level	[edit interfaces <i>interface-name</i> transmit-bucket]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Discard packets that exceed the threshold for the transmit leaky bucket.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties on page 95

paired-group

Syntax	paired-group <i>group-name</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure load sharing between two working protect circuit pairs.
Options	<i>group-name</i> —Circuit's group name, as configured with the protect-circuit or working-circuit statement.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring APS Load Sharing • working-circuit on page 374

pap

Syntax	<pre>pap { access-profile name; default-pap-password password; local-name name; local-password password; passive; }</pre>
Hierarchy Level	<pre>[edit interfaces interface-name ppp-options], [edit interfaces interface-name unit logical-unit-number ppp-options], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number ppp-options]</pre>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	<p>Configure the Password Authentication Protocol (PAP). Use PAP authentication as a means to provide a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.</p> <p>After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.</p>
	<div>  <p>BEST PRACTICE: On inline service (si) interfaces for L2TP, only the <code>pap</code> statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p> </div>
	The remaining statements are explained separately.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Challenge Handshake Authentication Protocol on page 75 • Configuring PPP PAP Authentication • Tracing Operations of the pppd Process on page 82 • traceoptions (PPP Process) • Example: Configuring PAP for an L2TP Profile • Applying PPP Attributes to L2TP LNS Subscribers Per Inline Service Interface

partition

Syntax	<code>partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type <i>type</i> timeslots <i>time-slot-range</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IQ interfaces and J Series interfaces on the Dual-Port Channelized E1 and T1PIM, configure the channelized interface partition. The partition number is correlated with the channel number. Partition and channel numbering on IQ interfaces begins with :1, not :0.
Default	If you omit this statement, the channelized PIC or PIM is not partitioned, and no data channels are configured.
Options	<p><i>partition-number</i>—Sublevel interface partition index.</p> <p>Range:</p> <ul style="list-style-type: none"> • 1 through 4 for an OC3 interface on a channelized OC12 IQ interface. • 1 through 12 for a T3 interface on a channelized OC12 IQ interface. • 1 through 4 for a T3 interface on a channelized T3 IQ interface. • 1 through 28 for a T1 IQ interface on a channelized OC12 IQ or channelized T3 IQ interface. • 1 through 10 for an E1 interface on a channelized E1 IQ interface. • 1 through 30 on a channelized E1 interface. • 1 through 23 on a channelized T1 interface. • 1 through 24 for NxDS0 interfaces on either channelized OC12 IQ or channelized DS3 IQ interfaces. • 0 through 31 (with 0 reserved for framing) for NxDS0 interfaces on channelized E1 IQ interfaces. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Channelized E1 IQ and IQE Interfaces Overview</i> • <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i> • <i>Configuring Channelized T3 IQ Interfaces</i> • no-partition on page 280

passive (CHAP)

Syntax	<code>passive;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>ppp-options chap</code>], [edit interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options chap</code>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options chap</code>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Do not challenge the peer, but respond if challenged. If you omit this statement from the configuration, the interface always challenges its peer.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• <code>atm-ppp-llc</code>—PPP over AAL5 LLC encapsulation.• <code>atm-ppp-vc-mux</code>—PPP over AAL5 multiplex encapsulation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Passive Mode on page 77• <i>Junos OS Administration Library for Routing Devices</i>

passive (PAP)

Syntax	<code>passive;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>ppp-options pap</code>], [edit interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Initiate an authentication request when the PAP option is received from a peer. If you omit this statement from the configuration, the interface requires the peer to initiate an authentication request.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Passive Mode on page 80• <i>Junos OS Administration Library for Routing Devices</i>


passive-monitor-mode

Syntax	passive-monitor-mode;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Monitor packet flows from another router. If you include this statement in the configuration, the interface does not send keepalives or alarms, and does not participate actively on the network.</p> <p>This statement is supported on ATM, Ethernet, and SONET/SDH interfaces. For more information, see <i>ATM Interfaces Feature Guide for Routing Devices</i>.</p> <p>For ATM and Ethernet interfaces, you can include this statement on the physical interface only.</p> <p>For SONET/SDH interfaces, you can include this statement on the logical interface only.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Enabling Passive Monitoring on ATM Interfaces</i> • <i>Passive Monitoring on Ethernet Interfaces Overview</i> • <i>Enabling Passive Monitoring on SONET/SDH Interfaces</i> • multiservice-options on page 273 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

path-trace

Syntax	<code>path-trace <i>trace-string</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure a path trace identifier, which is a text string that identifies the circuit.</p> <p>On SONET/SDH OC48 interfaces that are configured for channelized (multiplexed) mode (by including the no-concatenate statement at the [edit chassis fpc slot-number pic <i>pic-number</i>] hierarchy level), the bytes e1-quiet and bytes f1 options have no effect. The bytes f2, bytes z3, bytes z4, and path-trace options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.</p> <p>For DS3 channels on a channelized OC12 interface, you can configure a unique path trace for each of the 12 channels. Each path trace can be up to 16 bytes. For channels on a channelized OC12 IQ interface, each path trace can be up to 64 bytes.</p>
Options	<p>trace-string—Text string that identifies the circuit. If the string contains spaces, enclose it in quotation marks. A common convention is to use the circuit identifier as the path trace identifier. If you do not configure an identifier, the Junos OS uses the system and interface names to construct the default trace-string. For all nonchannelized SONET/SDH interfaces, the default trace-string is system-name interface-name. For channelized SONET/SDH interfaces and 10-Gigabit Ethernet WAN-PHY interfaces, the default trace-string is interface-name.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the SONET/SDH Path Trace Identifier</i>• sonet-options on page 328

payload-scrambler

Syntax	(payload-scrambler no-payload-scrambler);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the sonet payload-scrambler statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the t3-options payload-scrambler statement in the configuration for each DS3 channel.</p>
	<div>  <p>NOTE: The payload-scrambler statement at the [edit interfaces <i>interface-name</i> e3-options] hierarchy level is not valid for IQE PICs.</p> </div>
Default	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • <i>Configuring E3 HDLC Payload Scrambling</i> • <i>Configuring SONET/SDH HDLC Payload Scrambling</i> • <i>Configuring T3 HDLC Payload Scrambling</i> • <i>Examples: Configuring T3 Interfaces</i> • compatibility-mode on page 180

periodic

Syntax	<code>periodic interval;</code>
Hierarchy Level	[edit interfaces aex aggregated-ether-options lacp], [edit interfaces interface-range <i>name</i> aggregated-ether-options lacp]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	For aggregated Ethernet interfaces only, configure the interval for periodic transmission of LACP packets.
Options	<i>interval</i> —Interval for periodic transmission of LACP packets. <ul style="list-style-type: none">• fast—Transmit packets every second.• slow—Transmit packets every 30 seconds. Default: fast
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Aggregated Ethernet LACP</i>• <i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i>

per-unit-scheduler

Syntax	<code>per-unit-scheduler;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 13.2 on 16x10GE MPC and MPC3E line cards. Statement introduced in Junos OS Release 13.2 on PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 13.3 on MPC4E line cards.
Description	For Channelized OC3 IQ, Channelized OC12 IQ, Channelized STM1 IQ, Channelized T3 IQ, Channelized E1 IQ, E3 IQ, link services IQ interfaces (lsq-), link services (ls-) on J Series routers, Gigabit Ethernet IQ, Gigabit Ethernet IQ2 and IQ2-E, and 10-, 40-, and 100-Gigabit Ethernet interfaces (including the 16x10GE MPC), enable the association of scheduler map names with logical interfaces.



NOTE: Per-unit scheduling is not supported on T1 interfaces configured on the Channelized OC12 IQ PIC.



NOTE: On Gigabit Ethernet IQ2 and IQ2-E PICs without the `per-unit-scheduler` statement, the entire PIC supports 4071 VLANs and the user can configure all the VLANs on the same port.

On Gigabit Ethernet IQ2 and IQ2-E PICs with the `per-unit-scheduler` statement, the entire PIC supports $1024 - 2 * \text{number of ports}$ (1024 minus two times the number of ports), because each port is allocated two default schedulers.

When including the `per-unit-scheduler` statement, you must also include the `vlan-tagging` statement or the `flexible-vlan-tagging` statement (to apply scheduling to VLANs) or the `encapsulation frame-relay` statement (to apply scheduling to DLCIs) at the `[edit interfaces interface-name]` hierarchy level.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs</i> • vlan-tagging on page 366 • flexible-vlan-tagging on page 218 • <i>Applying Scheduling and Shaping to VLANs</i> • <i>Configuring Virtual LAN Queuing and Shaping on PTX Series Packet Transport Routers</i>

pfc

Syntax	pfc;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options compression], [edit interfaces <i>interface-name</i> unit logical-unit-number ppp-options compression], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number ppp-options compression]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation, configure the router to compress the protocol field to one byte.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the PPP Protocol Field Compression on page 86

pic-type

Syntax	pic-type (atm1 atm2);
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM interfaces, configure the type of ATM PIC installed in your router.
Options	atm1 —ATM1 PIC. atm2 —ATM2 IQ PIC.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the ATM PIC Type

plp1

Syntax	<code>plp1 cells;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for QFX Series switches.</p>
Description	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded. This threshold applies to packets that have a PLP of 1.
Default	EPD threshold is unregulated.
Options	<p>cells—Maximum number of cells.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 1 through 425,984 cellsFor 1-port OC48 interfaces, 1 through 425,984 cellsFor 2-port OC3, DS3, and E3 interfaces, 1 through 212,992 cellsFor 4-port DS3 and E3 interfaces, 1 through 106,496 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Two EPD Thresholds per Queue</i> • <i>Configuring an ATM Scheduler Map</i> • linear-red-profile on page 245

plp-to-clp

Syntax	plp-to-clp;
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port atm-options</i>], [edit interfaces at- <i>fpc/pic/port unit logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port unit logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, enable the PLP setting to be copied to the cell-loss priority (CLP) bit.
Default	If you omit this statement, the Junos OS does not copy the PLP setting to the CLP bit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>• <i>Copying the PLP Setting to the CLP Bit on ATM Interfaces</i>

policer (CoS)

Syntax	<pre> policer <i>cos-policer-name</i> { aggregate { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } premium { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ, Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, define a CoS policer template to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits. The premium policer is not supported on MX Series routers or for Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router).</p>
Options	<p><i>cos-policer-name</i>—Name of one policer to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Gigabit Ethernet Policers</i>

pool

Syntax	<code>pool <i>pool-name</i> <priority <i>priority</i>>;</code>
Hierarchy Level	[edit interfaces <i>br-pim/0/port</i> dialer-options], [edit interfaces <i>umd0</i> dialer-options], [edit interfaces <i>dlm</i> unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>dlm</i> unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers, for logical and physical ISDN interfaces, specify the dial pool. The dial pool allows logical (dialer) and physical (<i>br-pim/0/port</i>) interfaces to be bound together dynamically on a per-call basis. On a dialer interface, pool directs the dialer interface which dial pool to use. On <i>br-pim/0/port</i> interface, pool defines the pool to which the interface belongs.
Options	<i>pool-name</i> —Pool identifier. <i>priority priority</i> —(Physical <i>br-pim/0/port</i> interfaces only) Specify a priority value of 0 (lowest) to 255 (highest) for the interface within the pool.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ISDN Physical Interface Properties</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

pop-all-labels

Syntax	pop-all-labels { required-depth <i>number</i> ; }
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options mpls], [edit interfaces <i>interface-name</i> sonet-options mpls], [edit interfaces <i>interface-name</i> fastether-options mpls], [edit interfaces <i>interface-name</i> gigether-options mpls]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	<p>For passive monitoring on ATM, SONET/SDH, Fast Ethernet, and Gigabit Ethernet interfaces only, removes up to two MPLS labels from incoming IP packets. For passive monitoring on T Series devices, removes up to five MPLS labels from incoming IP packets.</p> <p>This statement has no effect on IP packets with more than two MPLS labels, or IP packets with more than five MPLS labels on T Series devices. Packets with MPLS labels cannot be processed by the Monitoring Services PIC; if packets with MPLS labels are forwarded to the Monitoring Services PIC, they are discarded.</p> <p>The remaining statement is explained separately.</p>
Default	If you omit this statement, the MPLS labels are not removed, and the packet is not processed by the Monitoring Services PIC.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Removing MPLS Labels from Incoming Packets</i> • <i>Enabling Passive Monitoring on SONET/SDH Interfaces</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

ppp-options

Syntax	<pre> ppp-options { authentication [<i>authentication-protocols</i>]; chap { access-profile <i>name</i>; challenge-length minimum <i>minimum-length</i> maximum <i>maximum-length</i>; default-chap-secret <i>name</i>; local-name <i>name</i>; passive; } compression { acfc; pfc; } dynamic-profile <i>profile-name</i>; initiate-ncp (ip ipv6 dual-stack-passive) lcp-max-conf-req <i>number</i> lcp-restart-timer <i>milliseconds</i>; loopback-clear-timer <i>seconds</i>; ncp-max-conf-req <i>number</i> ncp-restart-timer <i>milliseconds</i>; on-demand-ip-address pap { access-profile <i>name</i>; default-pap-password <i>password</i>; local-name <i>name</i>; local-password <i>password</i>; passive; } } </pre>
Hierarchy Level	<pre> [edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] </pre>

Release Information Statement introduced before Junos OS Release 7.4.

Description On interfaces with PPP encapsulation, configure PPP-specific interface properties.

For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:

- **atm-ppp-llc**—PPP over AAL5 LLC encapsulation.
- **atm-ppp-vc-mux**—PPP over AAL5 multiplex encapsulation.



BEST PRACTICE: On inline service (si) interfaces for L2TP, only the chap and pap statements are typically used for subscriber management. We recommend that you leave the other statements subordinate to

ppp-options—including those subordinate to chap and pap—at their default values.

.....
The remaining statements are explained separately.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Challenge Handshake Authentication Protocol on page 75 • Applying PPP Attributes to L2TP LNS Subscribers Per Inline Service Interface

premium (Output Priority Map)

Syntax	<pre>premium { forwarding-class class-name { loss-priority (high low); } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map classifier]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ interfaces only, define the classifier for egress premium traffic.</p> <p>The statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Specifying an Output Priority Map • input-priority-map on page 236

premium (Policer)

Syntax	<pre>premium { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Define a policer to apply to nonpremium traffic.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gigabit Ethernet Policers</i>• aggregate (Gigabit Ethernet CoS Policer) on page 151• ieee802.1p on page 232

preserve-interface

Syntax	<code>preserve-interface;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	<p>Provide link PIC replication, providing MLPPP link redundancy at the port level. This feature is supported with SONET APS and the following link PICs:</p> <ul style="list-style-type: none"> • Channelized OC3 IQ PIC • Channelized OC12 IQ PIC • Channelized STM1 IQ PIC <p>Link PIC replication provides the ability to add two sets of links, one from the active SONET PIC and the other from the standby SONET PIC, to the same bundle. If the active SONET PIC fails, links from the standby PIC are used without triggering link renegotiation. All the negotiated state is replicated from the active links to the standby links to prevent link renegotiation.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Link PIC Redundancy</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>


primary (AS PIC or Multiservices PIC Interfaces)

Syntax	<code>primary interface-name;</code>
Hierarchy Level	[edit interfaces (rsp0 rsp1) redundancy-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary AS PIC or MultiServices PIC interface.
Options	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form sp-fpc/pic/port .
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

priority (Schedulers)

Syntax	<code>priority (high low);</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign queuing priority to a forwarding class.
Options	low —Forwarding class has low priority. high —Forwarding class has high priority.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>

promiscuous-mode

Syntax	<code>promiscuous-mode { vpi vpi-identifier; }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	For ATM interfaces with atm-ccc-cell-relay encapsulation, map all incoming cells from either an interface port or a VP to a single label-switched path (LSP) without restricting the VCI number. Promiscuous mode allows you to map traffic from all 65,535 VCIs to a single LSP, or from all 256 VPIs to a single LSP.
<div>  <p>NOTE: In ACX Series routers, the statement supports only Inverse Multiplexing for ATM (IMA).</p> </div>	
Options	vpi-identifier —Open this VPI in promiscuous mode. Range: 0 through 255
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring ATM Cell-Relay Promiscuous Mode vpi (ATM CCC Cell-Relay Promiscuous Mode) on page 367

protect-circuit

Syntax	<code>protect-circuit <i>group-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the protect router in an APS circuit pair. When the working interface fails, APS brings up the protection circuit and the traffic is moved to the protection circuit.
Options	<i>group-name</i> —Circuit's group name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Basic Automatic Protect Switching</i>• working-circuit on page 374

queue-depth

Syntax	<code>queue-depth <i>cells</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define maximum queue depth in the CoS VC drop profile. Packets are always dropped beyond the defined maximum. This statement is mandatory; there is no default configuration.
Default	Buffer usage is unregulated.
Options	<i>cells</i> —Maximum number of cells the queue can contain. Range: 1 through 64,000 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>• <i>Configuring Linear RED Profiles on ATM Interfaces</i>• high-plp-threshold on page 226• low-plp-threshold on page 263

queue-length

Syntax	<code>queue-length <i>number</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>For ATM1 interfaces only, define the maximum queue length in the traffic-shaping profile. For ATM1 PICs, each VC has its own independent shaping parameters.</p>
Default	Buffer usage is unregulated.
Options	<p><i>number</i>—Maximum number of packets the queue can contain.</p> <p>Range: 1 through 16,383 packets</p> <p>Default: 16,383 packets</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the ATM1 Queue Length</i>

rate

Syntax	<code>rate percentage;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> receive-bucket], [edit interfaces <i>interface-name</i> transmit-bucket]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify percentage of the interface line rate that is available to receive or transmit packets.
Options	percentage —Percentage of the interface line rate that is available to receive or transmit packets. Range: 0 through 100
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Receive and Transmit Leaky Bucket Properties on page 95

receive-bucket

Syntax	<pre>receive-bucket { overflow (discard tag); rate percentage; threshold bytes; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Set parameters for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.</p> <p>For each DS3 channel on a channelized OC12 interface, you can configure a unique receive bucket.</p> <p>The statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Receive and Transmit Leaky Bucket Properties on page 95• transmit-bucket on page 351

red-differential-delay

Syntax	<code>red-differential-delay <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the red differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
Options	<i>milliseconds</i> —Red differential delay threshold. Range: 1 through 2000 milliseconds Default: 10 milliseconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• action-red-differential-delay on page 147• yellow-differential-delay on page 374• <i>Junos OS Services Interfaces Library for Routing Devices</i>

redundancy-options

Syntax	<pre>redundancy-options { primary <i>interface-name</i>; secondary <i>interface-name</i>; hot-standby; }</pre>
Hierarchy Level	<pre>[edit interfaces (rsp0 rsp1)], [edit interfaces <i>rls<number></number></i>] [edit interfaces <i>rsp<number></number></i>] [edit interfaces <i>rms<number></number></i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary and secondary (backup) AS PIC interfaces or MultiServices PIC interfaces.
Options	<p>primary <i>interface-name</i>—The identifier for the primary LSQ AS, rsp, or rms interface.</p> <p>secondary <i>interface-name</i>—The identifier for the secondary (backup) LSQ AS, rsp, or rmsinterface.</p> <p>hot-standby—For one-to-one AS, rsp, or rms redundancy configurations, specify that the failure detection and recovery must take place in less than 5 seconds.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

remote-loopback-respond

Syntax	remote-loopback-respond;
Hierarchy Level	[edit interfaces <i>ct1-fpc/pic/port</i>], [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	For T1 interfaces only, configure the router to respond to remote loopback requests. Remote loopback requests can be from the facilities data link or inband.



NOTE: When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the remote-loopback-respond statement must be included at the [edit interfaces *ct1-fpc/pic/port*] hierarchy level.

Default	The router does not respond to remote loop requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the T1 Remote Loopback Response</i> • feac-loop-respond on page 217 • loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 258

request

Syntax	<code>request (protect working);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Perform a manual switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch.
Options	protect —Request that the circuit become the protect circuit. working —Request that the circuit become the working circuit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Switching Between the Working and Protect Circuits</i>• force on page 220

required-depth

Syntax	<code>required-depth <i>number</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options mpls pop-all-labels],</p> <p>[edit interfaces <i>interface-name</i> sonet-options mpls pop-all-labels],</p> <p>[edit interfaces <i>interface-name</i> fastether-options mpls pop-all-labels],</p> <p>[edit interfaces <i>interface-name</i> gigether-options mpls pop-all-labels]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p>
Description	<p>For passive monitoring on ATM and SONET/SDH interfaces only, specify the number of MPLS labels an incoming packet must have for the pop-all-labels statement to take effect.</p> <p>If you include the required-depth 1 statement, the pop-all-labels statement takes effect for incoming packets with one label only. If you include the required-depth 2 statement, the pop-all-labels statement takes effect for incoming packets with two labels only.</p>
Options	<p>number—Number of MPLS labels on incoming IP packets.</p> <p>Range: 1 or 2 labels</p> <p>Default: If you omit this statement, the pop-all-labels statement takes effect for incoming packets with one or two labels. The default is equivalent to including the required-depth [1 2] statement.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Removing MPLS Labels from Incoming Packets</i> • <i>Enabling Passive Monitoring on SONET/SDH Interfaces</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

revert-time (Interfaces)

Syntax	<code>revert-time seconds;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure APS revertive mode.
Default	APS operates in nonrevertive mode.
Options	seconds —Amount of time to wait after the working circuit has again become functional before making the working circuit active again. Range: 1 through 65,535 seconds Default: None (APS operates in nonrevertive mode)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Revertive Mode</i>

revertive

Syntax	<code>revertive;</code>
Hierarchy Level	[edit interfaces aeX aggregated-ether-options lacp link-protection]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3 for EX Series switches.
Description	Enable the ability to switch to a better priority link (if one is available).



NOTE: By default, LACP link protection is revertive. However, you can use this statement to define a specific aggregated Ethernet interface as revertive to override a global non-revertive statement specified at the [edit chassis] hierarchy level.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>non-revertive (Chassis)</i>• <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</i>

rfc-2615

Syntax	rfc-2615;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Include this statement to enable features described in RFC 2615, <i>PPP over SONET/SDH</i> .
Default	Settings required by RFC 1619, <i>PPP over SONET/SDH</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring SONET/SDH RFC 2615 Support</i>

rts

Syntax	rts (assert de-assert normal);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, request to send (RTS).
Options	assert —The to-DCE signal must be asserted. de-assert —The to-DCE signal must be deasserted. normal —Normal RTS signal handling, as defined by the TIA/EIA Standard 530. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Serial Signal Handling</i>

rts-polarity

Syntax	<code>rts-polarity (negative positive);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure RTS signal polarity.
Options	negative —Negative signal polarity. positive —Positive signal polarity. Default: positive
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Serial Signal Polarities</i>

rtvbr

Syntax	<code>rtvbr peak rate sustained rate burst length;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ PICs only, define the real-time variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the real-time bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps.</p>
Default	If the rtvbr statement is not included, bandwidth utilization is unlimited.
Options	<p>burst length—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak rate—Peak rate, in bits per second or cells per second. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure..</p> <p>sustained rate—Sustained rate, in bps or cps. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM CBR</i> • <i>Configuring ATM2 IQ Real-Time VBR</i> • <i>Applying Scheduler Maps to Logical ATM Interfaces</i>

- [cbr on page 173](#)
- [vbr on page 364](#)

[scheduler-maps \(For ATM2 IQ Interfaces\)](#)

Syntax	<code>scheduler-maps <i>map-name</i> { forwarding-class (<i>class-name</i> assured-forwarding best-effort expedited-forwarding network-control); vc-cos-mode (alternate strict); }</code>
Hierarchy Level	[edit at- <i>fpc/pic/port interface-name</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS parameters assigned to forwarding classes.
Options	<i>map-name</i> —Name of the scheduler map. The remaining statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>• <i>Configuring Scheduler Maps on ATM Interfaces</i>• <i>atm-scheduler-map</i>• <i>Junos OS Class of Service Library for Routing Devices</i>

[secondary](#)

Syntax	<code>secondary <i>interface-name</i>;</code>
Hierarchy Level	[edit interfaces (rsp0 rsp1) redundancy-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the secondary (backup) AS PIC interface or MultiServices PIC interface.
Options	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form <i>sp-fpc/pic/port</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

serial-options

```
Syntax  serial-options {
        clock-rate rate;
        clocking-mode (dce | loop);
        control-polarity (negative | positive);
        cts-polarity (negative | positive);
        dcd-polarity (negative | positive);
        dce-options {
            control-signal (assert | de-assert | normal);
            cts (ignore | normal | require);
            dcd (ignore | normal | require);
            dsr (ignore | normal | require);
            dtr signal-handling-option;
            ignore-all;
            indication (ignore | normal | require);
            rts (assert | de-assert | normal);
            tm (ignore | normal | require);
        }
        dsr-polarity (negative | positive);
        dte-options {
            control-signal (assert | de-assert | normal);
            cts (ignore | normal | require);
            dcd (ignore | normal | require);
            dsr (ignore | normal | require);
            dtr signal-handling-option;
            ignore-all;
            indication (ignore | normal | require);
            rts (assert | de-assert | normal);
            tm (ignore | normal | require);
        }
        dtr-circuit (balanced | unbalanced);
        dtr-polarity (negative | positive);
        encoding (nrz | nrzi);
        indication-polarity (negative | positive);
        line-protocol protocol;
        loopback (dce-local | dce-remote | local | remote);
        rts-polarity (negative | positive);
        tm-polarity (negative | positive);
        transmit-clock invert;
    }
```

Hierarchy Level [edit interfaces *se-pim*/O/*port*]

Release Information Statement introduced prior to Junos OS Release 7.4.

Description Configure serial-specific interface properties.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

- Related Documentation**
- *Serial Interfaces Overview*
 - *no-concatenate*

services (Priority Level)

- Syntax** `services priority-level;`
- Hierarchy Level** [edit [interfaces](#) *interface-name* [services-options](#) [sysloghost](#) *hostname*]
- Release Information** Statement introduced before Junos OS Release 7.4.
- Description** Specify system logging priority level.
- Options** *priority-level*—Assigns a priority level to the facility. Valid entries are as follows:
- **alert**—Conditions that should be corrected immediately.
 - **any**—Matches any level.
 - **emergency**—Panic conditions.
 - **critical**—Critical conditions.
 - **error**—Error conditions.
 - **info**—Informational messages.
 - **notice**—Conditions that require special handling.
 - **warning**—Warning messages.
- Required Privilege Level**
- `interface`—To view this statement in the configuration.
`interface-control`—To add this statement to the configuration.
- Related Documentation**
- *Junos OS Services Interfaces Library for Routing Devices*

services-options

Syntax

```

services-options {
  inactivity-timeout seconds;
  open-timeout seconds;
  session-limit {
    maximum number;
    rate new-sessions-per-second;
  }
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}

```

Hierarchy Level [edit [interfaces](#) *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Define the service options to be applied on an interface.

Options The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Services Interfaces Library for Routing Devices*

shaping

Syntax	<pre>shaping { (cbr rate rtvbr peak rate sustained rate burst length vbr peak rate sustained rate burst length); queue-length number; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the traffic-shaping profile.</p> <p>For Circuit Emulation PICs, specify traffic shaping in the ingress and egress directions.</p> <p>For ATM2 IQ interfaces, changing or deleting VP tunnel traffic shaping causes all logical interfaces on a VP to be deleted and then re-added.</p> <p>VP tunnels are not supported on multipoint interfaces.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Defining Virtual Path Tunnels</i>• <i>Defining the ATM Traffic-Shaping Profile</i>• <i>Configuring ATM QoS or Shaping</i>• <i>Applying Scheduler Maps to Logical ATM Interfaces</i>

shared-interface

Syntax	shared-interface;
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/slot</i>], [edit interfaces <i>so-fpc/pic/slot</i>], [edit interfaces <i>xe-fpc/pic/slot</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Configure a physical interface to be a shared interface. Logical interfaces configured under the shared physical interface can be assigned to different Protected System Domains (PSDs).
Options	This statement has no options.
Required Privilege Level	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • interface-shared-with on page 237

shdsl-options

Syntax	<pre>shdsl-options { annex (annex-a annex-b); line-rate <i>line-rate</i>; loopback (local remote payload); snr-margin { current <i>margin</i>; snext <i>margin</i>; } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure symmetric DSL (SHDSL) options. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>ATM-over-SHDSL Overview</i>

snext

Syntax	<code>snext margin;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options snr-margin], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options snr-margin]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure self-near-end crosstalk (SNEXT) signal-to-noise ratio (SNR) margin for a SHDSL line. When configured, the line trains at higher than SNEXT threshold. The SNR margin is the difference between the desired SNR and the actual SNR.
Options	margin —Desired SNEXT margin. Possible values are disabled or a margin between –10dB and 10 dB. Default: disabled
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM-over-SHDSL Overview</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

snr-margin

Syntax	<pre>snr-margin { current margin; snext margin; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	<p>For J Series Services Routers only, configure the SHDSL signal-to-noise ratio (SNR) margin. The SNR margin is the difference between the desired SNR and the actual SNR. Configuring the SNR creates a more stable SHDSL connection by making the line train at a SNR margin higher than the threshold. If any external noise below the threshold is applied to the line, the line remains stable.</p> <p>The statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM-over-SHDSL Overview</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

sonet-options

```
Syntax  sonet-options {  
        aps {  
            advertise-interval milliseconds;  
            annex-b  
            authentication-key key;  
            (break-before-make | no-break-before-make);  
            fast-aps-switch;  
            force;  
            hold-time milliseconds;  
            lockout;  
            neighbor address;  
            paired-group group-name;  
            protect-circuit group-name;  
            request;  
            revert-time seconds;  
            switching-mode (bidirectional | unidirectional);  
            working-circuit group-name;  
        }  
        bytes {  
            c2 value;  
            e1-quiet value;  
            f1 value;  
            f2 value;  
            s1 value;  
            z3 value;  
            z4 value;  
        }  
        fcs (16 | 32);  
        loopback (local | remote);  
        mpls {  
            pop-all-labels {  
                required-depth number;  
            }  
        }  
        path-trace trace-string;  
        (payload-scrambler | no-payload-scrambler);  
        rfc-2615;  
        trigger {  
            defect ignore;  
            defect hold-time up milliseconds down milliseconds;  
        }  
    }  
    vtmapping (itu-t | klm);  
    (z0-increment | no-z0-increment);
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure SONET/SDH-specific interface properties.

On SONET/SDH OC48 interfaces that you configure for channelized (multiplexed) mode (by including the **no-concatenate** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level), the **bytes e1-quiet** and **bytes f1** options have no effect. The **bytes f2**, **bytes z3**, **bytes z4**, and **path-trace** options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.

On a channelized OC12 interface, the **bytes e1-quiet**, **bytes f1**, **bytes f2**, **bytes z3**, and **bytes z4** options are not supported. The **fcs** and **payload-scrambler** statements are also not supported; you must configure these for each DS3 channel using the **t3-options fcs** and **t3-options payload-scrambler** statements. The **aps** and **loopback** statements are supported only on channel 0 and are ignored if included in the configurations for channels 1 through 11. You can configure loopbacks for each DS3 channel with the **t3-options loopback** statement. The **path-trace** statement can be included in the configuration for each DS3 channel, thereby configuring a unique path trace for each channel.

To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the **loopback** statement **local** and **remote** options at the controller interface (coc48, cstm16, coc12, cstm4, coc3, and cstm1). It is ignored for path-level interfaces **so-fpc/pic/port** or **so-fpc/pic/port:channel**.

If you are running Intermediate System-to-Intermediate System (IS-IS) over SONET/SDH interfaces, use PPP if you are running Cisco IOS Release 12.0 or later. If you need to run HDLC, configure an ISO family MTU of 4469 on the router.

The statements are explained separately.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring SONET/SDH Parameters on ATM Interfaces</i> • <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i> • <i>Channelized STM1 Interfaces Overview</i> • <i>SONET/SDH Physical Interface Properties Overview</i> • <i>no-concatenate</i>

source-address-filter

Syntax	<pre>source-address-filter { mac-address; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Description	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), specify the MAC addresses from which the interface can receive packets. For this statement to have any effect, you must include the source-filtering statement in the configuration to enable source address filtering. This statement is not supported on the J Series Services Routers.
Options	<p>mac-address—MAC address filter. You can specify the MAC address as <i>nn:nn:nn:nn:nn:nn</i> or <i>nnnn.nnnn.nnnn</i>, where <i>n</i> is a decimal digit. To specify more than one address, include multiple mac-address options in the source-address-filter statement.</p> <p>If you enable the VRRP on a Fast Ethernet or Gigabit Ethernet interface, as described in <i>VRRP and VRRP for IPv6 Overview</i>, and if you enable MAC source address filtering on the interface, you must include the virtual MAC address in the list of source MAC addresses that you specify in the source-address-filter statement. MAC addresses ranging from 00:00:5e:00:01:00 through 00:00:5e:00:01:ff are reserved for VRRP, as defined in RFC 3768, <i>Virtual Router Redundancy Protocol</i>. When you configure the VRRP group, the group number must be the decimal equivalent of the last hexadecimal byte of the virtual MAC address.</p> <p>On untagged Gigabit Ethernet interfaces, you should not configure the source-address-filter statement and the accept-source-mac statement simultaneously. On tagged Gigabit Ethernet interfaces, you should not configure the source-address-filter statement and the accept-source-mac statement with an identical MAC address specified in both filters.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling Ethernet MAC Address Filtering</i>• <i>Configuring MAC Filtering on PTX Series Packet Transport Routers</i>• source-filtering on page 331


source-filtering

Syntax	(source-filtering no-source-filtering);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Description	<p>For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces only, enable the filtering of MAC source addresses, which blocks all incoming packets to that interface. To allow the interface to receive packets from specific MAC addresses, include the source-address-filter statement.</p> <p>If the remote Ethernet card is changed, the interface is no longer able to receive packets from the new card because it has a different MAC address.</p>
Default	Source address filtering is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Enabling Ethernet MAC Address Filtering</i> • <i>Configuring MAC Filtering on PTX Series Packet Transport Routers</i> • <i>accept-source-mac</i> • source-address-filter on page 330

speed (Ethernet)

Syntax	<code>speed (10m 100m 1g auto auto-10m-100m);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces ge-<i>pim</i>/0/0 <i>switch-options</i> <i>switch-port</i> <i>port-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.
Description	<p>Configure the interface speed. This statement applies to the management Ethernet interface (fxp0 or em0), Fast Ethernet 12-port and 48-port PICs, the built-in Fast Ethernet port on the FIC (M7i router), the built-in Ethernet interfaces on J Series Services Routers, Combo Line Rate DPCs and Tri-Rate Ethernet Copper interfaces on MX Series routers, Gigabit Ethernet ports on J Series Services Routers with uPIMs installed and configured for access switching mode, and Gigabit Ethernet interfaces on EX Series switches.</p> <p>When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled. When you configure 100BASE-FX SFP, you must set the port speed at 100 Mbps.</p>
Options	<p>You can specify the speed as either 10m (10 Mbps), 100m (100 Mbps), or on J Series routers with uPIMs installed and on MX Series routers, 1g (1 Gbps). You can also specify the auto option on MX Series routers.</p> <p>For Gigabit Ethernet interfaces on EX Series switches, you can specify one of the following options:</p> <ul style="list-style-type: none">• 10m—10 Mbps• 100m—100 Mbps• 1g—1 Gbps• auto—Automatically negotiate the speed (10 Mbps, 100 Mbps, or 1 Gbps) based on the speed of the other end of the link.• auto-10m-100m—Automatically negotiate the speed (10 Mbps or 100 Mbps) based on the speed of the other end of the link.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Interface Speed on page 87• <i>Configuring the Interface Speed on Ethernet Interfaces</i>• <i>Configuring Gigabit Ethernet Autonegotiation</i>• <i>Configuring J Series Services Router Switching Interfaces</i>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i>

speed (MX Series DPC)

Syntax	<code>speed (auto 1Gbps 100Mbps 10Mbps);</code>
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/port</i>]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	On MX Series routers with Combo Line Rate DPCs and Tri-Rate Copper SFPs you can set auto negotiation of speed. To specify the auto negotiation speed, use the speed (auto 1Gbps 100Mbps 10Mbps) statement under the [edit interface <i>ge-/fpc/pic/port</i>] hierarchy level. The auto option will attempt to automatically match the rate of the connected interface. To set port speed negotiation to a specific rate, set the port speed to 1Gbps , 100Mbps , or 10Mbps .
<div>  <p>NOTE: If the negotiated speed and the interface speed do not match, the link will not be brought up. Half duplex mode is not supported.</p> </div>	
Options	You can specify the speed as either auto (autonegotiate), 10Mbps (10 Mbps), 100Mbps (100 Mbps), or 1Gbps (1 Gbps).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Gigabit Ethernet Autonegotiation</i> <i>no-auto-mdix</i>

speed (SONET/SDH)

Syntax	<code>speed (oc3 oc12 oc48);</code>
Hierarchy Level	[edit interfaces <i>so-fpc/pic/port</i>], [edit interfaces <i>so-fpc/pic/port:channel</i>]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Configure the interface speed. This statement applies to SONET/SDH interfaces on next-generation SONET/SDH Type 1 and Type 2 PICs with SFP. Available speeds depend on whether the PIC is in concatenated mode or nonconcatenated mode. Include the channel in the interface name when configuring nonconcatenated interfaces.
Options	oc3 oc12 oc48 —Speed when the PIC is in concatenated mode. For example, you can configure each port of a 4-port OC12 PIC to have a speed of oc3 . You can configure port 0 of a 4-port OC12 PIC to have a speed of oc12 . oc3 oc12 —Speed when the PIC is in nonconcatenated mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SONET/SDH Interface Speed</i>

spid1

Syntax	<code>spid1 <i>spid1-string</i>;</code>
Hierarchy Level	[edit interfaces <i>br-pim/0/port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the Service Profile Identifier (SPID).
Options	<i>spid1-string</i> —Numeric SPID.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ISDN Physical Interface Properties</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>


spid2

Syntax	<code>spid2 spid2-string;</code>
Hierarchy Level	[edit interfaces <i>br-pim/O/port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an additional SPID.
Options	<i>spid2-string</i> —Numeric SPID.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Physical Interface Properties</i> • <i>J Series Services Router Configuration Guide</i>

stacked-vlan-tagging

Syntax	<code>stacked-vlan-tagging;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	<p>For Gigabit Ethernet IQ interfaces, Gigabit Ethernet, 10-Gigabit Ethernet LAN/WAN PIC, and 100-Gigabit Ethernet Type 5 PIC with CFP, enable stacked VLAN tagging for all logical interfaces on the physical interface.</p> <p>For pseudowire subscriber interfaces, enable stacked VLAN tagging for logical interfaces on the pseudowire service.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i> • <i>vlan-tags (Stacked VLAN Tags)</i>

start-end-flag

Syntax	start-end-flag (filler shared);
Hierarchy Level	[edit interfaces e1- <i>fpc/pic/port</i>], [edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
Description	For DS0, E1, E3, T1, and T3 interfaces, configure the interface to share the transmission of start and end flags.
<div style="display: flex; align-items: center;">  <div> <p>NOTE: When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the start-end-flag statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div> </div>	
Options	filler —Wait two idle cycles between the start and end flags. shared —Share the transmission of the start and end flags. This is the default.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E1 Start and End Flags</i> • <i>Configuring the E3 Start and End Flags</i> • <i>Configuring T1 Start and End Flags</i> • <i>Configuring T3 Start and End Flags</i>

static-tei-val

Syntax	<code>static-tei-val value;</code>
Hierarchy Level	[edit interfaces <i>br-pim/O/port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers only. Statically configure the Terminal Endpoint Identifier (TEI) value. The TEI value represents any ISDN-capable device attached to an ISDN network that is the terminal endpoint. TEIs are used to distinguish between several different devices using the same ISDN links.
Options	value —Value between 0 through 63.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Physical Interface Properties</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

switching-mode

Syntax	<code>switching-mode (bidirectional unidirectional);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers only, configure the interface to interoperate with SONET/SDH line-terminating equipment (LTE) that is provisioned for unidirectional linear APS in 1+1 architecture.
Default	If the switching-mode statement is not configured, the mode is bidirectional, and the interface does not interoperate with a unidirectional SONET/SDH LTE.
Options	bidirectional —Support bidirectional mode only. unidirectional —Interoperate with a SONET/SDH LTE provisioned for unidirectional mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Switching Mode</i>

switch-options

Syntax	<pre>switch-options { switch-port <i>port-number</i> { (<i>auto-negotiation</i> no-auto-negotiation); speed (10m 100m 1g); link-mode (full-duplex half-duplex); } }</pre>
Hierarchy Level	[edit interfaces <i>ge-pim</i> /0/0]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	On a J Series Services Router with multiport Gigabit Ethernet uPIMs installed and operating in access switching mode, only one physical interface is configured for the entire multiport Gigabit Ethernet uPIM. Configuration of the physical port characteristics is done under the single physical interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring J Series Services Router Switching Interfaces</i>

switch-port

Syntax	<pre>switch-port <i>port-number</i> { (auto-negotiation no-auto-negotiation); speed (10m 100m 1g); link-mode (full-duplex half-duplex); }</pre>
Hierarchy Level	[edit interfaces <i>ge-pim/0/0</i> switch-options]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	On a J Series Services Router with Ethernet uPIMs installed and operating in access switching mode, configuration of the physical port characteristics, done under the single physical interface.
Default	Autonegotiation is enabled by default. If the link speed and duplex are also configured, the interfaces use the values configured as the desired values in the negotiation.
Options	<p><i>port-number</i>—Ports are numbered 0 through 5 on the 6-port Gigabit Ethernet uPIM, 0 through 7 on the 8-port Gigabit Ethernet uPIM, and 0 through 15 on the 16-port Gigabit Ethernet uPIM.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring J Series Services Router Switching Interfaces</i>

switch-type

Syntax	switch-type (att5e etsi ni1 ntdms-100)
Hierarchy Level	[edit interfaces br-pim/O/port isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers only. Configure the ISDN variant supported.
Options	<p>att5e—AT&T switch variant.</p> <p>etsi—European Telecommunications Standards Institute switch variant.</p> <p>ni1—National ISDN 1 switch variant.</p> <p>ntdms-100—Northern Telecom DMS-100.</p> <p>ntt—NTT Group switch for Japan.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ISDN Interfaces Overview</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

syslog (Monitoring)

Syntax	(syslog no-syslog);
Hierarchy Level	[edit interfaces mo-fpc/pic/port multiservice-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>System logging is enabled by default. The system log information of the Monitoring Services PIC is passed to the kernel for logging in the <code>/var/log</code> directory.</p> <ul style="list-style-type: none">• syslog—Enable PIC system logging.• no-syslog—Disable PIC system logging.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 97• <i>Junos OS Services Interfaces Library for Routing Devices</i>

system-priority

Syntax	<code>system-priority <i>priority</i>;</code>
Hierarchy Level	[edit interfaces aeX aggregated-ether-options lacp]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches.
Description	<p>Define LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global [edit chassis] hierarchy level.</p> <p>The device with the lower system priority value determines which links between LACP partner devices are active and which are in standby for each LACP group. The device on the controlling end of the link uses port priorities to determine which ports are bundled into the aggregated bundle and which ports are put in standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored. In priority comparisons, numerically lower values have higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both devices have the same LACP system priority (for example, they are both configured with the default setting of 127), the device MAC address determines which switch is in control.</p>
Options	<p>priority—Priority for the aggregated Ethernet system. A smaller value indicates a higher priority.</p> <p>Range: 0 through 65535</p> <p>Default: 127</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces (CLI Procedure)</i>

t1-options

Syntax `t1-options {
 bert-algorithm algorithm;
 bert-error-rate rate;
 bert-period seconds;
 buildout value;
 byte-encoding (nx56 | nx64);
 crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
 crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
 fcs (16 | 32);
 framing (esf | sf);
 idle-cycle-flag (flags | ones);
 invert-data;
 line-encoding (ami | b8zs);
 loopback (local | payload | remote);
 remote-loopback-respond;
 start-end-flag (filler | shared);
 timeslots time-slot-range;
 }`

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.

Description Configure T1-specific physical interface properties.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • *T1 Interfaces Overview*

t310

Syntax	t310-value <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>br-pim/O/port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ISDN interfaces, configure the Q.931-specific timer for T310, in seconds. The Q.931 protocol is involved in the setup and termination of connections.
Options	<p>seconds—Timer value, in seconds.</p> <p>Range: 1 through 65,536 seconds</p> <p>Default: 10 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Physical Interface Properties</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

t391

Syntax	t391 <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set Frame Relay link integrity polling interval.
Options	<p>seconds—Link integrity polling interval.</p> <p>Range: 5 through 30 seconds</p> <p>Default: 10 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • n391 on page 274 • n392 on page 275 • n393 on page 276 • t392 on page 344 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

t392

Syntax	t392 <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set Frame Relay polling verification interval.
Options	<i>seconds</i> —Polling verification interval. Range: 5 through 30 seconds Default: 15 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• n391 on page 274• n392 on page 275• n393 on page 276• t391 on page 343• timeslots on page 348• <i>Junos OS Services Interfaces Library for Routing Devices</i>

t3-options

Syntax t3-options {
 atm-encapsulation (direct | plcp);
 bert-algorithm *algorithm*;
 bert-error-rate *rate*;
 bert-period *seconds*;
 (cbit-parity | no-cbit-parity);
 compatibility-mode (digital-link | kentrox | larscom) <subrate *value*>;
 fcs (16 | 32);
 (feac-loop-respond | no-feac-loop-respond);
 idle-cycle-flag *value*;
 (long-buildout | no-long-buildout);
 (loop-timing | no-loop-timing);
 loopback (local | payload | remote);
 start-end-flag *value*;
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure T3-specific physical interface properties, including the properties of DS3 channels on a channelized OC12 interface. The **long-buildout** statement is not supported for DS3 channels on a channelized OC12 interface.

On T3 interfaces, the default encapsulation is PPP.

For ATM1 interfaces, you can configure a subset of E3 options statements.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • *T3 Interfaces Overview*

tag-protocol-id (TPIDs Expected to Be Sent or Received)

Syntax	tag-protocol-id [<i>tpids</i>];
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> aggregated-ether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> aggregated-ether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces, aggregated Ethernet with Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router), define the TPIDs expected to be sent or received on a particular VLAN. For each Gigabit Ethernet port, you can configure up to eight TPIDs using the tag-protocol-id statement; but only the first four TPIDs are supported on IQ2 and IQ2-E interfaces.</p> <p>For 10-Gigabit Ethernet LAN/WAN PIC interfaces on T Series routers only the default TPID value (0x8100) is supported.</p> <p>For Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches, define the TPIDs expected to be sent or received on a particular VLAN. The default TPID value is 0x8100. Other supported values are 0x88a8, 0x9100, and 0x9200.</p>
Options	<i>tpids</i> —TPIDs to be accepted on the VLAN. Specify TPIDs in hexadecimal.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring Frames with Particular TPIDs to Be Processed as Tagged Frames</i><i>Configuring Q-in-Q Tunneling (CLI Procedure)</i>

tei-option

Syntax	<code>tei-option (first-call power-up);</code>
Hierarchy Level	<code>[edit interfaces br-pim/0/port isdn-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ISDN interfaces, configure when the Terminal Endpoint Identifier (TEI) negotiates with the ISDN provider.
Options	<p>first-call—Activation does not occur until the call setup is sent.</p> <p>power-up—Activation occurs when the Services Router is powered on.</p> <p>Default: power-up</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Physical Interface Properties</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

threshold

Syntax	<code>threshold bytes;</code>
Hierarchy Level	<code>[edit interfaces interface-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the bucket threshold, which controls the burstiness of the leaky bucket mechanism. The larger the value, the more bursty the traffic, which means that over a very short amount of time, the interface can receive or transmit close to line rate, but the average over a longer time is at the configured bucket rate.
Options	<p>bytes—Maximum size, in bytes, for traffic bursts. For ease of entry, you can enter <i>number</i> either as a complete decimal number or as a decimal number followed by the abbreviation k (1000). For example, the entry threshold 2k corresponds to a threshold of 2000 bytes.</p> <p>Range: 0 through 65,535 bytes</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties on page 95

timeslots

Syntax	<code>timeslots <i>time-slot-range</i>;</code>
Hierarchy Level	<code>[edit interfaces e1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces t1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> e1-options],</code> <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i>],</code> <code>[edit interfaces <i>interface-name</i> t1-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E1 and T1 interfaces, allocate the specific time slots by number.



NOTE: When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the `timeslots` statement must be included at the `[edit interfaces e1-fpc/pic/port]` or `[edit interfaces t1-fpc/pic/port]` hierarchy level as appropriate.

Options	<p><i>time-slot-range</i>—Actual time slot numbers allocated:</p> <p>Range: Ranges vary by interface type and configuration option as follows:</p> <ul style="list-style-type: none"> • 1 through 24 for T1 interfaces (0 is reserved) • 1 through 31 for 4-port E1 PICs (0 is reserved) • 1 through 31 for NxDS0 interfaces (0 is reserved) • 2 through 32 for 10-port Channelized E1 and 10-port Channelized E1 IQ PICs (1 is reserved) • 2 through 32 for the setting under e1-<i>options</i> with IQE PICs (1 is reserved) (when creating fractional E1) • 1 through 31 for the setting under partition with IQE PICs (0 is reserved) (when creating NxDS0)
----------------	---



NOTE: When creating fractional E1 interfaces only, if you connect a 4-port E1 PIC interface to a device that uses time slot numbering from 2 through 32, you must subtract 1 from the configured number of time slots.

Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Fractional E1 IQ and IQE Interfaces</i> • <i>Configuring Fractional T1 IQ and IQE Interfaces</i>

- *Configuring Fractional E1 Time Slots*
- *Configuring Fractional T1 Time Slots*
- *Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots*

tm

Syntax	tm (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 interfaces only, configure the from-DCE signal, test-mode (TM).
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal TM signal handling as defined by the TIA/EIA Standard 530.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Serial Signal Handling</i>

tm-polarity

Syntax	tm-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure TM signal polarity.
Options	<p>negative—Negative signal polarity.</p> <p>positive—Positive signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Serial Signal Polarities</i>

traceoptions (Individual Interfaces)

Syntax	<pre>traceoptions { file <i>filename</i> <files <i>name</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; match; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p>
Description	<p>Define tracing operations for individual interfaces.</p> <p>To specify more than one tracing operation, include multiple flag statements.</p> <p>The interfaces traceoptions statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system syslog file in the directory /var/log/dcd.</p>
Default	If you do not include this statement, no interface-specific tracing operations are performed.
Options	<p>file name—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log/dcd. By default, interface process tracing output is placed in the file files number—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>match—(Optional) Regular expression for lines to be traced.</p> <p>no-world-readable—(Optional) Prevent any user from reading the log file.</p> <p>world-readable—(Optional) Allow any user to read the log file.</p> <p>size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options.</p> <ul style="list-style-type: none">• all—All interface tracing operations• event—Interface events• ipc—Interface interprocess communication (IPC) messages

- **media**—Interface media changes
- **q921**—Trace ISDN Q.921 frames
- **q931**—Trace ISDN Q.931 frames

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Tracing Operations of an Individual Router Interface*

transmit-bucket

Syntax `transmit-bucket {
 overflow discard;
 rate percentage;
 threshold bytes;
}`

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Set parameters for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.

For each DS3 channel in a channelized OC12 interface, you can configure a unique transmit bucket.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Receive and Transmit Leaky Bucket Properties on page 95](#)
- [receive-bucket on page 310](#)

transmit-clock

Syntax	transmit-clock invert;
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the transmit clock signal.
Options	invert —Shift the clock phase 180 degrees.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Serial Clocking Mode</i>

transmit-weight (ATM2 IQ CoS Forwarding Class)

Syntax	transmit-weight (cells <i>number</i> percent <i>number</i>);
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a transmission weight to a forwarding class.
Default	95 percent for queue 0, 5 percent for queue 3.
Options	percent <i>percent</i> —Transmission weight of the forwarding class as a percentage of the total bandwidth. Range: 5 through 100 cells <i>number</i> —Transmission weight of the forwarding class as a number of cells. Range: 0 through 32,000
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ATM2 IQ VC Tunnel CoS Components</i>

traps

Syntax	(traps no-traps);
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces interface-range <i>name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.
Description	Enable or disable the sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Enabling or Disabling SNMP Notifications on Physical Interfaces on page 103 • Enabling or Disabling SNMP Notifications on Logical Interfaces

trigger

Syntax	<pre>trigger { defect ignore; defect hold-time up milliseconds down milliseconds; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM over SONET/SDH, SONET/SDH interfaces, and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure SONET/SDH defect triggers to be ignored.
Default	If you do not include this statement, all SONET/SDH defect triggers are honored.
Options	<p>defect—Defect to ignore or hold. It can be one of the following:</p> <ul style="list-style-type: none">• ais-l—Line alarm indication signal• ais-p—Path alarm indication signal• ber-sd—Bit error rate signal degrade• ber-sf—Bit error rate signal fault• locd (ATM only)—Loss of cell delineation• lof—Loss of frame• lol—PHY loss of light• lop-p—Path loss of pointer• los—Loss of signal• pll—PHY phase-locked loop out of lock• plm-p—Path payload (signal) label mismatch• rfi-l—Line remote failure indication• rfi-p—Path remote failure indication• uneq-p—Path unequipped <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SONET/SDH Defect Triggers</i>


trigger-link-failure

Syntax	[trigger-link-failure <i>interface-name</i>];
Hierarchy Level	[edit interfaces lsq-fpc/pic/port lsq-failure-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	List of SONET interfaces connected to the LSQ interface that can implement Automatic Protection Switching (APS) if the LSQ PIC fails.
Options	<i>interface-name</i> —Name of SONET interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

unframed

Syntax	(unframed no-unframed);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow (ylw) or loss-of-frame (lof) alarms.
Default	Unframed mode is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 IQ and IQE Unframed Mode</i>

unidirectional

Syntax	unidirectional;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface. Unidirectional links are currently supported only on 10-Gigabit Ethernet interfaces on the following hardware: <div> NOTE: Which interfaces and pic for EX9200?</div> <ul style="list-style-type: none">• 4-port 10-Gigabit Ethernet DPC on the MX960 router• 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router
Default	Disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Unidirectional Traffic Flow on Physical Interfaces on page 17• Enabling Unidirectional Traffic Flow on Physical Interfaces on page 103

unit

```

Syntax  unit logical-unit-number {
        accept-source-mac {
            mac-address mac-address {
                policer {
                    input cos-policer-name;
                    output cos-policer-name;
                }
            }
        }
        accounting-profile name;
        advisory-options {
            downstream-rate rate;
            upstream-rate rate;
        }
        allow-any-vci;
        atm-scheduler-map (map-name | default);
        backup-options {
            interface interface-name;
        }
        bandwidth rate;
        cell-bundle-size cells;
        clear-dont-fragment-bit;
        compression {
            rtp {
                maximum-contexts number <force>;
                f-max-period number;
                queues [queue-numbers];
                port {
                    minimum port-number;
                    maximum port-number;
                }
            }
        }
        compression-device interface-name;
        copy-tos-to-outer-ip-header;
        demux-destination family;
        demux-source family;
        demux-options {
            underlying-interface interface-name;
        }
        description text;
        interface {
            l2tp-interface-id name;
            (dedicated | shared);
        }
        dialer-options {
            activation-delay seconds;
            callback;
            callback-wait-period time;
            deactivation-delay seconds;
            dial-string [dial-string-numbers];
            idle-timeout seconds;

```

```

incoming-map {
    caller caller-id | accept-all;
    initial-route-check seconds;
    load-interval seconds;
    load-threshold percent;
    pool pool-name;
    redial-delay time;
    watch-list {
        [routes];
    }
}
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
family family-name {
    ... the family subhierarchy appears after the main [edit interfaces interface-name unit
        logical-unit-number] hierarchy ...
}
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (disable | seconds);

```

```

output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-restart-timer milliseconds;
    pap {
        access-profile name;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
pppoe-underlying-options {
    access-concentrator name;
    direct-connect;
    dynamic-profile profile-name;
    max-sessions number;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
    length);
    queue-length number;
}
short-sequence;

```

```
targeted-distribution;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            (input | output | input output);
        }
    }
}
access-concentrator name;
address address {
    ... the address subhierarchy appears after the main [edit interfaces interface-name unit
        logical-unit-number family family-name] hierarchy ...
}
bundle interface-name;
core-facing;
demux-destination {
    destination-prefix;
}
demux-source {
    source-prefix;
}
direct-connect;
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list [filter-names];
    output filter-name;
    output-list [filter-names];
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mac-validate (loose | strict);
max-sessions number;
```



```

mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    master-only;
    multipoint-destination address {
        dlci dlci-identifier;
        epd-threshold cells <plp1 cells>;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (disable | seconds);
        shaping {

```

```

        (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
         sustained rate);
        queue-length number;
    }
    vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
        hold-time seconds;
    }
    priority number;
    track {
        interface interface-name {
            bandwidth-threshold bits-per-second priority-cost number;
        }
        priority-hold-time seconds;
        route ip-address/prefix-length routing-instance instance-name priority-cost cost;
    }
    virtual-address [addresses];
    virtual-link-local-address ipv6-address;
    vrrp-inherit-from {
        active-interface interface-name;
        active-group group-number;
    }
}
}
}
}

```

Hierarchy Level [edit interfaces *interface-name*],
 [edit logical-systems *logical-system-name* interfaces *interface-name*],
 [edit interfaces interface-set *interface-set-name* interface *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.
Range: 0 through 1,073,741,823 for demux and PPPoE static interfaces. 0 through 16,385 for all other static interface types.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Logical Interface Properties*
 - *Junos OS Services Interfaces Library for Routing Devices*

vbr

Syntax	<code>vbr peak <i>rate</i> sustained <i>rate</i> burst <i>length</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the variable bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p>
Default	If the vbr statement is not specified, bandwidth utilization is unlimited.
Options	<p>burst <i>length</i>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak <i>rate</i>—Peak rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p> <p>sustained <i>rate</i>—Sustained rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring ATM CBR Applying Scheduler Maps to Logical ATM Interfaces

- [cbr on page 173](#)
- [rtvbr on page 319](#)
- [shaping on page 324](#)

vc-cos-mode

Syntax	vc-cos-mode (alternate strict);
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, specify packet-scheduling priority value for ATM2 IQ VC tunnels.
Options	<p>alternate—VC CoS queue has high priority. The scheduling of the queues alternates between the high-priority queue and the remaining queues, so every other scheduled packet is from the high-priority queue.</p> <p>strict—VC CoS queue has strictly high priority. A queue with strict high priority is always scheduled before the remaining queues. The remaining queues are scheduled in round-robin fashion.</p> <p>Default: alternate</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM2 IQ VC Tunnel CoS Components</i> • <i>Configuring Scheduler Maps on ATM Interfaces</i>

vlan-tagging

Syntax	vlan-tagging;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers. Statement introduced in Junos OS Release 13.2 for PTX Series Routers.
Description	For Fast Ethernet and Gigabit Ethernet interfaces, aggregated Ethernet interfaces configured for VPLS, and pseudowire subscriber interfaces, enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch</i>• <i>Example: Configuring BGP Autodiscovery for LDP VPLS</i>• <i>Configuring a Layer 3 Subinterface (CLI Procedure)</i>• <i>Configuring Tagged Aggregated Ethernet Interfaces</i>• <i>Configuring Interfaces for VPLS Routing</i>• <i>Enabling VLAN Tagging</i>• <i>802.1Q VLANs Overview</i>• <i>vlan-id</i>

vlan-tags-outer

Syntax	vlan-tags-outer <i>vlan-tag</i> ;
Hierarchy Level	[edit interfaces interface-set <i>interface-set-name</i> interface <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	The S-VLAN outer tag that belongs to a set of interfaces used to configure hierarchical CoS schedulers.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Class of Service Library for Routing Devices</i>

vlan-vci-tagging

Syntax	<code>vlan-vci-tagging;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 9.0.
Description	Enable the ATM-to-Ethernet interworking cross-connect function on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM-to-Ethernet Interworking</i>

vpi (ATM CCC Cell-Relay Promiscuous Mode)

Syntax	<code>vpi vpi-identifier;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options promiscuous-mode]
Release Information	Statement introduced before Junos OS Release 7.4. Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	<p>For ATM interfaces, allow all VCI in this VPI to open in ATM CCC cell-relay mode.</p> <p>When you include vpi statements at the [edit interfaces <i>interface-name</i> atm-options promiscuous-mode] hierarchy level, the specified VPIs open in promiscuous mode.</p>
Options	<p>vpi-identifier—ATM virtual path identifier. This is one of the VPIs that you define in the <i>vci</i> statement. (For a list of hierarchy levels at which you can include the <i>vci</i> statement, see <i>vci</i>.)</p> <p>Range: 0 through 255</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ATM Cell-Relay Promiscuous Mode</i>

vtmapping

Syntax	vtmapping (itu-t klm);
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]; [edit chassis fpc <i>number</i> pic <i>number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For the Channelized STM1 IQ PIC or Channelized STM1 PIC, configure virtual tributary mapping.</p> <p>For the Channelized STM1 PIC, you configure virtual tributary mapping at the [edit chassis fpc <i>number</i> pic <i>number</i>] hierarchy level.</p>
Options	<p>itu-t—International Telephony Union standard.</p> <p>klm—KLM standard.</p> <p>Default: klm</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Virtual Tributary Mapping of Channelized STM1 Interfaces</i>• <i>Configuring the Junos OS to Support Channelized STM1 Interface Virtual Tributary Mapping</i>

warning

Syntax	<pre>warning low-light-warning { (link-down syslog); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> optics-options]
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for PTX Series routers.</p>
Description	Specifies the action to take if the receiving optics signal is below the optics low-light warning threshold.
Options	<p>link-down—Drop the 10-Gigabit Ethernet link and marks link as down.</p> <p>syslog—Write the optics information to the system log.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i> • optics-options on page 285 • <i>100-Gigabit Ethernet OTN Options Configuration Overview</i>

wavelength

Syntax	<code>wavelength <i>nm</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> optics-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 13.2 for PTX Series routers.
Description	For 10-Gigabit or 100-Gigabit Ethernet DWDM interfaces only, configure full C-band ITU-Grid tunable optics.
Options	<i>nm</i> —Wavelength value. It can be one of the following:



NOTE: All values are displayed. However, if you configure a value that is not supported by the device, an error message is displayed and the device is not tuned to the specified wavelength.

- **1528.38**—1528.38 nanometers (nm), corresponds to a 50-GHz grid
- **1528.77**—1528.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.16**—1529.16 nm, corresponds to a 50-GHz grid
- **1529.55**—1529.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.94**—1529.94 nm, corresponds to a 50-GHz grid
- **1530.33**—1530.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1530.72**—1530.72 nm, corresponds to a 50-GHz grid
- **1531.12**—1531.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1531.51**—1531.51 nm, corresponds to a 50-GHz grid
- **1531.90**—1531.90 nm, corresponds to 50-GHz and 100-GHz grids
- **1532.29**—1532.29 nm, corresponds to a 50-GHz grid
- **1532.68**—1532.68 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.07**—1533.07 nm, corresponds to a 50-GHz grid
- **1533.47**—1533.47 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.86**—1533.86 nm, corresponds to a 50-GHz grid
- **1534.25**—1534.25 nm, corresponds to 50-GHz and 100-GHz grids
- **1534.64**—1534.64 nm, corresponds to a 50-GHz grid
- **1535.04**—1535.04 nm, corresponds to 50-GHz and 100-GHz grids

- **1535.43**—1535.43 nm, corresponds to a 50-GHz grid
- **1535.82**—1535.82 nm, corresponds to 50-GHz and 100-GHz grids
- **1536.22**—1536.22 nm, corresponds to a 50-GHz grid
- **1536.61**—1536.61 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.00**—1537.00 nm, corresponds to a 50-GHz grid
- **1537.40**—1537.40 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.79**—1537.79 nm, corresponds to a 50-GHz grid
- **1538.19**—1538.19 nm, corresponds to 50-GHz and 100-GHz grids
- **1538.58**—1538.58 nm, corresponds to a 50-GHz grid
- **1538.98**—1538.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1539.37**—1539.37 nm, corresponds to a 50-GHz grid
- **1539.77**—1539.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.16**—1540.16 nm, corresponds to a 50-GHz grid
- **1540.56**—1540.56 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.95**—1540.95 nm, corresponds to a 50-GHz grid
- **1541.35**—1541.35 nm, corresponds to 50-GHz and 100-GHz grids
- **1541.75**—1541.75 nm, corresponds to a 50-GHz grid
- **1542.14**—1542.14 nm, corresponds to 50-GHz and 100-GHz grids
- **1542.54**—1542.54 nm, corresponds to a 50-GHz grid
- **1542.94**—1542.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1543.33**—1543.33 nm, corresponds to a 50-GHz grid
- **1543.73**—1543.73 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.13**—1544.13 nm, corresponds to a 50-GHz grid
- **1544.53**—1544.53 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.92**—1544.92 nm, corresponds to a 50-GHz grid
- **1545.32**—1545.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1545.72**—1545.72 nm, corresponds to a 50-GHz grid
- **1546.12**—1546.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1546.52**—1546.52 nm, corresponds to a 50-GHz grid
- **1546.92**—1546.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1547.32**—1547.32 nm, corresponds to a 50-GHz grid
- **1547.72**—1547.72 nm, corresponds to 50-GHz and 100-GHz grids
- **1548.11**—1548.11 nm, corresponds to a 50-GHz grid

- **1548.51**—1548.51 nm, corresponds to 50-GHz and 100-GHz grids
- **1548.91**—1548.91 nm, corresponds to a 50-GHz grid
- **1549.32**—1549.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1549.72**—1549.72 nm, corresponds to a 50-GHz grid
- **1550.12**—1550.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1550.52**—1550.52 nm, corresponds to a 50-GHz grid
- **1550.92**—1550.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1551.32**—1551.32 nm, corresponds to a 50-GHz grid
- **1551.72**—1551.72 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.12**—1552.12 nm, corresponds to a 50-GHz grid
- **1552.52**—1552.52 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.93**—1552.93 nm, corresponds to a 50-GHz grid
- **1553.33**—1554.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1553.73**—1554.73 nm, corresponds to a 50-GHz grid
- **1554.13**—1554.13 nm, corresponds to 50-GHz and 100-GHz grids
- **1554.54**—1554.54 nm, corresponds to a 50-GHz grid
- **1554.94**—1554.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1555.34**—1555.34 nm, corresponds to a 50-GHz grid
- **1555.75**—1555.75 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.15**—1556.15 nm, corresponds to a 50-GHz grid
- **1556.55**—1556.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.96**—1556.96 nm, corresponds to a 50-GHz grid
- **1557.36**—1557.36 nm, corresponds to 50-GHz and 100-GHz grids
- **1557.77**—1557.77 nm, corresponds to a 50-GHz grid
- **1558.17**—1558.17 nm, corresponds to 50-GHz and 100-GHz grids
- **1558.58**—1558.58 nm, corresponds to a 50-GHz grid
- **1558.98**—1558.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1559.39**—1559.39 nm, corresponds to a 50-GHz grid
- **1559.79**—1559.79 nm, corresponds to 50-GHz and 100-GHz grids
- **1560.20**—1560.20 nm, corresponds to a 50-GHz grid
- **1560.61**—1560.61 nm, corresponds to 50-GHz and 100-GHz grids
- **1561.01**—1561.01 nm, corresponds to a 50-GHz grid
- **1561.42**—1561.42 nm, corresponds to 50-GHz and 100-GHz grids

- **1561.83**—1561.83 nm, corresponds to a 50-GHz grid
 - **1562.23**—1562.23 nm, corresponds to 50-GHz and 100-GHz grids
 - **1562.64**—1562.64 nm, corresponds to a 50-GHz grid
 - **1563.05**—1563.05 nm, corresponds to 50-GHz and 100-GHz grids
 - **1563.45**—1563.45 nm, corresponds to a 50-GHz grid
 - **1563.86**—1563.86 nm, corresponds to 50-GHz and 100-GHz grids
 - **1564.27**—1564.27 nm, corresponds to a 50-GHz grid
 - **1564.68**—1564.68 nm, corresponds to 50-GHz and 100-GHz grids
 - **1565.09**—1565.09 nm, corresponds to a 50-GHz grid
 - **1565.50**—1565.50 nm, corresponds to 50-GHz and 100-GHz grids
 - **1565.90**—1565.90 nm, corresponds to a 50-GHz grid
 - **1566.31**—1566.31 nm, corresponds to 50-GHz and 100-GHz grids
 - **1566.72**—1566.72 nm, corresponds to a 50-GHz grid
 - **1567.13**—1567.13 nm, corresponds to 50-GHz and 100-GHz grids
 - **1567.54**—1567.54 nm, corresponds to a 50-GHz grid
 - **1567.95**—1567.95 nm, corresponds to 50-GHz and 100-GHz grids
 - **1568.36**—1568.36 nm, corresponds to a 50-GHz grid
 - **1568.77**—1568.77 nm, corresponds to 50-GHz and 100-GHz grids
- Default:** **1550.12**—1550.12 nm, corresponds to 50-GHz and 100-GHz grids

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet DWDM Interface Wavelength Overview*
- *Configuring the 10-Gigabit or 100-Gigabit Ethernet DWDM Interface Wavelength*
- *show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and 100-Gigabit Ethernet)*

working-circuit

Syntax	<code>working-circuit <i>group-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the working router in an APS circuit pair.
Options	<i>group-name</i> —Circuit's group name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Basic Automatic Protect Switching</i>• protect-circuit on page 308

yellow-differential-delay

Syntax	<code>yellow-differential-delay <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, configure the yellow differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
Options	<i>milliseconds</i> —Yellow differential delay threshold. Range: 1 through 2000 milliseconds Default: 6 milliseconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• action-red-differential-delay on page 147• <i>remote</i>

z0-increment

Syntax	(z0-increment no-z0-increment);
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an incremental STM ID rather than a static one.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an Incrementing STM ID</i>• sonet-options on page 328

PART 3

Administration

- [Monitoring Commands on page 379](#)

CHAPTER 5

Monitoring Commands

- show interfaces (10-Gigabit Ethernet)
- show interfaces (ATM)
- show interfaces (ATM-over-ADSL)
- show interfaces (ATM-over-SHDSL)
- show interfaces (Channelized DS3-to-DS0)
- show interfaces (Channelized DS3-to-DS1)
- show interfaces (Channelized E1 IQ)
- show interfaces (Channelized E1)
- show interfaces (Channelized OC12 IQ and IQE)
- show interfaces (Channelized OC12)
- show interfaces (Channelized OC3 IQ and IQE)
- show interfaces (Channelized STM1 IQ)
- show interfaces (Channelized STM1)
- show interfaces (Channelized T1 IQ)
- show interfaces (Channelized T3 IQ)
- show interfaces (Discard)
- show interfaces (Fast Ethernet)
- show interfaces (Gigabit Ethernet)
- show interfaces (ISDN B-Channel)
- show interfaces (ISDN BRI)
- show interfaces (ISDN D-channel)
- show interfaces (ISDN Dialer)
- show interfaces (M Series, MX Series and T Series Routers, and PTX Series Packet Transport Routers Management and Internal Ethernet)
- show interfaces (PTX Series Packet Transport Routers)
- show interfaces (SONET/SDH)
- show interfaces (Serial)
- show interfaces (T1, E1, or DS)

- `show interfaces (T3 or E3)`
- `show interfaces extensive`
- `show interfaces media`
- `show interfaces terse`

show interfaces (10-Gigabit Ethernet)

Syntax	<pre>show interfaces <i>xe-fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced in Junos OS Release 8.0.
Description	(M320, M120, MX Series, and T Series routers and EX Series switches only) Display status information about the specified 10-Gigabit Ethernet interface.
Options	<p><i>xe-fpc/pic/port</i>—Display standard information about the specified 10-Gigabit Ethernet interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2) on page 396</p> <p>show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode) on page 399</p> <p>show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC) on page 401</p> <p>show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode) on page 403</p> <p>show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only) on page 403</p> <p>show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only) on page 404</p>
Output Fields	See Table 20 on page 382 for the output fields for the show interfaces (10-Gigabit Ethernet) command.

Table 20: show interfaces Gigabit Ethernet Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output	
Link flags	Information about the link. Possible values are described in the “Links Flags” section under <i>Common Output Fields Description</i> .	All levels	
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels	
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels	
CoS queues	Number of CoS queues configured.	detail extensive none	
Schedulers	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive	
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive	
Current address	Configured MAC address.	detail extensive none	
Hardware address	Hardware MAC address.	detail extensive none	
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none	
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified	
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified	
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive	
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive	
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive	detail extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 20 on page 382.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <code>ignore-l3-incompletes</code> statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
OTN alarms	Active OTN alarms identified on the interface.	detail extensive
OTN defects	OTN defects received on the interface.	detail extensive
OTN FEC Mode	<p>The FECmode configured on the interface.</p> <ul style="list-style-type: none"> • efec—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors. • gfec—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors. • none—FEC mode is not configured. 	detail extensive
OTN Rate	<p>OTN mode.</p> <ul style="list-style-type: none"> • fixed-stuff-bytes—Fixed stuff bytes 11.0957 Gbps. • no-fixed-stuff-bytes—No fixed stuff bytes 11.0491 Gbps. • pass-through—Enable OTN passthrough mode. • no-pass-through—Do not enable OTN passthrough mode. 	detail extensive
OTN Line Loopback	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: enabled or disabled .	detail extensive
OTN FEC statistics	<p>The forward error correction (FEC) counters for the DWDM OTN PIC.</p> <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive
OTN FEC alarms	<p>OTN FEC excessive or degraded error alarms triggered on the interface.</p> <ul style="list-style-type: none"> • FEC Degrade—OTU FEC Degrade defect. • FEC Excessive—OTU FEC Excessive Error defect. 	detail extensive
OTN OC	<p>OTN OC defects triggered on the interface.</p> <ul style="list-style-type: none"> • LOS—OC Loss of Signal defect. • LOF—OC Loss of Frame defect. • LOM—OC Loss of Multiframe defect. • Wavelength Lock—OC Wavelength Lock defect. 	detail extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
OTN OTU	OTN OTU defects detected on the interface <ul style="list-style-type: none"> • AIS—OTN AIS alarm. • BDI—OTN OTU BDI alarm. • IAE—OTN OTU IAE alarm. • TTIM—OTN OTU TTIM alarm. • SF—OTN ODU bit error rate fault alarm. • SD—OTN ODU bit error rate defect alarm. • TCA-ES—OTN ODU ES threshold alarm. • TCA-SES—OTN ODU SES threshold alarm. • TCA-UAS—OTN ODU UAS threshold alarm. • TCA-BBE—OTN ODU BBE threshold alarm. • BIP—OTN ODU BIP threshold alarm. • BBE—OTN OTU BBE threshold alarm. • ES—OTN OTU ES threshold alarm. • SES—OTN OTU SES threshold alarm. • UAS—OTN OTU UAS threshold alarm. 	detail extensive
Received DAPI	Destination Access Port Interface (DAPI) from which the packets were received.	detail extensive
Received SAPI	Source Access Port Interface (SAPI) from which the packets were received.	detail extensive
Transmitted DAPI	Destination Access Port Interface (DAPI) to which the packets were transmitted.	detail extensive
Transmitted SAPI	Source Access Port Interface (SAPI) to which the packets were transmitted.	detail extensive
PCS statistics	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"> • Bit errors—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode. • Errored blocks—Loss of block lock. The number of errored blocks when PCS receiver is operating in normal mode. 	detail extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 21 on page 396 • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux:	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the routing device.	extensive

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about address flag (possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none

Table 20: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. [Table 21 on page 396](#) describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). In [Table 21 on page 396](#), the **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit .50 (VLAN 50).

Table 21: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	show interfaces ge-0/3/0 extensive	Traffic statistics: Input bytes: 496 bytes per packet, representing the Layer 2 packet MAC statistics: Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	show interfaces ge-0/3/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	show interfaces ge-0/0/0 extensive	Traffic statistics: Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes MAC statistics: Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes includes 6 bytes for the destination MAC address + 4 bytes for VLAN + 2 bytes for the Ethernet type.
Outbound logical interface	show interfaces ge-0/0/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	

Sample Output

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2)

```

user@host> show interfaces xe-5/0/0 extensive
Physical interface: xe-5/0/0, Enabled, Physical link is Up
  Interface index: 177, SNMP ifIndex: 99, Generation: 178
  Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:

```

```

None, Source filtering: Enabled,
Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 1024
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:14:f6:b9:f1:f6, Hardware address: 00:14:f6:b9:f1:f6
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 6970332384 0 bps
  Output bytes : 0 0 bps
  Input packets: 81050506 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 6970299398 0 bps
  Input packets: 81049992 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort      81049992      81049992      0

  1 expedited-fo      0      0      0

  2 assured-forw      0      0      0

  3 network-cont      0      0      0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort      0      0      0

  1 expedited-fo      0      0      0

  2 assured-forw      0      0      0

  3 network-cont      0      0      0

Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors      0
  Errored blocks  0

```

```

MAC statistics:
Total octets          6970332384
Total packets        81050506
Unicast packets      81050000
Broadcast packets    506
Multicast packets     0
CRC/Align errors     0
FIFO errors          0
MAC control frames   0
MAC pause frames     0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0

Filter statistics:
Input packet count    81050506
Input packet rejects  506
Input DA rejects      0
Input SA rejects      0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0

Packet Forwarding Engine configuration:
Destination slot: 5

CoS information:
Direction : Output
CoS transmit queue   Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort        95    950000000    95      0      low    none
3 network-control    5     50000000     5      0      low    none

Direction : Input
CoS transmit queue   Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort        95    950000000    95      0      low    none
3 network-control    5     50000000     5      0      low    none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90

Traffic statistics:
Input bytes : 0
Output bytes : 46
Input packets: 0
Output packets: 1

IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

Local statistics:
Input bytes : 0
Output bytes : 46
Input packets: 0
Output packets: 1

Transit statistics:
Input bytes : 0
Output bytes : 0

```

```

Input packets:                0                0 pps
Output packets:               0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :               0
  Input packets:              0
  Output packets:             0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.1.1/24, Local: 192.1.1.1, Broadcast: 192.1.1.255,
Generation: 265
Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode)

```

user@host> show interfaces xe-1/0/0 extensive
Physical interface: xe-1/0/0, Enabled, Physical link is Up
Interface index: 141, SNMP ifIndex: 34, Generation: 47
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps 16384
Link flags : None
CoS queues : 4 supported
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:05:85:a2:10:9d, Hardware address: 00:05:85:a2:10:9d
Last flapped : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :                0                0 bps
Output bytes :               0                0 bps
Input packets:              0                0 pps
Output packets:             0                0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
HS Link CRC errors: 0, HS Link FIFO overflows: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
Resource errors: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort    0                0                0
1 expedited-fo   0                0                0
2 assured-forw   0                0                0
3 network-cont   0                0                0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics
  Seconds  Count
Bit errors 0        0
Errored blocks 0      0
MAC statistics:
  Receive  Transmit
Total octets 0        0
Total packets 0        0
Unicast packets 0        0
Broadcast packets 0        0
Multicast packets 0        0

```

```

CRC/Align errors                0          0
FIFO errors                     0          0
MAC control frames              0          0
MAC pause frames               0          0
Oversized frames               0
Jabber frames                  0
Fragment frames                0
VLAN tagged frames             0
Code violations                 0
Filter statistics:
  Input packet count            0
  Input packet rejects          0
  Input DA rejects              0
  Input SA rejects              0
  Output packet count           0
  Output packet pad count       0
  Output packet error count     0
CAM destination filters: 0, CAM source filters: 0
PMA PHY:
  Seconds      Count  State
  PLL lock     0      0 OK
  PHY light    63159  1 Light Missing
WIS section:
  BIP-B1        0      0
  SEF           434430  434438 Defect Active
  LOS           434430  1 Defect Active
  LOF           434430  1 Defect Active
  ES-S          434430
  SES-S         434430
  SEFS-S        434430
WIS line:
  BIP-B2        0      0
  REI-L         0      0
  RDI-L         0      0 OK
  AIS-L         434430  1 Defect Active
  BERR-SF       0      0 OK
  BERR-SD       0      0 OK
  ES-L          434430
  SES-L         434430
  UAS-L         434420
  ES-LFE        0
  SES-LFE       0
  UAS-LFE       0
WIS path:
  BIP-B3        0      0
  REI-P         0      0
  LOP-P         0      0 OK
  AIS-P         434430  1 Defect Active
  RDI-P         0      0 OK
  UNEQ-P        0      0 OK
  PLM-P         0      0 OK
  ES-P          434430
  SES-P         434430
  UAS-P         434420
  ES-PFE        0
  SES-PFE       0
  UAS-PFE       0
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00 orissa so-1/0/0.
Packet Forwarding Engine configuration:

```



```

Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %      bps      %      bytes
  0 best-effort           95      950000000  95        0      low      none
  3 network-control       5       50000000  5         0      low      none

```

show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC)

```

user@host> show interfaces ge-7/0/0 extensive
Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags     : None
Wavelength     : 1550.12 nm, Frequency: 193.40 THz
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:05:85:70:2b:72, Hardware address: 00:05:85:70:2b:72
Last flapped   : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   : 0          0 bps
Output bytes  : 0          0 bps
Input packets : 0          0 pps
Output packets: 0          0 pps
IPv6 transit statistics:
Input bytes   : 0
Output bytes  : 0
Input packets : 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort           0          0          0

  1 expedited-fo         0          0          0

  2 assured-forw         0          0          0

  3 network-cont
Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms  : LINK
Active defects : LINK
MAC statistics:
Total octets      Receive      Transmit
Total packets     0          0

```

```

Unicast packets                0                0
Broadcast packets              0                0
Multicast packets              0                0
CRC/Align errors               0                0
FIFO errors                    0                0
MAC control frames             0                0
MAC pause frames               0                0
Oversized frames               0
Jabber frames                  0
Fragment frames                0
VLAN tagged frames             0
Code violations                 0
Total octets                   0                0
Total packets                  0                0
Unicast packets                0                0
Broadcast packets              0                0
Multicast packets              0                0
CRC/Align errors               0                0
FIFO errors                    0                0
MAC control frames             0                0
MAC pause frames               0                0
Oversized frames               0
Jabber frames                  0
Fragment frames                0
VLAN tagged frames             0
Code violations                 0
OTN alarms                     :   None
OTN defects                    :   None
OTN FEC Mode                   :   GFEC
OTN Rate                       :   Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback : Enabled
OTN FEC statistics :
  Corrected Errors              0
  Corrected Error Ratio (      0 sec average) 0e-0
OTN FEC alarms:                Seconds    Count  State
  FEC Degrade                   0          0   OK
  FEC Excessive                 0          0   OK
OTN OC:                        Seconds    Count  State
  LOS                           2          1   OK
  LOF                          67164        2  Defect Active
  LOM                          67164       71  Defect Active
  Wavelength Lock               0          0   OK
OTN OTU:
  AIS                           0          0   OK
  BDI                          65919      4814  Defect Active
  IAE                          67158        1  Defect Active
  TTIM                          7          1   OK
  SF                           67164        2  Defect Active
  SD                           67164        3  Defect Active
  TCA-ES                        0          0   OK
  TCA-SES                       0          0   OK
  TCA-UAS                       80         40   OK
  TCA-BBE                       0          0   OK
  BIP                           0          0   OK
  BBE                           0          0   OK
  ES                            0          0   OK
  SES                           0          0   OK
  UAS                          587          0   OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:

```

```

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
  APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
  Payload Type: 0x03
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x03
Filter statistics:
  Input packet count                0
  Input packet rejects              0
  Input DA rejects                  0
  Input SA rejects                  0
  Output packet count                0
  Output packet pad count            0
  Output packet error count          0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
      0 best-effort        95      9500000000    95      0      low
none
      3 network-control    5      500000000    5      0      low
none
...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode)

```

user@host> show interfaces xe-7/0/0 extensive
Physical interface: xe-7/0/0, Enabled, Physical link is Up
  Interface index: 173, SNMP ifIndex: 212, Generation: 174
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Enabled,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only)

```

user@host> show interfaces xe-7/0/0-tx extensive
Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 137, Generation: 177
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Tx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:73:e4:83, Hardware address: 00:05:85:73:e4:83
  Last flapped   : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps

```

```

Output bytes :      322891152287160      9627472888 bps
Input packets:              0              0 pps
Output packets:    328809727380      1225492 pps

...

Filter statistics:
  Output packet count      328810554250
  Output packet pad count      0
  Output packet error count    0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :              0
  Output bytes :    322891152287160
  Input packets:              0
  Output packets:    328809727380
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Local statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Transit statistics:
  Input bytes :              0              0 bps
  Output bytes :    322891152287160      9627472888 bps
  Input packets:              0              0 pps
  Output packets:    328809727380      1225492 pps
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Protocol inet, MTU: 1500, Generation: 147, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
Generation: 141
  Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only)

```

user@host> show interfaces xe-7/0/0-rx extensive
Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 118, Generation: 175
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Rx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues

```

```

Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:05:85:73:e4:83, Hardware address: 00:05:85:73:e4:83
Last flapped   : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :      322857456303482      9627496104 bps
  Output bytes :              0          0 bps
  Input packets:      328775413751      1225495 pps
  Output packets:              0          0 pps

...

Filter statistics:
  Input packet count      328775015056
  Input packet rejects    1
  Input DA rejects        0

...

Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :      322857456303482
  Output bytes :              0
  Input packets:      328775413751
  Output packets:              0
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Local statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Transit statistics:
  Input bytes :      322857456303482      9627496104 bps
  Output bytes :              0          0 bps
  Input packets:      328775413751      1225495 pps
  Output packets:              0          0 pps
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.1.1/24, Local: 192.1.1.1, Broadcast: 192.1.1.255,
Generation: 139
  Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces (ATM)

Syntax	<pre>show interfaces at-<i>fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified ATM interface.
Options	<p>at-<i>fpc/pic/port</i>—Display standard information about the specified ATM interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display the SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ATM, IMA Group) on page 421</p> <p>show interfaces extensive (ATM IMA Group) on page 422</p> <p>show interfaces (ATM1, SONET Mode) on page 423</p> <p>show interfaces brief (ATM1, SONET Mode) on page 424</p> <p>show interfaces detail (ATM1, SONET Mode) on page 424</p> <p>show interfaces extensive (ATM1, SONET Mode) on page 425</p> <p>show interfaces (ATM2, SDH Mode) on page 427</p> <p>show interfaces brief (ATM2, SDH Mode) on page 428</p> <p>show interfaces detail (ATM2, SDH Mode) on page 429</p> <p>show interfaces extensive (ATM2, SDH Mode) on page 430</p> <p>show interfaces (ATM2, SONET Mode) on page 433</p> <p>show interfaces brief (ATM2, SONET Mode) on page 434</p> <p>show interfaces detail (ATM2, SONET Mode) on page 435</p> <p>show interfaces extensive (ATM2, SONET Mode) on page 437</p>
Output Fields	<p>Table 22 on page 406 lists the output fields for the show interfaces (ATM) command. Output fields are listed in the approximate order in which they appear.</p>

Table 22: ATM show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Description	Configured interface description.	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface: <ul style="list-style-type: none"> • ATM-CCC-CELL-RELAY—ATM cell relay for CCC. • ATM-CCC-VC-MUX—ATM virtual circuit (VC) for CCC. • ATM-CISCO-NLPID—Cisco-compatible ATM NLPID encapsulation. • ATM-MIPP-LLC—ATM MLPPP over ATM Adaptation Layer 5 (AAL5)/logical link control (LLC). • ATM-NLPID—ATM NLPID encapsulation. • ATM-PPP-LLC—ATM PPP over AAL5/LLC. • ATM-PPP-VC-MUX—ATM PPP over raw AAL5. • ATM-PVC—ATM permanent virtual circuits. • ATM-SNAP—ATM LLC/SNAP encapsulation. • ATM-TCC-SNAP—ATM LLC/SNAP for translational cross-connection. • ATM-TCC-VC-MUX—ATM VC for translational cross-connection. • ATM-VC-MUX—ATM VC multiplexing. • ETHER-OVER-ATM-LLC—Ethernet over ATM (LLC/SNAP) encapsulation. • ETHER-VPLS-OVER-ATM-LLC—Ethernet VPLS over ATM (bridging) encapsulation. 	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
framing Mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running as represented by the interface type (for example, OC3 , ADSL2+ , and SHDSL(2-wire)).	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Ethernet MAC address for this interface for Ethernet over ATM encapsulation.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Statistics for traffic on the interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and frame check sequence (FCS) errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's random early detection (RED) mechanism. • Invalid VCs—Number of cells that arrived for a nonexistent VC. • Framing errors—Sum of AAL5 packets that have FCS errors, reassembly timeout errors, and length errors. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • Resource errors—Sum of transmit drops. 	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If it increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained so long in shared packet SDRAM that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Physical interface queue counters of ATM2 PICs displayed by the show interfaces at-fpc/pic/port detail command show the packet forwarding stream statistics associated with the ATM2 ports. Since multiple ports of the ATM2 PICs (except for the ATM2 dual-port OC12) share one packet forwarding stream, the physical interface queue counters reflect the aggregate of ATM2 port statistics.</p>	detail extensive
SONET alarms SONET defects	<p>SONET media-specific defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY, SONET section, SONET line, and SONET path.</p>	detail extensive none

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault signal failure • BERR-SD—Bit error rate defect signal degradation • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive
Received SONET overhead Transmitted SONET overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	extensive
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p>	All levels

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—Alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive
Received SDH overhead Transmitted SDH overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. This byte is allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. This byte is used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—These bytes are allocated for future use. 	extensive
Received path trace Transmitted path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
ATM Status	ATM state information: <ul style="list-style-type: none">• HCS State—Status of the header check sequence. ATM uses the HCS field in the cell header in the cell delineation process to frame ATM cell boundaries. The HCS is an FCS-8 calculation over the first four octets of the ATM cell header.• LOC—Current loss of cell (LOC) delineation state. OK means that no LOC is currently asserted.	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
ATM Statistics	<p>ATM statistics for the interface:</p> <ul style="list-style-type: none"> • Uncorrectable HCS errors—Number of cells dropped because the cell delineation failed. These errors most likely indicate that a SONET/SDH layer problem has occurred. • Correctable HCS errors—Number of correctable HCS errors that occurred. The cell delineation process can recover from these errors and locate the ATM cell boundary, although the framing process is not quite stable. The ATM cell is not dropped. This counter increases when the cell delineation process changes its state from present to sync (for example, when a cable is plugged into the interface). <p>The following error statistics are from the framer:</p> <ul style="list-style-type: none"> • Tx cell FIFO overruns—Number of overruns in the transmit FIFO. • Rx cell FIFO overruns—Number of overruns in the receive FIFO. • Rx cell FIFO underruns—Number of underruns in the receive FIFO. • Input cell count—Number of ATM cells received by the interface (not including idle cells). • Output cell count—Number of ATM cells transmitted by the interface (including idle cells). • Output idle cell count—Number of idle cells sent by the port. When ATM has nothing to send, it sends idle cells to fill the time slot. • Output VC queue drops—Number of packets dropped by a port on the PIC. Packets are dropped because of queue limits on the VCs. <p>The following error statistics are from the SAR:</p> <ul style="list-style-type: none"> • Input no buffers—Number of AAL5 packets dropped because no channel blocks or buffers were available to handle them. • Input length errors—Number of AAL5 packets dropped because their length was incorrect. Usually, these errors occur because a cell has been corrupted or lost, or because the length field was corrupted. They can also mean the AAL5 length field was zero. • Input timeouts—Number of AAL5 packets dropped because of a reassembly timeout. • Input invalid VCs—Number of AAL5 packets dropped because the header was unrecognized (because the VC was not correct or not configured). • Input bad CRCs—Number of AAL5 packets dropped because of frame check sequence errors. • Input OAM cell no buffers—Number of received OAM cells or raw cells dropped because no buffers were available to handle them. • L2 circuit out-of-sequence packets—(Layer 2 AAL5 mode) Number of AAL5 packets that are out of sequential order. • Denied packets count—The number of packets dropped due to VLAN priority deny packets or due to an error forwarding configuration that might cause a negative frame length, that is, the stripping size is larger than the packet size. 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
VPI	<p>(ATM2) Virtual path identifier information:</p> <ul style="list-style-type: none"> • Flags—VPI flags can be one or more of the following: <ul style="list-style-type: none"> • Active (virtual path is up) • OAM (operation and maintenance is enabled) • Shaping (shaping is configured) • CBR, Peak • OAM, Period—Interval at which OAM F4 loopback cells are sent. • Up count—Number of F4 OAM cells required to consider the virtual path up; the range is 1 through 255. • Down count—Number of F4 OAM cells required to consider the virtual path down; the range is 1 through 255. • Total down time—Total number of seconds the VPI has been down since it was opened, using the format Total down time: hh:mm:ss or Never. • Last down—Time of last Down transition, using the format Last down: hh:mm:ss ago or Never. • OAM F4 cell statistics—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> • Total received—Number of OAM F4 cells received. • Total sent—Number of OAM F4 cells sent. • Loopback received—Number of OAM F4 loopback cells received. • Loopback sent—Number of OAM F4 loopback cells sent. • Last received—Time at which the last OAM F4 cell was received. • Last sent—Time at which the last OAM F4 cell was sent. • RDI received—Number of OAM F4 cells received with the remote defect indication bit set. • RDI sent—Number of OAM F4 cells sent with the RDI bit set. • AIS received—Number of OAM F4 cells received with the alarm indication signal bit set. • AIS sent—Number of OAM F4 cells sent with the AIS bit set. <p>Traffic statistics:</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the VPI. • Output bytes—Number of bytes transmitted on the VPI. • Input packets—Number of packets received on the VPI. • Output packets—Number of packets transmitted on the VPI. 	detail extensive none
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Protocol	Protocol family configured on the logical interface.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
VCI	Virtual circuit identifier number and information: <ul style="list-style-type: none"> • Flags—VCI flags: <ul style="list-style-type: none"> • Active—VCI is up and in working condition. • CCC down—VCI CCC is not in working condition. • Closed—VCI is closed because the user disabled the logical or physical interface from the CLI. • Configured—VCI is configured. • Down—VCI is not in working condition. The VCI might have alarms, defects, F5 AIS/RDI, or no response to OAM loopback cells. • ILMI—VCI is up and in working condition. • OAM—OAM loopback is enabled. • Multicast—VCI is a multicast VCI or DLCI. • Multipoint destination—VCI is configured as a multipoint destination. • None—No VCI flags. • Passive-OAM—Passive OAM is enabled. • Shaping—Shaping is enabled. • Sustained—Shaping rate is set to Sustained. • Unconfigured—VCI is not configured. • Total down time—Total number of seconds the VCI has been down, using the format Total down time: hh:mm:ss or Never. • Last down—Time of last Down transition, using the format Last down: hh:mm:ss. • EPD threshold—(ATM2 only) Threshold at which a packet is dropped when the queue size (in number of cells) exceeds the early packet-discard (EPD) value. 	All levels

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
VCI (continued)	<ul style="list-style-type: none"> • Transmit weight cells—(ATM2 only) Amount of bandwidth assigned to this queue. • ATM per-VC transmit statistics: <ul style="list-style-type: none"> • Tail queue packet drops—Number of packets dropped because of bandwidth constraints. This value indicates that packets are queued to send out at a rate faster than allowed. • OAM F4 cell statistics—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> • Total received—Number of OAM F4 cells received. • Total sent—Number of OAM F4 cells sent. • Loopback received—Number of OAM F4 loopback cells received. • Loopback sent—Number of OAM F4 loopback cells sent. • Last received—Time at which the last OAM F4 cell was received. • Last sent—Time at which the last OAM F4 cell was sent. • RDI received—Number of OAM F4 cells received with the remote defect indication bit set. • RDI sent—Number of OAM F4 cells sent with the RDI bit set. • AIS received—Number of OAM F4 cells received with the alarm indication signal bit set. • AIS sent—Number of OAM F4 cells sent with the AIS bit set. • Traffic statistics—Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	All levels
IMA group properties	<ul style="list-style-type: none"> • Version—The specified IMA specification version, either IMA 1.0 or IMA 1.1. • Frame length—The specified frame size, which can be 32, 64, 128, or 256. • Differential delay—Maximum differential delay among links in milliseconds. • Symmetry—Either Common Transmit Clock or Independent Transmit Clock timing mode. • Transmit clock—The specified IMA clock mode, either common or independent. • Minimum links—The number of minimum active links specified in both transmit and receive directions. <ul style="list-style-type: none"> • Transmit—The per-PIC limit on the number of minimum active links in the transmit direction. • Receive—The per-PIC limit on the number of minimum active links in the receive direction. • Frame synchronization—The specified IMA frame synchronization state transition variables (Alpha, Beta, and Gamma) and their specified values. <ul style="list-style-type: none"> • Alpha—The number of consecutive invalid ICP cells for IFSM. • Beta—The number of consecutive errored ICP cells for IFSM. • Gamma—The number of consecutive valid ICP cells for IFSM. • Links—The number of IMA links assigned to the IMA group. 	detail extensive none

Table 22: ATM show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
IMA group alarms	<ul style="list-style-type: none"> • Start-up-FE—Far-end group alarm status • Config-Aborted—Near-end configuration aborted group alarm status • Config-Aborted-FE—Far-end configuration aborted group alarm status • Insufficient-Links—Near-end insufficient links group alarm status • Insufficient-Links-FE—Far-end insufficient links group alarm status • Blocked-FE—Far-end blocked group alarm status • GR-Timing-Mismatch—Group timing mismatch alarm status 	detail extensive none
IMA group defects	<ul style="list-style-type: none"> • Start-up-FE—Far-end group defect status • Config-Aborted—Near-end configuration aborted group defect status • Config-Aborted-FE—Far-end configuration aborted group defect status • Insufficient-Links—Near-end insufficient links group defect status • Insufficient-Links-FE—Far-end insufficient links group defect status • Blocked-FE—Far-end blocked group defect status • GR-Timing-Mismatch—Group timing mismatch defect status 	detail extensive none
IMA Group state	Near-end and far-end group status	detail extensive none
IMA group media	<p>IMA group media status, including seconds, count and state for the following media parameters:</p> <ul style="list-style-type: none"> • FC • FC-FE • Addr-Mismatch • Running • UAS 	detail extensive none

Sample Output

show interfaces (ATM, IMA Group)

```

user@host> show interfaces at-1/0/0
Physical interface: at-1/0/0, Enabled, Physical link is Up
  IMA group properties:
    Version           : 1.1
    Frame length      : 128
    Differential delay : 25 milliseconds
    Symmetry          : Symmetrical Configuration and Operation
    Transmit clock     : Common
    Minimum links      : Transmit: 1, Receive: 1
    Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
    Links              : None
  IMA group alarms   : Start-up-FE Config-Aborted Config-Aborted-FE
                      Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
  IMA group defects  : Start-up-FE Config-Aborted Config-Aborted-FE
                      Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
  IMA Group state:
    Near end : Start up
    Far end  : Start up
  IMA group media:      Seconds      Count  State

```

```

FC                                0
FC-FE                             0
Addr-Mismatch                     0
Running                           0
UAS                               0

```

show interfaces extensive (ATM IMA Group)

```

user@host> show interfaces at-0/0/10 extensive
Physical interface: at-0/0/10, Enabled, Physical link is Up
  Interface index: 178, SNMP ifIndex: 540, Generation: 531
  Link-level type: ATM-PVC, MTU: 2048, Speed: Unspecified, Loopback: None, Payload
  scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 84:18:88:c0:33:0a
  Last flapped   : 2012-03-16 16:49:15 PDT (2d 07:12 ago)
  Statistics last cleared: 2012-03-16 16:56:58 PDT (2d 07:05 ago)
  Traffic statistics:
    Input bytes   : 0 0 bps
    Output bytes  : 0 0 bps
    Input packets : 0 0 pps
    Output packets: 0 0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards:
0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors:
0, Resource errors: 0
  IMA group properties:
    Version          : 1.1
    Frame length     : 128
    Differential delay : 25 milliseconds
    Symmetry         : Symmetrical Configuration and Operation
    Transmit clock    : Common
    Minimum links     : Transmit: 1, Receive: 1
    Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
    Link #1          : t1-0/0/4 up
  IMA Group alarms   : None
  IMA Group defects  : None

  IMA Group state:
    Near end : Operational
    Far end  : Operational
  IMA group media:
    Seconds      Count  State
    FC           0
    FC-FE        0
    Addr-Mismatch 0
    Running      198306
    UAS          0
  ATM status:
    HCS state:   Sync
    LOC         :   OK

```

```

ATM Statistics:
  Uncorrectable HCS errors: 0, Correctable HCS errors: 0, Tx cell FIFO overruns:
0, Rx cell FIFO overruns: 0,
  Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0, Output
idle cell count: 0,
  Output VC queue drops: 0, Input no buffers: 0, Input length errors: 0, Input
timeouts: 0, Input invalid VCs: 0,
  Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
  Destination slot: 0
  VPI 2
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes      : 0
    Output bytes     : 0
    Input packets    : 0
    Output packets   : 0

Logical interface at-0/0/10.602 (Index 71) (SNMP ifIndex 1057) (Generation
17226)
  Flags: Point-To-Point SNMP-Traps CCC-Down 0x0 Encapsulation:
ATM-CCC-Cell-Relay
  L2 circuit cell bundle size: 1, bundle timeout: 125 usec, timeout count: 0
  L2 circuit out-of-sequence count: 0, denied packets count: 0

```

show interfaces (ATM1, SONET Mode)

```

user@host> show interfaces at-1/0/0
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:05:85:02:38:7e
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:51 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  SONET alarms   : None
  SONET defects  : None

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204)
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 192.168.220.24/30, Local: 192.168.220.26,
      Broadcast: 192.168.220.27
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Input packets : 0
  Output packets: 0

```

show interfaces brief (ATM1, SONET Mode)

```
user@host> show interfaces at-1/0/0 brief
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None

Logical interface at-1/0/0.0
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  inet 192.168.220.26/30
  iso
  VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
```

show interfaces detail (ATM1, SONET Mode)

```
user@host> show interfaces at-1/0/0 detail
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194, Generation: 183
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:02:38:7e
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:55 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0 0 bps
    Output bytes  : 0 0 bps
    Input packets : 0 0 pps
    Output packets: 0 0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:


|                | Queued packets | Transmitted packets | Dropped packets |
|----------------|----------------|---------------------|-----------------|
| 0 best-effort  | 0              | 0                   | 0               |
| 1 expedited-fo | 0              | 0                   | 0               |
| 2 assured-forw | 0              | 0                   | 0               |
| 3 network-cont | 0              | 0                   | 0               |


  SONET alarms   : None
  SONET defects  : None

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Local statistics:
    Input bytes   : 0
```



```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26,
Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

show interfaces extensive (ATM, SONET Mode)

```

user@host> show interfaces at-1/0/0 extensive
Physical interface: at-1/0/0, Enabled, Physical link is Up
Interface index: 300, SNMP ifIndex: 194, Generation: 183
Description: to allspice at-1/0/0
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:05:85:02:38:7e
Last flapped : 2006-02-24 14:28:12 PST (6d 01:56 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0
1 expedited-fo 0 0 0

```

```

2 assured-forw          0          0          0

3 network-cont          0          0          0

SONET alarms   : None
SONET defects  : None
SONET PHY:
Seconds      Count  State
  PLL Lock      0      0 OK
  PHY Light      0      0 OK
SONET section:
  BIP-B1          0      0
  SEF              0      0 OK
  LOS              0      0 OK
  LOF              0      0 OK
  ES-S            0
  SES-S           0
  SEFS-S          0
SONET line:
  BIP-B2          0      0
  REI-L           0      0
  RDI-L           0      0 OK
  AIS-L           0      0 OK
  BERR-SF         0      0 OK
  BERR-SD         0      0 OK
  ES-L            0
  SES-L           0
  UAS-L           0
  ES-LFE          0
  SES-LFE         0
  UAS-LFE         0
SONET path:
  BIP-B3          0      0
  REI-P           0      0
  LOP-P           0      0 OK
  AIS-P           0      0 OK
  RDI-P           0      0 OK
  UNEQ-P          1      1 OK
  PLM-P           0      0 OK
  ES-P            1
  SES-P           1
  UAS-P           0
  ES-PFE          0
  SES-PFE         0
  UAS-PFE         0
Received SONET overhead:
  F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00
  Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00
ATM status:
  HCS state:   Sync
  LOC        :    OK
ATM Statistics:
  Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
  Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
  Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
  Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,

```

```

Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
0 best-effort      95      147744000      95      0      low      none
3 network-control  5      7776000      5      0      low      none

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0      0 bps
  Output bytes : 0      0 bps
  Input packets: 0      0 pps
  Output packets: 0      0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26,
    Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0

```

show interfaces (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1
Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:05:85:8f:30:3f
Last flapped : 2006-03-24 13:29:58 PST (00:04:48 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
SDH alarms : None

```

```
SDH  defects  : None
VPI 0
  Flags: Active
  Total down time: 0 sec, Last down: Never
Traffic statistics:
  Input  packets:          0
  Output packets:          0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.12.6, Local: 10.0.12.5
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0
      Input packets : 0
      Output packets: 0

Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50)
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 0
  Output packets: 0
  VCI 0.4
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
      Input packets : 0
      Output packets: 0
```

show interfaces brief (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1 brief
Physical interface: at-0/2/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
Logical interface at-0/2/1.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  inet 10.0.12.5      --> 10.0.12.6
  iso
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0

Logical interface at-0/2/1.32767
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  VCI 0.4
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
```

show interfaces detail (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1 detail
Physical interface: at-0/2/1, Enabled, Physical link is Up
  Interface index: 154, SNMP ifIndex: 42, Generation: 40
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

  Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:8f:30:3f
  Last flapped   : 2006-03-24 13:29:58 PST (00:05:10 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort    0                0                0
    1 expedited-fo   0                0                0
    2 assured-forw   0                0                0
    3 network-cont   0                0                0

  SDH  alarms   : None
  SDH  defects  : None
  VPI 0
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes   :                0
      Output bytes  :                0
      Input packets :                0
      Output packets:                0

  Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
    Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
    Traffic statistics:
      Input bytes   :                0
      Output bytes  :                0
      Input packets :                0
      Output packets:                0
    Local statistics:
      Input bytes   :                0
      Output bytes  :                0
      Input packets :                0
      Output packets:                0
    Transit statistics:
      Input bytes   :                0                0 bps
      Output bytes  :                0                0 bps
      Input packets :                0                0 pps
      Output packets:                0                0 pps
    Protocol inet, MTU: 4470, Generation: 62, Route table: 0
    Flags: None

```

```

Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
  Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 0, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

```

show interfaces extensive (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1 extensive
Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42, Generation: 40
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:05:85:8f:30:3f
Last flapped : 2006-03-24 13:29:58 PST (00:06:49 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps

```

Input errors:

Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,

Resource errors: 0

Output errors:

Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0

Egress queues: 4 supported, 4 in use

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

SDH alarms : None

SDH defects : None

SDH PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	1	1	OK

SDH regenerator section:

RS-BIP8	2	8828	
OOF	2	2	OK
LOS	2	1	OK
LOF	2	1	OK
RS-ES	4		
RS-SES	3		
RS-SEFS	2		

SDH multiplex section:

MS-BIP24	2	771	
MS-FEBE	1	17476	
MS-FERF	2	1	OK
MS-AIS	2	1	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
MS-ES	4		
MS-SES	2		
MS-UAS	0		
MS-ES-FE	3		
MS-SES-FE	2		
MS-UAS-FE	0		

SDH path:

HP-BIP8	1	6	
HP-FEBE	1	251	
HP-LOP	0	0	OK
HP-AIS	2	1	OK
HP-FERF	3	2	OK
HP-UNEQ	1	1	OK
HP-PLM	2	1	OK
HP-ES	4		
HP-SES	3		
HP-UAS	0		
HP-ES-FE	3		
HP-SES-FE	3		
HP-UAS-FE	0		

Received SDH overhead:

```

F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
ATM status:
HCS state: Sync
LOC      : OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 62, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes : 0
Output bytes : 0

```



```

        Input packets:                0
        Output packets:               0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
    Input bytes :                     0
    Output bytes :                     0
    Input packets:                    0
    Output packets:                   0
Local statistics:
    Input bytes :                     0
    Output bytes :                     0
    Input packets:                    0
    Output packets:                   0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 0, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
    Input bytes :                     0
    Output bytes :                     0
    Input packets:                    0
    Output packets:                   0

```

show interfaces (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1
Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Current address: 00:14:f6:22:58:5e
Last flapped   : 2006-03-13 17:46:36 PST (16:01:12 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
SONET alarms   : None
SONET defects  : None
VPI 0
Flags: Active, OAM, Shaping
CBR, Peak: 50kbps
OAM, Period 30 sec, Up count: 10, Down count: 10
Total down time: 0 sec, Last down: Never
OAM F4 cell statistics:
Total received: 4, Total sent: 4
Loopback received: 4, Loopback sent: 4
RDI received: 0, RDI sent: 0
AIS received: 0
Traffic statistics:
    Input packets:                    4
    Output packets:                   30
VPI 10
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
    Input packets:                    0

```

```
Output packets: 0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.59.5, Local: 10.0.59.6
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10
      Input packets : 0
      Output packets: 0

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76)
  Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 4
  Output packets: 30
  VCI 0.16
    Flags: Active, ILMI
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
      Input packets : 0
      Output packets: 26
  VCI 0.4
    Flags: Active, OAM
    OAM, Period 30 sec, Up count: 10, Down count: 10
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0
      Input packets : 4
      Output packets: 4
  OAM F4 cell statistics:
    Total received: 4, Total sent: 4
    Loopback received: 4, Loopback sent: 4
    RDI received: 0, RDI sent: 0
    AIS received: 0, AIS sent: 0
```

show interfaces brief (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1 brief
Physical interface: at-0/3/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None

Logical interface at-0/3/1.0
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  inet 10.0.59.6 --> 10.0.59.5
  iso
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10
```

```

Logical interface at-0/3/1.32767
  Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  VCI 0.16
    Flags: Active, ILMI
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
  VCI 0.4
    Flags: Active, OAM
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0

```

show interfaces detail (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1 detail
Physical interface: at-0/3/1, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 67, Generation: 22
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:22:58:5e
  Last flapped   : 2006-03-13 17:46:36 PST (16:02:39 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                312                0 bps
    Output bytes  :               2952                0 bps
    Input packets :                 6                0 pps
    Output packets:                50                0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort      44                44                0
    1 expedited-fo      0                0                0
    2 assured-forw      0                0                0
    3 network-cont      6                6                0

  SONET alarms   : None
  SONET defects  : None
  VPI 0
    Flags: Active, OAM, Shaping
    CBR, Peak: 50kbps
    OAM, Period 30 sec, Up count: 10, Down count: 10
    Total down time: 0 sec, Last down: Never
  OAM F4 cell statistics:
    Total received: 6, Total sent: 6
    Loopback received: 6, Loopback sent: 6
    Last received: 00:00:29, Last sent: 00:00:29
    RDI received: 0, RDI sent: 0
    AIS received: 0
    Traffic statistics:
      Input bytes   :                312
      Output bytes  :               2952
      Input packets :                 6
      Output packets:                50

```

```
VPI 10
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
Encapsulation: ATM-SNAP
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 38, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
    Generation: 44
Protocol iso, MTU: 4470, Generation: 39, Route table: 0
  Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 10
ATM per-VC transmit statistics:
  Tail queue packet drops: 0
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)
Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input bytes : 360
  Output bytes : 3302
  Input packets: 6
  Output packets: 50
Local statistics:
  Input bytes : 360
  Output bytes : 3302
  Input packets: 6
  Output packets: 50
VCI 0.16
Flags: Active, ILMI
Total down time: 0 sec, Last down: Never
```

```

EPD threshold: 0, Transmit weight cells: 0
ATM per-VC transmit statistics:
  Tail queue packet drops: 0
Traffic statistics:
  Input bytes : 0
  Output bytes : 2640
  Input packets: 0
  Output packets: 44
VCI 0.4
  Flags: Active, OAM
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 312
    Output bytes : 312
    Input packets: 6
    Output packets: 6
  OAM F4 cell statistics:
    Total received: 6, Total sent: 6
    Loopback received: 6, Loopback sent: 6
    Last received: 00:00:29, Last sent: 00:00:29
    RDI received: 0, RDI sent: 0
    AIS received: 0, AIS sent: 0

```

show interfaces extensive (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1 extensive
Physical interface: at-0/3/1, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 67, Generation: 22
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags : Present Running
  Link flags : None
  CoS queues : 4 supported, 4 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:22:58:5e
  Last flapped : 2006-03-13 17:46:36 PST (16:04:12 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 520 0 bps
    Output bytes : 4240 0 bps
    Input packets: 10 0 pps
    Output packets: 72 0 pps
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  Egress queues: 4 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	62	62	0
1 expedited-fo	0	0	0

2 assured-forw	0	0	0
3 network-cont	10	10	0

SONET alarms : None
 SONET defects : None
 SONET PHY:

	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	0	0	OK

SONET section:

BIP-B1	0	0	
SEF	0	0	OK
LOS	0	0	OK
LOF	0	0	OK
ES-S	0		
SES-S	0		
SEFS-S	0		

SONET line:

BIP-B2	0	0	
REI-L	0	0	
RDI-L	0	0	OK
AIS-L	0	0	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
ES-L	0		
SES-L	0		
UAS-L	0		
ES-LFE	0		
SES-LFE	0		
UAS-LFE	0		

SONET path:

BIP-B3	0	0	
REI-P	0	0	
LOP-P	0	0	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	1	1	OK
PLM-P	0	0	OK
ES-P	1		
SES-P	1		
UAS-P	0		
ES-PFE	0		
SES-PFE	0		
UAS-PFE	0		

Received SONEt overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x13, C2(cmp)	: 0x13, F2	: 0x00
Z3	: 0x00, Z4	: 0x00, S1(cmp)	: 0x00	

Transmitted SONEt overhead:

F1	: 0x00, J0	: 0x01, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x13, F2	: 0x00, Z3	: 0x00
Z4	: 0x00			

ATM status:

HCS state:	Sync
LOC	: OK

ATM Statistics:

Uncorrectable HCS errors:	0,
Correctable HCS errors:	0,
Tx cell FIFO overruns:	0,
Rx cell FIFO overruns:	0,
Rx cell FIFO underruns:	0,
Input cell count:	0,
Output cell count:	0,
Output idle cell count:	0,
Output VC queue drops:	0,
Input no buffers:	0,

```

Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
  Flags: Active, OAM, Shaping
  CBR, Peak: 50kbps
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  OAM F4 cell statistics:
  Total received: 10, Total sent: 10
  Loopback received: 10, Loopback sent: 10
  Last received: 00:00:02, Last sent: 00:00:02
  RDI received: 0, RDI sent: 0
  AIS received: 0
  Traffic statistics:
    Input bytes :           520
    Output bytes :          4240
    Input packets:           10
    Output packets:          72
VPI 10
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0

Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0
  Local statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0
  Transit statistics:
    Input bytes :           0           0 bps
    Output bytes :           0           0 bps
    Input packets:           0           0 pps
    Output packets:          0           0 pps
  Protocol inet, MTU: 4470, Generation: 38, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
      Generation: 44
  Protocol iso, MTU: 4470, Generation: 39, Route table: 0
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10
    ATM per-VC transmit statistics:
      Tail queue packet drops: 0
    Traffic statistics:

```

```
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
```

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)

Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000

Encapsulation: ATM-VCMUX

Traffic statistics:

```
Input bytes : 660
Output bytes : 5473
Input packets: 11
Output packets: 83
```

Local statistics:

```
Input bytes : 660
Output bytes : 5473
Input packets: 11
Output packets: 83
```

VCI 0.16

Flags: Active, ILMI

Total down time: 0 sec, Last down: Never

EPD threshold: 0, Transmit weight cells: 0

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

```
Input bytes : 0
Output bytes : 4320
Input packets: 0
Output packets: 72
```

VCI 0.4

Flags: Active, OAM

OAM, Period 30 sec, Up count: 10, Down count: 10

Total down time: 0 sec, Last down: Never

EPD threshold: 2129, Transmit weight cells: 0

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

```
Input bytes : 572
Output bytes : 572
Input packets: 11
Output packets: 11
```

OAM F4 cell statistics:

Total received: 11, Total sent: 11

Loopback received: 11, Loopback sent: 11

Last received: 00:00:18, Last sent: 00:00:18

RDI received: 0, RDI sent: 0

AIS received: 0, AIS sent: 0

show interfaces (ATM-over-ADSL)

Syntax	<pre>show interfaces at-pim/0/port <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers) Display status information about the specified ATM-over-asynchronous DSL (ADSL) interface.
Options	<p>at-pim/0/port—Display standard information about the specified ADSL interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display the SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ATM-over-ADSL) on page 443</p> <p>show interfaces brief (ATM-over-ADSL) on page 443</p> <p>show interfaces detail (ATM-over-ADSL) on page 444</p> <p>show interfaces extensive (ATM-over-ADSL) on page 446</p>
Output Fields	Table 23 on page 441 lists only output fields that are specific to the show interfaces (ATM-over-ADSL) command. For information about all other output fields, see Table 92 under the show interfaces (ATM) command.

Table 23: ATM-over-ADSL show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
ADSL alarms	Number and type of ADSL alarms. See “ADSL media” for details.	detail extensive none
ADSL defects	Number and type of ADSL defects. See “ADSL media” for details.	detail extensive none

Table 23: ATM-over-ADSL show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
ADSL status	<p>Operational information for ATM-over-ADSL interfaces.</p> <ul style="list-style-type: none"> • Modem status—Status of the modem: Down, Training, or Showtime. • DSL mode—Configured line type of the digital subscriber line: adsl2plus, ansi-dmt, auto, itu-dmt, or itu-dmt-bis. • Last fail code—Reason for failure: ATU-C not detected, incompatible line condition, protocol error, message error, spurious ATU detected, forced silence, unselectable operation mode, or none. • Subfunction—Specified analog front-end chip and discrete front. • Seconds in showtime—Number of seconds the ADSL connection is in showtime. 	detail extensive none
ADSL media	<p>Information about ADSL media-specific defects that can prevent the interface from passing packets. The following information is displayed for each defect:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The possible defects are as follows:</p> <ul style="list-style-type: none"> • LOF—Loss of frame. • LOS—Loss of signal. • LOM—Loss of multiframe. • LOP—Loss of pointer. • LOCDI—Loss of cell delineation for an interleaved channel. • LOCDNI—Loss of cell delineation for a noninterleaved channel. 	extensive
ADSL Statistics	<p>Information about the ADSL terminal unit-remote (ATU-R) at the far end of the connection and the ADSL terminal unit-central office (ATU-C) at the near end:</p> <ul style="list-style-type: none"> • Attenuation (dB)—Attenuation in decibels. • Capacity used (%)—Percentage of capacity used. • Noise margin (dB)—Maximum extraneous signal allowed without causing the output to deviate from an allowable level, in decibels. • Output power (dBm)—Amount of power used by the ATM-over-ADSL interface. • Bit rate (kbps)—Speed of data transfer on the ATM-over-ADSL interface, in kilobits per second. • CRC—Number of cyclic redundancy check errors. • FEC—Number of forward error corrections. • HEC—Number of header error checksums. • Received cells—Number of cells received through the interface. • Transmitted cells—Number of cells sent through the interface. 	detail extensive

Sample Output

show interfaces (ATM-over-ADSL)

```

user@host> show interfaces at-5/0/0
Physical interface: at-5/0/0, Enabled, Physical link is Down
  Interface index: 149, SNMP ifIndex: 68
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, ADSL mode,
  Speed: ADSL2+, Loopback: None
  Device flags   : Present Running Down
  Link flags     : None
  CoS queues     : 8 supported, 8 in use
  Current address: 00:05:85:c3:85:84
  Last flapped   : 2005-12-19 15:36:02 PST (12w0d 18:33 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  ADSL alarms    : None
  ADSL defects   : None
  ADSL status:
    Modem status : Training
    DSL mode      : Adsl2plus  Annex A
    Last fail code: ATU-C not detected
    Subfunction   : 0x00
    Seconds in showtime : 0

Logical interface at-5/0/0.0 (Index 70) (SNMP ifIndex 71)
  Flags: Device-Down Point-To-Multipoint SNMP-Traps 0x4000
  Encapsulation: Ether-over-ATM-LLC
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 1500
  Flags: None
  VCI 0.128
  Flags: Active, Multicast
  Total down time: 0 sec, Last down: Never
  Input packets : 0
  Output packets: 0

Logical interface at-5/0/0.32767 (Index 71) (SNMP ifIndex 70)
  Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 0
  Output packets: 0
  VCI 0.4
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Input packets : 0
  Output packets: 0

```

show interfaces brief (ATM-over-ADSL)

```

user@host> show interfaces at-5/0/0 brief
Physical interface: at-5/0/0, Enabled, Physical link is Down
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, ADSL mode,
  Speed: ADSL2+, Loopback: None
  Device flags   : Present Running Down
  Link flags     : None
  Logical interface at-5/0/0.0
    Flags: Device-Down Point-To-Multipoint SNMP-Traps 0x4000
    Encapsulation: Ether-over-ATM-LLC
    inet

```

```
VCI 0.128
  Flags: Active, Multicast
  Total down time: 0 sec, Last down: Never
```

```
Logical interface at-5/0/0.32767
  Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  VCI 0.4
    Flags: Active
    Total down time: 0 sec, Last down: Never
```

show interfaces detail (ATM-over-ADSL)

```
user@host> show interfaces at-5/0/0 detail
Physical interface: at-5/0/0, Enabled, Physical link is Down
  Interface index: 149, SNMP ifIndex: 68, Generation: 30
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, ADSL mode,
  Speed: ADSL2+, Loopback: None
  Device flags   : Present Running Down
  Link flags     : None
  CoS queues    : 8 supported, 8 in use
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 00:05:85:c3:85:84
  Last flapped  : 2005-12-19 15:36:02 PST (12w0d 18:33 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          0          0 bps
    Output bytes  :          0          0 bps
    Input packets :          0          0 pps
    Output packets:          0          0 pps
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0 best-effort          0              0              0
    1 expedited-fo        0              0              0
    2 assured-forw        0              0              0
    3 network-cont        0              0              0
    4 be-class            0              0              0
    5 ef-class            0              0              0
    6 af-class            0              0              0

  ADSL alarms   : None
  ADSL defects  : None
  ADSL status:
    Modem status : Training
    DSL mode     : Adsl2plus  Annex A
    Last fail code: ATU-C not detected
    Subfunction  : 0x00
    Seconds in showtime : 0
  ADSL Statistics:
    Attenuation (dB)      :          0.0          0.0
    Capacity used (%)     :          0          0
    Noise margin (dB)    :          0.0          0.0
    Output power (dBm)   :          0.0          0.0

                                Interleave      Fast  Interleave      Fast
```

Bit rate (kbps) :	0	0	0	0
CRC :	0	0	0	0
FEC :	0	0	0	0
HEC :	0	0	0	0
Received cells :	0	0		
Transmitted cells :	0	0		

Logical interface at-5/0/0.0 (Index 70) (SNMP ifIndex 71) (Generation 8)

Flags: Device-Down Point-To-Multipoint SNMP-Traps 0x4000

Encapsulation: Ether-over-ATM-LLC

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Local statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Transit statistics:

Input bytes :	0	0 bps
Output bytes :	0	0 bps
Input packets:	0	0 pps
Output packets:	0	0 pps

Protocol inet, MTU: 1500, Generation: 12, Route table: 0

Flags: None

VCI 0.128

Flags: Active, Multicast

Total down time: 0 sec, Last down: Never

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Logical interface at-5/0/0.32767 (Index 71) (SNMP ifIndex 70) (Generation 9)

Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000

Encapsulation: ATM-VCMUX

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Local statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

VCI 0.4

Flags: Active

Total down time: 0 sec, Last down: Never

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

show interfaces extensive (ATM-over-ADSL)

```

user@host> show interfaces at-5/0/0 extensive
Physical interface: at-5/0/0, Enabled, Physical link is Down
  Interface index: 149, SNMP ifIndex: 68, Generation: 30
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, ADSL mode,
  Speed: ADSL2+, Loopback: None
  Device flags   : Present Running Down
  Link flags     : None
  CoS queues     : 8 supported, 8 in use
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:c3:85:84
  Last flapped   : 2005-12-19 15:36:02 PST (12w0d 18:34 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, Resource
errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  Queue counters:


| Queue counters: | Queued packets | Transmitted packets | Dropped packets |
|-----------------|----------------|---------------------|-----------------|
| 0 best-effort   | 0              | 0                   | 0               |
| 1 expedited-fo  | 0              | 0                   | 0               |
| 2 assured-forw  | 0              | 0                   | 0               |
| 3 network-cont  | 0              | 0                   | 0               |
| 4 be-class      | 0              | 0                   | 0               |
| 5 ef-class      | 0              | 0                   | 0               |
| 6 af-class      | 0              | 0                   | 0               |


  ADSL alarms   : None
  ADSL defects  : None
  ADSL media:


|        | Seconds | Count | State |
|--------|---------|-------|-------|
| LOF    | 0       | 0     | OK    |
| LOS    | 0       | 0     | OK    |
| LOM    | 0       | 0     | OK    |
| LOP    | 0       | 0     | OK    |
| LOCDI  | 0       | 0     | OK    |
| LOCDNI | 0       | 0     | OK    |


  ADSL status:
    Modem status : Training
    DSL mode      : Adsl2plus Annex A
    Last fail code: ATU-C not detected
    Subfunction   : 0x00
    Seconds in showtime : 0
  ADSL Statistics:


|                   | ATU-R | ATU-C |
|-------------------|-------|-------|
| Attenuation (dB)  | 0.0   | 0.0   |
| Capacity used (%) | 0     | 0     |
| Noise margin (dB) | 0.0   | 0.0   |


```

```

Output power (dBm)      :          0.0          0.0

                        Interleave    Fast  Interleave    Fast
Bit rate (kbps)   :          0        0          0        0
CRC               :          0        0          0        0
FEC               :          0        0          0        0
HEC               :          0        0          0        0
Received cells   :          0        0
Transmitted cells :          0        0

ATM status:
HCS state:      Hunt
LOC           :      OK

ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0

Packet Forwarding Engine configuration:
Destination slot: 5

CoS information:
CoS transmit queue    Bandwidth      Buffer    Priority  Limit
                      %          bps      %        usec
0 best-effort         95      7600000    95         0      low  none
3 network-control     5       400000     5         0      low  none

Logical interface at-5/0/0.0 (Index 70) (SNMP ifIndex 71) (Generation 8)
Flags: Device-Down Point-To-Multipoint SNMP-Traps 0x4000
Encapsulation: Ether-over-ATM-LLC
Traffic statistics:
Input bytes   :          0
Output bytes  :          0
Input packets :          0
Output packets:          0
Local statistics:
Input bytes   :          0
Output bytes  :          0
Input packets :          0
Output packets:          0
Transit statistics:
Input bytes   :          0          0 bps
Output bytes  :          0          0 bps
Input packets :          0          0 pps
Output packets:          0          0 pps
Protocol inet, MTU: 1500, Generation: 12, Route table: 0
Flags: None
VCI 0.128
Flags: Active, Multicast
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes   :          0
Output bytes  :          0
Input packets :          0
Output packets:          0

Logical interface at-5/0/0.32767 (Index 71) (SNMP ifIndex 70) (Generation 9)
Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:

```

```
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
```


show interfaces (ATM-over-SHDSL)

Syntax	<pre>show interfaces at-pim/0/port <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers) Display status information about the specified ATM-over-symmetric high-speed DSL (SHDSL) interface.
Options	<p>at-pim/0/port—Display standard information about the specified SHDSL interface</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display the SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ATM-over-SHDSL) on page 451</p> <p>show interfaces brief (ATM-over-SHDSL) on page 452</p> <p>show interfaces detail (ATM-over-SHDSL) on page 452</p> <p>show interfaces extensive (ATM-over-SHDSL) on page 454</p>
Output Fields	Table 24 on page 450 lists only output fields that are specific to the show interfaces (ATM-over-SHDSL) command. For information about all other output fields, see Table 92 under the show interfaces (ATM) command.

Table 24: ATM-over-SHDSL show interfaces Output Fields

Field Name	Field Description	Level of Output
SHDSL alarms	Number and type of SHDSL alarms. See "SHDSL media" for details.	detail extensive none
SHDSL defects	Number and type of SHDSL defects. See "SHDSL media" for details.	detail extensive none
SHDSL media	<p>Information about the SHDSL media-specific defects that can prevent the interface from passing packets. The following information is displayed for each defect:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The possible defects are as follows:</p> <ul style="list-style-type: none"> • LOSD—Loss of signal was detected at the remote application interface. • LOSW—Loss of sync word. A message ID was sent. • ES—Errored seconds. One or more cyclic redundancy check (CRC) anomalies were detected. • SES—Severely errored seconds. At least 50 CRC anomalies were detected. • UAS—Unavailable seconds. An interval occurred during which one or more LOSW defects were detected. 	extensive
SHDSL status	<p>Operational information for ATM-over-SHDSL interfaces.</p> <ul style="list-style-type: none"> • Line termination—SHDSL transceiver unit- remote (STU-R) (Only customer premises equipment is supported.) • Annex—Either Annex A or Annex B. Annex A is supported in North America, and Annex B is supported in Europe. • Line mode—SHDSL mode configured on the G.SHDSL Physical Interface Module (PIM), either 2-wire or 4-wire. • Modem status—Data. • Bit rate (kbps)—Speed of data transfer on the ATM-over-G.SHDSL interface, in kilobits per second. • Last fail mode—Code for the last interface failure. • Framer mode—Framer mode of the underlying interface: ATM. • Dying gasp—Ability of a J Series router that has lost power to send a message informing the attached DSL access multiplexer (DSLAM) that it is about to go offline: Enabled or Disabled. • Framer sync status—Framer synchronization status: In sync or Out of sync (OOS). • Chipset version—Version number of the chipset on the interface. • Firmware version—Version number of the firmware on the interface. 	detail extensive none

Table 24: ATM-over-SHDSL show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SHDSL statistics	<ul style="list-style-type: none"> • Loop Attenuation (dB)—Attenuation in decibels. • Transmit power (dBm)—Power of the transmitting interface. • Receiver gain (dB)—Power increase of the receiving interface, in decibels. • SNR sampling (dB)—Signal-to-noise ratio at a receiver point, in decibels. • CRC errors—Number of cyclic redundancy check errors. • SEGA errors—Number of segment anomaly errors. A regenerator operating on a segment received corrupted data. • LOSW errors—Number of loss of signal defect errors. Three or more consecutively received frames contained one or more errors in the framing bits. • Received cells—Number of cells received through the interface. • Transmitted cells—Number of cells sent through the interface. • HEC errors—Number of header error checksum errors. • Cell Drop—Number of dropped cells on the interface. 	detail extensive

Sample Output

show interfaces (ATM-over-SHDSL)

```

user@host> show interfaces at-4/0/0
Physical interface: at-4/0/0, Enabled, Physical link is Down
  Interface index: 141, SNMP ifIndex: 41
  Link-level type: Ethernet-over-ATM, MTU: 4482, Clocking: Internal,
  Speed: SHDSL(2-wire), Loopback: None
  Device flags   : Present Running Down
  Link flags     : None
  CoS queues     : 8 supported, 8 in use
  Current address: 00:05:85:c2:44:60
  Last flapped   : 2006-03-21 15:07:11 PST (2w0d 00:59 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  SHDSL alarms   : LOSD
  SHDSL defects  : LOSD
  SHDSL status:
    Line termination : STU-R
    Annex            : Unknown
    Line mode        : 2-wire
    Modem status     : Training
    Bit rate (kbps)  : 0
    Last fail mode   : No failure (0x00)
    Frammer mode     : ATM
    Dying gasp       : Enabled
    Frammer sync status : Out of sync
    Chipset version  : 00
    Firmware version : R3.0.1

  Logical interface at-4/0/0.0 (Index 68) (SNMP ifIndex 44)
    Flags: Device-Down Point-To-Point SNMP-Traps 0x4000
    Encapsulation: Ether-over-ATM-LLC
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 1500

```

```
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
Input packets : 0
Output packets: 0
Logical interface at-4/0/0.32767 (Index 69) (SNMP ifIndex 43)
Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Input packets : 0
Output packets: 0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
Input packets : 0
Output packets: 0
```

show interfaces brief (ATM-over-SHDSL)

```
user@host> show interfaces at-4/0/0 brief
Physical interface: at-4/0/0, Enabled, Physical link is Down
Link-level type: Ethernet-over-ATM, MTU: 4482, Clocking: Internal,
Speed: SHDSL(2-wire), Loopback: None
Device flags   : Present Running Down
Link flags     : None

Logical interface at-4/0/0.0
Flags: Device-Down Point-To-Point SNMP-Traps 0x4000
Encapsulation: Ether-over-ATM-LLC
inet
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never

Logical interface at-4/0/0.32767
Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
```

show interfaces detail (ATM-over-SHDSL)

```
user@host> show interfaces at-4/0/0 detail
Physical interface: at-4/0/0, Enabled, Physical link is Down
Interface index: 141, SNMP ifIndex: 41, Generation: 22
Link-level type: Ethernet-over-ATM, MTU: 4482, Clocking: Internal,
Speed: SHDSL(2-wire), Loopback: None
Device flags   : Present Running Down
Link flags     : None
CoS queues     : 8 supported, 8 in use
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:05:85:c2:44:60
Last flapped   : 2006-03-21 15:07:11 PST (2w0d 01:00 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   : 0          0 bps
Output bytes  : 0          0 bps
Input packets : 0          0 pps
Output packets: 0          0 pps
Queue counters:      Queued packets  Transmitted packets  Dropped packets
```

```

0 best-effort          0          0          0
1 expedited-fo         0          0          0
2 assured-forw         0          0          0
3 network-cont         0          0          0

SHDSL alarms   : LOSD
SHDSL defects  : LOSD
SHDSL status:
  Line termination : STU-R
  Annex            : Unknown
  Line mode        : 2-wire
  Modem status     : Training
  Bit rate (kbps)  : 0
  Last fail mode   : No failure (0x00)
  Frammer mode     : ATM
  Dying gasp       : Enabled
  Frammer sync status : Out of sync
  Chipset version  : 00
  Firmware version : R3.0.1
SHDSL statistics:
  Loop attenuation (dB) : 2.3
  Transmit power (dBm)  : 0.0
  Receiver gain (dB)    : 20.412
  CRC errors            : 0
  SEGA errors           : 0
  LOSW errors           : 0
  Received cells        : 0
  Transmitted cells     : 0
  HEC errors            : 0
  Cell drop             : 0

Logical interface at-4/0/0.0 (Index 68) (SNMP ifIndex 44) (Generation 8)
Flags: Device-Down Point-To-Point SNMP-Traps 0x4000
Encapsulation: Ether-over-ATM-LLC
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0          0 bps
  Output bytes : 0          0 bps
  Input packets: 0          0 pps
  Output packets: 0          0 pps
Protocol inet, MTU: 1500, Generation: 11, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:

```

```

        Input bytes :          0
        Output bytes :          0
        Input packets:          0
        Output packets:         0

Logical interface at-4/0/0.32767 (Index 69) (SNMP ifIndex 43) (Generation 9)
Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0

```

show interfaces extensive (ATM-over-SHDSL)

```

user@host> show interfaces at-4/0/0 extensive
Physical interface: at-4/0/0, Enabled, Physical link is Down
Interface index: 141, SNMP ifIndex: 41, Generation: 22
Link-level type: Ethernet-over-ATM, MTU: 4482, Clocking: Internal,
Speed: SHDSL(2-wire), Loopback: None
Device flags   : Present Running Down
Link flags     : None
CoS queues     : 8 supported, 8 in use
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:05:85:c2:44:60
Last flapped   : 2006-03-21 15:07:11 PST (2w0d 01:02 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:         0          0 pps
Input errors:
  Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort              0                  0                  0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          0          0          0

SHDSL alarms   : LOSD
SHDSL defects  : LOSD
SHDSL media:
    Seconds      Count  State
    LOSD         1228405    1 Defect Active
    LOSW          0         0 OK
    ES            0
    SES           0
    UAS           1228402
SHDSL status:
    Line termination : STU-R
    Annex            : Unknown
    Line mode        : 2-wire
    Modem status     : Training
    Bit rate (kbps)  : 0
    Last fail mode   : No failure (0x00)
    Frammer mode     : ATM
    Dying gasp       : Enabled
    Frammer sync status : Out of sync
    Chipset version  : 00
    Firmware version : R3.0.1
SHDSL statistics:
    Loop attenuation (dB) : 2.3
    Transmit power (dBm)  : 0.0
    Receiver gain (dB)    : 20.412
    CRC errors            : 0
    SEGA errors           : 0
    LOSW errors           : 0
    Received cells        : 0
    Transmitted cells     : 0
    HEC errors            : 0
    Cell drop             : 0
Packet Forwarding Engine configuration:
    Destination slot: 4
CoS information:
    CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                             %      bps      %      usec
    0 best-effort           95      2196400  95      0        low  none
    3 network-control       5      115600   5      0        low  none

Logical interface at-4/0/0.0 (Index 68) (SNMP ifIndex 44) (Generation 8)
Flags: Device-Down Point-To-Point SNMP-Traps 0x4000
Encapsulation: Ether-over-ATM-LLC
Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input bytes : 0 bps
    Output bytes : 0 bps

```

Input packets: 0 0 pps
Output packets: 0 0 pps

Protocol inet, MTU: 1500, Generation: 11, Route table: 0

Flags: None

VCI 0.128

Flags: Active

Total down time: 0 sec, Last down: Never

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Logical interface at-4/0/0.32767 (Index 69) (SNMP ifIndex 43) (Generation 9)

Flags: Device-Down Point-To-Multipoint No-Multicast SNMP-Traps 0x4000

Encapsulation: ATM-VCMUX

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Local statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

VCI 0.4

Flags: Active

Total down time: 0 sec, Last down: Never

ATM per-VC transmit statistics:

Tail queue packet drops: 0

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

show interfaces (Channelized DS3-to-DS0)

Syntax	<pre>show interfaces ds-fpc/pic/port:t1channel:ds0channel <brief detail extensive> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS0 interface.
Options	<p>ds-fpc/pic/port:t1channel:ds0channel—Display standard information about the specified channelized DS3-to-DS0 interface.</p> <p>brief detail extensive—(Optional) Display the specified level of output interface.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized DS3-to-DS0) on page 465
Output Fields	Table 25 on page 457 lists the output fields for the show interfaces (all Channelized DS3 interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 25: Channelized DS3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Mode	Whether C-bit parity mode or M13 mode is enabled.	All levels
Framing	Physical layer framing format used on the link. It can be ESF or SF . The default is ESF .	All levels
Parent	(Channelized IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—The number of keepalive packets that a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value, value...xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last seen hh:mm:ss ago). 	detail extensive none
LCP state	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—LCP negotiation is incomplete (not yet completed or has failed). Not-configured—LCP is not configured on the interface. Opened—LCP negotiation is successful. 	detail extensive none
NCP state	<p>(PPP) Network Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—NCP negotiation is incomplete (not yet completed or has failed). Not-configured—NCP is not configured on the interface. Opened—NCP negotiation is successful. 	detail extensive none

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CHAP state	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication). • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone hh:mm:ss ago</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Counter increments when the software could not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning. • HS link CRC errors—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. 	extensive

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DS1 alarms	Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	detail extensive none
DS1 defects	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	
T1 media	Counts of T1 media-specific errors. <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error event • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • LES—Line error seconds • ES—Errored seconds • SEFS—Severely errored framing seconds (section) • SES—Severely errored seconds • BES—Bit error seconds • UAS—Unavailable seconds 	extensive

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DS3 media	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Remote defect indication • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CCV—C-bit coding violation • LES—Line error seconds • PES—P-bit errored seconds • PSES—P-bit errored seconds (section) • CES—C-bit errored seconds • CSES—C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Byte encoding—Byte encoding used: Nx64K or Nx56K. • Data inversion—HDLC data inversion setting: Enabled or Disabled 	extensive
Interface transmit queues	<p>Name of the transmit queues and their associated statistics for each DS1 channel on the Channelized DS3-to-DS1 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DS1 or DS3 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Bandwidth	Bandwidth configured on the interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none

Table 25: Channelized DS3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
Redundant Link	(LSQ redundancy) Backup link for Link Services IQ redundancy.	detail extensive none

Sample Output

show interfaces extensive (Channelized DS3-to-DS0)

```

user@host> show interfaces ds-0/0/0:0:0 extensive
Physical interface: ds-0/0/0:0:0, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 4298, Generation: 177
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps, FCS: 16,
  Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 280 (last seen 00:00:09 ago)
    Output: 286 (last sent 00:00:00 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  Last flapped   : 2002-05-23 17:53:29 PDT (00:46:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :           6814           16 bps
    Output bytes  :          28840           72 bps
    Input packets :           568           0 pps
    Output packets:           893           0 pps
  Input errors:

```

Errors: 0, Drops: 0, Framing errors: 39, Policed discards: 0,
 L3 incompletes: 0, L2 channel errors: 2, L2 mismatch timeouts: 0,
 HS link CRC errors: 0

Output errors:

Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0

DS1 alarms : None

DS3 alarms : None

DS1 defects : None

DS3 defects : None

T1 media:	Seconds	Count	State
SEF	0	0	OK
BEE	5	1	OK
AIS	0	0	OK
LOF	0	0	OK
LOS	0	0	OK
YELLOW	17	1	OK
BPV	0	0	
EXZ	0	0	
LCV	5	27765	
PCV	0	0	
CS	0	0	
LES	0		
ES	0		
SES	5		
SEFS	10		
BES	0		
UAS	0		

DS3 media:	Seconds	Count	State
PLL Lock	0	0	OK
Reframing	0	0	OK
AIS	0	0	OK
LOF	0	0	OK
LOS	0	0	OK
IDLE	0	0	OK
YELLOW	0	0	OK
BPV	1	65535	
EXZ	1	65535	
LCV	2	131070	
PCV	1	1825	
CCV	0	0	
LES	1		
PES	1		
PSES	1		
CES	0		
CSES	0		
SEFS	0		
UAS	0		

Interface transmit queues:

	B/W	WRR	Packets	Bytes	Drops	Errors
Queue0	95	95	0	0	0	0
Queue1	5	5	893	28840	0	0

HDLC configuration:

Giant threshold: 1514, Runt threshold: 3

Timeslots : 1-10

Byte encoding: Nx64K, Data inversion: Disabled

DS3 BERT configuration:

BERT time period: 10 seconds, Elapsed: 0 seconds

Algorithm: 2^15 - 1, Induced error rate: 10e-0

DS1 BERT configuration:

BERT time period: 10 seconds, Elapsed: 0 seconds

Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)

Packet Forwarding Engine configuration:
Destination slot: 0, PLP byte: 2 (0x01)
CoS information: CoS transmit queue Bandwidth Buffer

Priority	Limit		%	bps	%	usec		
0	best-effort		95	608000	95	0	low	none
3	network-control		5	32000	5	0	low	none

Logical interface ds-0/0/0:0:0.0 (Index 5) (SNMP ifIndex 4299)
(Generation 943)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 949, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 18.18.18.1, Local: 18.18.18.2, Broadcast: Unspecified,
Generation: 1849

show interfaces (Channelized DS3-to-DS1)

Syntax	<code>show interfaces t1-fpc/pic/port:t1channel</code> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS1 interface.
Options	t1-fpc/pic/port:t1channel —Display standard information about the specified channelized DS3-to-DS1 interface. brief detail extensive terse —(Optional) Display brief interface information. descriptions —(Optional) Display interface description strings. media —(Optional) Display media-specific information about network interfaces. snmp-index <i>snmp-index</i> —(Optional) Display information for the specified SNMP index of the interface. statistics —(Optional) Display static interface statistics.
Required Privilege Level	view
List of Sample Output	show interfaces extensive (channelized DS3-to-DS1) on page 468
Output Fields	See the output field table for the show interfaces (Channelized DS3-to-DS0) command .

Sample Output

show interfaces extensive (channelized DS3-to-DS1)

```
user@host> show interfaces t1-0/0/0:0 extensive
Physical interface: t1-0/0/0:0, Enabled, Physical link is Up
  Interface index: 210, SNMP ifIndex: 14, Generation: 2977
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 30 (last seen 00:00:05 ago)
    Output: 29 (last sent 00:00:00 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
```

```

CHAP state: Not-configured
Last flapped   : 2002-05-23 17:30:12 PDT (17:29:43 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          944          16 bps
Output bytes  :         1162          16 bps
Input packets :          66           0 pps
Output packets:          82           0 pps
Input errors:
  Errors: 1, Drops: 0, Framing errors: 1, Policed discards: 8,
  L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS1  alarms   : None
DS3  alarms   : None
DS1  defects  : None
DS3  defects  : None
T1  media:
Seconds      Count  State
SEF          0        0 OK
BEE         11         5 OK
AIS         28         1 OK
LOF         27         1 OK
LOS          0         0 OK
YELLOW      23         1 OK
BPV          0         0
EXZ          0         0
LCV         11       20574
PCV          0         0
CS           0         0
LES         28
ES          28
SES         39
SEFS        50
BES         0
UAS         0
DS3  media:
Seconds      Count  State
PLL Lock     0         0 OK
Reframing    0         0 OK
AIS          0         0 OK
LOF          1         1 OK
LOS          1         1 OK
IDLE         0         0 OK
YELLOW      0         0 OK
BPV          2       131070
EXZ          3       49910
LCV          5       180980
PCV          2        327
CCV         12       264558
LES          3
PES          3
PSES         2
CES         13
CSES         13
SEFS         1
UAS         35
Interface transmit queues:
      B/W  WRR  Packets  Bytes  Drops  Errors
Queue0  95  95      0      0      0      0
Queue1   5   5     82     1162    0      0
HDLC configuration:

```

```
Giant threshold: 1514, Runt threshold: 3
Timeslots      : 1-10
Line encoding: B8ZS, Byte encoding: Nx64K, Data inversion: Disabled
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, Induced error rate: 10e-0
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 2 (0x00) CoS information:
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
  0 best-effort           95      608000  95      0      low  none
  3 network-control       5      32000   5      0      low  none
Logical interface t1-0/0/0:0.0 (Index 11) (SNMP ifIndex 23) (Generation 497)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Bandwidth: 0
Protocol inet, MTU: 1500, Generation: 576, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 21.21.21.2, Local: 21.21.21.1, Broadcast: Unspecified,
  Generation: 977
```

show interfaces (Channelized E1 IQ)

Syntax	show interfaces (<i>ce1-fpc/pic/port</i> <i>type-fpc/pic/port<:channel></i>) <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized E1 IQ interface.
Options	<p><i>type-fpc/pic/port:<channel></i>—Interface type with optional corresponding channel levels. For the physical channelized E1 IQ interface, <i>type</i> is ce. For the clear channel, <i>type</i> is e1. At the first level of channelization, <i>type</i> is ds.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (Channelized E1 IQ) (Physical) on page 471</p> <p>show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation) on page 472</p> <p>show interfaces extensive (Channelized E1 IQ MLFR Encapsulation) on page 473</p> <p>show interfaces detail (Clear Channel E1) on page 474</p>
Output Fields	For information about output fields, see the output field table for the show interfaces (Channelized E1) command. Output fields are listed in the approximate order in which they appear.

Sample Output

show interfaces (Channelized E1 IQ) (Physical)

```

user@host> show interfaces ce1-1/2/3
Physical interface: ce1-1/2/3, Enabled, Physical link is Up
  Interface index: 18, SNMP ifIndex: 1128
  Link-level type: Frame-relay, Controller, MTU: 1504, Clocking: Internal, Speed:
E1, Loopback: None, FCS: 16, Framing: G704, Parent: None
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags       : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds

```

```

LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Last flapped   : 2002-10-04 17:52:51 PDT (00:32:57 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
DS1 alarms    : None
DS1 defects   : None

```

show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation)

```

user@host> show interfaces ds-0/3/4:1 extensive
Physical interface: ds-0/3/4:1, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 63, Generation: 34
Link-level type: Multilink-PPP, MTU: 1518, Clocking: Internal, Speed: 64kbps,
Loopback: None, FCS: 16,
Parent: ce1-0/3/4 Interface index 150
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
CHAP state: Closed
CoS queues   : 4 supported, 4 maximum usable queues
Last flapped : Never
Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
Traffic statistics:
  Input bytes   : 0                      0 bps
  Output bytes  : 6070570                 224 bps
  Input packets : 0                      0 pps
  Output packets: 209330                 0 pps
Input errors:
  Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0
HDLC configuration:
  Giant threshold: 1528, Runt threshold: 2
  Timeslots      : 1
  Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared

```



```

DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

Logical interface ds-0/3/4:1.0 (Index 74) (SNMP ifIndex 64) (Generation 13)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol mlppp, Multilink bundle: ls-0/1/0.0, MTU: 1514, Generation: 24,
  Route table: 0

```

show interfaces extensive (Channelized E1 IQ MLFR Encapsulation)

```

user@host> show interfaces ds-0/3/4:5 extensive
Physical interface: ds-0/3/4:5, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 72, Generation: 38
  Link-level type: Multilink-FR, MTU: 1518, Clocking: Internal, Speed: 64kbps,
  Loopback: None, FCS: 16,
  Parent: ce1-0/3/4 Interface index 150
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : No-Keepalives DCE
  Hold-times    : Up 0 ms, Down 0 ms
  ANSI LMI settings: n392dce 3, n393dce 4, t392dce 15 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  DTE statistics:
    Enquiries sent           : 0
    Full enquiries sent      : 0
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 0
  CoS queues : 4 supported, 4 maximum usable queues
  Last flapped : 2005-12-21 09:59:01 PST (1w0d 03:44 ago)
  Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Input errors:
    Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  HDLC configuration:
    Giant threshold: 1528, Runt threshold: 2
    Timeslots : 5
    Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared

```

```

DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x01)

Logical interface ds-0/3/4:5.0 (Index 78) (SNMP ifIndex 73) (Generation 17)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Transit statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Protocol mlfrr, Multilink bundle: ls-0/1/0.1, MTU: 1514, Generation: 28, Route
table: 0
  DLCI 10
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes : 0
      Output bytes : 0
      Input packets: 0
      Output packets: 0
  DLCI statistics:
    Active DLCI :1 Inactive DLCI :0

```

show interfaces detail (Clear Channel E1)

```

user@host> show interfaces e1-1/2/6 detail
Physical interface: e1-1/2/6, Enabled, Physical link is Up
  Interface index: 89, SNMP ifIndex: 1278, Generation: 341
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1, Loopback:None,
...
  Logical interface e1-1/2/6.0 (Index 52) (SNMP ifIndex 1279) (Generation 169)
    Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
    Bandwidth: 0
...

```

show interfaces (Channelized E1)

Syntax	<pre>show interfaces ds-fpc/pic/port:ds0channel <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information the specified channelized E1 interface.
Options	<p>ds-fpc/pic/port:ds0channel—Display standard information about the specified channelized E1 interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized E1) on page 483
Output Fields	Table 26 on page 475 lists the output fields for the show interfaces (Channelized E1 and Channelized E1 IQ) command. Output fields are listed in the approximate order in which they appear.

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be G704 , G704-NO-CRC4 , or Unframed . The default is G704 .	All levels
Parent	(Channelized E1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> Interval <i>seconds</i>—Time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. Down-count <i>number</i>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. Up-count <i>number</i>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Settings for link management can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value...xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago) Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for <code>n392dte</code> or <code>n393dce</code> intervals. (See LMI settings). 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone (hour:minute:second ago)</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS Queues	Number of CoS queues configured.	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • Resource errors—Sum of transmit drops. 	extensive

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then either the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
DS1 alarms	<p>E1 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none
DS1 defects		

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
E1 media	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The E1 media-specific error types can be:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • FEBS—Far-end block error • LES—Line error seconds • ES—Errored seconds • BES—Bursty errored seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encodingHDB3—Line encoding used. 	extensive
Interface transmit queues	<p>Names of the transmit queues and their associated statistics for each DSO channel on the Channelized E1 to DSO PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DSx BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified

Table 26: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than one second) for this counter to stabilize.	detail extensive
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
Multilink bundle	(Multilink) Interface name for the multilink bundle, if configured.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized E1)

```
user@host> show interfaces ds-0/1/1:1 extensive
```

```

Physical interface: ds-0/1/1:1, Enabled, Physical link is Down
Interface index: 163, SNMP ifIndex: 37, Generation: 46
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported, 4 maximum usable queues
Last flapped   : 2005-12-28 14:44:06 PST (00:00:30 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:                0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0
DS1 alarms : LOF, LOS
DS1 defects : LOF, LOS
E1 media:
  Seconds      Count  State
SEF            982318      1 Defect Active
BEE              0         0 OK
AIS              0         0 OK
LOF            982318      1 Defect Active
LOS            982318      1 Defect Active
YELLOW          0         0 OK
BPV              1         1
EXZ              1         1
LCV              1         1
PCV              1         2
CS                0         0
FEBE             1         9
LES              1
ES            982318
SES            982318
SEFS            982318
BES              1
UAS              0
Interface transmit queues:
      B/W  WRR      Packets      Bytes      Drops      Errors
Queue0   95   95          0          0          0          0
Queue1    5    5          0          0          0          0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : 31
  Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS1 BERT configuration:
  BERT time period: 0 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^11 - 1, 0.152 and 0.153 (2047 type),
  Pseudorandom (8)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 2 (0x1b)
CoS information:
  CoS transmit queue    Bandwidth    Buffer    Priority    Limit

```

		%	bps	%	usec		
0	best-effort	95	1945600	95	0	low	none
3	network-control	5	102400	5	0	low	none

show interfaces (Channelized OC12 IQ and IQE)

Syntax `show interfaces (type-fpc/pic/port<:channel><:channel><:channel>)
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display status information about the specified channelized OC12 IQ and IQE interface.

Options `type-fpc/pic/port:channel:channel:channel`—Interface type with optional corresponding channel levels.
For SONET mode, the interface type can be one of the following:

- `type-fpc/pic/port`—For the physical channelized OC12 IQ or IQE interface, **type** is `coc12`. For the clear channel, **type** is `so` (for OC12).
- `type-fpc/pic/port:channel`—At the first level of channelization, **type** can be `coc1` (channelized OC1), `ct3` (from `coc1`), `so` (for OC3), or `t3`.
- `type-fpc/pic/port:channel:channel`—At the second level of channelization, **type** can be `ct1` (from `ct3` or `coc1`) or `t1` (from `ct3` or `coc1`).
- `type-fpc/pic/port:channel:channel:channel`—At the third level of channelization, **type** is `ds` (from `ct1`).

For SDH mode, the interface type can be one of the following:

- `type-fpc/pic/port`—For the physical channelized OC12 IQ or IQE interface, **type** is `cstm4`. For the clear channel, **type** is `so` (for SONET/SDH (vc-4-4c)).
- `type-fpc/pic/port:channel`—At the first level of channelization, **type** can be `so` (from `cstm4`) or `cau4` (from `cstm4`).
- `type-fpc/pic/port:channel:channel`—At the second level of channelization, **type** can be `ct3` or `t3` (from or `cau4`).
- `type-fpc/pic/port:channel:channel:channel`—At the third level of channelization, **type** is `ct1` or `t1` (from `ct3`).
- `type-fpc/pic/port:channel:channel:channel:channel`—At the fourth level of channelization, **type** is `ds` (from `ct1`).

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level	view
List of Sample Output	show interfaces extensive (CAU4 on Channelized OC-12 IQ) on page 487 show interfaces extensive (Channelized OC1 on Channelized OC12 IQ) on page 487 show interfaces extensive (Channelized OC12 IQ) (Physical) on page 487 show interfaces extensive (Channelized T1 from Channelized OC12 IQ) on page 488 show interfaces extensive (Channelized T3 on Channelized OC12 IQ) on page 488 show interfaces extensive (CSTM4 on Channelized OC-12 IQ) on page 488 show interfaces extensive (DS0 on Channelized OC12 IQ) on page 488 show interfaces extensive (SONET Interface on Channelized OC12 IQ) on page 488 show interfaces extensive (T1 on Channelized OC12 IQ) on page 489
Output Fields	See the output field table for the show interfaces (Channelized OC3 IQ and IQE) command.

Sample Output

[show interfaces extensive \(CAU4 on Channelized OC-12 IQ\)](#)

```
user@host> show interfaces cau4-0/2/0:1 extensive
Physical interface: cau4-0/2/0:1, Enabled, Physical link is Up
  Interface index: 219, SNMP ifIndex: 139, Generation: 221
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, Parent: cstm4-0/2/0 Interface index 216
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : None
...
```

[show interfaces extensive \(Channelized OC1 on Channelized OC12 IQ\)](#)

```
user@host> show interfaces extensive coc1-4/2/0:7
Physical interface: coc1-4/2/0:7, Enabled, Physical link is Up
  Interface index: 381, SNMP ifIndex: 2524, Generation: 728
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: 51840kbps, Loopback: None,
  FCS: 16, Payload scrambler: Disabled, Parent: coc12-4/2/0 (Index 266)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

[show interfaces extensive \(Channelized OC12 IQ\) \(Physical\)](#)

```
user@host> show interfaces extensive coc12-4/2/0
Physical interface: coc12-4/2/0, Enabled, Physical link is Up
  Interface index: 266, SNMP ifIndex: 1269, Generation: 601
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC12, Loopback: None,
  FCS: 16, Payload scrambler: Disabled, Parent: None Device flags   : Present
Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
...
```

show interfaces extensive (Channelized T1 from Channelized OC12 IQ)

```
user@host> show interfaces extensive ct1-4/2/0:7:1
Physical interface: ct1-4/2/0:4:1, Enabled, Physical link is Up
  Interface index: 305, SNMP ifIndex: 2410, Generation: 640
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16,
  Framing: ESF, Parent: coc1-4/2/0:7 (Index 304)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

show interfaces extensive (Channelized T3 on Channelized OC12 IQ)

```
user@host> show interfaces ct3-0/2/0:1 extensive
Physical interface: ct3-0/2/0:1:1, Enabled, Physical link is Up
  Interface index: 220, SNMP ifIndex: 140, Generation: 222
  Link-level type: Controller, Clocking: Internal, Speed: T3, Loopback: None,
  Mode: C/Bit parity, Parent: cau4-0/2/0:1 Interface index 219
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : None
...
```

show interfaces extensive (CSTM4 on Channelized OC-12 IQ)

```
user@host> show interfaces cstm4-0/2/0 extensive
Physical interface: cstm4-0/2/0, Enabled, Physical link is Up
  Interface index: 216, SNMP ifIndex: 33, Generation: 218
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC12,
  Loopback: None, Parent: None   Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : None
...
```

show interfaces extensive (DS0 on Channelized OC12 IQ)

```
user@host> show interfaces extensive ds-4/2/0:7:1:1
Physical interface: ds-4/2/0:4:1:1, Enabled, Physical link is Up
  Interface index: 306, SNMP ifIndex: 2411, Generation: 641
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps,
  Loopback: None, FCS: 16, Parent: ct1-4/2/0:7:1 (Index 305)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
...
```

show interfaces extensive (SONET Interface on Channelized OC12 IQ)

```
user@host> show interfaces so-0/2/0:1 extensive
Physical interface: so-0/2/0:1, Enabled, Physical link is Up
  Interface index: 750, SNMP ifIndex: 23, Generation: 11709
  Link-level type: Multilink-FR, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, FCS: 16,
  Payload scrambler: Enabled, Parent: coc12-0/2/0 Interface index 749
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives DTE
...
```


show interfaces extensive (T1 on Channelized OC12 IQ)

```
user@host> show interfaces t1-0/2/0:1:1 extensive
Physical interface: t1-0/2/0:1:1:1, Enabled, Physical link is Up
Interface index: 222, SNMP ifIndex: 143, Generation: 226
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/2/0:1:1
Interface index 221
Device flags      : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags       : Keepalives
...
```

show interfaces (Channelized OC12)

Syntax	<pre>show interfaces t3-fpc/pic/port:t3channel <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified channelized OC12 interface.
Options	<p>t3-fpc/pic/port:t3channel—Display standard information about the specified channelized OC12 interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized OC12) on page 490
Output Fields	See the output field table for the show interfaces (Channelized OC3 IQ and IQE) command.

Sample Output

show interfaces extensive (Channelized OC12)

```
user@host> show interfaces t3-0/3/0:0 extensive
Physical interface: t3-0/3/0:0, Enabled, Physical link is Up
  Interface index: 32, SNMP ifIndex: 21, Generation: 2719
  Link-level type: Frame-Relay, PPP, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: T3, Loopback: None, SONET Loopback: None, FCS: 16, Mode: C/Bit parity
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 43186
    Full enquiries sent      : 8515
    Enquiry responses received : 43185
    Full enquiry responses received : 8515
  DCE statistics:
```

```

    Enquiries received           : 0
    Full enquiries received      : 0
    Enquiry responses sent       : 0
    Full enquiry responses sent  : 0
Common statistics:
    Unknown messages received    : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout  : 0
Nonmatching DCE-end DLCIs:
    2
Hold-times      : Up 0 ms, Down 0 ms
Last flapped   : 2002-05-23 16:59:03 PDT (18:23:58 ago)
Statistics last cleared: Never
Traffic statistics:
    Input bytes :           1700           0 bps
    Output bytes :          1714           0 bps
    Input packets:           123           0 pps
    Output packets:          124           0 pps
Input errors:
    Errors: 0, Drops: 0, Framing errors: 1100817, Bucket drops: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS3 alarms : None
SONET alarms : None
DS3 defects : None
SONET defects : None
DS3 media:
    Seconds      Count  State
    AIS          0       0 OK
    LOF          18       1 OK
    LOS          0       0 OK
    IDLE         0       0 OK
    YELLOW       0       0 OK
    BPV          0       0
    EXZ          0       0
    LCV          0       0
    PCV          36     122399
    CCV          72     91948
    LES          0
    PES          18
    PSES         18
    CES          18
    CSES         18
    SEFS         18
    UAS          0
HDLCD configuration:
    Policing bucket: Disabled
    Shaping bucket : Disabled
    Giant threshold: 4484, Runt threshold: 3
DSU configuration:
    Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
    FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Algorithm: Unknown (0), Induced error rate: 10e-0
Interface transmit queues:
    B/W  WRR      Packets      Bytes      Drops      Errors
Queue0  95  95         0         0         0         0
Queue1   5   5        529       6348        0         0

```

```

SONET PHY:                Seconds      Count  State
  PLL Lock                  0           0  OK
  PHY Light                 20           1  OK
SONET section:
  BIP-B1                    0           0
  SEF                      20           1  OK
  LOS                      20           1  OK
  LOF                      20           1  OK
  ES-S                     20
  SES-S                    20
  SEFS-S                   20
SONET line:
  BIP-B2                    0           0
  REI-L                    0           0
  RDI-L                    0           0  OK
  AIS-L                    0           0  OK
  BERR-SF                  18           1  OK
  BERR-SD                   2           1  OK
  ES-L                     20
  SES-L                    20
  UAS-L                    10
  ES-LFE                   0
  SES-LFE                  0
  UAS-LFE                  0
SONET path:
  BIP-B3                    0           0
  REI-P                    0           0
  LOP-P                    20           1  OK
  AIS-P                    0           0  OK
  RDI-P                    0           0  OK
  UNEQ-P                   0           0  OK
  PLM-P                    20           1  OK
  ES-P                     20
  SES-P                    20
  UAS-P                    10
  ES-PFE                   0
  SES-PFE                  0
  UAS-PFE                  0
Received SONET overhead:
  F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0x04, C2(cmp) : 0x04, F2      : 0x00
  Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00, V5      : 0x00
  V5(cmp) : 0x00
Transmitted SONET overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0x04, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, V5      : 0x00
Received path trace: t3-0/3/0:0
  74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 0d 0a  t3-0/3/0:0:.....
Transmitted path trace: t3-0/3/0:0
  74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 00 00  t3-0/3/0:0:.....
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
  0 best-effort           95      42499200 95         0      low  none
  3 network-control        5       2236800  5         0      low  none
Logical interface t3-0/3/0:0.0 (Index 11) (SNMP ifIndex 268) (Generation 499)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 578, Route table: 0

```

```
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 22.22.22.1, Local: 22.22.22.2, Broadcast: Unspecified,
Generation: 98
DLCI 100
  Flags: Active, Dce-configured
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :2 Inactive DLCI : 0
```

show interfaces (Channelized OC3 IQ and IQE)

Syntax	<code>show interfaces (<i>type-fpc/pic/port</i> <:<i>channel</i>><:<i>channel</i>><:<i>channel</i>>) <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized OC3 IQ or IQE interface.
Options	<p><i>type-fpc/pic/port:channel:channel:channel</i>—Interface type with optional corresponding channel levels. The interface type can be one of the following:</p> <ul style="list-style-type: none">• <i>type-fpc/pic/port</i>—For the physical interface, <i>type</i> is coc3. For the clear channel, <i>type</i> is so (for OC3).• <i>type-fpc/pic/port:channel</i>—At the first level of channelization, <i>type</i> can be coc1 (channelized OC1), ct3 (from coc1), or t3 (from coc1).• <i>type-fpc/pic/port:channel:channel</i>—At the second level of channelization, <i>type</i> can be ct1 (from coc1 or ct3) or t1 (from coc1 or ct3).• <i>type-fpc/pic/port:channel:channel:channel</i>—At the third level of channelization, <i>type</i> can be ds (from ct1). <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized OC3 IQ) (Physical) on page 508 show interfaces extensive (Channelized OC1 on Channelized OC3 IQ) on page 509 show interfaces extensive (Channelized T1 on Channelized OC3 IQ) on page 510 show interfaces extensive (DSO on Channelized OC3 IQ) on page 511
Output Fields	Table 27 on page 495 lists the output fields for the show interfaces (all Channelized OC interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 27: Channelized OC show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Description	Interface description.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	SONET/SDH reference clock source. It can be Internal or External . Clocking is configured and displayed only for channel 0.	All levels
Framing mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
SONET loopback	Whether loopback is enabled on a SONET/SDH interface, and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16-bit .	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
ANSI or ITU LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is (ANSI or ITU) LMI settings: <i>value</i>, <i>value...</i> <i>nn</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1–255) • n392dce—DCE error threshold (1–10) • n392dte—DTE error threshold (1–10) • n393dce—DCE monitored event count (1–10) • n393dte—DTE monitored event count (1–10) • t391dte—DTE polling timer (5–30 seconds) • t392dce—DCE polling verification timer (5–30 seconds) 	All levels
LMI statistics	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last sent <i>hh:mm:ss</i> ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last sent <i>hh:mm:ss</i> ago). 	detail extensive
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none
Common statistics	<p>(Frame Relay) Statistics about messages sent between the DTE and the DCE:</p> <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Nonmatching DCE-end DLCIs	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hh:mm:ss timezone year-month-day (hh:mm:ss ago)</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS Queues	Number of CoS queues configured.	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
DS1 alarms DS1 defects	<p>Elor T1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. See the following list for all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
T1 media	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The T1 or E1 media-specific error types are:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • FEBE—Far-end block error (E1 only) • LES—Line error seconds • ES—Errored seconds • BES—Bit error seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops caused by traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning. • HS link FIFO overflows—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces. • Resource errors—Sum of transmit drops. 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • HS link FIFO underflows—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Active alarms	Defects that can prevent the interface from passing packets:	detail extensive
Active defects	<ul style="list-style-type: none"> • None—There are no active defects or alarms. • LOF—Loss of frame. 	
SONET alarms	Media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	All levels
SONET defects	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY , SONET section , SONET line , and SONET path .	

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET vt	<p>SONET virtual-tributary (VT) alarms and defects:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-V—Remote error indication (near-end VT) • LOP-V—Loss of pointer (near-end VT) • AIS-V—Alarm indication signal (near-end VT) • RDI-V—Remote defect indication (near-end VT) • UNEQ-V—Unequipped (near-end VT) • PLM-V—Payload label mismatch (near-end VT) • ES-V—Errored seconds (near-end VT) • SES-V—Severely errored seconds (near-end VT) • UAS-V—Unavailable seconds (near-end VT) • ES-VFE—Errored seconds (far-end VT) • SES-VFE—Severely errored seconds (far-end VT) • UAS-VFE—Unavailable seconds (far-end VT) 	extensive
SONET PHY	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOS—Loss of signal • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Received SONET overhead	Values of the received and transmitted SONET/SDH overhead:	extensive
Transmitted SONET overhead	<p>F1—Section user channel byte. This byte is set aside for the purposes of users.</p> <p>S1—Synchronization Status (S1). The S1 byte is located in the first STS-1 of an STS-N. Bits 5 through 8 convey the synchronization status of the network element.</p> <p>Z3 and Z4—Path overhead.</p> <p>V5—Virtual Tributary (VT) path overhead byte.</p>	
SDH alarms	SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.	All levels
SDH defects	<p>NOTE: For controller based SONET PICs, the SDH alarms and SDH defects output in the show interface coc3 extensive command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
DS3 media	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—(DS3 only) Pulse code violation • CCV—(DS3 only) C-bit coding violation • FEBE—(DS3 only) Far-end block error • LES—Line error seconds • PES—(DS3 only) P-bit errored seconds • PSES—(DS3 only) P-bit errored seconds (section) • CES—(DS3 only) C-bit errored seconds • CSES—(DS3 only) C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used. It is always HDB3. • Byte encoding—(T1 only) Byte encoding used: Nx64K or Nx56K. • Line encoding—Line encoding used. For T1, the value can be B8ZS or AMI. For E1, the value is HDB3. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive
Interface transmit queues	<p>Name of the transmit queues and their associated statistics for each DS3 channel on the Channelized OC12 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive
DSU configuration	<p>Information about the DSU configuration. The last three lines (Bit count, Error bit count, and LOS information) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> • Compatibility mode—CSU/DSU compatibility mode: None, Larscom, Kentrox, or Digital-Link. • Scrambling—Payload scrambling. It can be Enabled or Disabled. • Subrate—Configured subrate setting. Applies only when Digital-Link compatibility mode is used. It can be Disabled or display units in kbps. • FEAC loopback—(T3) Whether a far-end alarm and control (FEAC) loopback is Active or Inactive. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal. • Response—Whether the FEAC signal is Enabled or Disabled. • Count—Number of FEAC loopbacks. 	extensive
BERT configuration	<p>(DS interfaces) BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize. <ul style="list-style-type: none"> • Input rate—Rate of bits and packets received on the interface. • Output rate—Rate of bits and packets transmitted on the interface. 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive

Table 27: Channelized OC show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
Multilink bundle	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Addresses, Flags	Information about the address flags. Possible values are described in the "Addresses Flags" section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized OC3 IQ) (Physical)

```

user@host> show interfaces extensive coc3-0/0/0
Physical interface: coc3-0/0/0, Enabled, Physical link is Down
  Interface index: 128, SNMP ifIndex: 22, Generation: 11
  Description: pink coc3-0/0/0

```

```

Link-level type: Controller, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, Parent: None
Device flags : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : None
Hold-times : Up 0 ms, Down 0 ms
CoS queues : 4 supported
Last flapped : 2005-01-27 16:39:21 PST (1w0d 22:09 ago)
Statistics last cleared: Never
SONET alarms : PLL, LOS
SONET defects : PLL, LOF, LOS, SEF, AIS-L
SONET PHY:
  Seconds Count State
  PLL Lock 681767 1 PLL Lock Error
  PHY Light 0 0 OK
SONET section:
  BIP-B1 0 0
  SEF 681767 1 Defect Active
  LOS 681767 1 Defect Active
  LOF 681767 1 Defect Active
  ES-S 681767
  SES-S 681767
  SEFS-S 681767
SONET line:
  BIP-B2 0 0
  REI-L 0 0
  RDI-L 0 0 OK
  AIS-L 681767 1 Defect Active
  BERR-SF 0 0 OK
  BERR-SD 0 0 OK
  ES-L 681767
  SES-L 681767
  UAS-L 681757
  ES-LFE 0
  SES-LFE 0
  UAS-LFE 0
Received SONET overhead:
  F1 : 0x00, J0 : 0x00, K1 : 0xff, K2 : 0xff
  S1 : 0xff
Transmitted SONET overhead:
  F1 : 0x00, J0 : 0x01, K1 : 0x00, K2 : 0x00
  S1 : 0x00

```

show interfaces extensive (Channelized OC1 on Channelized OC3 IQ)

```

user@host> show interfaces extensive coc1-0/0/0:1
Physical interface: coc1-0/0/0:1, Enabled, Physical link is Down
Interface index: 133, SNMP ifIndex: 27, Generation: 16
Link-level type: Controller, Clocking: Internal, SONET mode, Speed: 51840kbps,

Loopback: None, Parent: coc3-0/0/0
Interface index 128
Device flags : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : None
Hold-times : Up 0 ms, Down 0 ms
CoS queues : 4 supported
Last flapped : 2005-02-04 14:51:07 PST (00:00:35 ago)
Statistics last cleared: Never
SONET alarms : None
SONET defects : AIS-P
SONET path:

```

```

BIP-B3                0          0
REI-P                 0          0
LOP-P                 0          0 OK
AIS-P                 36          1 Defect Active
RDI-P                 0          0 OK
UNEQ-P                0          0 OK
PLM-P                 0          0 OK
ES-P                  36
SES-P                  36
UAS-P                  26
ES-PFE                 0
SES-PFE                 0
UAS-PFE                 0
Received SONET overhead:
  C2      : 0xff, C2(cmp) : 0x01, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0x01, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: router-1 coc1-0/0/0:1
6b 61 76 65 72 69 20 63 6f 63 31 2d 30 2f 30 2f   router-1 coc1-0/0/0:1
30 3a 31 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (Channelized T1 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ct1-0/0/0:1:1
Physical interface: ct1-0/0/0:1:1, Enabled, Physical link is Down
Interface index: 134, SNMP ifIndex: 62, Generation: 17
Link-level type: Controller, Clocking: Internal, Speed: T1, Loopback: None,
Framing: ESF, Parent: coc1-0/0/0:1 Interface index 133
Device flags   : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : 2005-02-04 14:54:35 PST (00:00:18 ago)
Statistics last cleared: Never
DS1 alarms     : None
DS1 defects    : AIS, LOF
T1 media:
  Seconds      Count  State
SEF            1       1 OK
BEE            1       1 OK
AIS           18       1 Defect Active
LOF           18       1 Defect Active
LOS            0       0 OK
YELLOW         0       0 OK
BPV            0       0
EXZ            0       0
LCV            0       0
PCV            0       0
CS             0       0
LES           18
ES            18

```

```

SES                      18
SEFS                     18
BES                      0
UAS                      14
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms   : None
SONET defects  : None
SONET vt:
  BIP-BIP2      0          0
  REI-V         0          0
  LOP-V         0          0 OK
  AIS-V        19          1 Defect Active
  RDI-V        19          1 Defect Active
  UNEQ-V       0          0 OK
  PLM-V        19          1 Defect Active
  ES-V         19
  SES-V        19
  UAS-V         9
  ES-VFE       0
  SES-VFE      0
  UAS-VFE      0
Received SONET overhead:
  V5           : 0x07, V5(cmp) : 0x02
Transmitted SONET overhead:
  V5           : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (DS0 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ds-0/0/0:1:1
Physical interface: ds-0/0/0:1:1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 63, Generation: 18
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 320kbps,
Loopback: None, FCS: 16, Parent: ct1-0/0/0:1:1 Interface index 134
Device flags   : Present Running
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          0          0 bps
Output bytes  :          0          0 bps
Input packets :          0          0 pps
Output packets:         0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort              0              0              0

1 expedited-fo             0              0              0

```

2 assured-forw	0	0	0
3 network-cont	0	0	0

HDLC configuration:

Giant threshold: 1514, Runt threshold: 2

Timeslots : 1-5

Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
Start end flag: shared

DS0 BERT configuration:

BERT time period: 10 seconds, Elapsed: 0 seconds

Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)

Packet Forwarding Engine configuration:

Destination slot: 0, PLP byte: 4 (0x00)

show interfaces (Channelized STM1 IQ)

Syntax	<code>show interfaces (type-fpc/pic/port <:channel><:channel>)</code> <code><brief detail extensive terse></code> <code><descriptions></code> <code><media></code> <code><snmp-index snmp-index></code> <code><statistics></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized STM1 IQ interface.
Options	<p>type-fpc/pic/port:channel:channel—Interface type with optional corresponding channel levels. The interface type can be one of the following types:</p> <ul style="list-style-type: none"> • type-fpc/pic/port:channel—For the physical channelized STM1 IQ interface, type is cstm1. For the clear channel, type is so. For channelization, the STM1 IQ interface must be converted to interface type cau4. • type-fpc/pic/port:channel—At the first level of channelization, type can be ce1 or e1 (clear channel or fractional channel from cau4). • type-fpc/pic/port:channel:channel—At the second level of channelization, type is ds (from ce1). <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces (Channelized STM1 IQ) (Physical) on page 513 show interfaces (Channelized AU-4) (Physical) on page 514 show interfaces (Channelized E1) (Physical) on page 514 show interfaces (DS) on page 515
Output Fields	See the output field table for the show interfaces (Channelized STM1) command.

Sample Output

show interfaces (Channelized STM1 IQ) (Physical)

```
user@host> show interfaces cstm1-0/0/0
```

```

Physical interface: cstm1-0/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 35
Link-level type: Frame-relay, Controller, Clocking: Internal, SDH mode,
Speed: OC3, Loopback: None, Parent: None Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent : 43186
  Full enquiries sent : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received : 0
  Full enquiries received : 0
  Enquiry responses sent : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Last flapped : 2003-02-06 15:01:56 PST (07:15:06 ago)
...

```

show interfaces (Channelized AU-4) (Physical)

```

user@host> show interfaces cau4-0/0/0
Physical interface: cau4-0/0/0, Enabled, Physical link is Up
Interface index: 147, SNMP ifIndex: 36
Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, Parent: cstm1-0/0/0 Interface index 146
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : None
Last flapped : 2003-02-06 19:36:31 PST (02:40:42 ago)
SDH alarms : None
SDH defects : None
...

```

show interfaces (Channelized E1) (Physical)

```

user@host> show interfaces ce1-0/0/0:11
Physical interface: ce1-0/0/0:11, Enabled, Physical link is Up
Interface index: 169, SNMP ifIndex: 288
Link-level type: Frame-relay, Controller, Clocking: Internal, Speed: E1,
Loopback: None, Framing: G704, Parent: cau4-0/0/0 Interface index 147
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent : 43186
  Full enquiries sent : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:

```

```

    Enquiries received           : 0
    Full enquiries received      : 0
    Enquiry responses sent       : 0
    Full enquiry responses sent   : 0
Common statistics:
    Unknown messages received    : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout  : 0
Nonmatching DCE-end DLCIs:
    2
Last flapped   : 2003-02-06 22:05:23 PST (00:13:45 ago)
DS1  alarms    : None
DS1  defects    : None
SDH   alarms    : None
SDH   defects    : None
...

```

show interfaces (DS)

```

user@host> show interfaces ds-0/0/0:11:1
Physical interface: ds-0/0/0:11:1, Enabled, Physical link is Up
  Interface index: 170, SNMP ifIndex: 289
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: Illegal, FCS: 16, Parent: ce1-0/0/0:11 Interface index 169
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  CoS Queues: 8 maximum usable queues, 4 in use
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Conf-req-sent
  Egress queues: 8 supported, 4 in use
...
Logical interface ds-0/0/0:11:1.0 (Index 77) (SNMP ifIndex 290)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.134.1.0/30, Local: 10.134.1.1
DLCI 100
  Flags: Active, Dce-configured
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
...

```

show interfaces (Channelized STM1)

Syntax	<pre>show interfaces e1-fpc/pic/port:elchannel <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized STM1 interface.
Options	<p>e1-fpc/pic/port:elchannel—Display standard status information about the specified channelized STM1 interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized STM1, SDH) on page 527
Output Fields	Table 28 on page 516 lists the output fields for the show interfaces (all Channelized STM1 interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 28: Channelized STM1 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the "Enabled Field" section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be G704 , G704-NO-CRC4 , or Unframed . The default is G704 .	All levels
Parent	(Channelized STM1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> intervalseconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
ANSI LMI settings or ITU LMI settings	<p>(Frame Relay) Local Management Interface settings. The format is (ANSI or ITU) LMI settings: <i>value, value...xx</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1- 255) n392dce—DCE error threshold (1-10) n392dte—DTE error threshold (1-10) n393dce—DCE monitored event count (1-10) n393dte—DTE monitored event count (1-10) t391dte—DTE polling timer (5-30 seconds) t392dce—DCE polling verification timer (5-30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last seen <i>hh:mm:ss</i> ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last seen <i>hh:mm:ss</i> ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning. 	extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. 	extensive
DS1 alarms DS1 defects	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p> <p>NOTE: For controller-based SONET PICs, the SDH alarms and SDH defects output in the show interface cstm1 extensive command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	All levels

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
E1 media	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Error types can be:</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal • BEE—Bit error • BES—Bit error seconds • BPV—Bipolar violation • CS—Carrier state • ES—Errored seconds • EXZ—Excessive zeros • FEBE—Far-end block error • LCV—Line code violation • LES—Line error seconds • LOF—Loss of frame • LOS—Loss of signal • PCV—Pulse code violation • SEF—Severely errored framing • SEFS-S—Severely errored framing seconds (section) • SES—Severely errored seconds • UAS—Unavailable seconds • YELLOW—Errors at the remote site receiver 	extensive
Interface transmit queues	<p>Names of the transmit queues and their associated statistics for each E1 channel on the Channelized STM1-to-E1 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used. It is always HDB3. 	extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DS1 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH tu	<p>Active alarms and defects, plus counts of specific SDH tributary unit (TU) errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • TU-BIP-2—Bit interleaved parity for SONET line overhead • TU-FEBE—(near-end TU) • TU-LOP—Loss of pointer (near-end TU) • TU-AIS—Alarm indication signal (near-end TU) • TU-FERF—(near-end TU) • TU-UNEQ—Unequipped (near-end TU) • TU-PLM—Payload label mismatch (near-end TU) • TU-ES—Errored seconds (near-end TU) • TU-SES—Severely errored seconds (near-end TU) • TU-UAS—Unavailable seconds (near-end TU) • TU-ES-FE—Errored seconds (far-end TU) • TU-SES-FE—Severely errored seconds (far-end TU) • TU-UAS-FE—Unavailable seconds (far-end TU) 	extensive
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i> signal. • Z3 and Z4—Allocated for future use. 	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none

Table 28: Channelized STM1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized STM1, SDH)

```

user@host> show interfaces e1-1/0/0:1 extensive
Physical interface: e1-1/0/0:1, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 285, Generation: 2915
  Link-level type: Frame-relay, MTU: 1504, SDH mode, Speed: E1, Loopback: None,
  FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 43186
    Full enquiries sent      : 8515
    Enquiry responses received : 43185
    Full enquiry responses received : 8515
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received  : 0
    Enquiry responses sent   : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 0
  Nonmatching DCE-end DLCIs:
    2
  Hold-times      : Up 0 ms, Down 0 ms

```

```

Last flapped   : 2002-05-23 17:02:59 PDT (17:23:45 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :           592           48 bps
  Output bytes  :           644           48 bps
  Input packets :            46            0 pps
  Output packets:            46            0 pps
Input errors:
  Errors: 0, Drops: 9, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 11, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
DS1 alarms   : None
DS1 defects  : None
SDH alarms   : None
SDH defects  : None
E1 media:
  Seconds      Count  State
SEF            0        0 OK
BEE            0        0 OK
AIS           124        1 OK
LOF           124        1 OK
LOS            0        0 OK
YELLOW         0        0 OK
BPV            0         0
EXZ            0         0
LCV            0         0
PCV            0         0
CS             0         0
FEBE           0         0
LES           124
ES            125
SES           124
SEFS          124
BES            0
UAS            37
Interface transmit queues:
      B/W  WRR  Packets      Bytes      Drops      Errors
Queue0   95  95         0         0         0         0
Queue1    5   5       529       6348         0         0
HDLC configuration:
  Giant threshold: 0, Runt threshold: 0
  Timeslots      : All active
  Line encoding: HDB3
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SDH PHY:
  Seconds      Count  State
PLL Lock       0        0 OK
PHY Light      0        0 OK
SDH regenerator section:
  RS-BIP8       0        0
  OOF           125        1 OK
  LOS           125        1 OK
  LOF           125        1 OK
  RS-ES         125
  RS-SES        125
  RS-SEFS       125
SDH multiplex section:
  MS-BIP24      0        0
  MS-FEBE       0        0

```



```

MS-FERF          0          0 OK
MS-AIS           125        1 OK
BERR-SF          0          0 OK
BERR-SD          0          0 OK
MS-ES            125
MS-SES           125
MS-UAS           115
MS-ES-FE         0
MS-SES-FE        0
MS-UAS-FE        0
SDH path:
HP-BIP8          0          0
HP-FEBE          0          0
HP-LOP           0          0 OK
HP-AIS           125        1 OK
HP-FERF          0          0 OK
HP-UNEQ          0          0 OK
HP-PLM           125        1 OK
HP-ES            125
HP-SES           125
HP-UAS           115
HP-ES-FE         0
HP-SES-FE        0
HP-UAS-FE        0
SDH tu:
TU-BIP2          0          0
TU-FEBE          124        1
TU-LOP           0          0 OK
TU-AIS           124        1 OK
TU-FERF          124        1 OK
TU-UNEQ          0          0 OK
TU-PLM           124        1 OK
TU-ES            125
TU-SES           125
TU-UAS           115
TU-ES-FE         0
TU-SES-FE        0
TU-UAS-FE        0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x02, C2(cmp) : 0x02, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00, V5      : 0x02
V5(cmp) : 0x02
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x02, F2      : 0x00, Z3      : 0x00
Z4      : 0x00, V5      : 0x02
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Packet Forwarding Engine configuration:
Destination slot: 1, PLP byte: 2 (0x07)
CoS information:
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
  0 best-effort            95      1945600  95      0      low  none
  3 network-control        5       102400   5      0      low  none
Logical interface e1-1/0/0:1.0 (Index 10) (SNMP ifIndex 369) (Generation 496)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 575, Route table: 0

```

```
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 19.19.19.3, Local: 19.19.19.4, Broadcast: Unspecified,
  Generation: 975
DLCI 100
  Flags: Active, Dce-configured
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
DLCI statistics:
  Active DLCI :2 Inactive DLCI : 0
```

show interfaces (Channelized T1 IQ)

Syntax	<pre>show interfaces (ct1-fpc/pic/port type-fpc/pic/port<:channel><:channel>) <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced in Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized T1 IQ interface.
Options	<p>type-fpc/pic/port:channel—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> type-fpc/pic/port—For the physical channelized T1 IQ interface, type is ct1. type-fpc/pic/port:channel—For the clear channel, type is t1. At the first level of channelization, type can be ct1 or t1. type-fpc/pic/port:channel:channel—At the second level of channelization, type can be ds. <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (CT1) on page 539</p> <p>show interfaces extensive (T1) on page 540</p> <p>show interfaces extensive (DS0) on page 541</p>
Output Fields	Table 29 on page 531 lists the output fields for the show interfaces (Channelized T1 IQ and T3 IQ interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be ESF or SF . The default is ESF .	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	Configured settings for keepalives. <ul style="list-style-type: none"> interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communication equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS queues	Number of CoS queues configured.	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Counter increments when the software could not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
DS1 alarms DS1 defects	<p>Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
T1 media	<p>Counts of T1 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal • BEE—Bit error event • BES—Bit error seconds • BPV—Bipolar violation • CS—Carrier state • ES—Errored seconds • EXZ—Excessive zeros • FEBE—Far-end block error • LCV—Line code violation • LES—Line error seconds • LOF—Loss of frame • LOS—Loss of signal • PCV—Pulse code violation • SEF—Severely errored framing • SEFS—Severely errored framing seconds (section) • SES—Severely errored seconds • UAS—Unavailable seconds • YELLOW—Errors at the remote site receiver 	extensive
Line encoding	Line encoding used: B8ZS or AMI .	All levels
Buildout	Buildout setting.	All levels
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used: B8ZS or AMI. • Byte encoding—Byte encoding used: Nx64K or Nx56K. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle Flag—Idle cycle flags. • Start end Flag—Start and end flag. 	extensive

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DSO or DS1 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none

Table 29: Channelized T1 IQ and T3 IQ show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
DLCI	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags, Total down time, Last down, and Traffic statistics. Flags is one or more of the following:</p> <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (CT1)

```

user@host> show interfaces extensive ct1-0/1/1
Physical interface: ct1-0/1/1, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 32, Generation: 28
  Link-level type: Controller, Clocking: Internal, Speed: T1,
  Loopback: None, Framing: ESF, Parent: None
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : 2005-08-17 11:47:09 PDT (1d 03:38 ago)
Statistics last cleared: 2005-08-18 15:25:37 PDT (00:00:27 ago)
DS1 alarms     : None
DS1 defects    : None
T1 media:
      Seconds    Count  State
SEF           0      0  OK
BEE           0      0  OK
AIS           0      0  OK
LOF           0      0  OK
LOS           0      0  OK
YELLOW        0      0  OK
BPV           0      0
EXZ           0      0
LCV           0      0
PCV           0      0
CS            0      0
LES           0
ES            0
SES           0
SEFS          0
BES           0

```

```

UAS                                0
Line encoding: B8ZS
Buildout       : 0 to 132 feet
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (T1)

```

user@host> show interfaces extensive t1-0/2/0
Physical interface: t1-0/2/0, Enabled, Physical link is Up
  Interface index: 161, SNMP ifIndex: 33, Generation: 61
  Link-level type: PPP, MTU: 1504, Speed: T1, Loopback: None, FCS: 16,
  Parent: ct1-0/2/0 Interface index 148
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout : 0
Nonmatching DCE-end DLCIs:
  2
Hold-times   : Up 0 ms, Down 0 ms
CoS queues   : 4 supported
Last flapped : 2005-09-07 15:43:47 PDT (00:00:06 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0          0 bps
  Output bytes  : 14         0 bps
  Input packets : 0          0 pps
  Output packets: 1          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets  Dropped packets
  0 best-effort      0          0          0
  1 expedited-fo     0          0          0
  2 assured-forw     0          0          0
  3 network-cont     1          1          0
DS1 alarms   : None

```

```

DS1  defects  : None
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 2
  Timeslots      : All active
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag:
  flags, Start end flag: shared
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

```

show interfaces extensive (DS0)

```

user@host> show interfaces extensive ds-0/1/0:0
Physical interface: ds-0/1/0:1, Enabled, Physical link is Up
  Interface index: 157, SNMP ifIndex: 52, Generation: 46
  Link-level type: Frame-Relay, PPP, MTU: 1504, Clocking: Internal,
  Speed: 640kbps, Loopback: None, FCS:16,
  Parent: ct1-0/1/0 Interface index 143
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Hold-times      : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 8 (last seen 00:00:12 ago)
  Output: 8 (last sent 00:00:07 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues   : 4 supported
Last flapped : 2005-08-18 15:23:46 PDT (00:03:17 ago)
Statistics last cleared: 2005-08-18 15:25:37 PDT (00:01:26 ago)
Traffic statistics:
  Input bytes  : 840 0 bps
  Output bytes : 912 0 bps
  Input packets: 25 0 pps
  Output packets: 26 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0,

```

```
L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort      0                0                0
1 expedited-fo     0                0                0
2 assured-forw     0                0                0
3 network-cont     26               26               0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 2
  Timeslots       : 1-10
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS0 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)
Logical interface ds-0/1/0:1.0 (Index 67) (SNMP ifIndex 53) (Generation 11)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 26, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 11.11.11.0/30, Local: 11.11.11.2, Broadcast: 11.11.11.3,
    Generation: 39
DLCI 100
  Flags: Active, Dce-configured
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
DLCI statistics:
  Active DLCI :2 Inactive DLCI : 0
...
```

show interfaces (Channelized T3 IQ)

Syntax	<pre>show interfaces (ct3-fpc/pic/port type-fpc/pic/port<:channel><:channel>) <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized T3 IQ interface.
Options	<p>type-fpc/pic/port:channel—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> • type-fpc/pic/port—For the physical channelized T3 IQ interface, type is ct3. • type-fpc/pic/port:channel—For the clear channel, type is t3. At the first level of channelization, type can be ct1 or t1. • type-fpc/pic/port:channel:channel—At the second level of channelization, type is ds. <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (Channelized T3 IQ) (Physical) on page 544</p> <p>show interfaces extensive (Channelized T1 on Channelized T3 IQ) on page 544</p> <p>show interfaces extensive (DSO on Channelized T3 IQ) on page 544</p>
Output Fields	See the output field table for the show interfaces (Channelized T1 IQ) command.

Sample Output

show interfaces extensive (Channelized T3 IQ) (Physical)

```
user@host> show interfaces extensive ct3-0/0/1
Physical interface: ct3-0/0/1, Enabled, Physical link is Up
  Interface index: 30, SNMP ifIndex: 317, Generation: 29
  Link-level type: Controller, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

show interfaces extensive (Channelized T1 on Channelized T3 IQ)

```
user@host> show interfaces extensive ct1-0/0/1:2
Physical interface: ct1-0/0/1:2, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 1505, Generation: 174
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/0/1 (Index 32)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

show interfaces extensive (DSO on Channelized T3 IQ)

```
user@host> show interfaces extensive ds-0/0/1:2:1
Physical interface: ds-0/0/1:2:1, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 1563, Generation: 175
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Parent: ct1-0/0/1:2(Index 175)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
...
```


show interfaces (Discard)

Syntax	<pre>show interfaces dsc <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified discard interface.
Options	<p>dsc—Display standard information about the specified discard interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—This option is not relevant for the discard interface and always shows a value of 0.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) This option is not relevant for the discard interface and always shows a value of 0.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show interfaces (ATM) on page 406 • show interfaces routing
List of Sample Output	show interfaces dsc on page 548 show interfaces dsc brief on page 548 show interfaces dsc detail on page 548 show interfaces dsc extensive on page 549
Output Fields	<p>Table 30 on page 545 lists the output fields for the show interfaces (discard) command. Output fields are listed in the approximate order in which they appear.</p>

Table 30: Discard show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface, whether the interface is enabled, and the state of the physical interface: Up or Down .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none

Table 30: Discard show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	All levels
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link type	Encapsulation being used on the physical interface.	detail extensive
Link flags	Information about the link. Possible values are described in the "Link Flags" section under <i>Common Output Fields Description</i> .	detail extensive
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address, Hardware address	Configured MAC address and hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 30: Discard show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> • Errors—Sum of incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	detail extensive
Output errors	<p>(Extensive only) Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels

Table 30: Discard show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	All levels
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive

Sample Output

show interfaces dsc

```

user@host> show interfaces dsc
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5
  Type: Software-Pseudo, MTU: Unlimited
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Last flapped   : Never
    Input packets : 0
    Output packets: 0

  Logical interface dsc.0 (Index 66) (SNMP ifIndex 235)
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    Protocol inet, MTU: Unlimited
    Flags: None

```

show interfaces dsc brief

```

user@host> show interfaces dsc brief
Physical interface: dsc, Enabled, Physical link is Up
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
  Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

  Logical interface dsc.0
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    inet

```

show interfaces dsc detail

```

user@host> show interfaces dsc detail
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
  Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Unspecified

```

```

Link flags      : None
Physical info   : Unspecified
Hold-times     : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0

Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
  Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0
  Flags: None

```

show interfaces dsc extensive

```

user@host> show interfaces dsc extensive
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
Unspecified, Speed: Unspecified
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type      : Unspecified
Link flags     : None
Physical info   : Unspecified
Hold-times     : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0
Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
  Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0

```

show interfaces (Fast Ethernet)

Syntax	<pre>show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified Fast Ethernet interface.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the interface type is <i>fe-fpc/pic/port</i>. On the J Series routers, the interface type is <i>fe-pim/O/port</i>.</p> <p><i>brief detail extensive terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (Fast Ethernet) on page 563</p> <p>show interfaces brief (Fast Ethernet) on page 564</p> <p>show interfaces detail (Fast Ethernet) on page 564</p> <p>show interfaces extensive (Fast Ethernet) on page 564</p>
Output Fields	<p>Table 31 on page 550 lists the output fields for the show interfaces Fast Ethernet command. Output fields are listed in the approximate order in which they appear.</p>

Table 31: show interfaces Fast Ethernet Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Link-mode	Type of link connection configured for the physical interface: Full-duplex or Half-duplex	extensive
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the "Links Flags" section under <i>Common Output Fields Description</i> .	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(GigabitEthernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command.</p>	detail extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
OTN FEC statistics	<p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	
PCS statistics	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> • Bit errors—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode. • Errored blocks—Loss of block lock. The number of errored blocks when PCS receiver is operating in normal mode. 	detail extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other routing device manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
VLAN-Tag	Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags. <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Demux:	IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following: <ul style="list-style-type: none"> Source Family Inet Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the "Protocol Field" section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> Input bytes, Output bytes—Number of bytes received and transmitted on the interface set Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the routing device.	extensive
Transit statistics	Number and rate of bytes and packets transiting the switch. <p>NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.</p>	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the "Family Flags" section under <i>Common Output Fields Description</i> .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none

Table 31: show interfaces Fast Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about address flag (possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i>).	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:44 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Active alarms  : None
  Active defects : None
  Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198)
    Flags: SNMP-Traps Encapsulation: ENET2

```

```
Protocol inet, MTU: 1500
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255
```

show interfaces brief (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 brief
Physical interface: fe-0/0/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Logical interface fe-0/0/0.0
Flags: SNMP-Traps Encapsulation: ENET2
inet 10.10.10.1/24
```

show interfaces detail (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 detail
Physical interface: fe-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 22, Generation: 5391
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
Last flapped : 2006-01-20 14:50:58 PST (2w4d 00:45 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 42 0 bps
Input packets: 0 0 pps
Output packets: 1 0 pps
Active alarms : None
Active defects : None
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 105, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255,
Generation: 136
```

show interfaces extensive (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 extensive
Physical interface: fe-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 22, Generation: 5391
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed:
100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:05:85:02:38:00, Hardware address: 00:05:85:02:38:00
Last flapped : 2006-01-20 14:50:58 PST (2w4d 00:46 ago)
Statistics last cleared: Never
```

```

Traffic statistics:
Input bytes :          0          0 bps
Output bytes :         42          0 bps
Input packets:         0          0 pps
Output packets:        1          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Active alarms : None
Active defects : None
MAC statistics:

```

	Receive	Transmit
Total octets	0	64
Total packets	0	1
Unicast packets	0	0
Broadcast packets	0	1
Multicast packets	0	0
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	
Jabber frames	0	
Fragment frames	0	
VLAN tagged frames	0	
Code violations	0	

```

Filter statistics:
Input packet count      0
Input packet rejects    0
Input DA rejects        0
Input SA rejects        0
Output packet count      1
Output packet pad count  0
Output packet error count 0
CAM destination filters: 1, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link partner: Full-duplex, Flow control: None, Remote fault: Ok
Local resolution:
Packet Forwarding Engine configuration:
Destination slot: 0
CoS information:

```

	Bandwidth		Buffer	Priority	Limit		
	%		bps	%	usec		
0 best-effort	95	950000000	95	0	low	none	
3 network-control	5	50000000	5	0	low	none	

```

Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 105, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.10.10/24, Local: 10.10.10.1, Broadcast: 10.10.10.255,
Generation: 136

```

show interfaces (Gigabit Ethernet)

Syntax	<code>show interfaces <i>ge-fpc/pic/port</i></code> <code><brief detail extensive terse></code> <code><descriptions></code> <code><media></code> <code><snmp-index <i>snmp-index</i>></code> <code><statistics></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series, T Series, and MX Series routers and EX Series switches only) Display status information about the specified Gigabit Ethernet interface.
Options	<p><i>ge-fpc/pic/port</i>—Display standard information about the specified Gigabit Ethernet interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Additional Information	In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• <i>Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration</i>
List of Sample Output	<p>show interfaces (Gigabit Ethernet) on page 581</p> <p>show interfaces (Gigabit Ethernet on MX Series Routers) on page 581</p> <p>show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration) on page 582</p> <p>show interfaces brief (Gigabit Ethernet) on page 582</p> <p>show interfaces detail (Gigabit Ethernet) on page 583</p> <p>show interfaces extensive (Gigabit Ethernet IQ2) on page 584</p> <p>show interfaces (Gigabit Ethernet Unnumbered Interface) on page 587</p> <p>show interfaces (ACI Interface Set Configured) on page 587</p>
Output Fields	Table 32 on page 567 describes the output fields for the show interfaces (Gigabit Ethernet) command. Output fields are listed in the approximate order in which they appear. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see Table 33 on page 580 .

Table 32: show interfaces Gigabit Ethernet Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Links Flags” section under <i>Common Output Fields Description</i> .	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(Gigabit Ethernet intelligent queuing 2 [IQ2] interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds (ms).	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Drops field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Dropped packets field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Queue counters (Ingress)	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link . <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Interface transmit statistics	(On MX Series devices) Status of the interface-transmit-statistics configuration: Enabled or Disabled. <ul style="list-style-type: none"> • Enabled—When the interface-transmit-statistics statement is included in the configuration. If this is configured, the interface statistics show the actual transmitted load on the interface. • Disabled—When the interface-transmit-statistics statement is not included in the configuration. If this is not configured, the interface statistics show the offered load on the interface. 	detail extensive
OTN FEC statistics	The forward error correction (FEC) counters provide the following statistics: <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive
PCS statistics	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"> • Bit errors—High bit error rate. Indicates the number of bit errors when the PCS receiver is operating in normal mode. • Errored blocks—Loss of block lock. The number of errored blocks when the PCS receiver is operating in normal mode. 	detail extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the show interfaces (10-Gigabit Ethernet) command. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> • Packet length exceeds 1518 octets, or • Packet length exceeds MRU • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. <p>NOTE: The 20-port Gigabit Ethernet MIC (MIC-3D-20GE-SFP) does not have hardware counters for VLAN frames. Therefore, the VLAN tagged frames field displays 0 when the show interfaces command is executed on a 20-port Gigabit Ethernet MIC. In other words, the number of VLAN tagged frames cannot be determined for the 20-port Gigabit Ethernet MIC.</p> • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner—Information from the remote Ethernet device: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the link partner, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), Symmetric/Asymmetric (link partner supports PAUSE on receive and transmit or only PAUSE on transmit), and None (link partner does not support flow control). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the local Ethernet device: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the local device. For Gigabit Ethernet interfaces, advertised capabilities are Symmetric/Asymmetric (local device supports PAUSE on receive and transmit or only PAUSE on receive) and None (local device does not support flow control). Depending on the result of the negotiation with the link partner, local resolution flow control type will display Symmetric (local device supports PAUSE on receive and transmit), Asymmetric (local device supports PAUSE on receive), and None (local device does not support flow control). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
ACI VLAN: Dynamic Profile	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ACI information.	brief detail extensive none
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Dynamic Profile	(MX Series routers with Trio MPCs only) Name of the dynamic profile that was used to create this interface configured with a Point-to-Point Protocol over Ethernet (PPPoE) family.	detail extensive none
Service Name Table	(MX Series routers with Trio MPCs only) Name of the service name table for the interface configured with a PPPoE family.	detail extensive none
Max Sessions	(MX Series routers with Trio MPCs only) Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.	detail extensive none

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Duplicate Protection	(MX Series routers with Trio MPCs only) State of PPPoE duplicate protection: On or Off . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.	detail extensive none
Direct Connect	State of the configuration to ignore DSL Forum VSAs: On or Off . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the router.	extensive
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.</p>	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none

Table 32: show interfaces Gigabit Ethernet Output Fields (*continued*)

Field Name	Field Description	Level of Output
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about the address flag. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 33: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	show interfaces ge-0/3/0 extensive	Traffic statistics: Input bytes: 496 bytes per packet, representing the Layer 2 packet MAC statistics: Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	show interfaces ge-0/3/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	

Table 33: Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type (*continued*)

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Outbound physical interface	show interfaces ge-0/0/0 extensive	Traffic statistics: Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes MAC statistics: Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes include 6 bytes for the destination MAC address plus 4 bytes for VLAN plus 2 bytes for the Ethernet type.
Outbound logical interface	show interfaces ge-0/0/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	

Sample Output

show interfaces (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:05:85:4a:e9:7c, Hardware address: 00:05:85:4a:e9:7c
  Last flapped   : 2006-08-10 17:25:10 PDT (00:01:08 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)
  Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
  Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
  Active alarms   : None
  Active defects  : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
  0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol ccc, MTU: 1522
  Flags: Is-Primary

```

show interfaces (Gigabit Ethernet on MX Series Routers)

```

user@host> show interfaces ge-2/2/2
Physical interface: ge-2/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 188
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
  Loopback: Disabled,

```

```

Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues     : 8 supported, 4 maximum usable queues
Schedulers    : 0
Current address: 00:1f:12:b7:d7:c0, Hardware address: 00:1f:12:b7:d6:76
Last flapped   : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : None
Active defects : None
Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
  Flags: SNMP-Traps 0x20000000 Encapsulation: Ethernet-Bridge
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol aenet, AE bundle: ae0.0    Link Index: 4

```

show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration)

```

user@host> show interfaces ge-2/1/2 extensive | match "output|interface"
Physical interface: ge-2/1/2, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 530, Generation: 154
Interface flags: SNMP-Traps Internal: 0x4000
Output bytes   :      240614363944      772721536 bps
Output packets:      3538446506      1420444 pps
Direction : Output
Interface transmit statistics: Enabled

Logical interface ge-2/1/2.0 (Index 331) (SNMP ifIndex 955) (Generation 146)
Output bytes   :      195560312716      522726272 bps
Output packets:      4251311146      1420451 pps

```

show interfaces brief (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 brief
Physical interface: ge-3/0/2, Enabled, Physical link is Up
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None

Logical interface ge-3/0/2.0
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  ccc

Logical interface ge-3/0/2.32767
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

```

show interfaces detail (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 detail
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35, Generation: 177
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:05:85:4a:e9:7c, Hardware address: 00:05:85:4a:e9:7c
  Last flapped   : 2006-08-09 17:17:00 PDT (01:31:33 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes  :                0                0 bps
    Output bytes :                0                0 bps
    Input packets:                0                0 pps
    Output packets:              0                0 pps
  Ingress traffic statistics at Packet Forwarding Engine:
    Input bytes  :                0                0 bps
    Input packets:                0                0 pps
    Drop bytes   :                0                0 bps
    Drop packets:                0                0 pps
  Ingress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort           0                0                0
    1 expedited-fo         0                0                0
    2 assured-forw         0                0                0
    3 network-cont         0                0                0

  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort           0                0                0
    1 expedited-fo         0                0                0
    2 assured-forw         0                0                0
    3 network-cont         0                0                0

  Active alarms  : None
  Active defects : None

  Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)
    Flags: SNMP-Traps 0x4000
    VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)
  Out(swap-push 0x8100.512 0x8100.513)
    Encapsulation: VLAN-CCC
    Egress account overhead: 100
    Ingress account overhead: 90
    Traffic statistics:
      Input bytes  :                0
      Output bytes :                0

```

```

Input packets:          0
Output packets:         0
Local statistics:
Input bytes :           0
Output bytes :          0
Input packets:          0
Output packets:         0
Transit statistics:
Input bytes :           0          0 bps
Output bytes :          0          0 bps
Input packets:          0          0 pps
Output packets:         0          0 pps
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0
Flags: Is-Primary

```

```

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)
(Generation 139)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Traffic statistics:
Input bytes :           0
Output bytes :          0
Input packets:          0
Output packets:         0
Local statistics:
Input bytes :           0
Output bytes :          0
Input packets:          0
Output packets:         0
Transit statistics:
Input bytes :           0          0 bps
Output bytes :          0          0 bps
Input packets:          0          0 pps
Output packets:         0          0 pps

```

show interfaces extensive (Gigabit Ethernet IQ2)

```

user@host> show interfaces ge-7/1/3 extensive
Physical interface: ge-7/1/3, Enabled, Physical link is Up
Interface index: 170, SNMP ifIndex: 70, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4004000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 256
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:14:f6:30:5e:74, Hardware address: 00:14:f6:30:5e:74
Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          38910844056          7952 bps
Output bytes :           7174605          8464 bps
Input packets:         418398473          11 pps
Output packets:          78903          12 pps
IPv6 transit statistics:
Input bytes :           0
Output bytes :           0
Input packets:          0
Output packets:          0

```


Ingress traffic statistics at Packet Forwarding Engine:

```

Input bytes :          38910799145          7952 bps
Input packets:         418397956           11 pps
Drop bytes :              0              0 bps
Drop packets:           0              0 pps

```

Input errors:

```

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0

```

Output errors:

```

Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

```

```

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0

```

Ingress queues: 4 supported, 4 in use

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	418390823	418390823	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	7133	7133	0

Egress queues: 4 supported, 4 in use

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	1031	1031	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	77872	77872	0

```

Active alarms : None

```

```

Active defects : None

```

MAC statistics:

	Receive	Transmit
Total octets	38910844056	7174605
Total packets	418398473	78903
Unicast packets	408021893366	1026
Broadcast packets	10	12
Multicast packets	418398217	77865
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	
Jabber frames	0	
Fragment frames	0	
VLAN tagged frames	0	
Code violations	0	OTN Received Overhead Bytes:
APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58		
Payload Type: 0x08		

OTN Transmitted Overhead Bytes:

```

APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x08

```

Filter statistics:

Input packet count	418398473
Input packet rejects	479
Input DA rejects	479

```

Input SA rejects                                0
Output packet count                            78903
Output packet pad count                        0
Output packet error count                      0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
  Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
  Remote fault: OK
Local resolution:
  Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                        %      bps      %      usec
0 best-effort           95      950000000  95      0
low none
3 network-control       5      500000000   5      0
low none
Direction : Input
CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                        %      bps      %      usec
0 best-effort           95      950000000  95      0
low none
3 network-control       5      500000000   5      0
low none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :      812400
Output bytes :    1349206
Input packets:     9429
Output packets:    9449
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:     0
Local statistics:
Input bytes :      812400
Output bytes :    1349206
Input packets:     9429
Output packets:    9449
Transit statistics:
Input bytes :      0      7440 bps
Output bytes :      0      7888 bps
Input packets:      0      10 pps
Output packets:      0      11 pps
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:     0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary

```

```

Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
Output Filters: F2-ge-3/0/1.0-out (53)
Destination: 10.74.2/24, Local: 10.74.2.2, Broadcast: 10.74.2.255,
Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in [Table 32 on page 567](#).

show interfaces (Gigabit Ethernet Unnumbered Interface)

```

user@host> show interfaces ge-3/2/0
Physical interface: ge-3/2/0, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 50
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Current address: 00:14:f6:11:26:f8, Hardware address: 00:14:f6:11:26:f8
  Last flapped   : 2006-10-27 04:42:23 PDT (08:01:52 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 624 bps (1 pps)
  Active alarms  : None
  Active defects : None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 0
  Output packets: 6
  Protocol inet, MTU: 1500
  Flags: Unnumbered
  Donor interface: lo0.0 (Index 64)
  Preferred source address: 22.22.22.22

```

show interfaces (ACI Interface Set Configured)

```

user@host> show interfaces ge-1/0/0.4001
Logical interface ge-1/0/0.4001 (Index 340) (SNMP ifIndex 548)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4001 ] Encapsulation: PPP-over-

Ethernet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
  PPPoE:
    Dynamic Profile: aci-vlan-pppoe-profile,
    Service Name Table: None,
    Max Sessions: 32000, Max Sessions VSA Ignore: Off,
    Duplicate Protection: On, Short Cycle Protection: Off,
    Direct Connect: Off,
    AC Name: nbc

```

Input packets : 9
Output packets: 8
Protocol multiservice, MTU: Unlimited

show interfaces (ISDN B-Channel)

Syntax	<pre>show interfaces bc-pim/0/port:channel <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers only) Display information about the specified ISDN B-channel interface.
Options	<p>bc-pim/0/port:channel—Display standard information about the specified ISDN B-channel interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display the interface description string.</p> <p>media—(Optional) Display media-specific information.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Additional Information	There are no user-configurable fields on B-channel interfaces.
Required Privilege Level	view
List of Sample Output	show interfaces (ISDN B-Channel) on page 592 show interfaces brief (ISDN B-Channel) on page 593 show interfaces detail (ISDN B-Channel) on page 593 show interfaces extensive (ISDN B-Channel) on page 593
Output Fields	Table 34 on page 589 lists the output fields for the show interfaces (ISDN B-channel) command. Output fields are listed in the approximate order in which they appear.

Table 34: ISDN B-Channel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface	Name of the physical interface type.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Fiel” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none

Table 34: ISDN B-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU)—Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this is the top level.	detail extensive none
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured media access control (MAC) address.	detail extensive
Hardware address	MAC address of the hardware.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
CoS queues	Number of class-of-service (CoS) queues configured.	detail extensive none
Last flapped	Date, time, and length of time since the interface changed its status from down to up.	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	none specified
Output rate	Output rate in bps and pps.	none specified
Statistics last cleared	Time when the interface statistics were last set to zero.	detail extensive

Table 34: ISDN B-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the logical and physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that the Junos OS does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 34: ISDN B-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels

Sample Output

show interfaces (ISDN B-Channel)

```

user@host> show interfaces bc-4/0/0:1
Physical interface: bc-4/0/0:1, Enabled, Physical link is Up
  Interface index: 151, SNMP ifIndex: 75
  Type: Serial, Link-level type: 57, MTU: 4092, Clocking: Internal,
  Speed: 64kbps,
  Parent: br-4/0/0 Interface index 129
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Last flapped   : 2006-06-13 19:50:38 PDT (14:39:03 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

```


Logical interface bc-4/0/0:1.0 (Index 74) (SNMP ifIndex 79)
 Flags: Point-To-Point SNMP-Traps Encapsulation: 64

show interfaces brief (ISDN B-Channel)

```
user@host> show interfaces bc-4/0/0:1 brief
Physical interface: bc-4/0/0:1, Enabled, Physical link is Up
  Type: Serial, Link-level type: 57, MTU: 4092, Clocking: Internal,
  Speed: 64kbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000

Logical interface bc-4/0/0:1.0
  Flags: Point-To-Point SNMP-Traps Encapsulation: 64
```

show interfaces detail (ISDN B-Channel)

```
user@host> show interfaces bc-4/0/0:1 detail
Physical interface: bc-4/0/0:1, Enabled, Physical link is Up
  Interface index: 151, SNMP ifIndex: 75, Generation: 152
  Type: Serial, Link-level type: 57, MTU: 4092, Clocking: Internal,
  Speed: 64kbps,
  Parent: br-4/0/0 Interface index 129
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  CoS queues    : 8 supported, 8 maximum usable queues
  Last flapped  : 2006-06-13 19:50:38 PDT (14:39:06 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :           4096           0 bps
    Output bytes  :          128423          96 bps
    Input packets :              0           0 pps
    Output packets:             9801          0 pps
  Egress queues: 8 supported, 8 in use
  Queue counters:      Queued packets  Transmitted packets    Dropped packets

    0 best-effort           13             13             0
    1 expedited-fo           0              0             0
    2 assured-forw           0              0             0
    3 network-cont        9788            9788             0

Logical interface bc-4/0/0:1.0 (Index 74) (SNMP ifIndex 79) (Generation 140)
  Flags: Point-To-Point SNMP-Traps Encapsulation: 64
```

show interfaces extensive (ISDN B-Channel)

```
user@host> show interfaces bc-4/0/0:1 extensive
Physical interface: bc-4/0/0:1, Enabled, Physical link is Up
  Interface index: 151, SNMP ifIndex: 75, Generation: 152
  Type: Serial, Link-level type: 57, MTU: 4092, Clocking: Internal,
  Speed: 64kbps,
```

```

Parent: br-4/0/0 Interface index 129
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
CoS queues : 8 supported, 8 maximum usable queues
Last flapped : 2006-06-13 19:50:38 PDT (14:39:12 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 4096 0 bps
Output bytes : 128423 0 bps
Input packets: 0 0 pps
Output packets: 9801 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:
Carrier transitions: 4, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0
Egress queues: 8 supported, 8 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 13 13 0
1 expedited-fo 0 0 0
2 assured-forw 0 0 0
3 network-cont 9788 9788 0

Packet Forwarding Engine configuration:
Destination slot: 4, PLP byte: 1 (0x00)
CoS information:
CoS transmit queue Bandwidth Buffer Priority Limit
% bps % usec
0 best-effort 95 60800 95 0 low none
3 network-control 5 3200 5 0 low none
Logical interface bc-4/0/0:1.0 (Index 74) (SNMP ifIndex 79) (Generation 140)
Flags: Point-To-Point SNMP-Traps Encapsulation: 64

```

show interfaces (ISDN BRI)

Syntax	<pre>show interfaces br-pim/0/port <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers only) Display status information about the specified ISDN Basic Rate Interface (BRI) interface.
Options	<p>br-pim/0/port—Display standard information about the specified ISDN BRI interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display the interface description string.</p> <p>media—(Optional) Display media-specific information.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ISDN BRI) on page 597</p> <p>show interfaces brief (ISDN BRI) on page 598</p> <p>show interfaces detail (ISDN BRI) on page 598</p> <p>show interfaces extensive (ISDN BRI) on page 598</p>
Output Fields	Table 35 on page 595 lists the output fields for the show interfaces (ISDN BRI) command. Output fields are listed in the approximate order in which they appear.

Table 35: ISDN BRI show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface	Name of the physical interface type.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface index number that reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 35: ISDN BRI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Type	Type of interface.	All levels
Link-level type	Encapsulation type used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU)—Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this is the top level.	detail extensive none
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Physical info	Information about the physical interface.	detail extensive none
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	Media access control (MAC) address of the interface.	detail extensive
Alternate link address	Backup link address.	detail extensive
Last flapped	Date, time, and length of time since the interface changed its status from down to up.	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	none specified
Output rate	Output rate in bps and pps.	none specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 35: ISDN BRI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the logical and physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that the Junos OS does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions —Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive

Sample Output

show interfaces (ISDN BRI)

```

user@host> show interfaces br-4/0/0
Physical interface: br-4/0/0, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 59
  Type: BRI, Link-level type: Controller, MTU: 4092, Clocking: 1,
  Speed: 128kbps, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : S/T
  Last flapped   : 2006-06-13 19:50:38 PDT (15:18:26 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

```

show interfaces brief (ISDN BRI)

```
user@host> show interfaces brief br-4/0/0
Physical interface: br-4/0/0, Enabled, Physical link is Up
  Type: BRI, Link-level type: Controller, MTU: 4092, Clocking: 1, Speed: 128kbps

Device flags      : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
```

show interfaces detail (ISDN BRI)

```
user@host> show interfaces br-4/0/0 detail
Physical interface: br-4/0/0, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 59, Generation: 130
  Type: BRI, Link-level type: Controller, MTU: 4092, Clocking: 1,
  Speed: 128kbps, Parent: None
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link type         : Full-Duplex
  Link flags        : None
  Physical info     : S/T
  Hold-times        : Up 0 ms, Down 0 ms
  Last flapped      : 2006-06-13 19:50:38 PDT (15:18:32 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes      :                0                0 bps
    Output bytes     :                0                0 bps
    Input packets    :                0                0 pps
    Output packets   :                0                0 pps
```

show interfaces extensive (ISDN BRI)

```
user@host> show interfaces br-4/0/0 extensive
Physical interface: br-4/0/0, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 59, Generation: 130
  Type: BRI, Link-level type: Controller, MTU: 4092, Clocking: 1,
  Speed: 128kbps, Parent: None
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link type         : Full-Duplex  Link flags      : None
  Physical info     : S/T
  Hold-times        : Up 0 ms, Down 0 ms
  Last flapped      : 2006-06-13 19:50:38 PDT (15:18:38 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes      :                0                0 bps
    Output bytes     :                0                0 bps
    Input packets    :                0                0 pps
    Output packets   :                0                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0
```

show interfaces (ISDN D-channel)

Syntax	<pre>show interfaces dc-pim/0/port:0 <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers only) Display information about the specified ISDN D-channel interface.
Options	<p>dc-pim/0/port:0—Display standard information about the specified ISDN D-channel interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display the interface description string.</p> <p>media—(Optional) Display media-specific information.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Additional Information	There are no user-configurable features on D-channel interfaces.
Required Privilege Level	view
List of Sample Output	show interfaces (ISDN D-Channel) on page 602 show interfaces brief (ISDN D-Channel) on page 602 show interfaces detail (ISDN D-Channel) on page 603 show interfaces extensive (ISDN D-Channel) on page 603
Output Fields	Table 36 on page 599 lists the output fields for the show interfaces (ISDN D-channel) command. Output fields are listed in the approximate order in which they appear.

Table 36: ISDN D-Channel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical Interface	Name of the physical interface type.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface index number that reflects its initialization sequence.	detail extensive none

Table 36: ISDN D-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation type used on the physical interface.	All levels
MTU	Maximum transmission unit—Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this is the top level.	detail extensive none
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link type	Type of data transmission.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	MAC address of the hardware.	detail extensive
Alternate link address	Backup address for the link.	detail extensive
Last flapped	Date, time, and length of time since the interface changed its status from down to up.	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	none specified
Output rate	Output rate in bps and pps.	none specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 36: ISDN D-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> Input bytes—Number of bytes received on the interface. Output bytes—Number of bytes transmitted on the interface. Input packets—Number of packets received on the interface. Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<ul style="list-style-type: none"> Errors—Input errors on the interface. Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. Framing errors—Number of packets received with an invalid frame checksum (FCS). Runts—Frames received smaller than the runt threshold. Giants—Frames received larger than the giant threshold. Policed Discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos does not support. Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> Carrier transitions —Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. Errors—Sum of outgoing frame aborts and FCS errors. Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC Red mechanism. MTU errors—Number of packets larger than the MTU threshold. Resource errors—Sum of transmit drops. 	extensive
ISDN Alarms	ISDN alarms.	All levels
ISDN Media	<ul style="list-style-type: none"> LOF—Loss of frame LOS—Loss of signal 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels

Table 36: ISDN D-Channel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the logical interface. • Output packets—Number of packets transmitted on the logical interface 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive

Sample Output

show interfaces (ISDN D-Channel)

```

user@host> show interfaces dc-4/0/0
Physical interface: dc-4/0/0, Enabled, Physical link is Up
  Interface index: 150, SNMP ifIndex: 73
  Type: Serial, Link-level type: 55, MTU: 4092, Clocking: Internal,
  Speed: 16kbps,
  Parent: br-4/0/0 Interface index 129
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Last flapped   : 2006-06-13 19:50:38 PDT (15:29:32 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  ISDN alarms    : None

Logical interface dc-4/0/0.32767 (Index 73) (SNMP ifIndex 74)
  Flags: Point-To-Point SNMP-Traps Encapsulation: 60
  Input packets : 23482
  Output packets: 21686

```

show interfaces brief (ISDN D-Channel)

```

user@host> show interfaces dc-4/0/0 brief
Physical interface: dc-4/0/0, Enabled, Physical link is Up
  Type: Serial, Link-level type: 55, MTU: 4092, Clocking: Internal,
  Speed: 16kbps
  Device flags   : Present Running

```

```
Interface flags: SNMP-Traps Internal: 0x4000
ISDN alarms   : None
```

```
Logical interface dc-4/0/0.32767
Flags: Point-To-Point SNMP-Traps Encapsulation: 60
```

show interfaces detail (ISDN D-Channel)

```
user@host> show interfaces dc-4/0/0 detail
Physical interface: dc-4/0/0, Enabled, Physical link is Up
  Interface index: 150, SNMP ifIndex: 73, Generation: 151
  Type: Serial, Link-level type: 55, MTU: 4092, Clocking: Internal,
  Speed: 16kbps,
  Parent: br-4/0/0 Interface index 129
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped  : 2006-06-13 19:50:38 PDT (15:29:42 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          257592          0 bps
    Output bytes  :          231162          0 bps
    Input packets :          23483          0 pps
    Output packets:          21687          0 pps
  ISDN alarms    : None

Logical interface dc-4/0/0.32767 (Index 73) (SNMP ifIndex 74) (Generation 139)

  Flags: Point-To-Point SNMP-Traps Encapsulation: 60
  Traffic statistics:
    Input bytes   :          257592
    Output bytes  :          664902
    Input packets :          23483
    Output packets:          21687
  Local statistics:
    Input bytes   :          257592
    Output bytes  :          664902
    Input packets :          23483
    Output packets:          21687
```

show interfaces extensive (ISDN D-Channel)

```
user@host> show interfaces dc-4/0/0 extensive
Physical interface: dc-4/0/0, Enabled, Physical link is Up
  Interface index: 150, SNMP ifIndex: 73, Generation: 151
  Type: Serial, Link-level type: 55, MTU: 4092, Clocking: Internal,
  Speed: 16kbps,
  Parent: br-4/0/0 Interface index 129
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
```

Last flapped : 2006-06-13 19:50:38 PDT (15:29:49 ago)

Statistics last cleared: Never

Traffic statistics:

Input bytes :	257596	0 bps
Output bytes :	231167	0 bps
Input packets:	23484	0 pps
Output packets:	21688	0 pps

Input errors:

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0

Output errors:

Carrier transitions: 5, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

ISDN alarms : None

ISDN media:	Seconds	Count	State
LOF	1874	2	OK
LOS	1874	2	OK

Logical interface dc-4/0/0.32767 (Index 73) (SNMP ifIndex 74) (Generation 139)

Flags: Point-To-Point SNMP-Traps Encapsulation: 60

Traffic statistics:

Input bytes :	257596
Output bytes :	664927
Input packets:	23484
Output packets:	21688

Local statistics:

Input bytes :	257596
Output bytes :	664927
Input packets:	23484
Output packets:	21688

show interfaces (ISDN Dialer)

Syntax	<pre>show interfaces <i>dlnumber</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series routers only) Display information about the ISDN dialer interface.
Options	<p><i>dlnumber</i>—Display standard information about the specified ISDN dialer interface.</p> <p><i>brief detail extensive terse</i>—(Optional) Display brief interface information.</p> <p><i>descriptions</i>—(Optional) Display the interface description string.</p> <p><i>media</i>—(Optional) Display media-specific information.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ISDN Dialer) on page 610</p> <p>show interfaces brief (ISDN Dialer) on page 611</p> <p>show interfaces detail (ISDN Dialer) on page 611</p> <p>show interfaces extensive (ISDN Dialer) on page 612</p>
Output Fields	<p>Table 37 on page 605 lists the output fields for the show interfaces (ISDN dialer) command. Output fields are listed in the approximate order in which they appear.</p>

Table 37: ISDN Dialer show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical Interface	Name of the physical interface type.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface index number that reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 37: ISDN Dialer show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Type	Interface type.	All levels
Link-level type	Type of encapsulation configured on the physical interface.	All levels
MTU	Maximum transmission unit (MTU)—Size of the largest transmitted packet.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Device flags	Information about the physical device.	All levels
Interface flags	Information about the interface.	All levels
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link.	detail extensive none
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	MAC address of the hardware.	detail extensive
Alternate link address	Backup link address.	detail extensive
Last flapped	Date, time, and length of time since the interface status changed from down to up .	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	none specified
Output rate	Output rate in bps and pps.	none specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 37: ISDN Dialer show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that the Junos OS does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels

Table 37: ISDN Dialer show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Dialer	<p>Information about the status and configuration of the dialer interface:</p> <ul style="list-style-type: none"> • State—State of the interface: Active or Inactive. • Dial pool—Dial pool name. • Dial strings—Dialing number for the ISDN connection. • Subordinate interfaces—Associated B-channel interface name and SNMP index number. • Activation delay—Length of time (in seconds) to wait before enabling the interface after the primary interface has failed. • Deactivation delay—Length of time (in seconds) to wait before disabling the interface after the primary interface is operational. • Initial route check delay—Wait period (in seconds) for the software to check if the primary interface is up after the router comes up. The range is from 1 through 300 seconds. The default is 120 seconds. • Redial delay—(Available on interfaces configured for ISDN dial-out.) Delay, in seconds, between two successive calls made. The range of values is 2 to 255. The default value is 3. • Callback wait period—Time, in seconds, that the dialer waits before it calls back the caller ID. The default value is 5. • Load threshold—Bandwidth threshold percentage used for adding interfaces. Another link is added to the multilink bundle when the load reaches the threshold value you set. The range of values is 0 to 100. The default value is 100. • Load interval—Interval used to calculate the average load on the network. By default, the average interface load is calculated every 60 seconds. 	All levels
Bandwidth	Speed at which the interface is running.	detail extensive none
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the logical interface. • Output packets—Number of packets transmitted on the logical interface 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive

Table 37: ISDN Dialer show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
Keepalive settings	<p>Configured settings for keepalives.</p> <ul style="list-style-type: none"> interval <i>seconds</i>—Time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. up-count <i>number</i>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. down-count <i>number</i>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. 	detail extensive none
Keepalive statistics	<p>Information about keepalive packets. (When no level of output is specified, the word "statistics" is not part of the field name and the phrase "last seen" is not displayed.)</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LCP state	<p>Link Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—LCP negotiation is incomplete (not yet completed or has failed). Not configured—LCP is not configured on the interface. Opened—LCP negotiation is successful. 	detail extensive none
NCP state	<p>Network Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—NCP negotiation is incomplete (not yet completed or has failed). Not configured—NCP is not configured on the interface. Opened—NCP negotiation is successful. 	detail extensive none

Table 37: ISDN Dialer show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CHAP state	Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Resp-received—Response received for the challenge sent, but CHAP not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response sent for the challenge received. • Chap-Chal-sent—Challenge sent. • Chap-Chal-received—Challenge received but response not yet sent. • Down—CHAP authentication is incomplete (not yet completed or has failed). • Not-configured—CHAP is not configured on the interface. • Opened—CHAP authentication was successful. 	detail extensive none
protocol family	Protocol family configured on the logical interface. If the family is inet , the IP address of the logical interface and the IP address on the remote side of the connection are included.	brief
Protocol	Protocol family configured on the logical interface.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (ISDN Dialer)

```

user@host>show interfaces dl0
Physical interface: dl0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 77
Type: 27, Link-level type: PPP, MTU: 1504
Device flags   : Present Running

```

```

Interface flags: SNMP-Traps
Link type      : Full-Duplex
Link flags     : Keepalives
Last flapped   : Never
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)

Logical interface d10.0 (Index 76) (SNMP ifIndex 78)
  Flags: Point-To-Point SNMP-Traps 0x4000 LinkAddress 23-0 Encapsulation: PPP
  Dialer:
    State: Active, Dial pool: 10
    Dial strings: 5551212
    Subordinate interfaces: bc-4/0/0:1 (Index 151)
    Activation delay: 0, Deactivation delay: 0
    Initial route check delay: 120
    Redial delay: 3
    Callback wait period: 5
    Load threshold: 0, Load interval: 60
  Bandwidth: 64kbps
  Input packets : 13
  Output packets: 10846
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 5412 (00:00:06 ago), Output: 5416 (00:00:05 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
    Protocol inet, MTU: 1500
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.40.1, Local: 10.0.40.2

```

show interfaces brief (ISDN Dialer)

```

user@host> show interfaces d10 brief
Physical interface: d10, Enabled, Physical link is Up
  Type: 27, Link-level type: PPP, MTU: 1504, Clocking: Unspecified,
  Speed: Unspecified
Device flags   : Present Running
Interface flags: SNMP-Traps

Logical interface d10.0
  Flags: Point-To-Point SNMP-Traps 0x4000 LinkAddress 23-0 Encapsulation: PPP
  Dialer:
    State: Active, Dial pool: 10
    Dial strings: 5551212
    Subordinate interfaces: bc-4/0/0:1 (Index 151)
    Activation delay: 0, Deactivation delay: 0
    Initial route check delay: 120
    Redial delay: 3
    Callback wait period: 5
    Load threshold: 0, Load interval: 60
  inet 10.0.40.2      --> 10.0.40.1

```

show interfaces detail (ISDN Dialer)

```

user@host> show interfaces d10 detail
Physical interface: d10, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 77, Generation: 154
  Type: 27, Link-level type: PPP, MTU: 1504, Clocking: Unspecified,
  Speed: Unspecified

```

```
Device flags      : Present Running
Interface flags:  SNMP-Traps
Link type        : Full-Duplex
Link flags       : Keepalives
Physical info    : Unspecified
Hold-times      : Up 0 ms, Down 0 ms
Current address:  Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped    : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes      :          131116          40 bps
Output bytes     :              0           0 bps
Input packets    :          10847           0 pps
Output packets   :              0           0 pps
```

```
Logical interface dl0.0 (Index 76) (SNMP ifIndex 78) (Generation 142)
Flags: Point-To-Point SNMP-Traps 0x4000 LinkAddress 23-0 Encapsulation: PPP
Dialer:
  State: Active, Dial pool: 10
  Dial strings: 5551212
  Subordinate interfaces: bc-4/0/0:1 (Index 151)
  Activation delay: 0, Deactivation delay: 0
  Initial route check delay: 120
  Redial delay: 3
  Callback wait period: 5
  Load threshold: 0, Load interval: 60
Bandwidth: 64kbps
Traffic statistics:
Input bytes      :          1092
Output bytes     :        131459
Input packets    :           13
Output packets   :        10848
Local statistics:
Input bytes      :          1092
Output bytes     :        131459
Input packets    :           13
Output packets   :        10848
Transit statistics:
Input bytes      :              0           0 bps
Output bytes     :              0           0 bps
Input packets    :              0           0 pps
Output packets   :              0           0 pps
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 5413 (last seen 00:00:03 ago)
  Output: 5417 (last sent 00:00:02 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
  Protocol inet, MTU: 1500, Generation: 142, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.40.1, Local: 10.0.40.2, Broadcast: Unspecified,
    Generation: 142
```

show interfaces extensive (ISDN Dialer)

```
user@host> show interfaces dl0 extensive
```

```

Physical interface: d10, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 77, Generation: 154
  Type: 27, Link-level type: PPP, MTU: 1504, Clocking: Unspecified,
  Speed: Unspecified
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : Keepalives
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          131116          0 bps
    Output bytes  :           0          0 bps
    Input packets :          10847          0 pps
    Output packets:           0          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0

Logical interface d10.0 (Index 76) (SNMP ifIndex 78) (Generation 142)
  Flags: Point-To-Point SNMP-Traps 0x4000 LinkAddress 23-0 Encapsulation: PPP
  Dialer:
    State: Active, Dial pool: 10
    Dial strings: 5551212
    Subordinate interfaces: bc-4/0/0:1 (Index 151)
    Activation delay: 0, Deactivation delay: 0
    Initial route check delay: 120
    Redial delay: 3
    Callback wait period: 5
    Load threshold: 0, Load interval: 60
  Bandwidth: 64kbps
  Traffic statistics:
    Input bytes   :          1092
    Output bytes  :         131459
    Input packets :           13
    Output packets:         10848
  Local statistics:
    Input bytes   :          1092
    Output bytes  :         131459
    Input packets :           13
    Output packets:         10848
  Transit statistics:
    Input bytes   :           0          0 bps
    Output bytes  :           0          0 bps
    Input packets :           0          0 pps
    Output packets:           0          0 pps
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 5413 (last seen 00:00:07 ago)
    Output: 5417 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured

```

```
CHAP state: Closed
Protocol inet, MTU: 1500, Generation: 142, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.40.1, Local: 10.0.40.2, Broadcast: Unspecified,
    Generation: 142
```

show interfaces (M Series, MX Series and T Series Routers, and PTX Series Packet Transport Routers Management and Internal Ethernet)

Syntax (M Series, MX Series T Series, and PTX Series Routers Management Ethernet Interface)	<pre>show interfaces em0 fxp0 <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Syntax (M Series, MX Series, T Series, and PTX Series Routers Internal Ethernet Interface)	<pre>show interfaces bcm0 em0 em1 fxp1 fxp2 ixgbe0 ixgbe1 <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.</p>
Description	(M Series, T Series, TX Matrix Plus, and PTX Series devices only) Display status information about the management Ethernet and internal Ethernet interfaces.
Options	<p>em0 fxp0—(M Series, MX Series, T Series, and PTX Series) Display standard information about the management Ethernet interface. For supported Ethernet interface by chassis and Routing Engine, see <i>Supported Routing Engines by Router</i>.</p> <p>bcm0 em0 em1 fxp1 fxp2 ixgbe0 ixgbe1—(M Series, MX Series, T Series, and PTX Series) Display standard information about the internal Ethernet interfaces. See <i>Supported Routing Engines by Router</i> for the internal Ethernet interface names for each Routing Engine by hardware platform.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces brief (Management Ethernet) on page 619</p> <p>show interfaces (Management Ethernet) on page 619</p> <p>show interfaces (Management Ethernet [TX Matrix Plus Router]) on page 620</p> <p>show interfaces (Management Ethernet [PTX Series Packet Transport Routers]) on page 620</p>

[show interfaces detail \(Management Ethernet\) on page 620](#)
[show interfaces detail \(Management Ethernet \[TX Matrix Plus Router\]\) on page 621](#)
[show interfaces detail \(Management Ethernet \[PTX Packet Transport Routers\]\) on page 622](#)
[show interfaces extensive \(Management Ethernet\) on page 622](#)
[show interfaces extensive \(Management Ethernet \[TX Matrix Plus Router\]\) on page 623](#)
[show interfaces extensive \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 624](#)
[show interfaces brief \(Management Ethernet\) on page 625](#)
[show interfaces brief \(Management Ethernet \[TX Matrix Plus Router\]\) on page 625](#)
[show interfaces brief \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 625](#)
[show interfaces \(Internal Ethernet\) on page 625](#)
[show interfaces \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 626](#)
[show interfaces detail \(Internal Ethernet\) on page 626](#)
[show interfaces detail \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 627](#)
[show interfaces extensive \(internal Ethernet\) on page 628](#)
[show interfaces extensive \(internal Ethernet \[TX Matrix Plus Router\]\) on page 629](#)

Output Fields [Table 38 on page 616](#) lists the output fields for the **show interfaces** (management) command on the M Series routers, T Series routers, TX Matrix Plus routers, and PTX Series Packet Transport Routers. Output fields are listed in the approximate order in which they appear.

Table 38: M Series and T Series Router Management and Internal Ethernet show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation type used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU)—Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels

Table 38: M Series and T Series Router Management and Internal Ethernet show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Media access control (MAC) address of the interface.	detail extensive none
Alternate link address	Backup link address.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone (hour:minute:second ago)</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input packets	Number of packets received on the physical interface.	None specified
Output packets	Number of packets transmitted on the physical interface.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the logical and physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 38: M Series and T Series Router Management and Internal Ethernet show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed Discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • Resource errors—Sum of transmit drops. 	extensive
Logical Interface		
Logical interface	Name of the logical interface	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	detail extensive none
inet	IP address of the logical interface.	brief
Protocol	Protocol family configured on the logical interface (such as iso or inet6).	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 38: M Series and T Series Router Management and Internal Ethernet show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Route table	Route table in which this address exists. For example, Route table:0 refers to inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces brief (Management Ethernet)

```

user@host> show interfaces fxp0 brief
Physical interface: fxp0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface fxp0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  192.168.70.143/21

```

show interfaces (Management Ethernet)

```

user@host> show interfaces fxp0
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Current address: 00:a0:a5:56:01:89, Hardware address: 00:a0:a5:56:01:89
  Last flapped   : Never
    Input packets : 80804
    Output packets: 1105

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred Is-Primary

```

Destination: 192.168.64/21, Local: 192.168.70.143,
Broadcast: 192.168.71.255

show interfaces (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:80:f9:26:00:c0, Hardware address: 00:80:f9:26:00:c0
  Last flapped   : Never
    Input packets : 1424
    Output packets: 5282

Logical interface em0.0 (Index 3) (SNMP ifIndex 18)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 1424
  Output packets: 5282
  Protocol inet, MTU: 1500
    Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
    192.168.178.127
```

show interfaces (Management Ethernet [PTX Series Packet Transport Routers])

```
user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b
  Last flapped   : Never
    Input packets : 212581
    Output packets: 71

Logical interface em0.0 (Index 3) (SNMP ifIndex 0)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 212551
  Output packets: 71
  Protocol inet, MTU: 1500
    Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 192.168.3/24, Local: 192.168.3.30,
    Broadcast: 192.168.3.255
```

show interfaces detail (Management Ethernet)

```
user@host> show interfaces fxp0 detail
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Physical info   : Unspecified
```

```

Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:a0:a5:56:01:89, Hardware address: 00:a0:a5:56:01:89
Alternate link address: Unspecified
Last flapped    : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          6484031
  Output bytes :          167503
  Input packets:          81008
  Output packets:         1110

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 6, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.64/21, Local: 192.168.70.143,
    Broadcast: 192.168.71.255, Generation: 1

```

show interfaces detail (Management Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces em0 detail
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Link type         : Full-Duplex
  Physical info      : Unspecified
  Hold-times        : Up 0 ms, Down 0 ms
  Current address: 00:80:f9:26:00:c0, Hardware address: 00:80:f9:26:00:c0
  Alternate link address: Unspecified
  Last flapped      : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          124351
    Output bytes :         1353212
    Input packets:          1804
    Output packets:         5344
  IPv6 transit statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          117135
    Output bytes :         1331647
    Input packets:          1804
    Output packets:         5344
  Local statistics:
    Input bytes :          117135
    Output bytes :         1331647
    Input packets:          1804
    Output packets:         5344
  Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary

```

Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

show interfaces detail (Management Ethernet [PTX Packet Transport Routers])

```
user@host> show interfaces detail em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          15255909
    Output bytes  :           4608
    Input packets :          214753
    Output packets:           72
  IPv6 transit statistics:
    Input bytes   :           0
    Output bytes  :           0
    Input packets :           0
    Output packets:           0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes   :          14394630
    Output bytes  :           3024
    Input packets :          214723
    Output packets:           72
  Local statistics:
    Input bytes   :          14394630
    Output bytes  :           3024
    Input packets :          214723
    Output packets:           72
  Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 192.168.3/24, Local: 192.168.3.30,
    Broadcast: 192.168.3.255, Generation: 1
```

show interfaces extensive (Management Ethernet)

```
user@host> show interfaces fxp0 extensive
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
```

```

Current address: 00:a0:a5:56:01:89, Hardware address: 00:a0:a5:56:01:89
Alternate link address: Unspecified
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          6678904
  Output bytes :          169657
  Input packets:          83946
  Output packets:         1127
Input errors:
  Errors: 12, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 6, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.64/21, Local: 192.168.70.143,
    Broadcast: 192.168.71.255, Generation: 1

```

show interfaces extensive (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 extensive
```

```

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags : Present Running
  Interface flags: SNMP-Traps
  Link type : Full-Duplex
  Physical info : Unspecified
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:80:f9:26:00:c0, Hardware address: 00:80:f9:26:00:c0
  Alternate link address: Unspecified
  Last flapped : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          127120
    Output bytes :         1357414
    Input packets:          1843
    Output packets:         5372
  IPv6 transit statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
    0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
    0

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:

```

```

Input bytes : 119748
Output bytes : 1335719
Input packets: 1843
Output packets: 5372
Local statistics:
Input bytes : 119748
Output bytes : 1335719
Input packets: 1843
Output packets: 5372
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

```

show interfaces extensive (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces extensive em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 15236459
    Output bytes : 4608
    Input packets: 214482
    Output packets: 72
  IPv6 transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
  Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes : 14376264
    Output bytes : 3024
    Input packets: 214452
    Output packets: 72
  Local statistics:
    Input bytes : 14376264
    Output bytes : 3024
    Input packets: 214452
    Output packets: 72

```



```

Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255, Generation: 1

```

show interfaces brief (Management Ethernet)

```

user@host> show interfaces fxp1 brief
Physical interface: fxp1, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface fxp1.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  10.0.0.4/8
  inet6 fe80::200:ff:fe00:4/64
        fec0::10:0:0:4/64
  tnp   4

```

show interfaces brief (Management Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces em0 brief
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface em0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  192.168.178.11/25

```

show interfaces brief (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces em0 brief
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface em0.0
Flags: SNMP-Traps Encapsulation: ENET2
inet  192.168.3.30/24

```

```

root@absolutely> show interfaces em0 terse
Interface      Admin Link Proto  Local      Remote
em0            up    up
em0.0          up    up  inet    192.168.3.30/24

```

show interfaces (Internal Ethernet)

```

user@host> show interfaces fxp1
Physical interface: fxp1, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

```

```
Link type      : Full-Duplex
Current address: 02:00:00:00:00:04, Hardware address: 02:00:00:00:00:04
Last flapped   : Never
  Input packets : 30655
  Output packets: 33323

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255
  Protocol inet6, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe00:4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::10:0:0:4
  Protocol tnp, MTU: 1500
    Flags: Primary, Is-Primary
    Addresses
      Local: 4
```

show interfaces (Internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0
Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 02:00:00:22:00:04, Hardware address: 02:00:00:22:00:04
  Last flapped   : Never
    Input packets : 2301738
    Output packets: 3951155

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 2301595
  Output packets: 3951155
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255
    Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
      Destination: 128/2, Local: 162.0.0.4, Broadcast: 191.255.255.255
  Protocol inet6, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe22:4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::a:22:0:4
  Protocol tnp, MTU: 1500
    Flags: Primary, Is-Primary
    Addresses
      Local: 0x22000004
```

show interfaces detail (Internal Ethernet)

```
user@host> show interfaces fxp1 detail
```

```

Physical interface: fxp1, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 2, Generation: 1
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100Mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 02:00:00:00:00:04, Hardware address: 02:00:00:00:00:04
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          2339969
    Output bytes  :          15880707
    Input packets :           30758
    Output packets:           33443

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 7, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
      Generation: 3
  Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
      Broadcast: Unspecified, Generation: 5
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
      Generation: 7
  Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
    Flags: Primary, Is-Primary
    Addresses, Flags: None
      Destination: Unspecified, Local: 4, Broadcast: Unspecified,
      Generation: 8

```

show interfaces detail (Internal Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces ixgbe0 detail
Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 1000Mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 02:00:00:22:00:04, Hardware address: 02:00:00:22:00:04
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          238172825
    Output bytes  :          1338948955
    Input packets :          2360984
    Output packets:          4061512

```

```

IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes : 228720309
Output bytes : 1261387447
Input packets: 2360841
Output packets: 4061512
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 228720309
Output bytes : 1261387447
Input packets: 2360841
Output packets: 4061512
Protocol inet, MTU: 1500, Generation: 2, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
Destination: 128/2, Local: 162.0.0.4, Broadcast: 191.255.255.255,
Generation: 3
Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Generation: 4
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: fec0::/64, Local: fec0::a:22:0:4
Protocol tnp, MTU: 1500, Generation: 5
Generation: 4, Route table: 1
Flags: Primary, Is-Primary
Addresses, Flags: None
Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

show interfaces extensive (internal Ethernet)

```

user@host> show interfaces fxp1 extensive
Physical interface: fxp1, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 2, Generation: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: 02:00:00:00:00:04, Hardware address: 02:00:00:00:00:04
Alternate link address: Unspecified
Last flapped : Never
Statistics last cleared: Never

```

```

Traffic statistics:
Input bytes :          2349897
Output bytes :        15888605
Input packets:          30896
Output packets:        33607
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 7, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
    Generation: 3
  Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
      Broadcast: Unspecified, Generation: 5
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
      Generation: 7
  Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
    Flags: Primary, Is-Primary
    Addresses, Flags: None
      Destination: Unspecified, Local: 4, Broadcast: Unspecified,
      Generation: 8

```

show interfaces extensive (internal Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces ixgbe0 extensive
Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 02:00:00:22:00:04, Hardware address: 02:00:00:22:00:04
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
Traffic statistics:
Input bytes :          242730780
Output bytes :        1348312269
Input packets:         2398737
Output packets:       4133510
IPv6 transit statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:        0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:

```

```

0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

```

```

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          233127252
    Output bytes :         1269350897
    Input packets:         2398594
    Output packets:        4133510
  IPv6 transit statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:         0
    Output packets:        0
  Local statistics:
    Input bytes :          233127252
    Output bytes :         1269350897
    Input packets:         2398594
    Output packets:        4133510
  Protocol inet, MTU: 1500, Generation: 2, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
      Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
      Destination: 128/2, Local: 162.0.0.4, Broadcast: 191.255.255.255,
Generation: 3
    Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
      Flags: Is-Primary
      Addresses, Flags: Is-Preferred
        Destination: fe80::/64, Local: fe80::200:ff:fe22:4
      Generation: 4
        Addresses, Flags: Is-Default Is-Preferred Is-Primary
        Destination: fec0::/64, Local: fec0::a:22:0:4
    Protocol tnp, MTU: 1500, Generation: 5
      Generation: 4, Route table: 1
      Flags: Primary, Is-Primary
      Addresses, Flags: None
        Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

show interfaces (PTX Series Packet Transport Routers)

Syntax	<pre>show interfaces et-<i>fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	<p>Command introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 12.1 for PTX Series Packet Transport Routers.</p>
Description	(PTX Series Packet Transport Routers only) Display status information about the specified Ethernet interface.
Options	<p>et-<i>fpc/pic/port</i>—Display standard information about the specified Ethernet interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media —(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces brief (PTX5000 Packet Transport Router) on page 640</p> <p>show interfaces extensive (PTX5000 Packet Transport Router) on page 641</p> <p>show interfaces terse (PTX5000 Packet Transport Router) on page 642</p>
Output Fields	See Table 39 on page 632 for the output fields for the show interfaces (PTX Series Packet Transport Routers) command.

Table 39: show interfaces PTX Series Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
BPDU Error	Bridge protocol data unit (BPDU) errors (if any).	All levels
MAC-Rewrite	MAC Rewrite errors (if any).	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the “Links Flags” section under <i>Common Output Fields Description</i> .	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>NOTE: Input bytes and output bytes are counted as Layer 3 packet length.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. <p>NOTE: The L3 incompletes field is <i>not</i> supported on PTX Series Packet Transport Routers.</p> <ul style="list-style-type: none"> • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set • Input packets, Output packets—Number of packets received and transmitted on the interface set. <p>NOTE: Input bytes and output bytes are counted as Layer 3 packet length.</p>	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the router.	extensive

Table 39: show interfaces PTX Series Output Fields (*continued*)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about flags (possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces brief (PTX5000 Packet Transport Router)

```
user@host> show interfaces brief et-7/0/0
```



```

Physical interface: et-7/0/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled, Source
filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None

```

show interfaces extensive (PTX5000 Packet Transport Router)

```

user@host> show interfaces et-7/0/0 extensive
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 168, SNMP ifIndex: 501, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 88:e0:f3:3b:de:43, Hardware address: 88:e0:f3:3b:de:43
Last flapped   : 2012-01-18 11:48:24 PST (01:51:00 ago)
Statistics last cleared: 2012-01-18 13:38:54 PST (00:00:30 ago)
Traffic statistics:
Input bytes   : 0                      0 bps
Output bytes  : 0                      0 bps
Input packets : 0                      0 pps
Output packets: 0                      0 pps
IPv6 transit statistics:
Input bytes   : 0
Output bytes  : 0
Input packets : 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort        0                      0                      0
1 expedited-fo       0                      0                      0
2 assured-forw       0                      0                      0
3 network-cont       0                      0                      0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms   : None
Active defects  : None
MAC statistics:
Total octets      Receive      Transmit
Total packets     0            0

```

```

Unicast packets          0          0
Broadcast packets        0          0
Multicast packets        0          0
CRC/Align errors         0          0
FIFO errors              0          0
MAC control frames       0          0
MAC pause frames         0          0
Oversized frames         0
Jabber frames            0
Fragment frames          0
VLAN tagged frames       0
Code violations           0
Filter statistics:
  Input packet count      0
  Input packet rejects    0
  Input DA rejects        0
  Input SA rejects        0
  Output packet count     0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
      0 best-effort      95      95000000000      95      usec      0      low
none
      3 network-control  5       500000000      5       0      low
none
Interface transmit statistics: Disabled

```

show interfaces terse (PTX5000 Packet Transport Router)

```

user@host> show interfaces terse
Interface      Admin Link Proto  Local      Remote
et-2/0/0       up    up
et-2/0/1       up    up
et-2/0/2       up    up
et-2/0/3       up    up
et-2/0/4       up    up
et-2/0/5       up    down
et-2/0/6       up    up
et-2/0/7       up    up
et-2/0/8       up    up
et-2/0/9       up    down
et-2/0/10      up    up
et-2/0/11      up    up
et-2/0/12      up    up
et-2/0/13      up    down
et-2/0/14      up    up
et-2/0/15      up    up
et-2/0/16      up    up
et-2/0/17      up    down
et-2/0/18      up    down
et-2/0/19      up    up
et-2/0/20      up    down

```

et-2/0/21	up	up	
et-2/0/22	up	down	
et-2/0/23	up	up	
et-2/1/0	up	up	
et-2/1/1	up	up	
et-2/1/2	up	up	
et-2/1/3	up	up	
et-2/1/4	up	up	
et-2/1/5	up	up	
et-2/1/6	up	up	
et-2/1/7	up	up	
et-2/1/8	up	up	
et-2/1/9	up	up	
et-2/1/10	up	up	
et-2/1/11	up	up	
et-2/1/12	up	up	
et-2/1/13	up	up	
et-2/1/14	up	up	
et-2/1/15	up	up	
et-2/1/16	up	up	
et-2/1/17	up	up	
et-2/1/18	up	up	
et-2/1/19	up	up	
et-2/1/20	up	up	
et-2/1/21	up	up	
et-2/1/22	up	up	
et-2/1/23	up	up	
et-5/0/0	up	up	
et-5/0/0.0	up	up	ccc
et-5/0/0.32767	up	up	multiservice
et-5/0/1	up	up	
et-5/0/2	up	up	
et-5/0/3	up	down	
et-5/0/4	up	down	
et-5/0/5	up	up	
et-5/0/5.0	up	up	ccc
et-5/0/5.32767	up	up	multiservice
et-5/0/6	up	up	
et-5/0/7	up	up	
et-5/0/8	up	down	
et-5/0/9	up	up	
et-5/0/10	up	up	
et-5/0/11	up	up	
et-5/0/12	up	up	
et-5/0/13	up	down	
et-5/0/14	up	down	
et-5/0/15	up	up	
et-5/0/16	up	up	
et-5/0/17	up	up	
et-5/0/18	up	up	
et-5/0/19	up	up	
et-5/0/20	up	down	
et-5/0/21	up	down	
et-5/0/22	up	up	
et-5/0/23	up	up	
et-5/1/0	up	up	
et-5/1/1	up	up	
et-7/0/0	up	up	
et-7/0/1	up	up	
et-7/0/2	up	up	
et-7/0/3	up	up	

et-7/0/4	up	up		
et-7/0/5	up	up		
et-7/0/6	up	up		
et-7/0/7	up	up		
et-7/0/8	up	up		
et-7/0/9	up	up		
et-7/0/10	up	down		
et-7/0/11	up	down		
et-7/0/12	up	down		
et-7/0/13	up	down		
et-7/0/14	up	down		
et-7/0/15	up	down		
et-7/0/16	up	down		
et-7/0/17	up	down		
et-7/0/18	up	down		
et-7/0/19	up	down		
et-7/0/20	up	down		
et-7/0/21	up	down		
et-7/0/22	up	down		
et-7/0/23	up	down		
dsc	up	up		
em0	up	up		
em0.0	up	up	inet	192.168.177.61/25
gre	up	up		
ipip	up	up		
ixgbe0	up	up		
ixgbe0.0	up	up	inet	10.0.0.4/8
				128.0.0.1/2
				128.0.0.4/2
			inet6	fe80::200:fff:fe00:4/64
				fec0::a:0:0:4/64
			tnp	0x4
ixgbe1	up	up		
ixgbe1.0	up	up	inet	10.0.0.4/8
				128.0.0.1/2
				128.0.0.4/2
			inet6	fe80::200:1ff:fe00:4/64
				fec0::a:0:0:4/64
			tnp	0x4
lo0	up	up		
lo0.0	up	up	inet	10.255.177.61 --> 0/0
				127.0.0.1 --> 0/0
			iso	
47.0005.80ff.f800.0000.0108.0001.0102.5517.7061			inet6	abcd::10:255:177:61
				fe80::ee9e:cd0f:fc02:b01e
lo0.16384	up	up	inet	127.0.0.1 --> 0/0
lo0.16385	up	up	inet	
lsi	up	up		
mtun	up	up		
pimd	up	up		
pime	up	up		
tap	up	up		

show interfaces (SONET/SDH)

Syntax	<pre>show interfaces <i>so-fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified SONET/SDH interface.
Options	<p><i>so-fpc/pic/port</i>—Display standard information about the specified SONET/SDH interface.</p> <p><i>brief detail extensive terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • SONET/SDH Interfaces Overview
List of Sample Output	show interfaces (SDH Mode, PPP) on page 658 show interfaces brief (SDH Mode, PPP) on page 659 show interfaces detail (SDH Mode, PPP) on page 659 show interfaces extensive (SDH Mode, PPP) on page 660 show interfaces brief (SONET Mode, Frame Relay) on page 662 show interfaces (SONET Mode, Frame Relay) on page 662 show interfaces detail (SONET Mode, Frame Relay) on page 663 show interfaces extensive (SONET Mode, Frame Relay) on page 665 show interfaces extensive (OC768-over-4xOC192 Mode) on page 667 show interfaces detail (IPv6 Tracking) on page 670 show interfaces (shared interface) on page 671
Output Fields	Table 40 on page 646 lists the output fields for the show interfaces (SONET/SDH) command. Output fields are listed in the approximate order in which they appear.

Table 40: SONET/SDH show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	SONET/SDH reference clock source: Internal or External . Clocking is configured and displayed only for channel 0.	All levels
Framing mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Shared-interface	Indicates whether the routing domain is the owner or non-owner of the shared interface. If the routing domain is the Root System Domain (RSD), the value is Owner . If the routing domain is a Protected System Domain (PSD) under the RSD, the value is Non-owner .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
ANSI or ITU LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is (ANSI or ITU) LMI settings: <i>value</i>, <i>value</i>... <i>xx</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1-255) • n392dce—DCE error threshold (1-10) • n392dte—DTE error threshold (1-10) • n393dce—DCE monitored event count (1-10) • n393dte—DTE monitored event count (1-10) • t391dte—DTE polling timer (5-30 seconds) • t392dce—DCE polling verification timer (5-30 seconds) 	All levels
LMI	Input: <i>value</i> (<i>hh:mm:ss ago</i>), Output: <i>value</i> (<i>hh:mm:ss ago</i>)	brief none
LMI statistics	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last seen <i>hh:mm:ss ago</i>). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last sent <i>hh:mm:ss ago</i>). 	detail extensive
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	All levels
Keepalive or Keepalive statistics	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format hh:mm:ss. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format hh:mm:ss. 	All levels
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number of bytes and packets received and transmitted on the physical interface, and the traffic rate in bits per seconds (bps). <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Label-switched interface (LSI) traffic statistics	(Frame Relay) LSI traffic statistics: <ul style="list-style-type: none"> • Input bytes—Number of bytes and speed, in bits per second (bps), received on the interface. • Output packets—Number of packets and speed, in bps, transmitted on the interface. 	extensive
Input errors	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • HS link FIFO overflows—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces. 	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • HS link FIFO underflows—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeds the MTU of the interface. 	extensive
IPv6 transit statistics	<p>Number of transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
SONET alarms SONET defects	(SONET) SONET media-specific alarms and defects that prevents the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY , SONET section , SONET line , and SONET path .	All levels
Link	(For 4-port OC192c PIC operating in OC768-over-4xOC192 mode) The link number. Errors and alarms are displayed for each link.	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive
Received SONET overhead Transmitted SONET overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	extensive
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p>	All levels

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—Alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive
Received SDH overhead Transmitted SDH overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	extensive
Received path trace Transmitted path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
PPP parameters	The PPP loopback clear timer value.	extensive

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Shared interface	Provides the following information: <ul style="list-style-type: none"> • shared with—(RSD only) Indicates which PSD owns the logical shared interface. For example, psd3. • peer interface—(PSD only) Lists the logical tunnel interface that peers with the logical shared interface. For example, ut-2/1/0.2. • tunnel token—Specifies the receive (RX) and transmit (TX) tunnel tokens. For example, Rx: 5.519, Tx: 13.514. 	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Multilink bundle	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	detail extensive none
AS bundle	(If the logical interface is configured as part of an aggregated SONET bundle.) AS bundle number.	detail extensive
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none

Table 40: SONET/SDH show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the interface.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 66
Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 30 (00:00:07 ago), Output: 29 (00:00:05 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues    : 4 supported, 4 maximum usable queues
Last flapped  : 2006-03-24 13:20:56 PST (00:05:09 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SDH alarms    : None
SDH defects   : None

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43)

```

```

Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3
Protocol iso, MTU: 4470
  Flags: Protocol-Down
Protocol mpls, MTU: 4458, Maximum labels: 3
  Flags: Protocol-Down, Is-Primary

```

show interfaces brief (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0 brief
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 25 (00:00:01 ago), Output: 24 (00:00:04 ago)
  SDH  alarms    : None
  SDH  defects   : None

Logical interface so-0/0/0.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  inet  10.0.12.1/30
  iso
  mpls

```

show interfaces detail (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0 detail
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 66, Generation: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 33 (last seen 00:00:05 ago)
    Output: 32 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2006-03-24 13:20:56 PST (00:05:38 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :           862           0 bps
    Output bytes  :          3592          64 bps
    Input packets :           70           0 pps
    Output packets:          330           0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort              0              0              0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          329        329          0

SDH  alarms   : None
SDH  defects  : None

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
    Generation: 48
Protocol iso, MTU: 4470, Generation: 49, Route table: 0
  Flags: Protocol-Down
Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
  Flags: Protocol-Down, Is-Primary

```

show interfaces extensive (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0 extensive
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 66, Generation: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 36 (last seen 00:00:01 ago)
    Output: 35 (last sent 00:00:10 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2006-03-24 13:20:56 PST (00:06:08 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          922          0 bps
    Output bytes:         3850         64 bps
    Input packets:           75          0 pps
    Output packets:        356          0 pps
  Label-switched interface (LSI) traffic statistics:
    Input bytes :           0          0 bps
    Input packets:          0          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 218, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 2, HS link CRC errors: 0,
    HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,
    HS link FIFO underflows: 0, MTU errors: 0
  Egress queues: 4 supported, 4 in use

```

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	354	354	0

SDH alarms : None

SDH defects : None

SDH PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	2	1	OK

SDH regenerator section:

RS-BIP8	0	0	
OOF	3	8	OK
LOS	3	2	OK
LOF	3	2	OK
RS-ES	3		
RS-SES	3		
RS-SEFS	3		

SDH multiplex section:

MS-BIP24	0	0	
MS-FEBE	0	0	
MS-FERF	3	2	OK
MS-AIS	2	1	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
MS-ES	3		
MS-SES	3		
MS-UAS	0		
MS-SES-FE	3		
MS-UAS-FE	0		

SDH path:

HP-BIP8	0	0	
HP-FEBE	0	0	
HP-LOP	1	1	OK
HP-AIS	2	1	OK
HP-FERF	3	2	OK
HP-UNEQ	0	0	OK
HP-PLM	1	1	OK
HP-ES	3		
HP-SES	3		
HP-UAS	0		
HP-ES-FE	3		
HP-SES-FE	3		
HP-UAS-FE	0		

Received SDH overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0xcf, C2(cmp)	: 0xcf, F2	: 0x00
Z3	: 0x00, Z4	: 0x00, S1(cmp)	: 0x00	

Transmitted SDH overhead:

F1	: 0x00, J0	: 0x01, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0xcf, F2	: 0x00, Z3	: 0x00
Z4	: 0x00			

Received path trace: R2 so-0/0/0

52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 R2 so-0/0/0.....

Transmitted path trace: R1 so-0/0/0

52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 R1 so-0/0/0.....

```

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue    Bandwidth      Buffer Priority  Limit
                        %          bps    %    usec
  0 best-effort         95  147744000  95     0      low  none
  3 network-control     5   7776000   5     0      low  none

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
PPP parameters:
  PPP loopback clear timer: 3 sec
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
  Generation: 48
Protocol iso, MTU: 4470, Generation: 49, Route table: 0
Flags: Protocol-Down
Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
Flags: Protocol-Down, Is-Primary
MS-ES-FE                               3

```

show interfaces brief (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 brief
Physical interface: so-0/0/0, Enabled, Physical link is Up
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 29 (00:00:02 ago), Output: 28 (00:00:01 ago)
SONET alarms   : None
SONET defects  : None

Logical interface so-0/0/0.0
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
inet  10.0.12.1      --> 10.0.12.2
iso
mpls
DLCI 16
Flags: Down, DCE-Unconfigured
Total down time: 00:04:12 sec, Last down: 00:04:12 ago

```

show interfaces (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 66
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds

```

```

LMI: Input: 23 (00:00:05 ago), Output: 22 (00:00:03 ago)
DTE statistics:
  Enquiries sent                : 19
  Full enquiries sent           : 3
  Enquiry responses received    : 20
  Full enquiry responses received : 3
DCE statistics:
  Enquiries received            : 0
  Full enquiries received       : 0
  Enquiry responses sent        : 0
  Full enquiry responses sent    : 0
Common statistics:
  Unknown messages received     : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout   : 1
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2006-03-06 11:53:20 PST (3d 03:09 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 56 bps (0 pps)
SONET alarms    : None
SONET defects   : None

Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.0.12.2, Local: 10.0.12.1
  Protocol iso, MTU: 4470
    Flags: None
  Protocol mpls, MTU: 4450, Maximum labels: 3
  DLCI 16
    Flags: Down, DCE-Unconfigured
    Total down time: 00:03:11 sec, Last down: 00:03:11 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

show interfaces detail (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 detail
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 66, Generation: 11
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives DTE
  Hold-times    : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 33 (last seen 00:00:09 ago)
    Output: 32 (last sent 00:00:01 ago)
  DTE statistics:
    Enquiries sent                : 27
    Full enquiries sent           : 5
    Enquiry responses received    : 28

```

```

Full enquiry responses received      : 5
DCE statistics:
  Enquiries received                  : 0
  Full enquiries received              : 0
  Enquiry responses sent              : 0
  Full enquiry responses sent         : 0
Common statistics:
  Unknown messages received           : 0
  Asynchronous updates received       : 0
  Out-of-sequence packets received    : 0
  Keepalive responses timedout        : 1
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped   : 2006-03-06 11:53:20 PST (3d 03:10 ago)
Statistics last cleared: Never
Traffic statistics:
  Input  bytes :          495368          0 bps
  Output bytes :         2765014          56 bps
  Input packets:          41165          0 pps
  Output packets:        133530          0 pps
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          18              18              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont       133506         133506              0

SONET alarms   : None
SONET defects  : None
Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Transit statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
  Protocol inet, MTU: 4470, Generation: 49, Route table: 0
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
      Generation: 61
  Protocol iso, MTU: 4470, Generation: 50, Route table: 0
    Flags: None
  Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
  DLCI 16
    Flags: Down, DCE-Unconfigured
    Total down time: 00:04:54 sec, Last down: 00:04:54 ago
    Traffic statistics:

```



```

        Input bytes :          0
        Output bytes :         0
        Input packets:         0
        Output packets:        0
    DLCI statistics:
        Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 extensive
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 66, Generation: 11
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : Keepalives DTE
Hold-times : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
    Input : 39 (last seen 00:00:02 ago)
    Output: 36 (last sent 00:00:07 ago)
DTE statistics:
    Enquiries sent : 30
    Full enquiries sent : 6
    Enquiry responses received : 33
    Full enquiry responses received : 6
DCE statistics:
    Enquiries received : 0
    Full enquiries received : 0
    Enquiry responses sent : 0
    Full enquiry responses sent : 0
Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
CoS queues : 4 supported, 4 maximum usable queues
Last flapped : 2006-03-06 11:53:20 PST (3d 03:11 ago)
Statistics last cleared: Never
Traffic statistics:
    Input bytes :          495452          56 bps
    Output bytes :        2765074          0 bps
    Input packets:         41171          0 pps
    Output packets:       133534          0 pps
Label-switched interface (LSI) traffic statistics:
    Input bytes :          0          0 bps
    Input packets:         0          0 pps
Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    HS link FIFO overflows: 0
Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,
    HS link FIFO underflows: 0, MTU errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          18              18              0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          133510      133510      0

SONET alarms   : None
SONET defects  : None
SONET PHY:
Seconds      Count  State
  PLL Lock      0      0 OK
  PHY Light     60      1 OK
SONET section:
BIP-B1         0        0
SEF            108      158 OK
LOS            108      2 OK
LOF            108      2 OK
ES-S           108
SES-S           108
SEFS-S         108
SONET line:
BIP-B2         0        0
REI-L          0        0
RDI-L          1        1 OK
AIS-L         107      1 OK
BERR-SF        0        0 OK
BERR-SD        44      2 OK
ES-L           108
SES-L           108
UAS-L          97
ES-LFE         1
SES-LFE         1
UAS-LFE         0
SONET path:
BIP-B3         0        0
REI-P          0        0
LOP-P          1        1 OK
AIS-P         107      1 OK
RDI-P          1        1 OK
UNEQ-P         0        0 OK
PLM-P          1        1 OK
ES-P           108
SES-P           108
UAS-P          97
ES-PFE         1
SES-PFE         1
UAS-PFE         0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R2 so-0/0/0
52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00 R2 so-0/0/0.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: R1 so-0/0/0
52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00 R1 so-0/0/0.....

```

```

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                           bps
0 best-effort             95      147744000 95      0        low    none
3 network-control         5       7776000   5       0        low    none

Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 4470, Generation: 49, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
  Generation: 61
Protocol iso, MTU: 4470, Generation: 50, Route table: 0
  Flags: None
Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
DLCI 16
  Flags: Down, DCE-Unconfigured
  Total down time: 00:05:42 sec, Last down: 00:05:42 ago
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (OC768-over-4xOC192 Mode)

```

user@host> show interfaces so-7/0/0 extensive
Physical interface: so-7/0/0, Enabled, Physical link is Up
  Interface index: 163, SNMP ifIndex: 23, Generation: 186
  Link-level type: Cisco-HDLC, MTU: 4474, Clocking: Internal, SONET mode, Speed:
OC768,
  Loopback: Local, FCS: 16, Payload scrambler: Enabled
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000

```

```

Link flags      : No-Keepalives
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2006-01-13 10:43:39 PST (01:05:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          76992          200 bps
  Output bytes  :          83707          216 bps
  Input packets :          1343           0 pps
  Output packets:          1343           0 pps
Input errors:
  Errors: 0, Drops: 3885, Framing errors: 68154624, Runts: 0, Giants: 0, Bucket
drops: 0,
  Policed discards: 0, L3 incompletes: 95040248, L2 channel errors: 0, L2
mismatch timeouts: 0,
  HS link CRC errors: 0, HS link FIFO overflows: 30742070
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
underflows: 0,
  MTU errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      2              2              0
  1 expedited-fo     0              0              0
  2 assured-forw     0              0              0
  3 network-cont     1341           1341           0

SONET alarms      : None
SONET defects     : None
Link : 0
SONET alarms      : None
SONET defects     : None
SONET PHY:
  Seconds          Count   State
  PLL Lock         0       0 OK
  PHY Light        0       0 OK
SONET section:
  BIP-B1           0       0
  SEF              2       1 OK
  LOS              0       0 OK
  LOF              3       2 OK
  ES-S             2
  SES-S            2
  SEFS-S           2
SONET line:
  BIP-B2           0       0
  REI-L            0       0
  RDI-L            1       1 OK
  AIS-L            2       1 OK
  BERR-SF          0       0 OK
  BERR-SD          0       0 OK
  ES-L             3
  SES-L            3
  UAS-L            0
  ES-LFE           1
  SES-LFE          1
  UAS-LFE          0
SONET path:

```

```

BIP-B3          0          0
REI-P           0          0
LOP-P           0          0 OK
AIS-P           2          1 OK
RDI-P           0          0 OK
UNEQ-P          0          0 OK
PLM-P           0          0 OK
ES-P            3
SES-P           3
UAS-P           0
ES-PFE          0
SES-PFE         0
UAS-PFE         0
Payload pointer:
Current pointer      : 522
Pointer increment count : 0
Pointer decrement count : 0
New pointer NDF count : 0
Received SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Link : 1
SONET alarms      : None
SONET defects     : None
SONET PHY:
Seconds          Count   State
  PLL Lock        0        0 OK
  PHY Light       0        0 OK
SONET section:
BIP-B1           0        0
SEF              2        1 OK
LOS              0        0 OK
LOF              3        2 OK
ES-S             2
SES-S            2
SEFS-S           2
SONET line:
BIP-B2           0        0
REI-L            0        0
RDI-L            0        0 OK
AIS-L            2        1 OK
BERR-SF          0        0 OK
BERR-SD          0        0 OK
ES-L             3
SES-L            3
UAS-L            0
ES-LFE           0

```

```

      SES-LFE                0
      UAS-LFE                0
SONET path:
      BIP-B3                 0          0
      REI-P                  0          0
      LOP-P                  0          0 OK
      AIS-P                  2          1 OK
      RDI-P                  0          0 OK
      UNEQ-P                 0          0 OK
      PLM-P                  0          0 OK
      ES-P                   3
      SES-P                   3
      UAS-P                   0
      ES-PFE                  0
      SES-PFE                 0
      UAS-PFE                 0
Payload pointer:
      Current pointer         : 522
      Pointer increment count : 0
      Pointer decrement count : 0
      New pointer NDF count   : 0
Received SONEt overhead:
      F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
      S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
      Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONEt overhead:
      F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
      S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
      Z4      : 0x00
Received path trace: fold so-7/0/0
      66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00      fold so-7/0/0...
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
      66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00      fold so-7/0/0...
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
      00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
...

```

show interfaces detail (IPv6 Tracking)

```

user@host> show interfaces so-0/2/0 detail
Physical interface: so-0/2/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 26, Generation: 131
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONEt mode,
Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 7 (last seen 00:00:01 ago)
    Output: 6 (last sent 00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Opened, iso: Not- configured, mp1s:
Not-configured
  CHAP state: Closed

```

```

PAP state: Closed
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2007-11-29 08:45:47 PST (1d 03:44 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          7407782          40 bps
  Output bytes  :          7307322          48 bps
  Input packets :          107570           0 pps
  Output packets:          108893           0 pps
IPv6 transit statistics:
  Input bytes   :          57328
  Output bytes  :          57400
  Input packets :          1024
  Output packets:          1025
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets
  0 best-effort      1191             1191                 0
  1 expedited-fo      0               0                     0
  2 assured-forw      0               0                     0
  3 network-cont     107700            107700                0
SONET alarms   : None
SONET defects  : None

Logical interface so-0/2/0.0 (Index 70) (SNMP ifIndex 47) (Generation 231)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet6, MTU: 4470, Generation: 433, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: abcd::a18:104/126, Local: abcd::a18:105,
  Broadcast: Unspecified, Generation: 683
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::2a0:a5ff:fe56:52a,
  Broadcast: Unspecified, Generation: 684

```

show interfaces (shared interface)

```

user@rsd1> show interfaces so-7/2/0
Physical interface: so-7/2/0, Enabled, Physical link is Down
Interface index: 128, SNMP ifIndex: 109
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC192, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
Shared-interface : Owner
Link flags     : No-Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 0 (never)
DTE statistics:
  Enquiries sent           : 0
  Full enquiries sent       : 0
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received        : 0
  Full enquiries received    : 0
  Enquiry responses sent     : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0

```

```
    Keepalive responses timedout      : 0
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2008-08-11 10:51:51 PDT (1w1d 04:47 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : LOL, PLL
SONET defects   : LOL, PLL, LOF, SEF, AIS-L, AIS-P

Logical interface so-7/2/0.0 (Index 67) (SNMP ifIndex 117)
  Flags: Device-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: FR-NLPID
  Shared interface:
    Shared with: psd5
    Tunnel token: Rx: 2.517, Tx: 1.517
  Input packets : 0
  Output packets: 0
  DLCI 700
    Flags: Active
    Total down time: 00:01:09 sec, Last down: 284:58:21 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI  :1 Inactive DLCI :0
```


show interfaces (Serial)

Syntax	show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about serial interfaces, including RS-232, RS-422/449, EIA-530, X.21, and V.35.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the interface type is <i>se-fpc/pic/port</i>. On the J Series routers, the interface type is <i>se-pim/0/port</i>.</p> <p><i>brief detail extensive terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (Serial, EIA-530) on page 679</p> <p>show interfaces brief (Serial, EIA-530) on page 679</p> <p>show interfaces detail (Serial, EIA-530) on page 680</p> <p>show interfaces extensive (Serial, EIA-530) on page 680</p> <p>show interfaces (Serial, V.35) on page 681</p> <p>show interfaces brief (Serial, V.35) on page 682</p> <p>show interfaces detail (Serial, V.35) on page 682</p> <p>show interfaces extensive (Serial, V.35) on page 683</p> <p>show interfaces statistics detail (RS 449) on page 684</p>
Output Fields	Table 41 on page 673 lists the output fields for the show interfaces (Serial) command. Output fields are listed in the approximate order in which they appear.

Table 41: show interfaces (Serial) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU) size on the physical interface.	All levels
Maximum speed	Maximum speed. The nonconfigurable value is 16,384 kbps.	detail extensive none
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalive packets. <ul style="list-style-type: none"> Interval <i>seconds</i>—Time between successive keepalive requests. The range of values, in seconds, is 10 to 32,767. The default value is 10. Up-count <i>number</i>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range of values is 1 to 255. The default value is 1. Down-count <i>number</i>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 to 255. The default value is 3. 	All levels
Keepalive	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> Input: <i>number (hh:mm:ss ago)</i>—Number of keepalive packets received by PPP and the time since the last keepalive packet was received. Output: <i>number (hh:mm:ss ago)</i>—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent. 	brief none

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> • Input: <i>number (last seen hh:mm:ss ago)</i>—Number of keepalive packets received by PPP and the time since the last keepalive packet was received. • Output: <i>number (last seen hh:mm:ss ago)</i>—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent. 	detail extensive
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues supported	Total number of egress queues supported on the specified interface. Displayed with the statistics option.	detail extensive
Egress queues in use	Total number of egress queues in use on the specified interface. Displayed with the statistics option.	detail extensive

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Queue counters	CoS queue number and its associated user-configured forwarding class name. Displayed with the statistics option. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Serial media information	Information about the physical media: <ul style="list-style-type: none"> • Line protocol—eia530, eia530a, rs232, rs449, v.35, or x.21. • Resync history—Information about resynchronization events: <ul style="list-style-type: none"> • Sync loss count—Number of times the synchronization was lost. • Data signal—(X.21 and V.35) Information about the data signal: <ul style="list-style-type: none"> • Rx Clock—Receive clock status: OK (DTE is receiving the receive clock signal) or Not detected (receive clock signal is not being received). • Control signals—Information about modem control signals: <ul style="list-style-type: none"> • Local mode:DCE (data communication equipment) or DTE (data terminal equipment) • To DCE—Control signals that the Serial PIC sent to the DCE: DTR (Data Terminal Ready:up or down) or RTS (Request To Send: up or down.) • From DC—Control signals that the Serial PIC received from the DCE: CTS (Clear To Send: up or down), DCD (Data Carrier Detect: up or down), DSR (Data Set Ready: up or down), or TM (Test Mode: up or down). • Clocking mode—Clocking used for the transmit clock: <ul style="list-style-type: none"> • dte—Transmit clock is generated by DTE. • dce—Transmit clock is generated by the DCE and is looped back as the transmit clock. • loop-timed—Receive clock from the DCE is looped back as the transmit clock. • Clock rate—Rate, in megahertz (MHz), at which the clock is configured. • Loopback—Configured loopback mode for the interface: dce-remote, dce-local, liu, local, or none. • Tx clock—Clocking phase of the transmit clock: invert (transmit clock polarity is inverted) or non-invert (transmit clock polarity is not inverted). • Line encoding—Type of line encoding used: nrz (nonreturn to zero) or nrzi (return to zero inverted). 	detail extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface: <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the source and destination address are also displayed.	brief
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive

Table 41: show interfaces (Serial) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 32 (00:00:10 ago), Output: 31 (00:00:07 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mp1s:
  Not-configured
  CHAP state: Closed
  CoS queues      : 8 supported, 8 maximum usable queues
  Last flapped    : 2006-04-26 15:10:18 PDT (00:05:22 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3

```

show interfaces brief (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1 brief
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Type: Serial, Link-level type: PPP, MTU: 1504
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 235 (00:00:10 ago), Output: 234 (00:00:00 ago)

Logical interface se-5/0/1.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  inet 12.0.0.1/30

```

show interfaces detail (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 detail
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41, Generation: 25
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input  : 37 (last seen 00:00:06 ago)
    Output: 35 (last sent 00:00:01 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 8 supported, 8 maximum usable queues
  Last flapped : 2006-04-26 15:10:18 PDT (00:06:02 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          928          40 bps
    Output bytes  :         1023          48 bps
    Input packets :           76           0 pps
    Output packets:           77           0 pps
  Serial media information:
    Line protocol: eia530
    Resync history:
      Sync loss count: 0
    Data signal:
      Rx Clock: OK
    Control signals:
      Local mode: DTE
      To DCE: DTR: up, RTS: up
      From DCE: CTS: up, DCD: up, DSR: up
    Clocking mode: loop-timed
    Clock rate: 8.0 MHz
    Loopback: none
    Tx clock: non-invert
    Line encoding: nrz

  Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
    Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
    Protocol inet, MTU: 1500, Generation: 15, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
      Generation: 23
```

show interfaces extensive (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 extensive
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41, Generation: 25
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
```



```

Keepalive statistics:
  Input : 40 (last seen 00:00:00 ago)
  Output: 37 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mp1s:
Not-configured
CHAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2006-04-26 15:10:18 PDT (00:06:28 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          988          40 bps
  Output bytes :        1088          48 bps
  Input packets:          81           0 pps
  Output packets:         82           0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 2, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0
Serial media information:
  Line protocol: eia530
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: OK
  Control signals:
    Local mode: DTE
    To DCE: DTR: up, RTS: up
    From DCE: CTS: up, DCD: up, DSR: up
  Clocking mode: loop-timed
  Clock rate: 8.0 MHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %          bps          %          usec
  0 best-effort           95        15564800    95           0          low    none
  3 network-control       5         819200      5            0          low    none

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 15, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
  Generation: 23

```

show interfaces (Serial, V.35)

```

user@host> show interfaces se-5/0/0
Physical interface: se-5/0/0, Enabled, Physical link is Down
Interface index: 150, SNMP ifIndex: 39
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags     : Loose-NCP

```

```
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 0 (never), Output: 0 (never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2006-04-26 14:51:27 PDT (01:02:23 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27)
  Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
  Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3
```

show interfaces brief (Serial, V.35)

```
user@host> show interfaces se-5/0/0 brief
Physical interface: se-5/0/0, Enabled, Physical link is Down
Type: Serial, Link-level type: PPP, MTU: 1504
Device flags      : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags        : Loose-NCP
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 0 (never), Output: 0 (never)

Logical interface se-5/0/0.0
  Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
  Encapsulation: PPP
  inet 13.0.0.2/30
```

show interfaces detail (Serial, V.35)

```
user@host> show interfaces se-5/0/0 detail
Physical interface: se-5/0/0, Enabled, Physical link is Down
  Interface index: 150, SNMP ifIndex: 39, Generation: 31
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags      : Present Running Down
  Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
  Link flags        : Loose-NCP
  Hold-times        : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
  CHAP state: Closed
  CoS queues      : 8 supported, 8 maximum usable queues
  Last flapped    : 2006-04-26 14:51:27 PDT (01:03:15 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
```

```

Serial media information:
  Line protocol: v.35
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: Not Detected
  Control signals:
    Local mode: DCE
    To DTE: CTS: down, DCD: down, DSR: up
    From DTE: DTR: down, RTS: down
  DCE loopback override: Off
  Clocking mode: internal
  Clock rate: 38.4 KHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
  Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
  Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 17, Route table: 0
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
    Generation: 23

```

show interfaces extensive (Serial, V.35)

```

user@host> show interfaces se-5/0/0 extensive
Physical interface: se-5/0/0, Enabled, Physical link is Down
  Interface index: 150, SNMP ifIndex: 39, Generation: 31
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
  Link flags     : Loose-NCP
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 8 supported, 8 maximum usable queues
  Last flapped : 2006-04-26 14:51:27 PDT (01:04:17 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0
  Serial media information:
    Line protocol: v.35
    Resync history:

```

```

    Sync loss count: 0
Data signal:
  Rx Clock: Not Detected
Control signals:
  Local mode: DCE
  To DTE: CTS: down, DCD: down, DSR: up
  From DTE: DTR: down, RTS: down
DCE loopback override: Off
Clocking mode: internal
Clock rate: 38.4 KHz
Loopback: none
Tx clock: non-invert
Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %      bps      %      usec
0 best-effort             95      15564800  95      0        low  none
3 network-control         5       819200   5       0        low  none

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
  Generation: 23

```

show interfaces statistics detail (RS 449)

```

user@host> show interfaces se-6/0/0 statistics detail
Interface index: 149, SNMP ifIndex: 59, Generation: 150
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 8mbps
Device flags   : Present Running
Interface flags: Point-To-Point Internal: 0x4000
Link flags     : No-Keepalives Loose-NCP
Hold-times     : Up 0 ms, Down 0 ms
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2007-11-28 19:38:36 PST (00:14:06 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          744          0 bps
Output bytes  :         5978          0 bps
Input packets :          33          0 pps
Output packets:         129          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
Resource errors: 0
Output errors:
Carrier transitions: 13, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0 best-effort	24	24	0
1 expedited-fo	0	0	0
2 bulk	0	0	0
3 assured-forw	105	105	0
4 voip	0	0	0

Serial media information:

Line protocol: rs449

Resync history:

Sync loss count: 0

Data signal:

Rx Clock: OK

Control signals:

Local mode: DTE

To DCE: DTR: up, RTS: up

From DCE: CTS: up, DCD: up, DSR: up

Clocking mode: internal

Loopback: none

Tx clock: non-invert

Line encoding: nrz

Logical interface se-6/0/0.0 (Index 75) (SNMP ifIndex 69) (Generation 141)

Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP

Protocol inet, MTU: 256, Generation: 145, Route table: 0

Flags: None

Addresses, Flags: Is-Preferred Is-Primary

Destination: 11.11.11/24, Local: 11.11.11.2, Broadcast: 11.11.11.255,

Generation: 157

show interfaces (T1, E1, or DS)

Syntax	<code>show interfaces <i>interface-type</i></code> <code><brief detail extensive terse></code> <code><descriptions></code> <code><media></code> <code><snmp-index <i>snmp-index</i>></code> <code><statistics></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified T1, E1, or DS interface.
Options	<p><i>interface-type</i>—On ACX Series, M Series, MX Series, and T Series routers, the T1 interface type is <i>t1-fpc/pic/port</i>, whereas the E1 interface type is <i>e1-fpc/pic/port</i>, and DS interface type is <i>ds-fpc/pic/port:<channel></i>. On the J Series routers, the T1 interface type is <i>t1-pim/O/port</i>, whereas the E1 interface type is <i>e1-pim/O/port</i>.</p> <p><i>brief detail extensive terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• Understanding Interfaces on ACX Series Universal Access Routers
List of Sample Output	show interfaces (T1, IMA Link) on page 698 show interfaces (T1, PPP) on page 699 show interfaces detail (T1, PPP) on page 699 show interfaces extensive (T1 CRC Errors) on page 700 show interfaces extensive (T1, PPP) on page 700 show interfaces (E1, Frame Relay) on page 702 show interfaces detail (E1, Frame Relay) on page 703 show interfaces extensive (E1, Frame Relay) on page 704 show interfaces (E1, IMA Link) on page 706 show interfaces extensive (T1, TDM-CCC-SATOP) on page 707 show interfaces extensive (DS, TDM-CCC-CESoPSN) on page 708
Output Fields	Table 42 on page 687 lists the output fields for the show interfaces (T1 or E1) command. Output fields are listed in the approximate order in which they appear.

Table 42: T1 or E1 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used for the E1 interface on the link: G704 , G704-NO-CRC4 , or Unframed . The default is G704 . Physical layer framing format used for the T1 interface on the link: SF and ESF . The default is ESF .	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
IMA Link alarms	Current active IMA link alarms, including the following: <ul style="list-style-type: none"> • LIF • LODS • RFI-IMA • Tx-Mis-Connected • Tx-Unusable-FE • Rx-Unusable-FE • Link Fault 	detail extensive none
IMA Link defects	Current active IMA link defects, including the following: <ul style="list-style-type: none"> • LIF • LODS • RFI-IMA • Tx-Mis-Connected • Tx-Unusable-FE • Rx-Unusable-FE • Link Fault 	detail extensive none
IMA Link state	Current active IMA link status, including the following: <ul style="list-style-type: none"> • Line: synchronized or not synchronized • Near end:—Status of near-end receive and transmit links <ul style="list-style-type: none"> • Rx: Usable or Unusable • Tx: Usable or Unusable • Far end:—Status of far-end receive and transmit links <ul style="list-style-type: none"> • Rx: Usable or Unusable • Tx: Usable or Unusable 	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
IMA link media	<p>IMA Link Media Status, which provides the seconds and count state for the following link media parameters:</p> <ul style="list-style-type: none"> • LIF • LODS • Err-ICP • IV • Rx-FC • Tx-FC • FE-Defects • FE-Rx-FC • FE-Tx-FC • Rx-ICP • Rx-Stuff • Tx-ICP • Tx-Stuff • Rx-SES • Rx-UAS • Rx-UUS • Tx-UUS • FE-Rx-SES • FE-Rx-UAS • FE-Rx-UUS • FE-Tx-UUS 	detail extensive none
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets. (When no level of output is specified, the word statistics is not part of the field name and the last seen text is not displayed.)</p> <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) which can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1–255) • n392dce—DCE error threshold (1–10) • n392dte—DTE error threshold (1–10) • n393dce—DCE monitored event count (1–10) • n393dte—DTE monitored event count (1–10) • t391dte—DTE polling timer (5–30 seconds) • t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Local Management Interface (LMI) packet statistics:</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no Local Management Interface (LMI) packet was reported for <code>n392dte</code> or <code>n393dce</code> intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) State of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response is not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Down—CHAP authentication is incomplete (not yet completed or has failed). • Not-configured—CHAP is not configured on the interface. • Opened—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS Queues	Number of CoS queues configured.	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
DS1 alarms DS1 defects	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal. • LOF—Loss of frame. • LOS—Loss of signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
T1 media or E1 media	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. The T1 or E1 media-specific error types are: • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • CRC Major—Cyclic redundancy check major alarm threshold exceeded • CRC Minor—Cyclic redundancy check minor alarm threshold exceeded • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • CRC—Cyclic redundancy check • FEBE—Far-end block error (E1 only) • LES—Line error seconds • ES—Errored seconds • BES—Bursty errored seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
SAToP Configuration	<p>Information about the SAToP configuration.</p> <ul style="list-style-type: none"> • payload-size—Configure the payload size, in bytes (from 32 through 1024 bytes). • idle-pattern—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255). • jitter-buffer-packets—Number of packets in the jitter buffer (from 1 through 64 packets). • jitter-buffer-latency—Time delay in the jitter buffer (from 1 through 1000 milliseconds). • excessive-packet-loss-rate—Set packet loss options. The options are groups, sample-period, and threshold. • sample-period—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds). • threshold—Percentile designating the threshold of excessive packet loss rate (1–100 percent). 	extensive

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CESoPSN Configuration	<p>Information about the CESoPSN configuration.</p> <ul style="list-style-type: none"> • packetization-latency—Time required to create packets (from 1000 through 8000 microseconds). • idle-pattern—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255). • jitter-buffer-packets—Number of packets in the jitter buffer (from 1 through 64 packets). • jitter-buffer-latency—Time delay in the jitter buffer (from 1 through 1000 milliseconds). • excessive-packet-loss-rate—Set packet loss options. The options are sample-period and threshold. • sample-period—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds). • threshold—Percentile designating the threshold of excessive packet loss rate (1–100 percent). 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Time slots configured on the interface. • Buildout—(T1 only) Buildout setting: 0-132, 133-265, 266-398, 399-531, or 532-655 feet. • Timeslots—Configured time slots for the interface. • Byte encoding—(T1 only) Byte encoding used: Nx64K or Nx56K. • Line encoding—Line encoding used. For T1, the value can be B8ZS or AMI. For E1, the value is HDB3. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive
DS1 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mlfr , or mpls .	detail extensive none
Multilink bundle	Interface name for the multilink bundle, if configured.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics or (Input packets , Output packets). Flags can be one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • DCE-Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • DCE-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Table 42: T1 or E1 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
CE Info	<p>Information related to the circuit emulation statistics.</p> <ul style="list-style-type: none"> • CE Tx—Number of transmitted packets and bytes (TDM to PSN flow). • CE Rx—Number of received packets and bytes and forward bytes (PSN to TDM flow). • CE Rx Forwarded—Number of forwarded bytes. • CE Strayed—Number of stray packets. • CE Lost—Number of lost packets. • CE Malformed—Number of malformed packets • CE Misinserted—Number of misinserted packets. • CE AIS dropped—Number of dropped bytes due to buffer overrun (PSN to TDM). • CE Dropped—Number of dropped packets during resynchronization • CE Overrun Events—Number of overrun events. • CE Underrun Events—Number of underrun events. 	extensive

Sample Output

show interfaces (T1, IMA Link)

```

user@host> show interfaces t1-1/0/0
IMA Link alarms   : None
IMA Link defects  : LIF, LODS
IMA Link state:
  Line           : Not synchronized
  Near end : Rx: Unusable, Tx: Usable
  Far end  : Rx: Unusable, Tx: Usable
IMA link media:      Seconds      Count  State
LIF                  0           0  OK
LODS                  0           0  OK
Err-ICP               0           0  OK
IV                    0           0  OK
Rx-FC                  0           0  OK
Tx-FC                  0           0  OK
FE-Defects             0           0
FE-Rx-FC               0           0
FE-Tx-FC               0           0
Rx-ICP                 0           0
Rx-Stuff               0           0
Tx-ICP                 0          11
Tx-Stuff               0           0
Rx-SES                  0
Rx-UAS                  0
Rx-UUS                  1
Tx-UUS                  0
FE-Rx-SES              0
FE-Rx-UAS              0
FE-Rx-UUS              0
FE-Tx-UUS              0

```

show interfaces (T1, PPP)

```

user@host> show interfaces t1-1/1/0
Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues    : 4 supported, 4 in use
  Last flapped  : 2005-12-05 08:43:06 PST (02:13:35 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 72 bps (0 pps)
  DS1 alarms   : None
  DS1 defects   : None

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

show interfaces detail (T1, PPP)

```

user@host> show interfaces t1-1/1/0 detail
Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45, Generation: 32
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues    : 4 supported, 4 in use
  Last flapped  : 2005-12-05 08:43:06 PST (02:13:52 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 798        0 bps
    Input packets: 0          0 pps
    Output packets: 42        0 pps
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0 best-effort      0          0          0
    1 expedited-fo     0          0          0

```

2 assured-forw	0	0	0
3 network-cont	40	40	0

```

DS1  alarms   : None
DS1  defects  : None
DS1  BERT configuration:
      BERT time period: 10 seconds, Elapsed: 0 seconds
      Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 18

```

show interfaces extensive (T1 CRC Errors)

```

user@host> show interfaces t1-3/2/0:1:1 extensive
Physical interface: t1-3/2/0:1:1, Enabled, Physical link is Down
Interface index: 179, SNMP ifIndex: 79, Generation: 180
:
:
DS1  alarms   : AIS, LOF, CRC Major, CRC Minor
DS1  defects  : AIS, LOF, CRC Major, CRC Minor
T1  media:      Seconds      Count  State
SEF                1          1  OK
BEE                1          1  OK
AIS               1128          1  Defect Active
LOF               1128          1  Defect Active
LOS                0           0  OK
YELLOW            0           0  OK
CRC Major         154           1  Defect Active
CRC Minor         154           1  Defect Active
BPV                0           0
EXZ                0           0
LCV                0           0
PCV                0           0
CS                 0           0
CRC               154          15400
...

```

show interfaces extensive (T1, PPP)

```

user@host> show interfaces t1-1/1/0 extensive
Physical interface: t1-1/1/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 45, Generation: 32
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured

```

```

CHAP state: Closed
CoS queues      : 4 supported, 4 in use
Last flapped    : 2005-12-05 08:43:06 PST (02:13:54 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :               817               72 bps
  Input packets :                0                0 pps
  Output packets:               43               0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      0                0                0
  1 expedited-fo     0                0                0
  2 assured-forw     0                0                0
  3 network-cont     42               42               0

DS1  alarms   : None
DS1  defects  : None
T1  media:
      Seconds      Count  State
SEF      1          1  OK
BEE      0          0  OK
AIS      0          0  OK
LOF      1          1  OK
LOS      0          0  OK
YELLOW   1          1  OK
BPV      1          1
EXZ      1          1
LCV      1        65535
PCV      1        1023
CS       0          0
LES      1
ES       1
SES      1
SEFS     1
BES      0
UAS      0

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : All active
  Line encoding: B8ZS
  Buildout       : 0 to 132 feet
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)

```

```

CoS information:
  CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                           %      bps      %      usec
  0 best-effort           95      1459200  95        0      low  none
  3 network-control       5       76800   5         0      low  none

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 18

```

show interfaces (E1, Frame Relay)

```

user@host> show interfaces e1-3/0/0
Physical interface: e1-3/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 37
  Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
  Loopback: None, FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 0 (never), Output: 11 (00:00:05 ago)
  DTE statistics:
    Enquiries sent           : 10
    Full enquiries sent      : 1
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 1
  CoS queues      : 8 supported
  Last flapped    : 2005-11-30 14:50:34 PST (4d 20:33 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)
  DS1 alarms     : None
  DS1 defects    : None
  Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32)
    Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Input packets : 0
  Output packets: 0
    Protocol inet, MTU: 1500
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:01:13 sec, Last down: 00:01:13 ago
    Input packets : 0
    Output packets: 0

```

```
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1
```

show interfaces detail (E1, Frame Relay)

```
user@host> show interfaces e1-3/0/0 detail
Physical interface: e1-3/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 37, Generation: 69
  Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
  Loopback: None, FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
  Hold-times     : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 12 (last sent 00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 10
    Full enquiries sent      : 2
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues : 8 supported
  Last flapped : 2005-11-30 14:50:34 PST (4d 20:33 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 225 56 bps
    Input packets: 0 0 pps
    Output packets: 15 0 pps
  Queue counters:
    Queued packets Transmitted packets Dropped packets

    0 limited 0 0 0
    1 expedited-fo 0 0 0
    2 real-plus 0 0 0
    3 network-cont 15 15 0

  DS1 alarms : None
  DS1 defects : None
  DS1 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
```

```

    Input packets:          0
    Output packets:         0
Local statistics:
    Input bytes :           0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
Transit statistics:
    Input bytes :           0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:         0          0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
    Generation: 42
DLCI 100
  Flags: Down, DCE-Unconfigured
  Total down time: 00:01:18 sec, Last down: 00:01:18 ago
  Traffic statistics:
    Input bytes :           0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (E1, Frame Relay)

```

user@host> show interfaces e1-3/0/0 extensive
Physical interface: e1-3/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 37, Generation: 69
  Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
  Loopback: None, FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
  Hold-times     : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 12 (last sent 00:00:05 ago)
  DTE statistics:
    Enquiries sent           : 10
    Full enquiries sent      : 2
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues : 8 supported
  Last flapped : 2005-11-30 14:50:34 PST (4d 20:33 ago)
  Statistics last cleared: Never

```



```

Traffic statistics:
Input bytes :          0          0 bps
Output bytes :         225        0 bps
Input packets:          0          0 pps
Output packets:        15         0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 17, Errors: 0, Drops: 0, Aged packets: 0,
MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 limited              0              0              0

1 expedited-fo         0              0              0

2 real-plus            0              0              0

3 network-cont         15             15             0

DS1  alarms   : None
DS1  defects  : None
E1  media:      Seconds      Count  State
SEF              0           0  OK
BEE              5           5  OK
AIS              0           0  OK
LOF             245          15  OK
LOS             245           4  OK
YELLOW           0          11  OK
BPV              0           0
EXZ              9           9
LCV              0           0
PCV              0           0
CS               0           0
FEBE             0           0
LES              0
ES               0
SES              0
SEFS             0
BES              0
UAS             271

HDLC configuration:
Policing bucket: Disabled
Shaping bucket : Disabled
Giant threshold: 1506, Runt threshold: 0
Timeslots      : All active
Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
Start end flag: shared
DS1 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
Destination slot: 3, PLP byte: 1 (0x00)
CoS information:
CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                        %      bps      %      usec
0 limited                95    1945600  95        0      low  none
3 network-control        5     102400   5         0      low  none
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)

```

```

Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:         0          0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
    Generation: 42
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:01:21 sec, Last down: 00:01:21 ago
    Traffic statistics:
      Input bytes :          0
      Output bytes :          0
      Input packets:          0
      Output packets:         0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

show interfaces (E1, IMA Link)

```

user@host> show interfaces e1-1/0/0
IMA Link alarms : None
IMA Link defects : LIF, LODS
IMA Link state:
  Line : Not synchronized
  Near end : Rx: Unusable, Tx: Usable
  Far end : Rx: Unusable, Tx: Usable
IMA link media:      Seconds      Count  State
LIF                  0          0
LODS                  0          0
Err-ICP               0          0
IV                    0          0
Rx-FC                 0          0
Tx-FC                 0          0
FE-Defects            0          0
FE-Rx-FC              0          0
FE-Tx-FC              0          0
Rx-ICP                0          0
Rx-Stuff              0          0
Tx-ICP                0          0
Tx-Stuff              0          0
Rx-SES                0          0
Rx-UAS                0          0
Rx-UUS                1          0
Tx-UUS                0          0
FE-Rx-SES             0          0
FE-Rx-UAS             0          0

```

```
FE-Rx-UUS          0
FE-Tx-UUS          0
```

show interfaces extensive (T1, TDM-CCC-SATOP)

```
user@host>show interfaces t1-1/0/0:1:1 extensive
Physical interface: t1-1/0/0:1:1, Enabled, Physical link is Down
  Interface index: 153, SNMP ifIndex: 579, Generation: 817
  Link-level type: TDM-CCC-SATOP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF,
  Parent: coc1-1/0/0:1 Interface index 152
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 8 supported, 8 maximum usable queues
  Last flapped   : 2012-10-28 02:12:40 PDT (22:32:13 ago)
  Statistics last cleared: 2012-10-29 00:44:52 PDT (00:00:01 ago)
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          0              0              0
    1 expedited-fo        0              0              0
    2 assured-forw        0              0              0
    3 network-cont        0              0              0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  DS1  alarms       : None
  DS1  defects      : None
  T1  media:        Seconds      Count  State
    SEF              0           0  OK
    BEE              0           0  OK
    AIS              0           0  OK
    LOF              0           0  OK
    LOS              0           0  OK
    YELLOW           0           0  OK
    CRC Major        0           0  OK
    CRC Minor        0           0  OK
    BPV              0           0
    EXZ              0           0
    LCV              0           0
    PCV              0           0
    CS               0           0
    CRC              0           0
    LES              0
    ES               0
    SES              0
    SEFS             0
    BES              0
    UAS              0

  SAToP configuration:
    Payload size: 192
    Idle pattern: 0xFF
    Octet aligned: Disabled
```

```

    Jitter buffer: packets: 8, latency: 7 ms, auto adjust: Disabled
    Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
DS1 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms : None
SONET defects : AIS-V, RDI-V
SONET vt:
    BIP-BIP2          0          0
    REI-V             0          0
    LOP-V             0          0 OK
    AIS-V             2          0 Defect Active
    RDI-V             2          0 Defect Active
    UNEQ-V            0          0 OK
    PLM-V             0          0 OK
    ES-V              0
    SES-V             0
    UAS-V             2
    ES-VFE            0
    SES-VFE           0
    UAS-VFE           0
Received SONET overhead:
V5 : 0x07
V5(cmp) : 0x02
Transmitted SONET overhead:
V5 : 0x02
Packet Forwarding Engine configuration:
    Destination slot: 1
CoS information:
    Direction : Output
    CoS transmit queue
Limit      Bandwidth      Buffer Priority
           %      bps      %      usec      low
0 best-effort 95      1459200 95      0      low
none
3 network-control 5      76800 5      0      low
none

Logical interface t1-1/0/0:1:1.0 (Index 69) (SNMP ifIndex 580) (Generation 525)

    Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-SATOP
CE info      Packets      Bytes Count
CE Tx        1005      192960
CE Rx        1004      192768
CE Rx Forwarded      0
CE Strayed      0
CE Lost      0
CE Malformed      0
CE Misinserted      0
CE AIS dropped      0
CE Dropped      1005      192960
CE Overrun Events      0
CE Underrun Events      0
Protocol ccc, MTU: 1504, Generation: 814, Route table: 0
    Flags: Is-Primary

```

show interfaces extensive (DS, TDM-CCC-CESoPSN)

```

user@host>show interfaces ds-1/0/0:1:1:1 extensive
Physical interface: ds-1/0/0:1:1:1, Enabled, Physical link is Down
Interface index: 154, SNMP ifIndex: 597, Generation: 819

```

```

Link-level type: TDM-CCC-CESoPSN, MTU: 1504, Speed: 1536kbps, Loopback: None,
FCS: 16, Parent: ct1-1/0/0:1:1 Interface index 153
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2012-10-29 00:49:03 PDT (00:00:35 ago)
Statistics last cleared: Never
Egress queues: 8 supported, 4 in use
Queue counters:
    Queued packets    Transmitted packets    Dropped packets

    0 best-effort      0              0              0
    1 expedited-fo     0              0              0
    2 assured-forw     0              0              0
    3 network-cont     0              0              0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

CESoPSN configuration:
  Packetization latency: 1000 us
  Idle pattern: 0xFF
  Jitter buffer: packets: 8, latency: 8 ms, auto adjust: Disabled
  Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 best-effort      95      1459200      95      0      low
none
    3 network-control  5       76800      5       0      low
none

Logical interface ds-1/0/0:1:1:1.0 (Index 69) (SNMP ifIndex 598) (Generation
549)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-CESoPSN
CE info      Packets      Bytes      Count
CE Tx        0            0
CE Rx        35712        6856704
CE Rx Forwarded      0
CE Strayed      0
CE Lost        0
CE Malformed    0
CE Misinserted  0
CE AIS dropped  0
CE Dropped     0            0
CE Overrun Events      0
CE Underrun Events    1

```

Protocol ccc, MTU: 1504, Generation: 857, Route table: 0
Flags: Is-Primary

show interfaces (T3 or E3)

Syntax	show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified T3 or E3 interface.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the T3 interface type is t3-fpc/pic/port, whereas the E3 interface type is e3-fpc/pic/port. On the J Series routers, the T3 interface type is t3-pim/0/port, whereas the E3 interface type is e3-pim/0/port.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces (T3, PPP) on page 720 show interfaces detail (T3, PPP) on page 721 show interfaces extensive (T3, PPP) on page 722 show interfaces (E3, Frame Relay) on page 723 show interfaces detail (E3, Frame Relay) on page 724 show interfaces extensive (E3, Frame Relay) on page 725
Output Fields	Table 43 on page 711 lists the output fields for the show interfaces (T3 or E3) command. Output fields are listed in the approximate order in which they appear.

Table 43: T3 or E3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Mode	(T3 only) Whether C-bit parity mode or M13 mode is enabled.	All levels
Long buildout	(T3 only) Buildout setting: less than 255 feet (68 meters) or greater than 255 feet and shorter than 450 feet (137 meters).	All levels
Framing	(E3 only) Physical layer framing format used on the link. It can be G751 or Unframed . The default is G751 .	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under <i>Common Output Fields Description</i> .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> interval seconds—Time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics or Keepalive	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Local Management Interface (LMI) settings (ANSI or ITU). ANSI LMI settings is the default. The format is LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) LMI statistics:</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> Unknown messages received—Number of received packets that do not fall into any category. Asynchronous updates received—Number of link status peer changes received. Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—LCP negotiation is incomplete (not yet completed or has failed). Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—NCP negotiation is incomplete (not yet completed or has failed). Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> Chap-Resp-received—Response received for the challenge sent, but CHAP not yet moved into the Success state. (Most likely with RADIUS authentication.) Chap-Resp-sent—Response sent for the challenge received. Chap-Chal-sent—Challenge sent. Chap-Chal-received—Challenge received but response not yet sent. Down—CHAP authentication is incomplete (not yet completed or has failed). Not-configured—CHAP is not configured on the interface. Opened—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (year-month-day hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets received on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—(T3 only) Number of frames received that are smaller than the runt threshold. • Giants—(T3 only) Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Active alarms Active defects	<p>E3 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal • EXZ—Excessive zeros • FERF—Far-end receive failures • IDLE—Idle code detected • LCD—Loss of cell delineation • LCV—Line code violation • LOF—Loss of frame • LOS—Loss of signal • PLL—Phase-locked loop • YLW—Remote defect indication 	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DS3 media or E3 media	<p>Counts of DS3 (T3) or E3 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—(DS3 only) Pulse code violation • CCV—(DS3 only) C-bit coding violation • FEBE—(DS3 only) Far-end block error • LES—Line error seconds • PES—(DS3 only) P-bit errored seconds • PSSES—(DS3 only) P-bit errored seconds (section) • CES—(DS3 only) C-bit errored seconds • CSES—(DS3 only) C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DSU configuration	<p>Information about the DSU configuration. The last three lines (Bit count, Error bit count, and LOS information) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> • Compatibility mod—CSU/DSU compatibility mode: None, Larscom, Kentrox, or Digital-Link. • Scrambling—Payload scrambling: Enabled or Disabled. • Subrate—Configured subrate setting. Applies only when Digital-Link compatibility mode is used. The subrate can be Disabled or display units in Kbps. • FEAC loopbac—(T3) Whether a far-end alarm and control (FEAC) loopback is Active or Inactive. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal. • Response—Whether the FEAC signal is Enabled or Disabled. • Count—Number of FEAC loopbacks. 	extensive
DS3 (or E3) BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive

Logical Interface

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	detail extensive none
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	extensive
Flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Encapsulation	Encapsulation on the logical interface.	detail extensive none
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mlfr , or mpls .	detail extensive none
Multilink bundle	(Multilink) Interface name for the multilink bundle.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none

Table 43: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
DLCI	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags, Total down time, Last down, and Traffic statistics (or Input packets, Output packets). Flags is one or more of the following:</p> <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • DCE Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • DCE-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces (T3, PPP)

```

user@host> show interfaces t3-0/2/0
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues     : 4 supported, 4 in use
  Last flapped   : 2005-12-05 08:43:06 PST (02:18:40 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 72 bps (0 pps)

```



```

Active alarms : None
Active defects : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

```

```

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

show interfaces detail (T3, PPP)

```

user@host> show interfaces t3-0/2/0 detail
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags : Keepalives
  Hold-times : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:45 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 152 0 bps
    Input packets: 0 0 pps
    Output packets: 8 0 pps
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	6	6	0

```

Active alarms : None
Active defects : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470, Generation: 17, Route table: 0
  Flags: Protocol-Down

```

Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
 Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
 Generation: 24

show interfaces extensive (T3, PPP)

```

user@host> show interfaces t3-0/2/0 extensive
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:47 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :               171               72 bps
    Input packets :                0                0 pps
    Output packets:                9                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    SRAM errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

    Resource errors: 0
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort             0                0                0

    1 expedited-fo            0                0                0

    2 assured-forw            0                0                0

    3 network-cont            7                7                0

  Active alarms : None
  Active defects: None
  DS3 media:
    Seconds      Count  State
    PLL Lock      0      0 OK
    Reframing      0      0 OK
    AIS            0      0 OK
    LOF            0      0 OK
    LOS            0      0 OK
    IDLE           0      0 OK
    YELLOW         0      0 OK

```

```

BPV                0          0
EXZ                0          0
LCV                1          4
PCV                0          0
CCV                0          0
FEBE               1          11
LES                1
PES                0
PSES               0
CES                0
CSES               0
SEFS               0
UAS                0
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
  Idle cycle flag: flags, Start end flag: shared
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
  FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %          bps          %          usec
0 best-effort             95      42499200    95           0          low     none
3 network-control         5       2236800     5           0          low     none

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 24

```

show interfaces (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0
Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags      : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags       : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 4 (00:00:06 ago)
DTE statistics:
  Enquiries sent                : 4
  Full enquiries sent           : 0
  Enquiry responses received    : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received            : 0
  Full enquiries received       : 0
  Enquiry responses sent        : 0

```

```

    Full enquiry responses sent      : 0
Common statistics:
    Unknown messages received       : 0
    Asynchronous updates received   : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout     : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:17 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:00:06 sec, Last down: 00:00:06 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

show interfaces detail (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 detail
Physical interface: e3-1/2/0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 49, Generation: 36
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
  Loopback: None, FCS: 16, Framing: G751
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives DTE
  Hold-times     : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 5 (last sent 00:00:07 ago)
  DTE statistics:
    Enquiries sent           : 5
    Full enquiries sent      : 0
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues      : 4 supported, 4 in use
  Last flapped   : 2005-12-05 08:46:14 PST (02:27:27 ago)

```

```

Statistics last cleared: Never
Traffic statistics:
Input bytes :          0          0 bps
Output bytes :         806         0 bps
Input packets:         0          0 pps
Output packets:        44          0 pps
Queue counters:      Queued packets  Transmitted packets  Dropped packets

0 best-effort          0              0              0

1 expedited-fo         0              0              0

2 assured-forw         0              0              0

3 network-cont        43              43              0

Active alarms : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:         0
Local statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:         0
Transit statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:         0          0 pps
Output packets:         0          0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 38
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:00:16 sec, Last down: 00:00:16 ago
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:         0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 extensive
Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49, Generation: 36
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000

```

```

Link flags      : Keepalives DTE
Hold-times     : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 6 (last sent 00:00:02 ago)
DTE statistics:
  Enquiries sent           : 5
  Full enquiries sent      : 1
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:30 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 821 56 bps
  Input packets: 0 0 pps
  Output packets: 45 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 21118, Bucket drops: 0,
  Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      0 0 0
  1 expedited-fo     0 0 0
  2 assured-forw     0 0 0
  3 network-cont     44 44 0

Active alarms : None
Active defects : None
E3 media:      Seconds      Count  State
  PLL Lock      0 0 OK
  Reframing     187 1 OK
  AIS           0 0 OK
  LOF          187 1 OK
  LOS          187 1 OK
  IDLE         0 0 OK
  YELLOW       0 0 OK
  BPV         0 0
  EXZ         0 0
  LCV        188 12303167

```

```

LES                                188
SEFS                               187
UAS                                195
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled
E3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced Error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %             bps        %          usec
0 best-effort             95      32649600   95          0          low    none
3 network-control         5       1718400    5          0          low    none

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
    Generation: 38
DLCI 100
  Flags: Down, DCE-Unconfigured
  Total down time: 00:00:19 sec, Last down: 00:00:19 ago
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive

Syntax show interfaces extensive

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.

Description Display extensive information about all interfaces configured on the router.



NOTE:

- At some times, the cumulative byte counters displayed with the `show interfaces extensive` command on the 10-Gigabit Ethernet MPC with SFP+ is not always increasing and cumulative and does not give the correct results. There is a time lag in collecting these statistics, during which the display might decrease or go from a nonzero number to zero. Eventually, the counter will display the correct result.
 - When the `show interfaces extensive` command is executed on a router with an MPC or a T4000 Type 5 FPC, the Input packet rejects counter of the Filter statistics field also displays statistics related to the following packet errors:
 - Invalid VLAN range
 - Tagged packet received on an untagged interface
 - When the `show interfaces extensive` command is executed on an interface that is configured on a T4000 Type 5 FPC, the IPv6 transit statistics field displays:
 - Total statistics (sum of transit and local statistics) at the physical interface level
 - Transit statistics at the logical interface level
 - When the `show interfaces extensive` command is executed on an aggregate interface in a T1600 Core Router, the IPv6 Input bytes is displayed for an aggregate interface. However, the IPv6 Input bytes is always zero on a member link of an aggregated bundle even when there is IPv6 transit traffic on the member link. This is because the logical interface index of the aggregate logical interface is updated but not the logical interface of the member links in the channel lookup table.
-

Options This command has no options.

Required Privilege Level view

List of Sample Output [show interfaces extensive \(Circuit Emulation\) on page 729](#)

[show interfaces extensive \(Fast Ethernet\) on page 729](#)
[show interfaces extensive \(Gigabit Ethernet\) on page 731](#)
[show interfaces extensive \(10-Gigabit Ethernet\) on page 732](#)
[show interfaces extensive \(IQ2 and IQ2E\) on page 734](#)
[show interfaces extensive \(100-Gigabit Ethernet Type 4 PIC with CFP\) on page 737](#)
[show interfaces extensive \(PTX5000 Packet Transport Router\) on page 739](#)
[show interfaces extensive \(MX Series Routers\) on page 741](#)
[show interfaces extensive \(T4000 Routers with Type 5 FPCs\) on page 743](#)
[show interfaces extensive \(Aggregated Ethernet\) on page 744](#)

Output Fields For more information, see the output fields table for the particular interface type in which you are interested. For information about destination class and source class statistics, see the “Destination Class Field” section and the “Source Class Field” section under *Common Output Fields Description*. For sample output for specific interfaces, see the other topics in this collection.

Sample Output

show interfaces extensive (Circuit Emulation)

If a Circuit Emulation (CE) PIC is configured for SAToP pseudowire, then pseudowire statistics are displayed in the CE information section of the **show interface extensive** output. If SAToP pseudowire is not configured on the CE PIC, then all CE information counters display 0 (zero).

```

user@host> show interface t1-0/0/0 extensive
Physical interface :t1-0/0/0, Enabled, Physical Link : Up
    Interface index:61441
    Speed : 1.54 Mbps, Loopback: Disabled
    Operational state : Enabled,    Encapsulation : Trans
    Encoding : b8zs,    Framing : unframe,    Build-out : 0-30
    Inversion : enable,    Clock source : master
    Description :
    Traffic statistics:
    T1 media:           Seconds
    ES                   1643
    SES                 1643

    CE Info             Packets           Bytes
    CE Rx               : 2395529         306627712
    CE Tx               : 2396259         306721152
    CE Rx Drop:         0                 0
    CE Tx Drop:         0                 0

    CE Overrun  Events: 0
    CE Underrun Events: 0

```

Sample Output

show interfaces extensive (Fast Ethernet)

```

user@host> show interfaces fe-0/2/1 extensive
Physical interface: fe-0/2/0, Enabled, Physical link is Up
    Interface index: 129, SNMP ifIndex: 23, Generation: 130
    Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
    Source filtering: Disabled, Flow control: Enabled
    Device flags   : Present Running

```

```

Interface flags: SNMP-Traps Internal: 0x4000
CoS queues      : 4 supported, 4 maximum usable queues
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:90:69:91:c4:3e, Hardware address: 00:90:69:91:c4:3e
Last flapped    : 2006-04-16 23:00:41 PDT (02:08:05 ago)
Statistics last cleared: 2006-04-16 21:42:00 PDT (03:26:46 ago)
Traffic statistics:
Input bytes :          17539          152 bps
Output bytes :          92968          224 bps
Input packets:           348           0 pps
Output packets:         1349           0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          66              66              0
1 expedited-fo         0              0              0
2 assured-forw         0              0              0
3 network-cont        1283           1283              0

Active alarms : None
Active defects : None
MAC statistics:
Total octets          24721          105982
Total packets         348           1349
Unicast packets       347           430
Broadcast packets     1            37
Multicast packets     0           882
CRC/Align errors      0            0
FIFO errors           0            0
MAC control frames    0            0
MAC pause frames      0            0
Oversized frames      0
Jabber frames         0
Fragment frames       0
VLAN tagged frames    0
Code violations        0
Filter statistics:
Input packet count    348
Input packet rejects  0
Input DA rejects      0
Input SA rejects      0
Output packet count    1349
Output packet pad count 0
Output packet error count 0
CAM destination filters: 3, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: None, Remote fault: OK
Packet Forwarding Engine configuration:

```

```

Destination slot: 0
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit

                                %      bps      %      usec
0 best-effort             95      95000000  95      0              low      none
3 network-control         5       5000000   5       0              low      none
Logical interface fe-0/2/0.0 (Index 66) (SNMP ifIndex 46) (Generation 133)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 142, Route table: 0
Flags: DCU, SCU-out

                                Packets      Bytes
Destination class      (packet-per-second)  (bits-per-second)
    silv1_new           0              0
    (                   0) (              0)
    silv2_new           0              0
    (                   0) (              0)
    silv_misc           0              0
    (                   0) (              0)
    silver0             0              0
    (                   0) (              0)
    silver2             0              0
    (                   0) (              0)
    silver3             0              0
    (                   0) (              0)
    silver4             0              0
    (                   0) (              0)
    silver5             0              0
    (                   0) (              0)
    silver6             0              0
    (                   0) (              0)
    silver7             0              0
    (                   0) (              0)
    silver9             0              0
    (                   0) (              0)

                                Packets      Bytes
Source class      (packet-per-second)  (bits-per-second)
    gold1          0              0
    (              0) (              0)
    gold2          16600          1062400
    (              0) (              0)
    gold3          0              0
    (              0) (              0)

Addresses, Flags: Is-Preferred Is-Primary
Destination: 12.1.1/24, Local: 12.1.1.1, Broadcast: 12.1.1.255,
Generation: 150

```

Sample Output

show interfaces extensive (Gigabit Ethernet)

```
user@host> show interfaces ge-5/0/0.0 extensive
```

```

Logical interface ge-5/0/0.0 (Index 71) (SNMP ifIndex 1930) (Generation 139)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          0
  Output bytes :         42
  Input packets:          0
  Output packets:         1
Local statistics:

```

```

Input bytes : 0
Output bytes : 42
Input packets: 0
Output packets: 1
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Output Filters: f-any
Protocol inet, MTU: 1500, Generation: 155, Route table: 0
Output Filters: f-inet,
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.11.1/24, Local: 10.11.1.1, Broadcast: 10.11.1.255,
Generation: 170
Protocol multiservice, MTU: Unlimited, Generation: 156, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

Sample Output

show interfaces extensive (10-Gigabit Ethernet)

```
user@host> show interfaces xe-2/1/0 extensive
```

```

Physical interface: xe-2/1/0, Enabled, Physical link is Up
Interface index: 258, SNMP ifIndex: 762, Generation: 2046
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:1d:b5:f8:6d:eb, Hardware address: 00:1d:b5:f8:6d:eb
Last flapped : 2011-12-17 00:19:02 PST (07:36:37 ago)
Statistics last cleared: 2011-12-17 07:55:24 PST (00:00:15 ago)
Traffic statistics:
Input bytes : 110000 0 bps
Output bytes : 0 0 bps
Input packets: 1000 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 110000
Output bytes : 0
Input packets: 1000
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          0          0          0

Queue number:           Mapped forwarding classes
0                       best-effort
1                       expedited-forwarding
2                       assured-forwarding
3                       network-control

Active alarms : None
Active defects : None
PCS statistics           Seconds
  Bit errors             0
  Errored blocks         0
MAC statistics:          Receive      Transmit
  Total octets           128000        0
  Total packets          1000          0
  Unicast packets        1000          0
  Broadcast packets      0            0
  Multicast packets      0            0
  CRC/Align errors       0            0
  FIFO errors            0            0
  MAC control frames     0            0
  MAC pause frames       0            0
  Oversized frames       0
  Jabber frames          0
  Fragment frames        0
  VLAN tagged frames     0
  Code violations         0
Filter statistics:
  Input packet count     1000
  Input packet rejects   0
  Input DA rejects       0
  Input SA rejects       0
  Output packet count    0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 2
CoS information:
  Direction : Output
  CoS transmit queue    Bandwidth      Buffer Priority
Limit
  0 best-effort         %      bps      %      usec      low
none
  3 network-control     5      500000000  5      0      low
none
Interface transmit statistics: Disabled

Logical interface xe-2/1/0.0 (Index 83) (SNMP ifIndex 1677) (Generation 10082)

Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          110000
  Output bytes :           0
  Input packets:          1000

```

```

Output packets:                0
IPv6 transit statistics:
  Input bytes :                55000
  Output bytes :                0
  Input packets:               500
  Output packets:              0
Local statistics:
  Input bytes :                55000
  Output bytes :                0
  Input packets:               500
  Output packets:              0
Transit statistics:
  Input bytes :                55000      0 bps
  Output bytes :                0        0 bps
  Input packets:               500      0 pps
  Output packets:              0        0 pps
IPv6 transit statistics:
  Input bytes :                55000
  Output bytes :                0
  Input packets:               500
  Output packets:              0
Protocol inet6, MTU: 1500, Generation: 23739, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 2001:1000:abcd:2312:1432:abcd:1234:0/112, Local:
2001:1000:abcd:2312:1432:abcd:1234:1234
  Generation: 506
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::21d:b5ff:fe8:6deb
Protocol multiservice, MTU: Unlimited, Generation: 508
  Generation: 23740, Route table: 0
  Policer: Input: __default_arp_policer__

```

Sample Output

show interfaces extensive (IQ2 and IQ2E)

```

user@host> show interfaces ge-3/2/2 extensive
Physical interface: ge-3/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 548, Generation: 159
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
  Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues : 8 supported, 8 maximum usable queues
  Schedulers : 128
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:12:86:fa, Hardware address: 00:14:f6:12:86:fa
  Last flapped : 2010-03-17 04:03:11 PDT (00:45:30 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :                1716096      0 bps
    Output bytes :                1716448      0 bps
    Input packets:                13407      0 pps
    Output packets:               13411      0 pps
  IPv6 total statistics:
    Input bytes :                1716096
    Output bytes :                1716096
    Input packets:                13407
    Output packets:               13407
  Ingress traffic statistics at Packet Forwarding Engine:

```

```

Input bytes :          1716096          0 bps
Input packets:          13407          0 pps
Drop bytes :            0          0 bps
Drop packets:           0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0, FIFO errors:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped
packets
  0 best-effort          13407          13407
0
  1 expedited-fo           0           0
0
  2 assured-forw           0           0
0
  3 network-cont           0           0
0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped
packets
  0 best-effort          13407          13407
0
  1 expedited-fo           0           0
0
  2 assured-forw           0           0
0
  3 network-cont           4           4
0
Active alarms : None
Active defects : None
MAC statistics:
Total octets          1716096          1716448
Total packets          13407          13411
Unicast packets          13407          13407
Broadcast packets           0           0
Multicast packets           0           4
CRC/Align errors           0           0
FIFO errors              0           0
MAC control frames        0           0
MAC pause frames          0           0
Oversized frames          0
Jabber frames             0
Fragment frames           0
VLAN tagged frames        0
Code violations           0
Filter statistics:
Input packet count          13407
Input packet rejects         0
Input DA rejects            0
Input SA rejects            0
Output packet count          13411
Output packet pad count       0
Output packet error count     0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:

```

Negotiation status: Complete
 Link partner:
 Link mode: Full-duplex, Flow control: None, Remote fault: OK
 Local resolution:
 Flow control: Symmetric, Remote fault: Link OK
 Packet Forwarding Engine configuration:
 Destination slot: 3

CoS information:

Direction : Output		Bandwidth		Buffer Priority	
CoS transmit queue					
Limit					
	%	bps	%	usec	
0 best-effort	95	950000000	95	0	low
none					
3 network-control	5	50000000	5	0	low
none					
Direction : Input		Bandwidth		Buffer Priority	
CoS transmit queue					
Limit					
	%	bps	%	usec	
0 best-effort	95	950000000	95	0	low
none					
3 network-control	5	50000000	5	0	low
none					

Logical interface ge-3/2/2.0 (Index 83) (SNMP ifIndex 6080) (Generation 148)

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.100] Encapsulation: ENET2

Traffic statistics:

Input bytes : 0
 Output bytes : 336
 Input packets: 0
 Output packets: 4

IPv6 total statistics:

Input bytes : 1716096
 Output bytes : 1716096
 Input packets: 13407
 Output packets: 13407

Local statistics:

Input bytes : 0
 Output bytes : 336
 Input packets: 0
 Output packets: 4

Transit statistics:

Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps

IPv6 total statistics:

Input bytes : 1716096
 Output bytes : 1716096
 Input packets: 13407
 Output packets: 13407

Protocol inet6, MTU: 1500, Generation: 159, Route table: 0

Flags: Is-Primary

Addresses, Flags: Is-Default Is-Primary

Destination: Unspecified, Local: 2000::2

Generation: 146

Addresses, Flags: Is-Preferred

Destination: fe80::/64, Local: fe80::214:f600:6412:86fa

Protocol multiservice, MTU: Unlimited, Generation: 148


```

Generation: 160, Route table: 0
Policer: Input: __default_arp_policer__

Logical interface ge-3/2/2.32767 (Index 84) (SNMP ifIndex 6081) (Generation
149)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol multiservice, MTU: Unlimited, Generation: 161, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

Sample Output

show interfaces extensive (100-Gigabit Ethernet Type 4 PIC with CFP)

```

user@host> show interfaces et-0/0/0:0 extensive
Physical interface: et-0/0/0:0, Enabled, Physical link is Down
Interface index: 156, SNMP ifIndex: 516, Generation: 163
Link-level type: Ethernet, MTU: 9192, Speed: 50000mbps, BPDU Error: None,
MAC-REWRITE Error: None,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Damping : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
Current address: 00:aa:aa:aa:aa:00, Hardware address: 00:21:59:5c:48:00
Last flapped : 2010-01-07 16:36:49 PST (18:02:35 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0,
L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
0
Output errors:

```

Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0,

HS link CRC errors: 0, MTU errors: 0, Resource errors: 0

Egress queues: 8 supported, 8 in use

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 DEFAULT, NC-	0	0	0
1 REALTIME	0	0	0
2 PRIVATE, NC-	0	0	0
3 CONTROL	1253	1253	0
4 BC-H, CLASS_	0	0	0
5 BC-M, CLASS_	0	0	0
6 IA, CLASS_V_	0	0	0
7 CLASS_S_OUTP	0	0	0

Queue	Mapped Forwarding Class
0	DEFAULT, NC-Q0
1	REALTIME
2	PRIVATE, NC-Q1
3	CONTROL
4	BC-H, CLASS-Q4
5	BC-M, CLASS-Q5
6	IA, CLASS_V_OUTPUT
7	CLASS_S_OUTPUT

Active alarms : None

Active defects : None

MAC statistics:	Receive	Transmit
Total octets	0	0
Total packets	0	0
Unicast packets	0	0
Broadcast packets	0	0
Multicast packets	0	0
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	
Jabber frames	0	
Fragment frames	0	
VLAN tagged frames	0	
Code violations	0	

Packet Forwarding Engine configuration:

Destination slot: 0

CoS information:

Direction : Output

CoS transmit queue		Bandwidth		Buffer	Priority	Limit
	%	bps	%	usec		
0 best-effort	95	47500000000	95	0	low	none
3 network-control	5	2500000000	5	0	low	none

Logical interface et-0/0/0:0.0 (Index 68) (SNMP ifIndex 546) (Generation 161)

```

Flags: Deviet-Down SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 9178, Generation: 220, Route table: 0
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 210.160.0/24, Local: 210.160.0.1, Broadcast: 210.160.0.255,
Generation: 192
Protocol mpls, MTU: 9166, Maximum labels: 3, Generation: 221, Route table: 0

Protocol multiservice, MTU: Unlimited, Generation: 222, Route table: 0
  Policer: Input: __default_arp_policer

```

Sample Output

show interfaces extensive (PTX5000 Packet Transport Router)

```

user@host> show interfaces et-7/0/0 extensive
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 501, Generation: 171
  Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  CoS queues : 8 supported, 8 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Damping : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
  Current address: 88:e0:f3:3b:de:43, Hardware address: 88:e0:f3:3b:de:43
  Last flapped : 2012-01-18 11:48:24 PST (01:47:08 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 3583014 0 bps
  Output bytes : 758050 0 bps
  Input packets: 17740 0 pps
  Output packets: 3418 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
0
Output errors:

```

```

Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0,
HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort        252                252                      0
1 expedited-fo        0                  0                        0
2 assured-forw        0                  0                        0
3 network-cont       6196              6196                    0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Active alarms : None
Active defects : None
MAC statistics:
Total octets      4108825      Transmit 1159686
Total packets    21166       6448
Unicast packets  14824       3255
Broadcast packets 3          0
Multicast packets 6339      3193
CRC/Align errors 0          0
FIFO errors       0          0
MAC control frames 0          0
MAC pause frames  0          0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 16091
Code violations    0

Filter statistics:
Input packet count 9
Input packet rejects 9
Input DA rejects   9
Input SA rejects   0
Output packet count 0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Incomplete
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit
0 best-effort           95      9500000000    95      usec      0      low
none
3 network-control       5      500000000      5      0      low
none
Interface transmit statistics: Disabled

```

Sample Output

show interfaces extensive (MX Series Routers)

```

user@host> show interfaces xe-0/0/0 extensive
Physical interface: xe-0/0/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 592, Generation: 148
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
  None,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 08:81:f4:82:a3:f0, Hardware address: 08:81:f4:82:a3:f0
  Last flapped   : 2013-10-26 03:20:40 test (2w3d 03:15 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                      0                0 bps
    Output bytes  :                      0                0 bps
    Input packets :                      0                0 pps
    Output packets:                      0                0 pps
  IPv6 transit statistics:
    Input bytes   :                      0
    Output bytes  :                      0
    Input packets :                      0
    Output packets:                      0
  Dropped traffic statistics due to STP State:
    Input bytes   :                      0
    Output bytes  :                      0
    Input packets :                      0
    Output packets:                      0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors:
  0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0	0	0	0
1	0	0	0
2	0	0	0
3	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms   : LINK
  Active defects  : LINK

```

```

PCS statistics                      Seconds
  Bit errors                      109
  Errored blocks                  109
MAC statistics:                    Receive      Transmit
  1                               0             0             0
  2                               0             0             0
  3                               0             0             0

Queue number:                      Mapped forwarding classes
  0                               best-effort
  1                               expedited-forwarding
  2                               assured-forwarding
  3                               network-control

Active alarms : LINK
Active defects : LINK
PCS statistics                      Seconds
  Bit errors                      109
  Errored blocks                  109
MAC statistics:                    Receive      Transmit
  Total octets                   0             0
  Total packets                  0             0
  Unicast packets                 0             0
  Broadcast packets               0             0
  Multicast packets               0             0
  CRC/Align errors               0             0
  FIFO errors                    0             0
  MAC control frames              0             0
  MAC pause frames                0             0
  Oversized frames                0
  Jabber frames                   0
  Fragment frames                 0
  VLAN tagged frames              0
  Code violations                 0
  Total errors                    0             0
Filter statistics:
  Input packet count              0
  Input packet rejects            0
  Input DA rejects                0
  Input SA rejects                0
  Output packet count              0
  Output packet pad count          0
  Output packet error count        0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Direction : Output
  CoS transmit queue              Bandwidth      Buffer Priority
Limit
  %          bps      %          usec      low
  0 best-effort  95    9500000000  95          0
none
  3 network-control  5    500000000  5          0
none
Interface transmit statistics: Disabled

```

Sample Output

show interfaces extensive (T4000 Routers with Type 5 FPCs)

The output fields for the **show interfaces *interface* extensive** command remains the same for 12-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-12XGE-SFPP), 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-24XGE-SFPP), and 100-Gigabit Ethernet Type 5 PIC with CFP (PF-1CGE-CFP).

```

user@host> show interfaces xe-4/0/0 extensive
Physical interface: xe-4/0/0, Enabled, Physical link is Up
  Interface index: 200, SNMP ifIndex: 592, Generation: 203
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Device flags      : Present Running
  Interface flags:  SNMP-Traps Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Hold-times       : Up 0 ms, Down 0 ms
  Damping          : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
  Current address: 00:12:1e:37:53:f8, Hardware address: 00:12:1e:37:53:f8
  Last flapped    : 2013-06-03 16:01:56 PDT (06:04:07 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  IPv6 transit statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets    Dropped packets

    0 best-effort      0                0                0
    1 expedited-fo     0                0                0
    2 assured-forw     0                0                0
    3 network-cont     0                0                0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms  : None
  Active defects : None
  PCS statistics                Seconds

```

```

    Bit errors                                0
    Errored blocks                            0
MAC statistics:                               Receive      Transmit
    Total octets                             0              0
    Total packets                            0              0
    Unicast packets                          0              0
    Broadcast packets                        0              0
    Multicast packets                        0              0
    CRC/Align errors                        0              0
    FIFO errors                             0              0
    MAC control frames                       0              0
    MAC pause frames                         0              0
    Oversized frames                         0
    Jabber frames                            0
    Fragment frames                          0
    VLAN tagged frames                       0
    Code violations                          0
Filter statistics:
    Input packet count                       0
    Input packet rejects                     0
    Input DA rejects                         0
    Input SA rejects                         0
    Output packet count                      0
    Output packet pad count                  0
    Output packet error count                0
    CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
    Destination slot: 0 (0x00)
CoS information:
    Direction : Output
    CoS transmit queue
        %      Bandwidth      %      Buffer Priority Limit
        %      bps            %      usec
    0 best-effort    95  9500000000  95      0      low  none
    3 network-control 5   500000000    5      0      low  none
Preclassifier statistics:
    Traffic Class      Received Packets  Transmitted Packets      Dropped Packets

    real-time          0                  0                  0
    network-control    0                  0                  0
    best-effort         0                  0                  0
Interface transmit statistics: Disabled

```

Sample Output

show interfaces extensive (Aggregated Ethernet)

```

user@host> show interfaces ae0 extensive
Physical interface: ae0, Enabled, Physical link is Up
Interface index: 199, SNMP ifIndex: 570, Generation: 202
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled, Minimum links needed: 1, Minimum bandwidth needed: 0
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 2c:6b:f5:d1:0f:c0, Hardware address: 2c:6b:f5:d1:0f:c0
Last flapped   : 2012-06-06 23:33:03 PDT (00:00:58 ago)
Statistics last cleared: Never
Traffic statistics:
    Input bytes :          18532          1984 bps
    Output bytes :           0           0 bps
    Input packets:          158           2 pps

```



```

Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:               0
  Output packets:              0
Dropped traffic statistics due to STP State:
  Input bytes :                0
  Output bytes :                0
  Input packets:               0
  Output packets:              0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont                0                0                0

Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                57                57                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont             63605             63605                0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control

Logical interface ae0.0 (Index 331) (SNMP ifIndex 583) (Generation 142)
Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :        149         2      17416      1984
  Output:         0         0         0         0
Link:
  ge-3/2/5.0
    Input :        90         1      10100      992
    Output:         0         0         0         0
  ge-3/3/9.0
    Input :        59         1       7316      992
    Output:         0         0         0         0
LACP info:      Role      System      System      Port
Port Port

```


```

                                priority      identifier priority      number
key
ge-3/2/5.0 Actor          100  00:00:00:00:00:01      127      1
1
ge-3/2/5.0 Partner        127  00:24:dc:98:67:c0      127      1  1
ge-3/3/9.0 Actor          100  00:00:00:00:00:01      127      2
1
ge-3/3/9.0 Partner        127  00:24:dc:98:67:c0      127      2  1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            38          137           0              0
ge-3/3/9.0            36          139           0              0
Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            0            0            0              0
ge-3/3/9.0            0            0            0              0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.2, Broadcast: 1.1.1.255, Generation:
153
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

show interfaces media

Syntax	show interfaces media
Release Information	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.
Description	Display media-specific information about all configured network interfaces.
<div>  NOTE: show interfaces media lists details for all interfaces, whereas show interfaces media <i>interface-name</i> lists details only for the specified interface. </div>	
Options	This command has no options.
Additional Information	Output from both the show interfaces <i>interface-name</i> detail and the show interfaces <i>interface-name</i> extensive commands includes all the information displayed in the output from the show interfaces media command.
Required Privilege Level	view
List of Sample Output	show interfaces media (SONET/SDH) on page 747 show interfaces media (MX Series Routers) on page 748 show interfaces media (PTX Series Packet Transport Routers) on page 748
Output Fields	<p>The output from the show interfaces media command includes fields that display interface media-specific information. These fields are also included in the show interfaces <i>interface-name</i> command for each particular interface type, and the information provided in the fields is unique to each interface type.</p> <p>One field unique to the show interfaces media command is interface-type errors (for example, SONET errors). This field appears for channelized E3, channelized T3, channelized OC, E1, E3, SONET, T1, and T3 interfaces. The information provided in this output field is also provided in the output from the show interfaces <i>interface-name</i> command. (For example, for SONET interfaces, these fields are SONET section, SONET line, and SONET path). For a description of errors, see the chapter with the particular interface type in which you are interested.</p>

Sample Output

show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```
user@host> show interfaces media so-4/1/2
```

```
Physical interface: so-4/1/2, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 495
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  CoS queues    : 8 supported
  Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  SONET alarms  : None
  SONET defects : None
  SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
  Received path trace: routerb so-1/1/2
  Transmitted path trace: routera so-4/1/2
```

show interfaces media (MX Series Routers)

```
user@host>show interfaces media xe-0/0/0
Physical interface: xe-0/0/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 592
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
  None,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Enabled
  Device flags   : Present Running
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Current address: 08:81:f4:82:a3:f0, Hardware address: 08:81:f4:82:a3:f0
  Last flapped  : 2013-10-26 03:20:40 test (1w6d 00:19 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : LINK
  Active defects : LINK
  PCS statistics
    Bit errors          Seconds
    Errored blocks      78
  MAC statistics:
    Input bytes: 0, Input packets: 0, Output bytes: 0, Output packets: 0
  Filter statistics:
    Filtered packets: 0, Padded packets: 0, Output packet errors: 0
  Interface transmit statistics: Disabled
```

show interfaces media (PTX Series Packet Transport Routers)

```
user@host> show interfaces media em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
```

```
Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b
Last flapped    : Never
Input packets   : 215151
Output packets  : 72
```

show interfaces terse

Syntax	show interfaces terse
Release Information	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.
Description	Display summary information about interfaces.
Options	This command has no options.
Additional Information	Interfaces are always displayed in numerical order, from the lowest to the highest FPC slot number. Within that slot, the lowest PIC slot is shown first. On an individual PIC, the lowest port number is always first.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>Examples: Configuring Logical System Interfaces</i>
List of Sample Output	show interfaces terse on page 751 show interfaces terse (TX Matrix Plus Router) on page 751 show interfaces terse (PTX Series Packet Transport Routers) on page 752
Output Fields	Table 44 on page 750 lists the output fields for the show interfaces terse command. Output fields are listed in the approximate order in which they appear.

Table 44: show interfaces terse Output Fields

Field Name	Field Description
Interface	Interface name.
Admin	Whether the interface is turned on (up) or off (down).
Link	Link state: up or down .
Proto	Protocol family configured on the logical interface. A logical interface on a router that supports Ethernet OAM always shows the multiservice protocol.
Local	Local IP address of the logical interface.
Remote	Remote IP address of the logical interface.

Sample Output

show interfaces terse

```

user@host> show interfaces terse
Interface           Admin Link Proto  Local          Remote
t1-0/1/0:0          up   up
t1-0/1/0:0.0        up   up   inet   192.168.220.18/30
t1-0/1/0:1          up   up
t1-0/1/0:2          up   up
t1-0/1/0:3          up   up
at-1/0/0            up   up
at-1/0/1            up   up
dsc                 up   up
fxp0                up   up
fxp0.0              up   up   inet   192.168.71.249/21
fxp1                up   up
fxp1.0              up   up   inet   10.0.0.4/8
                    tnp   4
gre                 up   up
ipip                up   up
lo0                 up   up
lo0.0               up   up   inet   10.0.1.4        --> 0/0
                    127.0.0.1       --> 0/0
lo0.16385           up   up   inet
lsi                 up   up
mtun                up   up

```

show interfaces terse (TX Matrix Plus Router)

```

user@host> show interfaces terse
Interface           Admin Link Proto  Local          Remote
xe-0/0/0            up   up
xe-0/0/1            up   up
xe-0/0/2            up   up
xe-0/0/3            up   up
xe-6/0/0            up   up
xe-6/0/1            up   up
xe-6/0/2            up   up
xe-6/0/3            up   up
xe-6/1/0            up   up
xe-6/1/1            up   up
xe-6/1/2            up   up
xe-6/1/3            up   up
so-0/0/0            up   up
so-0/0/0.0          up   up   inet   1.1.1.1/30
ge-1/3/0.0          up   up   inet   --> 0/0
ge-7/0/0            up   up
ge-7/0/0.0          up   up   inet   2.15.1.1/30
ge-7/0/0.1          up   up   inet   2.15.1.5/30
ge-7/0/0.2          up   up   inet   2.15.1.9/30
ge-7/0/0.3          up   up   inet   2.15.1.13/30
ge-7/0/0.4          up   up   inet   2.15.1.17/30
ge-7/0/0.5          up   up   inet   2.15.1.21/30
...
em0                 up   up
em0.0               up   up   inet   192.168.178.11/25
gre                 up   up

```

```

      ipip                up    up
      ixgbe0              up    up
      ixgbe0.0            up    up    inet    10.34.0.4/8
                                      162.0.0.4/2
                                      inet6    fe80::200:ff:fe22:4/64
                                      fec0::a:22:0:4/64
                                      tnp        0x22000004
      ixgbe1              up    up
      ixgbe1.0            up    up    inet    10.34.0.4/8
                                      162.0.0.4/2
                                      inet6    fe80::200:1ff:fe22:4/64
                                      fec0::a:22:0:4/64
                                      tnp        0x22000004
```

show interfaces terse (PTX Series Packet Transport Routers)

```

user@host> show interfaces em0 terse
      Interface      Admin Link Proto  Local      Remote
      em0            up   up
      em0.0          up   up   inet    192.168.3.30/24
```


PART 4

Index

- [Index on page 755](#)

Index

Symbols

#, comments in configuration statements.....	xxi
(), in syntax descriptions.....	xxi
10-Gigabit Ethernet interfaces	
MTU sizes.....	63
802.1Q VLANs	
mixed VLAN tagging.....	218, 277
VLAN tagging.....	366
802.1Q/Ethernet 802.3 encapsulation	
encapsulation overhead.....	59
802.1Q/Ethernet SNAP encapsulation	
encapsulation overhead.....	59
802.3ad statement.....	143
< >, in syntax descriptions.....	xxi
[], in configuration statements.....	xxi
{ }, in configuration statements.....	xxi
(pipe), in syntax descriptions.....	xxi

A

access profile	
configuring.....	76
default CHAP secret.....	76
access-profile statement.....	144
usage guidelines.....	75, 78
accounting profiles	
physical interfaces.....	97
example configuration.....	97
accounting-profile statement.....	145
usage guidelines.....	97
acfc statement.....	145
usage guidelines.....	84
acknowledge-retries statement.....	146
acknowledge-timer statement.....	147
usage guidelines.....	147
action-red-differential-delay statement.....	147
usage guidelines.....	147
address and control field compression.....	84
ADSL	
ATM-over-ADSL interfaces	
status information, displaying.....	441
advertise-interval statement.....	148

aggregate-ports statement.....	150
aggregated-ether-options statement.....	149
aggregated-sonet-options statement.....	150
alarm statement.....	152
alias statement.....	152
example configuration.....	106
annex statement.....	153
aps statement.....	154
annex-b.....	153
Asynchronous Transfer Mode See ATM	
asynchronous-notification statement.....	155
ATM cell-relay encapsulation	
encapsulation overhead.....	59
ATM encapsulation	
ATM PVC encapsulation.....	59, 69
keepalives.....	91
ATM interfaces	
encapsulation.....	69
MTU sizes.....	60, 61, 62, 64
status information, displaying.....	406
ATM PVC encapsulation.....	59, 69
ATM with SFP	
MTU sizes.....	64
atm-encapsulation statement.....	155
atm-options statement.....	156
ATM-over-ADSL interfaces	
status information, displaying.....	441
ATM-over-SHDSDL interfaces	
status information, displaying.....	449
ATM-to-Ethernet interworking.....	367
ATM2 IQ interfaces	
MTU sizes.....	62, 64
authentication-key statement.....	157
auto-negotiation statement	
Gigabit Ethernet.....	158
auto-reconnect statement.....	159

B

backup-interface statement.....	160
bandwidth-limit statement	
policer for Gigabit Ethernet interface.....	160
bchannel-allocation statement.....	161
bert-algorithm statement.....	162
bert-error-rate statement.....	164
bert-period statement.....	166
braces, in configuration statements.....	xxi
brackets	
angle, in syntax descriptions.....	xxi
square, in configuration statements.....	xxi

buildout statement	
E3 or T3 over ATM interfaces.....	167
T1 interfaces.....	168
burst-size-limit statement	
policer for Gigabit Ethernet interface.....	169
byte encoding.....	170
byte-encoding statement.....	170
bytes statement.....	171
C	
C-bit parity mode.....	172
calling-number statement.....	172
cbit-parity statement.....	172
cbr statement.....	173
cell-bundle-size statement.....	174
channelized DS3-to-DS0 interfaces	
status information, displaying.....	457
channelized DS3-to-DS1 interfaces	
status information, displaying.....	468
channelized E1 interfaces	
status information, displaying.....	475
channelized E1 IQ interfaces	
status information, displaying.....	471
channelized OC12 interfaces	
status information, displaying.....	490
channelized OC12 IQ interfaces	
status information, displaying.....	486
channelized OC12 IQE interfaces	
status information, displaying.....	486
channelized OC3 IQ interfaces	
status information, displaying.....	494
channelized OC3 IQE interfaces	
status information, displaying.....	494
Channelized SONET/SDH OC3/STM1 (Multi-Rate)	
interfaces	
MTU sizes.....	64
channelized STM1 interfaces	
status information, displaying.....	516
channelized STM1 IQ interfaces	
status information, displaying.....	513
channelized T1 IQ interfaces	
status information, displaying.....	531
channelized T3 IQ interfaces	
status information, displaying.....	543
CHAP.....	75, 78
configuring default CHAP secret.....	76
example configuration.....	77, 80
chap statement.....	175
usage guidelines.....	75, 78
Cisco HDLC encapsulation.....	68
configuring on physical interfaces.....	69
encapsulation overhead.....	59
keepalives.....	91
classifier statement.....	176
clock sources.....	93, 178
clock-rate statement.....	177
clocking statement.....	178
usage guidelines.....	93
clocking-mode statement.....	179
comments, in configuration statements.....	xxi
compatibility-mode statement.....	180
compression statement	
usage guidelines.....	84, 86
connections	
configuration statements.....	132
control-polarity statement.....	181
control-signal statement.....	182
conventions	
text and syntax.....	xx
core-dump statement.....	182
usage guidelines.....	97
crc-major-alarm-threshold statement.....	183
crc-minor-alarm-threshold statement.....	184
cts statement.....	185
cts-polarity statement.....	185
curly braces, in configuration statements.....	xxi
current statement.....	186
customer support.....	xxii
contacting JTAC.....	xxii
D	
damping	
interface transitions.....	98
damping statement.....	187
data circuit-terminating equipment <i>See</i> DCE	
data terminal equipment <i>See</i> DTE	
data-input statement.....	189
dcd statement.....	190
dcd-polarity statement.....	190
DCE.....	95, 191
dce statement.....	191
usage guidelines.....	95
dce-options statement.....	191
default-chap-secret statement.....	192
description statement.....	193
usage guidelines.....	55
dialin statement.....	194

- disable statement.....195
 - physical interfaces
 - usage guidelines.....104
- disabling
 - keepalives.....91
 - physical interfaces.....104
 - example configuration.....105
- discard interface
 - status information, displaying.....545
- documentation
 - comments on.....xxi
- drop-timeout statement.....196
- DS interfaces
 - status information, displaying.....686
- ds0-options statement.....197
- DS3 IQ interfaces
 - MTU sizes.....61, 62
- DS3/E3 interfaces
 - MTU sizes.....64
- dsr statement.....198
- dsr-polarity statement.....198
- dte-options statement.....199
- dtr statement.....200
- dtr-circuit statement.....199
- dtr-polarity statement.....201
- dump-on-flow-control statement.....201
- dynamic-profile statement
 - MLPPP.....202
 - PPP.....202
- E**
 - E1 interfaces
 - MTU sizes.....60, 61, 62
 - status information, displaying.....686
 - e1-options statement.....203
 - E3 interfaces
 - encapsulation.....69
 - MTU sizes.....60, 61, 62
 - status information, displaying.....711
 - E3 IQ interfaces
 - MTU sizes.....61, 62
 - e3-options statement.....204
 - encapsulation.....68
 - Ethernet 802.3.....59
 - example configuration.....73
 - on physical interfaces.....69
 - overheads.....59
 - See also ATM encapsulation
 - encapsulation statement
 - physical interface.....205
 - physical interfaces
 - usage guidelines.....69
 - encoding
 - byte.....170
 - encoding statement.....209
 - epd-threshold statement
 - physical interface.....210
 - es-options statement.....210
 - Ethernet CCC and TCC encapsulation
 - physical interfaces.....69
 - Ethernet CCC encapsulation
 - encapsulation overhead.....59
 - Ethernet interfaces
 - mixed VLAN tagging.....218, 277
 - status information, displaying
 - Fast Ethernet.....550
 - Gigabit Ethernet.....381, 566
 - internal.....615
 - management.....615
 - PTX Series.....631
 - VLAN tagging.....366
 - Ethernet over ATM encapsulation
 - encapsulation overhead.....59
 - physical interfaces.....69
 - Ethernet SNAP encapsulation
 - encapsulation overhead.....59
 - Ethernet TCC
 - encapsulation
 - encapsulation overhead.....59
 - ethernet-policer-profile statement.....211
 - ethernet-switch-profile statement.....212
 - extended VLAN
 - CCC
 - encapsulation.....69
 - encapsulation overhead.....59
 - TCC
 - encapsulation.....69
 - encapsulation overhead.....59, 60
 - external clock sources.....93, 178
- F**
 - facility-override statement.....213
 - Fast Ethernet interfaces
 - interface speed.....88
 - link modes.....56
 - MTU sizes.....60, 61, 62

status information, displaying.....	550
VLAN tagging.....	366
fast-aps-switch statement.....	215
fastether-options statement.....	214
fcs statement.....	216
feac-loop-respond statement.....	217
flexible-vlan-tagging statement.....	218
flow-control statement.....	219
font conventions.....	xx
force statement.....	220
fragment-threshold statement.....	221
Frame Relay encapsulation.....	68
DCE.....	95, 191
encapsulation overhead.....	59
keepalives.....	91
physical interfaces.....	69
Frame Relay ether type encapsulation	
physical interfaces.....	69
framing statement	
E1, E3, and T1 interfaces.....	222
G	
Gigabit Ethernet interfaces	
MTU sizes.....	60, 61, 62, 63
status information, displaying.....	381, 566
VLAN tagging.....	366
Gigabit Ethernet IQ PIC	
traffic and MAC statistics.....	381, 631
gether-options statement.....	223
gratuitous-arp-reply statement.....	224
H	
HDLC encapsulation	
Cisco HDLC encapsulation.....	69
hello-timer statement.....	225
high-plp-max-threshold statement.....	225
high-plp-threshold statement.....	226
hold-time statement	
APS.....	226
damping interface transitions	
usage guidelines.....	98
Physical Interface.....	227
SONET/SDH Defect Triggers.....	229
host statement.....	230
I	
idle-cycle-flag statement.....	231
ieee802.1p statement.....	232
ignore-all statement.....	232
ignore-l3-incompletes statement.....	233
ilmi statement.....	233
inactivity-timeout statement.....	234
indication statement.....	234
indication-polarity statement.....	235
ingress-rate-limit statement.....	235
input-priority-map statement.....	236
Interface encapsulation on PTX Series Packet	
Transport Routers	
configuring.....	74
interface names	
conventions.....	4, 5
interface range	
expanding member and member range	
statements.....	48
interface ranges.....	44
configuration.....	44
inheritance range priorities.....	51
inheriting common configuration.....	51
under other hierarchies.....	52
interface statement	
CoS.....	236
interface transitions	
damping.....	98
interface-range statement	
usage guidelines.....	44
interface-shared-with statement.....	237
interface-type statement.....	238
interfaces	
alias name.....	152
clock sources.....	93, 178
configuration statements.....	111
descriptive text.....	193
disabling.....	104
encapsulation See encapsulation	
mixed VLAN tagging.....	218, 277
interfaces statement.....	237
internal clock sources.....	93, 178
internal Ethernet interface	
status information, displaying.....	615
invert-data statement.....	239
ISDN	
B-channel interfaces, displaying.....	589
BRI interfaces, displaying.....	595
D-channel interfaces, displaying.....	599
dialer interfaces, displaying.....	605
ISDN interfaces	
calling-number.....	172

K

keepalives	
disabling.....	91
keepalives statement.....	240
usage guidelines.....	91

L

lACP statement	
Aggregated Ethernet.....	241
Layer 3 incomplete errors.....	233
LCP	
address and control field compression.....	84
protocol field compression.....	86
leaky bucket properties.....	16, 95
line-encoding statement.....	243
line-protocol statement.....	244
line-rate statement.....	244
linear-red-profile statement.....	245
linear-red-profiles statement.....	246
link modes.....	56
link protection	
non-revertive statement.....	279
revertive statement.....	316
link-layer-overhead statement.....	246
link-mode statement.....	247
usage guidelines.....	56, 88
link-protection statement.....	249
LMI packets <i>See</i> keepalives	
Lmi statement	
Frame Relay keepalives.....	252
Lmi-type statement.....	253
Local Management Interface packets <i>See</i> keepalives	
local name, configuring.....	77, 80
local password, configuring.....	80
local-name statement.....	254
usage guidelines.....	75, 78
local-password statement.....	255
lockout statement.....	255
log-prefix statement.....	256
logical interface scheduling.....	295
logical systems	
configuration statements.....	127
long-buildout statement.....	256
loop-timing statement.....	257

loopback statement

ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3.....	258
Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet.....	260
serial.....	261
loss-priority statement.....	261
low-plp-max-threshold statement.....	262
low-plp-threshold statement.....	263

M

mac statement.....	264
mac-learn-enable statement.....	265
management Ethernet interface	
configuring for M Series and T Series routers.....	87
configuring J Series Gigabit Ethernet interfaces.....	88
interface speed.....	87
link modes.....	56
manuals	
comments on.....	xxi
maximum transmission unit <i>See</i> MTU	
media MTUs.....	57
<i>See also</i> MTU	
media-specific interface information	
displaying.....	747
member interfaces	
expanding.....	50
inheritance.....	49
member statement	
usage guidelines.....	44
member-range statement	
usage guidelines.....	44
minimum-links statement.....	266
mixed VLAN tagging.....	218, 277
mlfr-uni-nni-bundle-options statement.....	267
MLPPP	
dynamic profile attachment.....	202
MLPPP statements	
dynamic-profile.....	202
modem-options statement.....	268
monitor-session statement	
usage guidelines.....	82
monitoring services interfaces	
physical interface properties.....	97
mpls statement.....	268
mrru statement.....	269

MTU	
physical interfaces.....	57
mtu statement.....	270
usage guidelines.....	57
Multi-Rate Ethernet interfaces	
MTU sizes.....	63
multicast-statistics	
aggregated Ethernet interfaces.....	272
aggregated SONET interfaces.....	272
multiservice-options statement.....	273
usage guidelines.....	97
N	
n391 statement.....	274
n392 statement.....	275
n393 statement.....	276
native-vlan-id statement.....	277
neighbor statement.....	278
no unidirectional statement.....	356
no-asynchronous-notification statement.....	155
no-cbit-parity statement.....	172
no-core-dump statement.....	182
usage guidelines.....	97
no-feac-loop-respond statement.....	217
no-flow-control statement.....	219
no-gratuitous-arp-reply statement.....	224
no-gratuitous-arp-request statement.....	278
no-keepalives statement.....	279
usage guidelines.....	91
no-long-buildout statement.....	256
no-loop-timing statement.....	257
no-loopback statement.....	260
no-mac-learn-enable statement.....	265
no-partition statement.....	280
no-payload-scrambler statement.....	293
no-source-filtering statement.....	331
no-syslog statement	
usage guidelines.....	97
no-termination-request statement.....	281
no-traps statement.....	353
usage guidelines.....	103
no-unframed statement.....	355
no-z0-increment statement.....	375
non-revertive statement.....	279
O	
OAM cells See keepalives	
oam-liveness statement.....	282
oam-period statement.....	283
oc-slice statement.....	284
open-timeout statement.....	284
optics-options statement.....	285
alarm.....	152
warning.....	369
output-priority-map statement.....	286
overflow statement	
configuring.....	95
receive bucket.....	286
transmit bucket.....	287
P	
paired-group statement.....	287
pap statement.....	288
parentheses, in syntax descriptions.....	xxi
partition statement.....	289
passive access, configuring.....	77, 80
passive statement	
CHAP.....	290
PAP.....	290
usage guidelines.....	75, 78
passive-monitor-mode statement.....	291
path-trace statement.....	292
payload-scrambler statement.....	293
per-unit scheduling.....	295
per-unit-scheduler statement.....	295
periodic statement.....	294
pfc statement.....	296
usage guidelines.....	86
physical interfaces	
accounting profiles.....	97
example configuration.....	97
byte encoding.....	170
C-bit parity mode.....	172
clock sources.....	93, 178
DCE.....	95, 191
descriptive text.....	55, 193
disabling.....	104
encapsulation.....	68
keepalives.....	91
leaky bucket properties.....	16, 95
link modes.....	56
meaningful alias name.....	152
media MTU size.....	57
mixed VLAN tagging.....	218, 277
PPP CHAP.....	75, 78
SNMP notifications.....	103
speed.....	87, 88, 89
statements.....	28

transitions, damping.....	98
unidirectional mode	
unidirectional link mode.....	17, 103
VLAN tagging.....	366
pic-type statement.....	296
plp-to-clp statement.....	298
plp1 statement.....	297
Point-to-Point Protocol encapsulation.....	68
encapsulation overhead.....	59
keepalives.....	91
on physical interfaces.....	69
PPP CHAP.....	75, 78
policer statement	
CoS.....	299
pool statement.....	300
pop-all-labels statement.....	301
PPP	
address and control field compression.....	84
dynamic profile attachment.....	202
protocol field compression.....	86
PPP statements	
dynamic-profile.....	202
ppp-options statement.....	302
usage guidelines.....	75, 78
PPPD processes, trace operations.....	82
premium	
policer.....	304
premium statement	
output priority map.....	303
preserve-interface statement.....	305
primary statement	
AS PIC or Multiservices PIC interfaces.....	305
priority	
schedulers.....	306
promiscuous-mode statement.....	307
protect-circuit statement.....	308
protocol field compression.....	86
protocol MTUs.....	57
See also MTU	
protocols connections	
configuration statements.....	132
pseudowires	
mixed VLAN tagging.....	218
PTX Series interfaces	
status information, displaying.....	631

Q

queue-depth statement.....	308
queue-length statement.....	309

R

rate statement.....	310
configuring.....	95
receive-bucket statement.....	310
configuring.....	95
red-differential-delay statement.....	311
redundancy-options statement.....	312
remote-loopback-respond statement.....	313
request statement.....	314
required-depth statement.....	315
revert-time statement.....	316
revertive statement.....	316
rfc-2615 statement.....	317
rts statement.....	317
rts-polarity statement.....	318
rtvbr statement.....	319

S

scheduler-maps statement	
for ATM2 IQ interfaces.....	320
SDH interfaces	
MTU sizes.....	60, 61, 62
secondary statement.....	320
serial interfaces	
status information, displaying.....	673
serial-options statement.....	321
services statement.....	322
services-options statement.....	323
shaping statement.....	324
shared-interface statement.....	325
SHDSL	
ATM-over-SHDSL interfaces	
status information, displaying.....	449
shdsl-options statement.....	325
show interfaces (10-Gigabit Ethernet)	
command.....	381
show interfaces (ATM) command.....	406
show interfaces (ATM-over-ADSL) command.....	441
show interfaces (ATM-over-SHDSL)	
command.....	449
show interfaces (Channelized DS3-to-DS0)	
command.....	457
show interfaces (Channelized DS3-to-DS1)	
command.....	468
show interfaces (Channelized E1 IQ)	
command.....	471
show interfaces (Channelized E1) command.....	475
show interfaces (Channelized OC12 IQ)	
command.....	486

show interfaces (Channelized OC12)		speed statement	
command.....	490	Ethernet.....	332
show interfaces (Channelized OC3 IQ and IQE)		MX Series DPC.....	333
command.....	494	SONET/SDH.....	334
show interfaces (Channelized STM1 IQ)		usage guidelines.....	87, 88, 89
command.....	513	spid1 statement.....	334
show interfaces (Channelized STM1)		spid2 statement.....	335
command.....	516	stacked-vlan-tagging statement.....	335
show interfaces (Channelized T1 IQ)		start-end-flag statement.....	336
command.....	531	static-tei-val statement.....	337
show interfaces (Channelized T3 IQ)		support, technical See technical support	
command.....	543	switch-options statement.....	338
show interfaces (discard) command.....	545	switch-port statement	
show interfaces (Fast Ethernet) command.....	550	access switching.....	339
show interfaces (Gigabit Ethernet)		switch-type statement.....	340
command.....	566	switching-mode statement.....	337
show interfaces (ISDN B-channel) command.....	589	syntax conventions.....	xx
show interfaces (ISDN BRI) command.....	595	syslog statement	
show interfaces (ISDN D-channel) command.....	599	usage guidelines.....	97
show interfaces (ISDN dialer) command.....	605	system-priority statement	
show interfaces (M Series and T		LACP.....	341
Series Management and Internal Ethernet)			
command.....	615	T	
show interfaces (PTX Series Packet Transport		T1 interfaces	
Routers) command.....	631	byte encoding.....	170
show interfaces (Serial) command.....	673	MTU sizes.....	60, 61, 62
show interfaces (SONET/SDH) command.....	645	status information, displaying.....	686
show interfaces (T1, E1, or DS) command.....	686	t1-options statement.....	342
show interfaces (T3 or E3) command.....	711	T3 interfaces	
show interfaces extensive command.....	728	C-bit parity mode.....	172
show interfaces media command.....	747	encapsulation.....	69
show interfaces terse command.....	750	MTU sizes.....	60, 61, 62
snext statement.....	326	status information, displaying.....	711
snr-margin statement.....	327	t3-options statement.....	345
SONET interfaces		t310 statement.....	343
clock sources.....	93	t391 statement.....	343
damping interface transitions.....	98	t392 statement.....	344
encapsulation.....	69	tag-protocol-id statement	
leaky bucket properties.....	16, 95	TPIDs expected to be sent or received.....	346
MTU sizes.....	60, 61, 62	TCC	
sonet-options statement.....	328	encapsulation.....	72
SONET/SDH interfaces		technical support	
interface speed.....	89	contacting JTAC.....	xxii
status information, displaying		tei-option statement.....	347
standard.....	645	threshold statement.....	347
source-address-filter statement.....	330	configuring.....	95
source-filtering statement.....	331	timeslots statement.....	348
		tm statement.....	349
		tm-polarity statement.....	349

traceoptions statement	
interfaces.....	350
PPPD processes.....	82
tracing operations	
PPPD.....	82
transitions	
damping.....	98
translational cross-connect encapsulation <i>See</i> TCC,	
encapsulation	
transmit clock sources.....	93
transmit-bucket statement.....	351
configuring.....	95
transmit-clock statement.....	352
transmit-weight statement	
ATM2 IQ CoS Forwarding Class.....	352
traps statement.....	353
usage guidelines.....	103
Tri-Rate Ethernet interfaces	
interface speed.....	89
MTU sizes.....	63
trigger statement.....	354
trigger-link-failure statement.....	355

U

unframed statement.....	355
unidirectional link mode.....	103
overview.....	17
unidirectional statement.....	356
unit statement.....	357

V

vbr statement.....	364
vc-cos-mode statement.....	365
VLAN CCC encapsulation	
encapsulation overhead.....	59, 60
physical interfaces.....	69
VLAN tagging.....	366
vlan-tagging statement.....	366
vlan-tags-outer statement.....	366
vlan-vci-tagging statement.....	367
vpi statement	
ATM CCC cell-relay promiscuous mode.....	367
vtmapping statement.....	368

W

warning statement.....	369
wavelength statement.....	370
working-circuit statement.....	374

Y

yellow-differential-delay statement.....	374
--	-----

Z

z0-increment statement.....	375
-----------------------------	-----

