



Network Management and Monitoring Feature Guide for QFX10000 Switches

Release

15.1X53



Modified: 2016-05-22

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Network Management and Monitoring Feature Guide for QFX10000 Switches
15.1X53
Copyright © 2016, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xv
	Documentation and Release Notes	xv
	Supported Platforms	xv
	Using the Examples in This Manual	xv
	Merging a Full Example	xvi
	Merging a Snippet	xvi
	Documentation Conventions	xvii
	Documentation Feedback	xix
	Requesting Technical Support	xix
	Self-Help Online Tools and Resources	xix
	Opening a Case with JTAC	xx
Part 1	Overview	
Chapter 1	Understanding Network Management	3
	Understanding Device and Network Management Features	3
Chapter 2	Junos Space	7
	Understanding Junos Space Support	7
Part 2	Configuration	
Chapter 3	Configuring Network Management	11
	Understanding Tracing and Logging Operations	11
	Configuring Console and Auxiliary Port Properties	13
	Configuring SSH Service for Remote Access to the Router or Switch	14
	Configuring the Root Login Through SSH	15
	Configuring the SSH Protocol Version	15
	Configuring the Client Alive Mechanism	15
	Configuring Telnet Service for Remote Access to a Switch	16
	Pinging Hosts	16
	Monitoring Traffic Through the Router or Switch	17
	Displaying Real-Time Statistics About All Interfaces on the Router or Switch	18
	Displaying Real-Time Statistics About an Interface on the Router or Switch	18
Chapter 4	Configuring Automation	21
	Overview of Junos Automation Enhancements	21
	Features of the Junos Automation Enhancements	21
	Overview of Python with Junos Automation Enhancements	22
	Understanding Automation Scripts Support	25

	How Commit Scripts Work	26
	Commit Script Input	27
	Commit Script Output	27
	Commit Scripts and the Junos OS Commit Model	28
	Standard Commit Model	28
	Commit Model with Commit Scripts	29
	Avoiding Potential Conflicts When Using Multiple Commit Scripts	31
	Overview of Generating Persistent or Transient Configuration Changes	32
	Differences Between Persistent and Transient Changes	32
	Interaction of Configuration Changes and Configuration Groups	35
	Tag Elements and Templates for Generating Changes	36
	Required Boilerplate for Commit Scripts	36
	How Op Scripts Work	38
	Required Boilerplate for Op Scripts	38
	Installing Junos OS Software with Junos Automation Enhancements	40
	Invoking the Python Interpreter	44
	Controlling the Execution of Commit Scripts	45
	Enabling Commit Scripts to Execute	45
	Removing Commit Scripts from the Configuration	46
	Deactivating Commit Scripts	47
	Activating Inactive Commit Scripts	47
	Displaying Commit Script Output	47
Chapter 5	Configuring sFlow Technology	51
	Understanding How to Use sFlow Technology for Network Monitoring on a Switch	51
	Sampling Mechanism and Architecture of sFlow Technology on Switches	51
	Adaptive Sampling	53
	sFlow Agent Address Assignment	54
	sFlow Limitations on Switches	54
	Example: Monitoring Network Traffic Using sFlow Technology	55
	Configuring sFlow Technology	59
Chapter 6	Configuring SNMP	61
	Utility MIB	62
	SNMPv3 Overview	62
	Minimum SNMPv3 Configuration on a Device Running Junos OS	63
	Understanding RMON	65
	RMON Overview	65
	Alarm Thresholds and Events	66
	RMON MIB Event, Alarm, Log, and History Control Tables	66
	Understanding Health Monitoring	69
	SNMP MIBs Support	70
	MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	70
	MIBs Supported on QFabric Systems	80

SNMP Traps Support	86
SNMP Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	86
SNMPv1 Traps	86
SNMPv2 Traps	91
SNMP Traps Supported on QFabric Systems	95
MIB Objects for the QFX Series	99
QFX Series Standalone Switches	99
QFabric Systems	99
QFabric System QFX3100 Director Device	100
QFabric System QFX3008-I Interconnect Device	100
QFabric System QFX3600-I Interconnect Device	100
QFabric System Node Devices	101
Configuring SNMP	101
Configuring the SNMP Community String	105
Configuring SNMP Trap Groups	106
Adding a Group of Clients to an SNMP Community	107
Configuring the Interfaces on Which SNMP Requests Can Be Accepted	108
Configuring MIB Views	108
Configuring RMON Alarms and Events	109
Configuring SNMP	110
Configuring an Event	110
Configuring an Alarm	111
Configuring Health Monitoring	111
Creating SNMPv3 Users	112
Configuring Access Privileges for a Group	113
Assigning a Security Name to a Group	115
Configuring SNMPv3 Traps on a Device Running Junos OS	116
Configuring SNMP Informs	117
Monitoring RMON MIB Tables	118
Monitoring SNMP	118
Tracing SNMP Activity on a Device Running Junos OS	120
Configuring the Number and Size of SNMP Log Files	121
Configuring Access to the Log File	121
Configuring a Regular Expression for Lines to Be Logged	122
Configuring the Trace Operations	122
Using the Enterprise-Specific Utility MIB to Enhance SNMP Coverage	123
Example: Configuring SNMP	125
Chapter 7	
Configuring System Logging	129
Overview of Junos OS System Log Messages	130
Overview of Single-Chassis System Logging Configuration	130
Junos OS Minimum System Logging Configuration	132
Junos OS System Log Configuration Statements	132
Adding a Text String to System Log Messages	133
Directing System Log Messages to a Log File	134
Directing System Log Messages to a Remote Machine	135
Directing System Log Messages to a User Terminal	135
Directing System Log Messages to the Console	136

Disabling the System Logging of a Facility	136
Displaying a Log File from a Single-Chassis System	137
Including Priority Information in System Log Messages	138
Including the Year or Millisecond in Timestamps	139
Logging Messages in Structured-Data Format	140
Interpreting Messages Generated in Structured-Data Format	141
Interpreting Messages Generated in Standard Format	144
Specifying Log File Size, Number, and Archiving Properties	145
Specifying the Facility and Severity of Messages to Include in the Log	146
Junos OS System Logging Facilities and Message Severity Levels	148
Default Facilities for System Log Messages Directed to a Remote Destination	150
Junos OS System Log Alternate Facilities for Remote Logging	150
Changing the Alternative Facility Name for System Log Messages Directed to a Remote Destination	151
Using Regular Expressions to Refine the Set of Logged Messages	153
Managing Host OS System Log and Core Files	155
Viewing Log Files On the Host OS System	156
Copying Log Files From the Host System To the Switch	156
Viewing Core Files On the Host OS System	156
Copying Core Files From the Host System To the Switch	156
Cleaning Up Temporary Files on the Host OS	157
Monitoring System Log Messages	157
Examples: Configuring System Logging	158
Examples: Assigning an Alternative Facility	160
Example: Configuring System Log Messages	161

Part 3

Configuration Statements

Chapter 8

Network Management	167
connection-limit	168
destination-override	169
no-remote-trace	169
protocol-version	170
rate-limit	171
ssh	172
telnet	173
tracing	174

Chapter 9

Automation	175
allow-transients	176
apply-macro	177
checksum	178
command	179
commit	180
description	181
direct-access	181
file (Commit Scripts)	182
file (Op Scripts)	183
no-allow-url	184

	op	185
	optional	186
	refresh (Commit Scripts)	186
	refresh (Op Scripts)	187
	refresh-from (Commit Scripts)	187
	refresh-from (Op Scripts)	188
	scripts	189
	source (Commit Scripts)	191
	source (Op Scripts)	191
Chapter 10	sFlow Technology	193
	agent-id	193
	collector (sFlow Technology)	194
	interfaces (sFlow)	195
	polling-interval	196
	sample-rate	197
	sflow	198
	source-ip	199
	traceoptions (sFlow Technology)	200
	udp-port	201
Chapter 11	SNMP	203
	access (SNMP)	206
	address (SNMP)	206
	address-mask	207
	agent-address	207
	alarm (SNMP RMON)	208
	authentication-md5	209
	authentication-none	210
	authentication-password	211
	authentication-sha	212
	authorization	213
	bucket-size	214
	categories	215
	client-list	215
	client-list-name	216
	clients	216
	commit-delay	217
	community (SNMP)	218
	community (RMON)	219
	community-name	220
	contact	221
	description	221
	description (RMON)	222
	destination-port (SNMP)	222
	engine-id	223
	event	224
	falling-event-index (RMON)	225
	falling-threshold (Health Monitor)	226
	falling-threshold (RMON)	227

falling-threshold-interval	228
filter-duplicates	228
filter-interfaces	229
group (Defining Access Privileges for an SNMPv3 Group)	229
group (Configuring Group Name)	230
health-monitor	231
history	232
interface (SNMP)	233
interface (RMON)	234
interval (Health Monitor)	235
interval (RMON)	236
local-engine	237
location	238
message-processing-model	238
name	239
nonvolatile	239
notify	240
notify-filter (Applying to the Management Target)	241
notify-filter (Configuring the Profile Name)	241
notify-view	242
oid	242
oid (SNMPv3)	243
owner	244
parameters	244
port	245
privacy-3des	246
privacy-aes128	247
privacy-des	248
privacy-none	248
privacy-password	249
read-view	250
remote-engine	251
request-type	252
retry-count	253
rising-event-index	254
rising-threshold (Health Monitor)	255
rising-threshold (RMON)	256
rmon	257
sample-type	258
security-level (Defining Access Privileges)	259
security-level (Generating SNMP Notifications)	260
security-model (Access Privileges)	261
security-model (Group)	262
security-model (SNMP Notifications)	262
security-name (Community String)	263
security-name (Security Group)	264
security-name (SNMP Notifications)	265
security-to-group	266
snmp	267

	snmp-community	271
	source-address (SNMP)	271
	startup-alarm	272
	syslog-subtag	273
	tag (Configuring Notification Targets)	273
	tag (Configuring the SNMP Community)	274
	tag-list	274
	target-address	275
	target-parameters	276
	targets	277
	timeout	277
	traceoptions (SNMP)	278
	trap-group	280
	trap-options	281
	type (RMON Notification)	282
	type	283
	user	283
	usm	284
	v3	286
	vacm	288
	variable	289
	version	290
	view (Configuring a MIB View)	291
	view (Associating MIB View with a Community)	292
	write-view	292
Chapter 12	System Logging	293
	archive (All System Log Files)	294
	archive (Individual System Log File)	296
	console (System Logging)	297
	explicit-priority	298
	facility-override	298
	file (System Logging)	299
	files	300
	host	301
	log-prefix (System)	303
	match	303
	size (System)	304
	structured-data	305
	syslog (System)	306
	time-format	308
	user (System Logging)	309
Part 4	Operational Commands	
Chapter 13	Network Management	313
	monitor traffic	314
	ping	326

Chapter 14	sFlow Technology	331
	clear sflow collector statistics	332
	show sflow	333
	show sflow collector	335
	show sflow interface	336
Chapter 15	SNMP	339
	clear snmp history	340
	clear snmp statistics	341
	request snmp spoof-trap	343
	request snmp utility-mib clear instance	349
	request snmp utility-mib set instance	350
	show snmp health-monitor	351
	show snmp inform-statistics	356
	show snmp mib	358
	show snmp rmon	361
	show snmp rmon history	365
	show snmp statistics	366
	show snmp v3	374
Chapter 16	System Logging	377
	request app-engine file-copy (crash log) from-jhost to-vjunos	378
	request app-engine cleanup	380
	show app-engine crash	382
	show app-engine logs	384
	show log	386

List of Figures

Part 2	Configuration	
Chapter 4	Configuring Automation	21
	Figure 1: Commit Script Input and Output	26
	Figure 2: Standard Commit Model	29
	Figure 3: Commit Model with Commit Scripts Added	29
	Figure 4: Configuration Evaluation by Multiple Commit Scripts	31
	Figure 5: Op Script Input and Output	38
Chapter 5	Configuring sFlow Technology	51
	Figure 6: sFlow Technology Monitoring System	56
Chapter 6	Configuring SNMP	61
	Figure 7: Setting Thresholds	66
	Figure 8: Inform Request and Response	117

List of Tables

	About the Documentation	xv
	Table 1: Notice Icons	xvii
	Table 2: Text and Syntax Conventions	xvii
Part 1	Overview	
Chapter 1	Understanding Network Management	3
	Table 3: Device and Network Management Features on the QFX Series, OCX Series, and EX4600	3
Part 2	Configuration	
Chapter 3	Configuring Network Management	11
	Table 4: Output Control Keys for the monitor interface Command	19
Chapter 4	Configuring Automation	21
	Table 5: Differences Between Persistent and Transient Changes	33
	Table 6: Commit Script Configuration and Operational Mode Commands	47
Chapter 6	Configuring SNMP	61
	Table 7: RMON Event Table	67
	Table 8: RMON Alarm Table	67
	Table 9: jnxRmon Alarm Table	68
	Table 10: RMON History Control Table	68
	Table 11: Monitored Object Instances	69
	Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	70
	Table 13: Juniper Networks Enterprise-Specific MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	76
	Table 14: Standard MIBs Supported on QFabric Systems	80
	Table 15: Juniper Networks Enterprise-Specific MIBs Supported on QFabric Systems	84
	Table 16: Standard SNMP Version 1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	87
	Table 17: Enterprise-Specific SNMPv1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	89
	Table 18: Standard SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	91
	Table 19: Enterprise-Specific SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis	93
	Table 20: Standard SNMPv2 Traps Supported on QFabric Systems	96
	Table 21: Enterprise-Specific SNMPv2 Traps Supported on QFabric Systems	97

	Table 22: SNMP Tracing Flags	122
Chapter 7	Configuring System Logging	129
	Table 23: Minimum Configuration Statements for System Logging	132
	Table 24: Fields in Structured-Data Messages	141
	Table 25: Facility and Severity Codes in the priority-code Field	143
	Table 26: Fields in Standard-Format Messages	144
	Table 27: Junos OS System Logging Facilities	147
	Table 28: System Log Message Severity Levels	148
	Table 29: Junos OS System Logging Facilities	148
	Table 30: System Log Message Severity Levels	149
	Table 31: Default Facilities for Messages Directed to a Remote Destination	150
	Table 32: Facilities for the facility-override Statement	150
	Table 33: Regular Expression Operators for the match Statement	154
Part 4	Operational Commands	
Chapter 13	Network Management	313
	Table 34: Match Conditions for the monitor traffic Command	316
	Table 35: Logical Operators for the monitor traffic Command	318
	Table 36: Arithmetic and Relational Operators for the monitor traffic Command	319
Chapter 14	sFlow Technology	331
	Table 37: show sflow Output Fields	333
	Table 38: show sflow collector Output Fields	335
	Table 39: show sflow interface Output Fields	336
Chapter 15	SNMP	339
	Table 40: show snmp health-monitor Output Fields	351
	Table 41: show snmp inform-statistics Output Fields	356
	Table 42: show snmp mib Output Fields	359
	Table 43: show snmp rmon Output Fields	361
	Table 44: show snmp statistics Output Fields	367
	Table 45: show snmp statistics subagents Output Fields	370
	Table 46: show snmp v3 Output Fields	375
Chapter 16	System Logging	377
	Table 47: request app-engine cleanup Output Fields	380
	Table 48: show app-engine crash Output Fields	382
	Table 49: show app-engine logs Output Fields	384

About the Documentation

- Documentation and Release Notes on page xv
- Supported Platforms on page xv
- Using the Examples in This Manual on page xv
- Documentation Conventions on page xvii
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- [QFX Series](#)

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:


```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xvii defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xvii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host> show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Understanding Network Management on page 3](#)
- [Junos Space on page 7](#)

CHAPTER 1

Understanding Network Management

- [Understanding Device and Network Management Features on page 3](#)

Understanding Device and Network Management Features

After you install a QFX Series product, OCX Series device, or EX4600 switch in your network, you need to manage the device. The products support features that you use to manage the device within the network, including the management of configuration, system performance, fault monitoring, and remote access.

[Table 3 on page 3](#) lists the device and network management features on the QFX Series, OCX Series, and EX4600.

Table 3: Device and Network Management Features on the QFX Series, OCX Series, and EX4600

Feature	Typical Uses	Documentation
AI-Scripts and Advanced Insight Manager (AIM)—Automatically detect and monitor faults on the switch, and depending on the configuration on the AIM application, send notifications of potential problems, and submit problem reports to Juniper Support Systems.	Fault management	Advanced Insight Scripts (AI-Scripts) Release Notes
Alarms and LEDs on the switch—Show status of hardware components and indicate warning or error conditions.	Fault management	Chassis Alarm Messages on a QFX3500 Device
Firewall filters—Control the packets that are sent to and from the network, balance network traffic, and optimize performance.	Performance management	<ul style="list-style-type: none">• Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices• Overview of Firewall Filters
In-band management—Enables connection to the switch using the same interfaces through which customer traffic flows. Communication between the switch and a remote console is typically enabled using SSH and Telnet services. SSH provides secure encrypted communications, whereas Telnet provides unencrypted, and therefore less secure, access to the switch.	Remote access management	<ul style="list-style-type: none">• Configuring SSH Service for Remote Access to the Router or Switch on page 14• Configuring Telnet Service for Remote Access to a Router or Switch

Table 3: Device and Network Management Features on the QFX Series, OCX Series, and EX4600 (continued)

Feature	Typical Uses	Documentation
Juniper Networks Junos OS automation scripts—Configuration and operations automation tools provided by Junos OS. These tools include commit scripts, operation scripts, event scripts, and event policies. Commit scripts enforce custom configuration rules, whereas operation scripts, event policies, and event scripts automate network troubleshooting and management.	<ul style="list-style-type: none"> • Configuration management • Performance management • Fault management 	<i>Automation Scripting Feature Guide</i>
Junos OS command-line interface (CLI)—CLI configuration statements that enable you to configure the switch based on your networking requirements, such as security, service, and performance.	<ul style="list-style-type: none"> • Configuration management • Performance management • User access management • Remote access management 	<i>CLI User Guide</i>
Junos Space software—Multipurpose GUI-based network management system that includes a base platform, the Network Application Platform, and other optional applications such as Ethernet Design, Service Now, Service Insight, and Virtual Control.	<ul style="list-style-type: none"> • Configuration management • Performance management • Fault management 	<ul style="list-style-type: none"> • Understanding Junos Space Support on page 7 • Junos Space Network Application Platform User Guide
NOTE: Junos Space does not support the OCX Series.		
Junos XML API—XML representation of Junos OS configuration statements and operational mode commands. Junos XML configuration tag elements are the content to which the Junos XML protocol operations apply. Junos XML operational tag elements are equivalent in function to operational mode commands in the CLI, which you can use to retrieve status information for a device. The Junos XML API also includes tag elements that are the counterpart to Junos CLI configuration statements.	<ul style="list-style-type: none"> • Configuration management • Performance management • Fault management 	<ul style="list-style-type: none"> • Junos XML API Configuration Developer Reference • Junos XML API Operational Developer Reference
NETCONF XML management protocol—XML-based management protocol that client applications use to request and change configuration information on routing, switching, and security platforms running Junos OS. The NETCONF XML management protocol defines basic operations that are equivalent to Junos OS CLI configuration mode commands. Client applications use the protocol operations to display, edit, and commit configuration statements (among other operations), just as administrators use CLI configuration mode commands such as show , set , and commit to perform those operations.	<ul style="list-style-type: none"> • Configuration management • Performance management • Fault management 	<i>NETCONF XML Management Protocol Developer Guide</i>

Table 3: Device and Network Management Features on the QFX Series, OCX Series, and EX4600 (*continued*)

Feature	Typical Uses	Documentation
<p>Operational mode commands—May be used to do the following:</p> <ul style="list-style-type: none"> Monitor switch performance. For example, the show chassis routing-engine command shows the CPU utilization of the Routing Engine. High CPU utilization of the Routing Engine can affect performance of the switch. View current activity and status of the device or network. For example, you can use the ping command to monitor and diagnose connectivity problems, and the traceroute command to locate points of failure on the network. 	<ul style="list-style-type: none"> Performance management Fault management 	CLI Explorer
<p>Out-of-band management—Enables connection to the switch through a management interface. Out-of-band management is supported on two dedicated management Ethernet interfaces as well as on the console and auxiliary ports. The management Ethernet interfaces connect directly to the Routing Engine. No transit traffic is allowed through the interfaces, separating customer and management traffic and ensuring that congestion or failures in the transit network do not affect the management of the switch.</p>	Remote access management	<ul style="list-style-type: none"> Connecting a QFX3500 Device to a Network for Out-of-Band Management Connecting a QFX Series Device to a Management Console Configuring Console and Auxiliary Port Properties on page 13
<p>SNMP Configuration Management MIB—Provides notification for configuration changes in the form of SNMP traps. Each trap contains the time at which the configuration change was committed, the name of the user who made the change, and the method by which the change was made. A history of the last 32 configuration changes is kept in jnxCmChgEvent Table.</p>	Configuration management	SNMP MIBs and Traps Reference
<p>SNMP MIBs and traps—Enable the monitoring of network devices from a central location. Use SNMP requests such as get and walk to monitor and view system activity.</p> <p>The QFX3500 switch supports SNMP Version 1 (v1), v2, and v3, and both standard and Juniper Networks enterprise-specific MIBs and traps.</p>	Fault management	<ul style="list-style-type: none"> SNMP MIBs and Traps Reference Understanding the Implementation of SNMP

Table 3: Device and Network Management Features on the QFX Series, OCX Series, and EX4600 (*continued*)

Feature	Typical Uses	Documentation
System log messages—Log details of system and user events, including errors. You can specify the severity and type of system log messages you wish to view or save, and configure the output to be sent to local or remote hosts.	<ul style="list-style-type: none">• Fault management• User access management	<ul style="list-style-type: none">• <i>Junos OS System Log Messages Reference</i>• Overview of Junos OS System Log Messages on page 130• Overview of Single-Chassis System Logging Configuration on page 130

CHAPTER 2

Junos Space

- [Understanding Junos Space Support on page 7](#)

Understanding Junos Space Support

The Juniper Networks Junos Space application, running on a JA1500 appliance or a Junos Space Virtual Appliance, is a comprehensive platform for building and deploying applications for collaboration, productivity, and network infrastructure and operations management. Junos Space provides a runtime environment implemented as a fabric of virtual and physical appliances.

The Junos Space Network Management Platform software comprises various applications for network management and configuration, including:

- Junos Space Administration—Provides management of Junos Space fabric, databases, licenses, applications, authentication servers, tags, permission labels, DMI schemas, and troubleshooting.
- Network Director—Provides unified management of supported Juniper Networks devices in your network. By providing full network life cycle management, Network Director simplifies the discovery, configuration, visualization, monitoring, and administration of large networks.
- Service Automation—Provides an end-to-end solution designed to streamline operations and enable proactive network management for Junos OS devices. The solution consists of Advanced Insight Scripts (AI-Scripts), Junos Space Service Now and Service Insight applications, and Juniper Support Systems (JSS).



NOTE: Do not install Junos Space and AI-Scripts on the control plane network EX4200 switches or EX4200 Virtual Chassis in a QFX3000 QFabric system

Before you can use Junos Space Network Director to manage the QFX Series device, you must ensure that the configuration on the device meets the requirements for all managed devices. For example:

- The device configuration has a static management IP address that is reachable from the Junos Space server.
- There is a user with full administrative privileges for Junos Space administration.
- SNMP is enabled (only if you plan on using SNMP as part of the device discovery).
- In Junos Space, set up a default device management interface (DMI) schema for the QFX Series device.

For more information about Network Director requirements, see the *Network Director Quick Start Guide* at:

http://www.juniper.net/techpubs/en_US/network-director1.5/information-products/pathway-pages/index.html

For more information about Junos Space, go to:

http://www.juniper.net/techpubs/en_US/release-independent/junos-space/index.html

**Related
Documentation**

- [Configuring SNMP on page 101](#)
- [Configuring SSH Service for Remote Access to the Router or Switch on page 14](#)

PART 2

Configuration

- [Configuring Network Management on page 11](#)
- [Configuring Automation on page 21](#)
- [Configuring sFlow Technology on page 51](#)
- [Configuring SNMP on page 61](#)
- [Configuring System Logging on page 129](#)

CHAPTER 3

Configuring Network Management

- [Understanding Tracing and Logging Operations on page 11](#)
- [Configuring Console and Auxiliary Port Properties on page 13](#)
- [Configuring SSH Service for Remote Access to the Router or Switch on page 14](#)
- [Configuring Telnet Service for Remote Access to a Switch on page 16](#)
- [Pinging Hosts on page 16](#)
- [Monitoring Traffic Through the Router or Switch on page 17](#)

Understanding Tracing and Logging Operations

Tracing and logging operations enable you to track events that occur in the switch—both normal operations and error conditions—and to track the packets that are generated by or passed through the switch. The results of tracing and logging operations are placed in files in the `/var/log` directory on the switch.

The Junos OS supports remote tracing for the following processes:

- **chassisd**—Chassis-control process
- **eventd**—Event-processing process
- **cosd**—Class-of-service process

You configure remote tracing by using the **tracing** statement at the **[edit system]** hierarchy level.



NOTE: The **tracing** statement is not supported on the QFX3000 QFabric system.

If you enabled remote tracing but wish to disable it for specific processes on the switch, use the **no-remote-trace** statement at the **[edit process-name traceoptions]** hierarchy level. This feature does not alter local tracing functionality in any way, and logging files are stored on the switch.

Logging operations use a system logging mechanism similar to the UNIX **syslogd** utility to record systemwide, high-level operations, such as interfaces going up or down and users logging in to or out of the switch. You configure these operations by using the **syslog**

statement at the **[edit system]** hierarchy level and by using the **options** statement at the **[edit ethernet-switching-options]** hierarchy level.

Tracing operations record more detailed information about the operations of the switch, including packet forwarding and routing information. To configure tracing operations, use the **traceoptions** statement.



NOTE: The **traceoptions** statement is not supported on the QFX3000 QFabric system.

You can define tracing operations in different portions of the switch configuration:

- **SNMP agent activity tracing operations**—Define tracing of the activities of SNMP agents on the switch. You configure SNMP agent activity tracing operations at the **[edit snmp]** hierarchy level.
- **Global switching tracing operations**—Define tracing for all switching operations. You configure global switching tracing operations at the **[edit ethernet-switching-options]** hierarchy level of the configuration.
- **Protocol-specific tracing operations**—Define tracing for a specific routing protocol. You configure protocol-specific tracing operations in the **[edit protocols]** hierarchy when configuring the individual routing protocol. Protocol-specific tracing operations override any equivalent operations that you specify in the global **traceoptions** statement. If there are no equivalent operations, they supplement the global tracing options. If you do not specify any protocol-specific tracing, the routing protocol inherits all the global tracing operations.
- **Tracing operations within individual routing protocol entities**—Some protocols allow you to define more granular tracing operations. For example, in Border Gateway Protocol (BGP), you can configure peer-specific tracing operations. These operations override any equivalent BGP-wide operations or, if there are no equivalents, supplement them. If you do not specify any peer-specific tracing operations, the peers inherit, first, all the BGP-wide tracing operations and, second, the global tracing operations.
- **Interface tracing operations**—Define tracing for individual interfaces and for the interface process itself. You define interface tracing operations at the **[edit interfaces]** hierarchy level of the configuration.
- **Remote tracing**—To enable system-wide remote tracing, configure the **destination-override syslog host** statement at the **[edit system tracing]** hierarchy level. This specifies the remote host running the system log process (syslogd), which collects the traces. Traces are written to files on the remote host in accordance with the syslogd configuration in **/etc/syslog.conf**. By default, remote tracing is not configured.

To override the system-wide remote tracing configuration for a particular process, include the **no-remote-trace** statement at the **[edit process-name traceoptions]** hierarchy. When **no-remote-trace** is enabled, the process does local tracing.

To collect traces, use the **local0** facility as the selector in the **/etc/syslog.conf** file on the remote host. To separate traces from various processes into different files, include the process name or trace-file name (if it is specified at the **[edit process-name**

traceoptions file] hierarchy level) in the Program field in the `/etc/syslog.conf` file. If your system log server supports parsing hostname and program name, then you can separate traces from the various processes.



NOTE: During a commit check, warnings about the **traceoptions** configuration (for example, mismatch in trace file sizes or number of trace files) are not displayed on the console. However, these warnings are logged in the system log messages when the new configuration is committed.

Related Documentation

- [Overview of Junos OS System Log Messages on page 130](#)

Configuring Console and Auxiliary Port Properties

The console port and auxiliary port on a switch provide out-of-band remote access to the switch. You can configure the console and auxiliary ports so that an external data terminal may be connected to the switch. The console port is enabled by default. The console port speed is 9600 baud, except on OCX Series devices, on which it is 115200 baud. The auxiliary port is disabled by default.

By default, terminal connections to the console and auxiliary ports are secure. When you configure the console and auxiliary ports as insecure, root logins are not allowed to establish terminal connections, and superusers and anyone with a user identifier (UID) of 0 are not allowed to establish terminal connections in multiuser mode.

To configure the console and auxiliary port properties on the switch:

1. To specify that the console port session should terminate if the connection to the data carrier is lost:

```
[edit system ports]
user@switch# set console log-out-on-disconnect
```

2. To specify the auxiliary port terminal type:

```
[edit system ports]
user@switch# set auxiliary type (ansi | small-xterm | vt100 | xterm)
```

For example, to specify the auxiliary port terminal type of **xterm** with a display of 80 columns by 65 rows:

```
[edit system ports]
user@switch# set auxiliary type xterm
```

3. To check the configuration:

```
[edit system ports]
user@switch# show
console log-out-on-disconnect;
auxiliary type xterm;
```

- Related Documentation**
- *auxiliary*
 - *console (Physical Port)*
 - *ports*

Configuring SSH Service for Remote Access to the Router or Switch

To configure the router or switch to accept SSH as an access service, include the **ssh** statement at the **[edit system services]** hierarchy level:

```
[edit system services]
ssh {
  ciphers [ cipher-1 cipher-2 cipher-3 ... ]
  client-alive-count-max number;
  client-alive-interval seconds;
  connection-limit limit;
  hostkey-algorithm <algorithm | no-algorithm>;
  key-exchange algorithm;
  macs algorithm;
  max-sessions-per-connection number;
  no-passwords;
  no-tcp-forwarding;
  protocol-version [v1 v2];
  rate-limit limit;
  root-login <allow | deny | deny-password>;
}
```

By default, the router or switch supports a limited number of simultaneous SSH sessions and connection attempts per minute. Use the following statements to change the defaults:

- **connection-limit *limit***—Maximum number of simultaneous connections per protocol (IPv4 and IPv6). The range is a value from 1 through 250. The default is 75. When you configure a connection limit, the limit is applicable to the number of SSH sessions per protocol (IPv4 and IPv6). For example, a connection limit of 10 allows 10 IPv6 SSH sessions and 10 IPv4 SSH sessions.
- **max-sessions-per-connection *number***—Include this statement to specify the maximum number of SSH sessions allowed per single SSH connection. This allows you to limit the number of cloned sessions tunneled within a single SSH connection. The default value is 10.
- **rate-limit *limit***—Maximum number of connection attempts accepted per minute (a value from 1 through 250). The default is 150. When you configure a rate limit, the limit is applicable to the number of connection attempts per protocol (IPv4 and IPv6). For example, a rate limit of 10 allows 10 IPv6 SSH session connection attempts per minute and 10 IPv4 SSH session connection attempts per minute.

By default, a user can create an SSH tunnel over a CLI session to a router running Junos OS via SSH. This type of tunnel could be used to forward TCP traffic, bypassing any firewall filters or ACLs, allowing access to resources beyond the router. Use the **no-tcp-forwarding** option to prevent a user from creating an SSH tunnel to a router via SSH.

For information about other configuration settings, see the following topics:

- [Configuring the Root Login Through SSH on page 15](#)
- [Configuring the SSH Protocol Version on page 15](#)
- [Configuring the Client Alive Mechanism on page 15](#)

Configuring the Root Login Through SSH

By default, users are allowed to log in to the router or switch as **root** through SSH. To control user access through SSH, include the **root-login** statement at the **[edit system services ssh]** hierarchy level:

```
[edit system services ssh]
root-login (allow | deny | deny-password);
```

allow—Allows users to log in to the router or switch as root through SSH. The default is **allow**.

deny—Disables users from logging in to the router or switch as root through SSH.

deny-password—Allows users to log in to the router or switch as root through SSH when the authentication method (for example, RSA) does not require a password.

Configuring the SSH Protocol Version

By default, only version 2 of the SSH protocol is enabled. To enable version 1, you must explicitly configure it.

To configure the router or switch to use version 1 and 2 of the SSH protocol, include the **protocol-version** statement and specify **v1** and **v2** at the **[edit system services ssh]** hierarchy level:

```
[edit system services ssh]
protocol-version [ v1 v2 ];
```

To configure the router or switch to use only version 1 of the SSH protocol, include the **protocol-version** statement and specify **v1** at the **[edit system services ssh]** hierarchy level:

```
[edit system services ssh]
protocol-version [ v1 ];
```

For J Series Services Routers, the export license software supports SSH version 1 only.

Configuring the Client Alive Mechanism

The client alive mechanism is valuable when the client or server depends on knowing when a connection has become inactive. It differs from the standard keepalive mechanism because the client alive messages are sent through the encrypted channel. The client alive mechanism is not enabled at default. To enable it, configure the **client-alive-count-max** and the **client-alive-interval**. This option applies to SSH protocol version 2 only.

In the following example, unresponsive SSH clients will be disconnected after approximately 100 seconds (20 x 5).

```
[edit system services ssh]
client-alive-count-max 5;
client-alive-interval 20;
```

Configuring Telnet Service for Remote Access to a Switch

Telnet provides unencrypted access to network devices. Configuring Telnet service for a switch enables in-band remote access to the switch.

By default, the switch supports a limited number of simultaneous Telnet sessions and connection attempts per minute. Optionally, you can change the default Telnet settings by configuring the connection limit and rate limit at the **[edit system services telnet]** hierarchy level.

The connection limit is the maximum number of simultaneous connections per protocol (IPv4). The range is from 1 through 250. The default is 75.

The rate limit is the maximum number of connection attempts accepted per minute per protocol. The range is from 1 through 250. The default is 150.

To configure Telnet service:

1. To specify the connection limit:

```
[edit system services]
user@switch# set telnet connection-limit connection-limit
```

2. To specify the rate limit:

```
[edit system services]
user@switch# set telnet rate-limit rate-limit
```

3. Check that the Telnet connection limit and rate limit show the values you specified:

```
[edit system services]
user@switch# show
telnet {
  connection-limit 50;
  rate-limit 100;
}
```

Related Documentation

- *Understanding Telnet on the QFabric System*
- *Example: Limiting the Number of Login Attempts for SSH and Telnet Sessions to Prevent Unauthorized Access*

Pinging Hosts

Purpose Use the CLI **ping** command to verify that a host can be reached over the network. This command is useful for diagnosing host and network connectivity problems. The switch sends a series of Internet Control Message Protocol (ICMP) echo (ping) requests to a specified host and receives ICMP echo responses.

Action To use the **ping** command to send four requests (ping count) to host3:
ping *host* *count* *number*

Sample Output

```
ping host3 count 4
user@switch> ping host3 count 4
PING host3.site.net (176.26.232.111): 56 data bytes
64 bytes from 176.26.232.111: icmp_seq=0 ttl=122 time=0.661 ms
64 bytes from 176.26.232.111: icmp_seq=1 ttl=122 time=0.619 ms
64 bytes from 176.26.232.111: icmp_seq=2 ttl=122 time=0.621 ms
64 bytes from 176.26.232.111: icmp_seq=3 ttl=122 time=0.634 ms

--- host3.site.net ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.619/0.634/0.661/0.017 ms
```

- Meaning**
- The **ping** results show the following information:
 - Size of the ping response packet (in bytes).
 - IP address of the host from which the response was sent.
 - Sequence number of the ping response packet. You can use this value to match the ping response to the corresponding ping request.
 - Time-to-live (ttl) hop-count value of the ping response packet.
 - Total time between the sending of the ping request packet and the receiving of the ping response packet, in milliseconds. This value is also called round-trip time.
 - Number of ping requests (probes) sent to the host.
 - Number of ping responses received from the host.
 - Packet loss percentage.
 - Round-trip time statistics: minimum, average, maximum, and standard deviation of the round-trip time.

- Related Documentation**
- [Troubleshooting Overview](#)
 - [Understanding Troubleshooting Resources](#)

Monitoring Traffic Through the Router or Switch

To help with the diagnosis of a problem, display real-time statistics about the traffic passing through physical interfaces on the router or switch.

To display real-time statistics about physical interfaces, perform these tasks:

1. [Displaying Real-Time Statistics About All Interfaces on the Router or Switch on page 18](#)
2. [Displaying Real-Time Statistics About an Interface on the Router or Switch on page 18](#)

Displaying Real-Time Statistics About All Interfaces on the Router or Switch

Purpose Display real-time statistics about traffic passing through all interfaces on the router or switch.

Action To display real-time statistics about traffic passing through all interfaces on the router or switch:

```
user@host> monitor interface traffic
```

Sample Output

```
user@host> monitor interface traffic
host name          Seconds: 15          Time: 12:31:09
Interface  Link  Input packets  (pps)  Output packets  (pps)
so-1/0/0    Down      0          (0)      0          (0)
so-1/1/0    Down      0          (0)      0          (0)
so-1/1/1    Down      0          (0)      0          (0)
so-1/1/2    Down      0          (0)      0          (0)
so-1/1/3    Down      0          (0)      0          (0)
t3-1/2/0    Down      0          (0)      0          (0)
t3-1/2/1    Down      0          (0)      0          (0)
t3-1/2/2    Down      0          (0)      0          (0)
t3-1/2/3    Down      0          (0)      0          (0)
so-2/0/0     Up    211035      (1)    36778      (0)
so-2/0/1     Up    192753      (1)    36782      (0)
so-2/0/2     Up    211020      (1)    36779      (0)
so-2/0/3     Up    211029      (1)    36776      (0)
so-2/1/0     Up    189378      (1)    36349      (0)
so-2/1/1    Down      0          (0)    18747      (0)
so-2/1/2    Down      0          (0)    16078      (0)
so-2/1/3     Up      0          (0)    80338      (0)
at-2/3/0     Up      0          (0)      0          (0)
at-2/3/1    Down      0          (0)      0          (0)
Bytes=b, Clear=c, Delta=d, Packets=p, Quit=q or ESC, Rate=r, Up=^U, Down=^D
```

Meaning The sample output displays traffic data for active interfaces and the amount that each field has changed since the command started or since the counters were cleared by using the **C** key. In this example, the **monitor interface** command has been running for 15 seconds since the command was issued or since the counters last returned to zero.

Displaying Real-Time Statistics About an Interface on the Router or Switch

Purpose Display real-time statistics about traffic passing through an interface on the router or switch.

Action To display traffic passing through an interface on the router or switch, use the following Junos OS CLI operational mode command:

```
user@host> monitor interface interface-name
```

Sample Output

```
user@host> monitor interface so-0/0/1
Next='n', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c', Interface='i'
R1
```

```

Interface: so-0/0/1, Enabled, Link is Up
Encapsulation: PPP, Keepalives, Speed: OC3 Traffic statistics:
  Input bytes:          5856541 (88 bps)
  Output bytes:         6271468 (96 bps)
  Input packets:        157629 (0 pps)
  Output packets:       157024 (0 pps)
Encapsulation statistics:
  Input keepalives:      42353
  Output keepalives:     42320
  LCP state: Opened
Error statistics:
  Input errors:          0
  Input drops:           0
  Input framing errors:  0
  Input runs:            0
  Input giants:          0
  Policed discards:      0
  L3 incompletes:        0
  L2 channel errors:     0
  L2 mismatch timeouts:  0
  Carrier transitions:    1
  Output errors:         0
  Output drops:          0
  Aged packets:         0
Active alarms : None
Active defects: None
SONET error counts/seconds:
  LOS count              1
  LOF count              1
  SEF count              1
  ES-S                   77
  SES-S                  77
SONET statistics:
  BIP-B1                 0
  BIP-B2                 0
  REI-L                  0
  BIP-B3                 0
  REI-P                  0
Received SONET overhead: F1      : 0x00 J0      : 0xZ

```

Meaning The sample output shows the input and output packets for a particular SONET interface (**so-0/0/1**). The information can include common interface failures, such as SONET/SDH and T3 alarms, loopbacks detected, and increases in framing errors. For more information, see *Checklist for Tracking Error Conditions*.

To control the output of the command while it is running, use the keys shown in [Table 4 on page 19](#).

Table 4: Output Control Keys for the monitor interface Command

Action	Key
Display information about the next interface. The monitor interface command scrolls through the physical or logical interfaces in the same order that they are displayed by the show interfaces terse command.	N
Display information about a different interface. The command prompts you for the name of a specific interface.	I

Table 4: Output Control Keys for the monitor interface Command (*continued*)

Action	Key
Freeze the display, halting the display of updated statistics.	F
Thaw the display, resuming the display of updated statistics.	T
Clear (zero) the current delta counters since monitor interface was started. It does not clear the accumulative counter.	C
Stop the monitor interface command.	Q

See the [CLI Explorer](#) for details on using match conditions with the **monitor traffic** command.

CHAPTER 4

Configuring Automation

- [Overview of Junos Automation Enhancements on page 21](#)
- [Overview of Python with Junos Automation Enhancements on page 22](#)
- [Understanding Automation Scripts Support on page 25](#)
- [How Commit Scripts Work on page 26](#)
- [Avoiding Potential Conflicts When Using Multiple Commit Scripts on page 31](#)
- [Overview of Generating Persistent or Transient Configuration Changes on page 32](#)
- [Required Boilerplate for Commit Scripts on page 36](#)
- [How Op Scripts Work on page 38](#)
- [Required Boilerplate for Op Scripts on page 38](#)
- [Installing Junos OS Software with Junos Automation Enhancements on page 40](#)
- [Invoking the Python Interpreter on page 44](#)
- [Controlling the Execution of Commit Scripts on page 45](#)
- [Displaying Commit Script Output on page 47](#)

Overview of Junos Automation Enhancements

The Junos Automation Enhancements are designed to support the increasing needs of large data centers for more automation and programmability.

- [Features of the Junos Automation Enhancements on page 21](#)

Features of the Junos Automation Enhancements

To use the Junos Automation Enhancements, you must install the **jinstall-qfx-5-flex-x.tgz** software bundle. This software bundle is identical to the other software bundle except that Veriexec is disabled, which enables you to run unsigned programs, such as programs that you develop with Python, Chef, and Puppet. The Junos Automation Enhancements include the following features:

- The factory default configuration is a Layer 3 configuration. (The standard default factory configuration on some devices series is Layer 2.)
- Safeguards ensure that you cannot overwrite essential Junos OS files, including system log notifications.

- Zero Touch Provisioning (ZTP) allows you to provision new switches in your network automatically, without manual intervention. See *Understanding Zero Touch Provisioning*.
- The installation automatically sets up and reserves a 1-gigabit user partition on your system. You can use this partition to store your binaries and additional packages.
- The user partition is not overwritten when you upgrade or downgrade the software to a OS image that does not contain the automation enhancements.



NOTE: If you make changes to the user partition while performing a unified in-service software upgrade (unified ISSU), the changes might be lost.

- The Python interpreter is included by default.
 - You can invoke Python directly from the shell. See [“Invoking the Python Interpreter” on page 44](#).
 - Starting with Junos OS Release 14.1X53-D10, three Open Source Python modules are pre-installed in the `jinstall-qfx-5-flex-x.tgz` software bundle. See [“Overview of Python with Junos Automation Enhancements” on page 22](#) for details.
- Chef for Junos OS and Puppet for Junos OS automation tools for provisioning and managing computer networking and storage resources are included.
 - For further information on Chef, see [Chef for Junos Getting Started Guide](#).
 - For further information on Puppet, see [Puppet for Junos OS Documentation](#).



NOTE: For full compatibility, you must use only Chef for Junos OS and Puppet for Junos OS rather than the standard FreeBSD versions of Chef and Puppet software.



CAUTION: Download additional third party packages at your own risk.

Related Documentation

- [Installing Junos OS Software with Junos Automation Enhancements on page 40](#)
- [Invoking the Python Interpreter on page 44](#)
- [QFX5100 Switch with Automation Enhancements Frequently Asked Questions](#)

Overview of Python with Junos Automation Enhancements

Python is a programming language that lets you work more quickly and integrate your systems more effectively. The Python interpreter is included within the Junos operating system (Junos OS) `jinstall-qfx-5-flex-x.tgz` software bundle.

Python is also suitable as an extension language for customizable applications.

Starting with Junos OS Release 14.1X53-D10, these Open Source Python modules are pre-installed in the `jinstall-qfx-5-flex-x.tgz` software bundle:

- **ncclient**—Facilitates client scripting and application development through the NETCONF protocol. See <http://ncclient.grnet.gr/0.3.2/> for documentation of some of the external APIs of the ncclient Python module. At the bottom of this list, see examples of usage of some of these APIs with sample scripts.
- **lxml**—Combines the speed and XML feature completeness of the C libraries libxml2 and libxslt with the simplicity of a native Python API. See <http://lxml.de/tutorial.html/> for documentation of some of the external APIs of the lxml Python module.
- **jinja2**—Serves as a fast, secure, designer-friendly templating language. See <http://jinja.pocoo.org/docs/api/> for documentation of some of the external APIs of the jinja2 Python module.

Example usage of some of the APIs of the ncclient Python module follows:

*** Example of "connect" and "command" API:**

```
from ncclient import manager

def connect(host, port, user, password):
    conn = manager.connect(host=host,
                           port=port,
                           username=user,
                           password=password,
                           timeout=10,
                           device_params = {'name': 'junos'},
                           hostkey_verify=False)

    print 'show version'
    print '*' * 30
    result = conn.command('show version', format='text')
    print result.xpath('output')[0].text

if __name__ == '__main__':
    connect('router', '22', 'netconf', 'juniper!')
```

*** Example of "compare_configuration" API:**

```
from ncclient import manager
from ncclient.xml_ import *

import time

def connect(host, port, user, password, source):
    conn = manager.connect(host=host,
                           port=port,
                           username=user,
                           password=password,
                           timeout=10,
                           device_params = {'name': 'junos'},
                           hostkey_verify=False)

    compare_config = conn.compare_configuration(rollback=3)
    print compare_config.tostring

if __name__ == '__main__':
    connect('router', 830, 'netconf', 'juniper!', 'candidate')
```

*** Example of "lock", "load_configuration", "validate", "commit", "discard_changes", "unlock" APIs:**

```
from ncclient import manager
from ncclient.xml_ import *

import time

def connect(host, port, user, password, source):
    conn = manager.connect(host=host,
                           port=port,
                           username=user,
                           password=password,
                           timeout=10,
                           device_params = {'name': 'junos'},
                           hostkey_verify=False)

    print 'locking configuration'
    lock = conn.lock()

    # build configuration element
    config = new_ele('system')
    sub_ele(config, 'host-name').text = 'foo'
    sub_ele(config, 'domain-name').text = 'bar'

    send_config = conn.load_configuration(config=config)
    print send_config.tostring

    check_config = conn.validate()
    print check_config.tostring

    compare_config = conn.compare_configuration()
    print compare_config.tostring

    print 'commit confirmed 300'
    #commit_config = conn.commit(confirmed=True, timeout='300')
    commit_config = conn.commit()
    print commit_config.tostring

    print 'sleeping for 5 sec...'
    time.sleep(5)

    discard_changes = conn.discard_changes()
    print discard_changes.tostring

    print 'unlocking configuration'
    unlock = conn.unlock()
    print unlock.tostring

if __name__ == '__main__':
    connect('router', 830, 'netconf', 'juniper!', 'candidate')
```



NOTE: For information on using Python, refer to your Python documentation.

**Related
Documentation**

- [Installing Junos OS Software with Junos Automation Enhancements on page 40](#)
- [Invoking the Python Interpreter on page 44](#)
- [QFX5100 Switch with Automation Enhancements Frequently Asked Questions](#)

Understanding Automation Scripts Support

This document describes the support for the Junos OS automation scripts on the QFabric system Director devices.

Junos OS automation consists of a suite of tools used to automate operational and configuration tasks on network devices running Junos OS. The automation tools, which leverage the native XML capabilities of the Junos OS, include commit scripts, operation (op) scripts, event policies and event scripts, and macros.



NOTE: Event policies and event scripts are not supported on the QFabric system at this time.

The QFabric system supports Junos OS automation scripts that are written in Stylesheet Language Alternative Syntax (SLAX) version 1.0.

Commit scripts automate the commit process and enforce custom configuration rules. You can use commit scripts to generate specific errors and warnings, and customize configurations and configuration templates. When a candidate configuration is committed, it is inspected by each active commit script. If a configuration violates your custom rules and the scripts generate an error, the commit fails. If the commit is successful, any configuration changes (both transient and permanent) are incorporated into the active configuration before it is passed to the Director software, which distributes the configuration to all applicable QFabric system components, including Node devices and Node servers.

Op scripts automate operational and troubleshooting tasks. Op scripts can be executed manually from the Junos OS CLI or NETCONF XML management protocol, or they can be called from another script.

The QFabric system supports the following automation script features:

- Commit scripts and op scripts are supported.
- Scripts written in SLAX version 1 are supported.
- Scripts are configured and deployed from the Director group. Since there is more than one Director device in a Director group, scripts must be deployed by each Director device or deployed in the shared media space.
- Scripts are stored in the shared media at this location:
`/pbdata/mgd_shared/partition-ip/var/db/scripts`. Under this directory, commit scripts are stored in the **commit** subdirectory, and op scripts are stored in the **op** subdirectory.
- Scripts are not stored in flash memory.

Related Documentation

- [How Commit Scripts Work on page 26](#)
- [How Op Scripts Work on page 38](#)
- [Required Boilerplate for Commit Scripts on page 36](#)

- [Required Boilerplate for Op Scripts on page 38](#)
- [Controlling the Execution of Commit Scripts on page 45](#)

How Commit Scripts Work


You enable commit scripts by listing the names of one or more commit script files at the **[edit system scripts commit]** hierarchy level. These scripts contain instructions that enforce custom configuration rules. Commit scripts are invoked during the commit process before the standard Junos OS validity checks are performed.

When you perform a commit operation, Junos OS executes each script in turn, passing the information in the candidate configuration to the scripts. The script inspects the configuration, performs the necessary tests and validations, and generates a set of instructions for performing certain actions. These actions include generating error, warning, and system log messages. If errors are generated, the commit operation fails and the candidate configuration remains unchanged. This is the same behavior that occurs with standard commit errors.

Commit scripts can also generate changes to the system configuration. Because the changes are loaded before the standard validation checks are performed, they are validated for correct syntax, just like statements already present in the configuration before the script is applied. If the syntax is correct, the configuration is activated and becomes the active, operational device configuration.

[Figure 1 on page 26](#) shows the flow of commit script input and output.

 Figure 1: Commit Script Input and Output

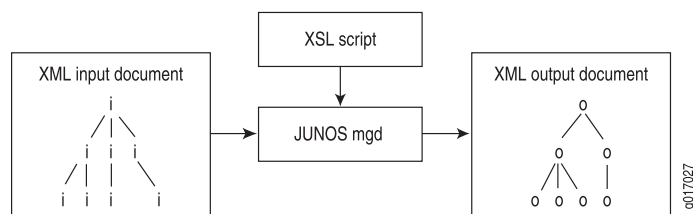

Commit scripts cannot make configuration changes to protected statements or within protected hierarchies. If a commit script attempts to modify or delete a protected statement or hierarchy, Junos OS issues a warning that the change cannot be made. Failure to modify a protected configuration element does not halt the commit script or the commit process.

The following sections discuss several important concepts related to the commit script input and output:

- [Commit Script Input on page 27](#)
- [Commit Script Output on page 27](#)
- [Commit Scripts and the Junos OS Commit Model on page 28](#)

Commit Script Input

The input for a commit script is the postinheritance candidate configuration in Junos XML API format. The term *postinheritance* means that all configuration group values have been inherited by their targets in the candidate configuration and the inactive portions of the configuration have been removed. For more information about configuration groups, see the *CLI User Guide*.

When you issue the **commit** command, Junos OS automatically generates the candidate configuration in XML format and reads it into the management (mgd) process, at which time the input is evaluated by any commit scripts.

To display the XML format of the postinheritance configuration, issue the **show | display commit-scripts view** command:

```
[edit]
user@host# show | display commit-scripts view
```

To display all configuration groups data, including script-generated changes to the groups, issue the **show groups | display commit-scripts** command:

```
[edit]
user@host# show groups | display commit-scripts
```

To save the commit script input to a file, add the **save** command to the command line:

```
[edit]
user@host# show | display commit-scripts view | save filename.xml
```

By default, the file is placed in your home directory on the switch, router, or security device.

Commit Script Output

To specify the desired commit script output—including warning, error, and system log messages, persistent changes, and transient changes—the script can contain tags that appear in any order, in any number. The tags for specifying output are as follows:

- **<xnm:warning>**—Generates a warning message
- **<xnm:error>**—Generates an error message.
- **<syslog><message>**—Generates a system log message.
- **<change>**—Generates a persistent change to the configuration.
- **<transient-change>**—Generates a transient change to the configuration.
- **<xsl:call-template name="jcs:emit-change">**
 <xsl:with-param name="content">—Generates a persistent change relative to the current context node as defined by an XPath expression.
- **<xsl:call-template name="jcs:emit-change">**
 <xsl:with-param name="tag" select="'transient-change'"/>
 <xsl:with-param name="content">—Generates a transient change relative to the current context node as defined by an XPath expression.
- **<xsl:call-template name="jcs:emit-change">**

```
<xsl:with-param name="message">
```

```
<xsl:text>
```

—Generates a warning message in conjunction with a configuration change. You can use this set of tags to generate a notification that the configuration has been changed.

Junos OS processes this output and performs the appropriate actions. Errors and warnings are passed back to the Junos OS CLI or to a Junos XML protocol client application. The presence of an error automatically causes the commit operation to fail. Persistent and transient changes are loaded into the appropriate configuration database.

To test the output of error, warning, and system log messages from commit scripts, issue the **commit check | display xml** command:

```
[edit]
user@host# commit check | display xml
```

To display a detailed trace of commit script processing, issue the **commit check | display detail** command:

```
[edit]
user@host# commit check | display detail
```



NOTE: System log messages do not appear in the trace output, so you cannot use the commit check operation to test script-generated system log messages. Furthermore, system log messages are written to the system log during a commit operation, but not during a commit check operation.

**Related
Documentation**

- *Example: Protecting the Junos OS Configuration from Modification or Deletion*
- *jcs:emit-change Template*

Commit Scripts and the Junos OS Commit Model

Junos OS uses a commit model to update the device's configuration. This model allows you to make a series of changes to a candidate configuration without affecting the operation of the device. When the changes are complete, you can commit the configuration. The commit operation saves the candidate configuration changes into the current configuration.


When you commit a set of changes in the candidate configuration, two methods are used to forward these changes to the current configuration:

- Standard commit model—Used when no commit scripts are active on the device.
- Commit script model—Incorporates commit scripts into the commit model.

Standard Commit Model

In the standard commit model, the management (mgd) process validates the candidate configuration based on standard Junos validation rules. If the configuration file is valid, it becomes the current active configuration. [Figure 2 on page 29](#) and the accompanying discussion explain how the standard commit model works:

 Figure 2: Standard Commit Model

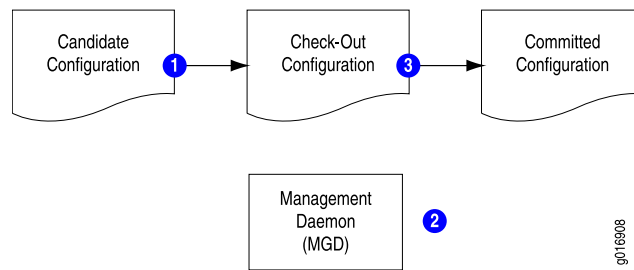


In the standard commit model, the software performs the following steps:

1. When the candidate configuration is committed, it is copied to become the checkout configuration.
2. The mgd process validates the checkout configuration.
3. If no error occurs, the checkout configuration is copied as the current active configuration.

Commit Model with Commit Scripts

When commit scripts are added to the standard commit model, the process becomes more complex. The mgd process first passes an XML-formatted checkout configuration to a script driver, which handles the verification of the checkout configuration by the commit scripts. When verification is complete, the script driver returns an XML *action file* to the mgd process. The mgd process follows the instructions in the action file to update the candidate and checkout configurations, issue messages to the CLI, and write information to the system log as required. After processing the action file, the mgd process performs the standard Junos OS validation. [Figure 3 on page 29](#) and the accompanying discussion explain this process.

 Figure 3: Commit Model with Commit Scripts Added

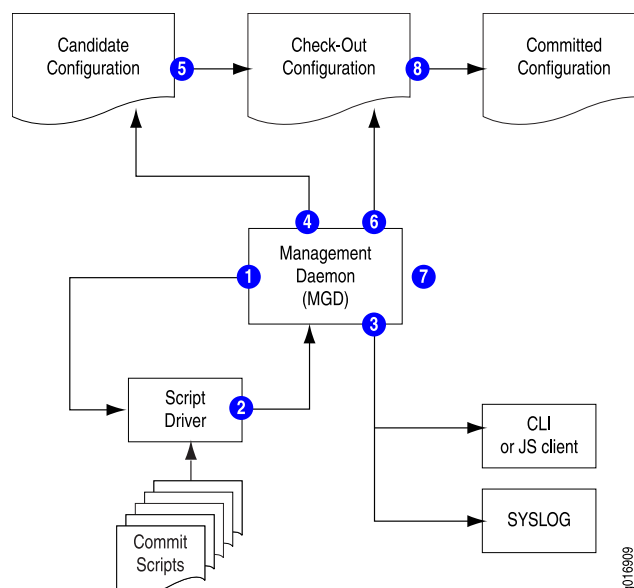

In the commit script model, Junos OS performs the following steps:

1. When the candidate configuration is committed, the mgd process sends the XML-formatted candidate configuration to the script driver.
2. Each enabled commit script is invoked against the candidate configuration, and each script can generate a set of actions for the mgd process to perform. The actions are collected in an XML action file.
3. The mgd process performs the following actions in response to **<error>**, **<warning>**, and **<syslog>** tag elements in the action file:
 - **<error>**—The mgd process halts the commit process (that is, the commit operation fails), returns an error message to the CLI or Junos XML protocol client, and takes no further action.
 - **<warning>**—The mgd process forwards the message to the CLI or the Junos XML protocol client.
 - **<syslog>**—The mgd process forwards the message to the system log process.
4. If the action file includes any **<change>** tag elements, the mgd process loads the requested changes into the candidate configuration.
5. The candidate configuration is copied to become the checkout configuration.
6. If the action file includes any **<transient-change>** tag elements, the mgd process loads the requested changes into the checkout configuration.
7. The mgd process validates the checkout configuration.
8. If there are no validation errors, the checkout configuration is copied to become the current active configuration.



NOTE: Commit scripts cannot make configuration changes to protected statements or within protected hierarchies. If a commit script attempts to modify or delete a protected statement or hierarchy, Junos OS issues a warning that the change cannot be made. Failure to modify a protected configuration element does not halt the commit script or the commit process.

Changes that are made to the candidate configuration during the commit operation are not evaluated by the custom rules during that commit operation. However, persistent changes are maintained in the candidate configuration and are evaluated by the custom rules during subsequent commit operations. For more information about how commit scripts change the candidate configuration, see [“Avoiding Potential Conflicts When Using Multiple Commit Scripts” on page 31](#).

Transient changes are never evaluated by the custom rules in commit scripts, because they are made to the checkout configuration only after the commit scripts have evaluated the candidate configuration and the candidate is copied to become the checkout configuration. To remove a transient change from the configuration, remove, disable, or deactivate the commit script (as discussed in *Controlling Execution of Commit Scripts During Commit Operations*), or comment out the code that generates the transient change.


For more information about differences between persistent and transient changes, see [“Overview of Generating Persistent or Transient Configuration Changes Using Commit Scripts”](#) on page 32.

Related Documentation • [Avoiding Potential Conflicts When Using Multiple Commit Scripts](#) on page 31

Avoiding Potential Conflicts When Using Multiple Commit Scripts

When you use multiple commit scripts, each script evaluates the original candidate configuration file. Changes made by one script are not evaluated by the other scripts. This means that conflicts between scripts might not be resolved when the scripts are first applied to the configuration. The commit scripts are executed in the order they are listed at the `[edit system scripts commit]` hierarchy level, as illustrated in [Figure 4 on page 31](#).

 Figure 4: Configuration Evaluation by Multiple Commit Scripts

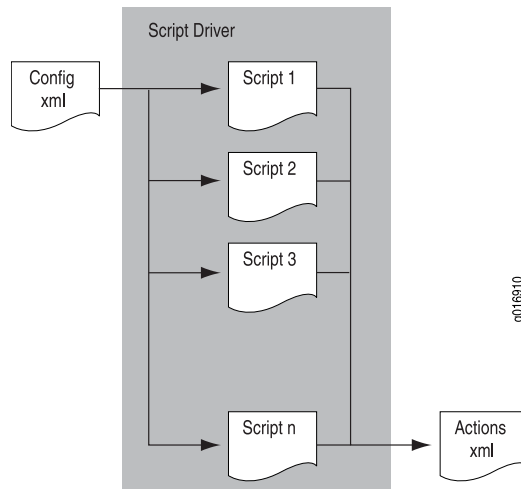

As an example of a conflict between commit scripts, suppose that commit script **A.xsl** is created to ensure that the device uses the domain name server with IP address **192.168.0.255**. Later, the DNS server's address is changed to **192.168.255.255** and a second script, **B.xsl**, is added to check that the device uses the DNS server with that address. However, script **A.xsl** is not removed or disabled.

Because each commit script evaluates the original candidate configuration, the final result of executing both scripts **A.xsl** and **B.xsl** depends on which DNS server address is configured in the original candidate configuration. If the now outdated address of **192.168.0.255** is configured, script **B.xsl** changes it to **192.168.255.255**. However, if the correct address of **192.168.255.255** is configured, script **A.xsl** changes it to the incorrect value **192.168.0.255**.

As another example of a potential conflict between commit scripts, suppose that a commit script protects a hierarchy using the **protect** attribute. If a second commit script attempts to modify or delete the hierarchy or the statements within the hierarchy, Junos OS issues a warning during the commit process and prevents the configuration change.

Exercise care to ensure that you do not introduce conflicts between scripts like those described in the examples. As a method of checking for conflicts with persistent changes, you can issue two separate **commit** commands.

Related Documentation

- [How Commit Scripts Work on page 26](#)

Overview of Generating Persistent or Transient Configuration Changes

Junos OS commit scripts enforce custom configuration rules. When a candidate configuration includes statements that you have decided must not be included in your configuration, or when the candidate configuration omits statements that you have decided are required, commit scripts can automatically change the configuration and thereby correct the problem.

- [Differences Between Persistent and Transient Changes on page 32](#)
- [Interaction of Configuration Changes and Configuration Groups on page 35](#)
- [Tag Elements and Templates for Generating Changes on page 36](#)

Differences Between Persistent and Transient Changes

Configuration changes made by commit scripts can be *persistent* or *transient*.

A persistent change remains in the candidate configuration and affects routing operations until you explicitly delete it, even if you subsequently remove or disable the commit script that generated the change and reissue the **commit** command. In other words, removing the commit script does not cause a persistent change to be removed from the configuration.

A transient change, in contrast, is made in the *checkout configuration* but not in the candidate configuration. The checkout configuration is the configuration database that is inspected for standard Junos OS syntax just before it is copied to become the active configuration on the device. If you subsequently remove or disable the commit script that made the change and reissue the **commit** command, the change is no longer made to the checkout configuration and so does not affect the active configuration. In other words, removing the commit script effectively removes a transient change from the configuration.

A common use for transient changes is to eliminate the need to repeatedly configure and display well-known policies, thus allowing these policies to be enforced implicitly. For example, if MPLS must be enabled on every interface with an International Organization for Standardization (ISO) protocol enabled, the change can be transient, so that the repetitive or redundant configuration data need not be carried or displayed in the candidate configuration. Furthermore, transient changes allow you to write script instructions that apply the change only if a set of conditions is met.

Persistent and transient changes are loaded into the configuration in the same manner that the **load replace** configuration mode command loads an incoming configuration. When generating a persistent or transient change, adding the **replace="replace"** attribute

to a configuration element produces the same behavior as a **replace** tag in a **load replace** operation.

By default, Junos OS merges the incoming configuration and the candidate configuration. New statements and hierarchies are added, and conflicting statements are overridden. When generating a persistent or transient change, if you add the **replace="replace"** attribute to a configuration element, Junos OS replaces the existing configuration element with the incoming configuration element. If the **replace="replace"** attribute is added to a configuration element, but there is no existing element of the same name in the current configuration, the incoming configuration element is added into the configuration. Elements that do not have the **replace** attribute are merged into the configuration.

Persistent and transient changes are loaded before the standard Junos validation checks are performed. This means any configuration changes introduced by a commit script are validated for correct syntax. If the syntax is correct, the new configuration becomes the active, operational device configuration.

Protected elements in the configuration hierarchy cannot be modified or deleted by either a persistent or a transient change. If a commit script attempts to modify or delete a protected statement or hierarchy, Junos OS issues a warning that the change cannot be made, and proceeds with the commit.

Persistent and transient changes have several important differences, as described in [Table 5 on page 33](#).

Table 5: Differences Between Persistent and Transient Changes

Persistent Changes	Transient Changes
<p>A persistent change is represented in a commit script by the <change> tag.</p> <p>Another way to represent a persistent change is with the content parameter inside a call to the jcs:emit-change template.</p> <p>The jcs:emit-change template is a helper template contained in the junos.xsl import file.</p>	<p>A transient change is represented in a commit script by the <transient-change> tag.</p> <p>Another way to represent a transient change is to use the content parameter and the tag transient parameter inside a call to the jcs:emit-change template.</p>
<p>You can use persistent changes to perform any Junos XML protocol operation, such as activate, deactivate, delete, insert (reorder), comment (annotate), and replace sections of the configuration.</p>	<p>Like persistent changes, you can use transient changes to perform any Junos XML protocol operation. However, some Junos XML protocol operations do not make sense to use with transient changes, such as generating comments and inactive settings.</p>

Table 5: Differences Between Persistent and Transient Changes (*continued*)

Persistent Changes	Transient Changes
Persistent changes are always loaded during the commit process if no errors are generated by any commit scripts or by the standard Junos OS validity check.	<p>For transient changes to be loaded, you must include the allow-transients statement at the [edit system scripts commit] hierarchy level. If you enable a commit script that generates transient changes and you do not include the allow-transients statement in the configuration, the CLI generates an error message and the commit operation fails.</p> <p>Like persistent changes, transient changes must pass the standard Junos OS validity check.</p> <p>You cannot use a commit script to generate the allow-transients statement at the [edit system scripts commit] hierarchy level. Rather, you must include this statement directly by using the CLI.</p>
<p>Persistent changes work like the load replace configuration mode command, and the change is added to the candidate configuration.</p> <p>When generating a persistent change, if you add the replace="replace" attribute to a configuration element, Junos OS replaces the existing element in the candidate configuration with the incoming configuration element. If there is no existing element of the same name in the candidate configuration, the incoming configuration element is added into the configuration. Elements that do not have the replace attribute are merged into the configuration.</p>	<p>Transient changes work like the load replace configuration mode command, and the change is added to the checkout configuration.</p> <p>When generating a transient change, if you add the replace="replace" attribute to a configuration element, Junos OS replaces the existing element in the checkout configuration with the incoming configuration element. If there is no existing element of the same name in the checkout configuration, the incoming configuration element is added into the configuration. Elements that do not have the replace attribute are merged into the configuration.</p> <p>Transient changes are not copied to the candidate configuration. For this reason, transient changes are not saved in the configuration if the associated commit script is deleted or deactivated.</p>
<p>After a persistent change is committed, the software treats it like a change you make by directly editing and committing the candidate configuration.</p> <p>After the persistent changes are copied to the candidate configuration, they are copied to the checkout configuration. If the changes pass the standard Junos OS validity checks, the changes are propagated to the switch, router, or security device components.</p>	Each time a transient change is committed, the software updates the checkout configuration database. After the transient changes pass the standard Junos OS validity checks, the changes are propagated to the device components.
<p>After committing a script that causes a persistent change to be generated, you can view the persistent change by issuing the show configuration mode command:</p> <pre>user@host# show</pre> <p>This command displays persistent changes only, not transient changes.</p>	<p>After committing a script that causes a transient change to be generated, you can view the transient change by issuing the show display commit-scripts configuration mode command:</p> <pre>user@host# show display commit-scripts</pre> <p>This command displays both persistent and transient changes.</p>

Table 5: Differences Between Persistent and Transient Changes (*continued*)

Persistent Changes	Transient Changes
<p>Persistent changes must conform to your custom configuration design rules as dictated by commit scripts.</p> <p>This does not become apparent until after a second commit operation because persistent changes are not evaluated by commit script rules on the current commit operation. The subsequent commit operation fails if the persistent changes do not conform to the rules imposed by the commit scripts configured during the first commit operation.</p>	<p>Transient changes are never tested by and do not need to conform to your custom rules. This is caused by the order of operations in the Junos OS commit model, which is explained in detail in “Commit Scripts and the Junos OS Commit Model” on page 28.</p>
<p>A persistent change remains in the configuration even if you delete, disable, or deactivate the commit script instructions that generated the change.</p>	<p>If you delete, disable, or deactivate the commit script instructions that generate a transient change, the change is removed from the configuration after the next commit operation. In short, if the associated instructions or the entire commit script is removed, the transient change is also removed.</p>
<p>As with direct CLI configuration, you can remove a persistent change by rolling back to a previous configuration that did not include the change and issuing the commit command. However, if you do not disable or deactivate the associated commit script, and the problem that originally caused the change to be generated still exists, the change is automatically regenerated when you issue another commit command.</p>	<p>You cannot remove a transient change by rolling back to a previous configuration.</p>
<p>You can alter persistent changes directly by editing the configuration using the CLI.</p>	<p>You cannot directly alter or delete a transient change by using the Junos OS CLI, because the change is not in the candidate configuration.</p> <p>To alter the contents of a transient change, you must alter the statements in the commit script that generates the transient change.</p>

Interaction of Configuration Changes and Configuration Groups

Any configuration change you can make by directly editing the configuration using the Junos OS command-line interface (CLI) can also be generated by a commit script as a persistent or transient change. This includes values specified at a specific hierarchy level or in configuration groups. As with direct CLI configuration, values specified in the *target* override values inherited from a configuration group. The target is the statement to which you apply a configuration group by including the **apply-groups** statement.

If you define persistent or transient changes as belonging to a configuration group, the configuration groups are applied in the order you specify in the **apply-groups** statements, which you can include at any hierarchy level except the top level. You can also disable inheritance of a configuration group by including the **apply-groups-except** statement at any hierarchy level except the top level.



CAUTION: Each commit script inspects the postinheritance view of the configuration. If a candidate configuration contains a configuration group,

be careful when using a commit script to change the related target configuration, because doing so might alter the intended inheritance from the configuration group.

Also be careful when using a commit script to change a configuration group, because the configuration group might be generated by an application that performs a load replace operation on the group during each commit operation.

For more information about configuration groups, see the *CLI User Guide*.

Tag Elements and Templates for Generating Changes

To generate changes, you can use the `jcs:emit-change` template, which implicitly includes `<change>` and `<transient-change>` XML elements; or you can explicitly include `<change>` and `<transient-change>` XML elements. Using the `jcs:emit-change` template allows you to set the hierarchical context of the change once rather than multiple times.

The `<change>` and `<transient-change>` elements are similar to the `<load-configuration>` operation defined by the Junos XML management protocol. The possible contents of the `<change>` and `<transient-change>` elements are the same as the contents of the `<configuration>` tag element used in the Junos XML protocol operation `<load-configuration>`. For complete details about the `<load-configuration>` element, see the *Junos XML Management Protocol Developer Guide*.

Required Boilerplate for Commit Scripts

When you write commit scripts, you use Extensible Stylesheet Language Transformations (XSLT) or Stylesheet Language Alternative Syntax (SLAX) tools provided with Junos OS. These tools include basic boilerplate that you must include in all commit scripts, optional extension functions that accomplish scripting tasks more easily, and named templates that make commit scripts easier to read and write, which you import from a file called `junos.xsl`. For more information about the extension functions and templates, see *Understanding Extension Functions in the jcs and slax Namespaces* and *Named Templates in the jcs Namespace Overview*.

Commit scripts are based on Junos XML and Junos XML protocol tag elements. Like all XML elements, angle brackets enclose the name of a Junos XML or Junos XML protocol tag element in its opening and closing tags. This is an XML convention, and the brackets are a required part of the complete tag element name. They are not to be confused with the angle brackets used in the documentation to indicate optional parts of Junos OS CLI command strings.

You must include either XSLT or SLAX boilerplate as the starting point for all commit scripts that you create. The XSLT boilerplate follows:

XSLT Boilerplate for Commit Scripts

```
1 <?xml version="1.0" standalone="yes"?>
2 <xsl:stylesheet version="1.0"
3   xmlns:xsl="http://www.w3.org/1999/XSL/Transform"
4   xmlns:junos="http://xml.juniper.net/junos/*/junos"
5   xmlns:xnm="http://xml.juniper.net/xnm/1.1/xnm"
```



```

6  xmlns:jcs="http://xml.juniper.net/junos/commit-scripts/1.0">
7  <xsl:import href="../../import/junos.xsl"/>

8  <xsl:template match="configuration">
    <!-- ... Insert your code here ... -->
9  </xsl:template>
10 </xsl:stylesheet>

```

Line 1 is the Extensible Markup Language (XML) processing instruction (PI). This PI specifies that the code is written in XML using version 1.0. The XML PI, if present, must be the first noncomment token in the script file.

```
1 <?xml version="1.0"?>
```

Lines 2 through 6 set the style sheet element and the associated namespaces. Line 2 sets the style sheet version as 1.0. Lines 3 through 6 list all the namespace mappings commonly used in commit scripts. Not all of these prefixes are used in this example, but it is not an error to list namespace mappings that are not referenced. Listing all namespace mappings prevents errors if the mappings are used in later versions of the script.

```

2 <xsl:stylesheet version="1.0"
3   xmlns:xsl="http://www.w3.org/1999/XSL/Transform"
4   xmlns:junos="http://xml.juniper.net/junos/*/junos"
5   xmlns:xnm="http://xml.juniper.net/xnm/1.1/xnm"
6   xmlns:jcs="http://xml.juniper.net/junos/commit-scripts/1.0">

```

Line 7 is an XSLT import statement. It loads the templates and variables from the file referenced as `../import/junos.xsl`, which ships as part of Junos OS. The `junos.xsl` file contains a set of named templates you can call in your scripts. These named templates are discussed in *Named Templates in the jcs Namespace Overview* and *Named Templates in the jcs Namespace Summary*.

```
7 <xsl:import href="../../import/junos.xsl"/>
```

Line 8 defines a template that matches the `<configuration>` element, which is the node selected by the `<xsl:template match="/">` template, contained in the `junos.xsl` import file. The `<xsl:template match="configuration">` element allows you to exclude the `/configuration/` root element from all XML Path Language (XPath) expressions in the script and begin XPath expressions with the top Junos OS hierarchy level. For more information, see *XPath Overview*.

```
8 <xsl:template match="configuration">
```

Add your code between Lines 8 and 9.

Line 9 closes the template.

```
9 </xsl:template>
```

Line 10 closes the style sheet and the commit script.

```
10 </xsl:stylesheet>
```

SLAX Boilerplate for Commit Scripts

The corresponding SLAX boilerplate is as follows:

```

version 1.0;
ns junos = "http://xml.juniper.net/junos/*/junos";
ns xnm = "http://xml.juniper.net/xnm/1.1/xnm";
ns jcs = "http://xml.juniper.net/junos/commit-scripts/1.0";

```

```
import "../import/junos.xml";

match configuration {
  /*
   * Insert your code here
   */
}
```

How Op Scripts Work


Op scripts execute Junos OS operational commands and inspect the resulting output. After inspection, op scripts can automatically correct errors within the device running Junos OS based on this output.

You add op scripts to device operations by listing the filenames of one or more op script files within the **[edit system scripts op]** hierarchy level. These files must be added to the appropriate op script file directory. For more information about op script file directories, see *Storing Scripts in Flash Memory*. Once added to the device, op scripts are invoked from the command line, using the **op filename** command.

You can use op scripts to generate changes to the device configuration by including the **<load-configuration>** tag element. Because the changes are loaded before the standard validation checks are performed, they are validated for correct syntax, just like statements already present in the configuration before the script is applied. If the syntax is correct, the configuration is activated and becomes the active, operational device configuration.

Figure 5 on page 38 shows a high-level view of the flow of op script input and output.

 Figure 5: Op Script Input and Output

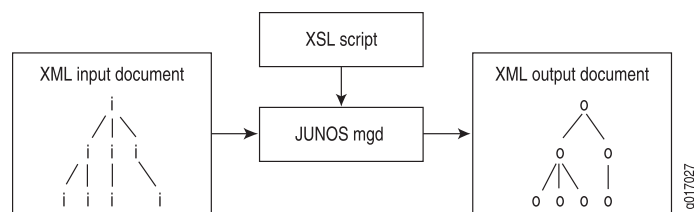

Required Boilerplate for Op Scripts

When you write operation (op) scripts, you use Extensible Stylesheet Language Transformations (XSLT) or Stylesheet Language Alternative Syntax (SLAX) tools provided with Junos OS. These tools include basic boilerplate that you must include in all op scripts, optional extension functions that accomplish scripting tasks more easily, and named templates that make scripts easier to read and write, which you import from a file called **junos.xml**. For more information about the extension functions and templates, see *Understanding Extension Functions in the jcs and slax Namespaces* and *Named Templates in the jcs Namespace Overview*.

Op scripts are based on Junos XML and Junos XML protocol tag elements. Like all XML elements, angle brackets enclose the name of a Junos XML or Junos XML protocol tag element in its opening and closing tags. This is an XML convention, and the brackets are

a required part of the complete tag element name. They are not to be confused with the angle brackets used in the documentation to indicate optional parts of Junos OS CLI command strings.

You must include either XSLT or SLAX boilerplate as the starting point for all op scripts that you create. The XSLT boilerplate follows:

XSLT Boilerplate for Op Scripts

```

1  <?xml version="1.0" standalone="yes"?>
2  <xsl:stylesheet version="1.0"
3    xmlns:xsl="http://www.w3.org/1999/XSL/Transform"
4    xmlns:junos="http://xml.juniper.net/junos/*/junos"
5    xmlns:xnm="http://xml.juniper.net/xnm/1.1/xnm"
6    xmlns:jcs="http://xml.juniper.net/junos/commit-scripts/1.0">
7    <xsl:import href="../../import/junos.xsl"/>

8    <xsl:template match="/">
9      <op-script-results>
10       <!-- ... insert your code here ... -->
11     </op-script-results>
12   </xsl:template>
13   <!-- ... insert additional template definitions here ... -->
14 </xsl:stylesheet>

```

Line 1 is the Extensible Markup Language (XML) processing instruction (PI), which marks this file as XML and specifies the version of XML as 1.0. The XML PI, if present, must be the first non-comment token in the script file.

```
1  <?xml version="1.0"?>
```

Line 2 opens the style sheet and specifies the XSLT version as 1.0.

```
2  <xsl:stylesheet version="1.0"
```

Lines 3 through 6 list all the namespace mappings commonly used in operation scripts. Not all of these prefixes are used in this example, but it is not an error to list namespace mappings that are not referenced. Listing all namespace mappings prevents errors if the mappings are used in later versions of the script.

```

3    xmlns:xsl="http://www.w3.org/1999/XSL/Transform"
4    xmlns:junos="http://xml.juniper.net/junos/*/junos"
5    xmlns:xnm="http://xml.juniper.net/xnm/1.1/xnm"
6    xmlns:jcs="http://xml.juniper.net/junos/commit-scripts/1.0">

```

Line 7 is an XSLT import statement. It loads the templates and variables from the file referenced as `../import/junos.xsl`, which ships as part of Junos OS (in the file `/usr/libdata/cscript/import/junos.xsl`). The `junos.xsl` file contains a set of named templates you can call in your scripts. These named templates are discussed in *Named Templates in the jcs Namespace Overview* and *Named Templates in the jcs Namespace Summary*.

```
7    <xsl:import href="../../import/junos.xsl"/>
```

Line 8 defines a template that matches the `</>` element. The `<xsl:template match="/">` element is the root element and represents the top level of the XML hierarchy. All XML Path Language (XPath) expressions in the script must start at the top level. This allows the script to access all possible Junos XML and Junos XML protocol remote procedure calls (RPCs). For more information, see *XPath Overview*.

```
8    <xsl:template match="/">
```

After the `<xsl:template match="/">` tag element, the `<op-script-results>` and `</op-script-results>` container tags must be the top-level child tags, as shown in Lines 9 and 10.

```

9      <op-script-results>
      <!-- ... insert your code here ... -->
10     </op-script-results>

```

Line 11 closes the template.

```
11    </xsl:template>
```

Between Line 11 and Line 12, you can define additional XSLT templates that are called from within the `<xsl:template match="/">` template.

Line 12 closes the style sheet and the op script.

```
12  </xsl:stylesheet>
```

SLAX Boilerplate for Op Scripts

The corresponding SLAX boilerplate is as follows:

```

version 1.0;

ns junos = "http://xml.juniper.net/junos/*/junos";
ns xnm = "http://xml.juniper.net/xnm/1.1/xnm";
ns jcs = "http://xml.juniper.net/junos/commit-scripts/1.0";
import "../import/junos.xsl";

match / {
  <op-script-results> {
    /*
     * Insert your code here
    */
  }
}

```

Installing Junos OS Software with Junos Automation Enhancements

Junos operating system (Junos OS) with Junos Automation Enhancements is a full-featured version of Junos OS with Veriexec disabled, which can only be installed on supported devices.



NOTE: You must install the `jinstall-qfx-5-flex-x.tgz` software bundle in order to use the automation enhancements.

Before you install software, download the Junos OS `jinstall-qfx-5-flex-x.tgz` software bundle. For information on downloading and accessing the files, see *Upgrading Software*.



BEST PRACTICE: Before you install the software, back up any critical files in `/var/home`. For more information regarding how to back up critical files, contact Customer Support at <http://www.juniper.net/support>.

Install the software:

1. Execute the **request system software add** command with the **validate** option:

- If the installation package resides locally on the switch, execute the **request system software add validate *pathname* source reboot** command, using the following format:

```
user@switch> request system software add validate /var/tmp/jinstall-qfx-5-flex-x.tgz
reboot
```

- If the installation package resides remotely, execute the **request system software add validate *pathname* source reboot** command, using the following format:

```
user@switch> request system software add validate
ftp://ftpsrvr/directory/jinstall-qfx-5-flex-x.tgz reboot
```

2. After the reboot has finished, verify that the new version of software has been properly installed by executing the **show version** command.

```
user@switch> show version
root@qfx5100-24q-et013> show version
fpc0:
-----
Hostname: qfx5100-24q-et013
Model: qfx5100-24q-2p
JUNOS Base OS Software Suite [13.2X51-D20]
JUNOS Base OS boot [13.2X51-D20]
JUNOS Crypto Software Suite [13.2X51-D20]
JUNOS Online Documentation [13.2X51-D20]
JUNOS Kernel Software Suite [13.2X51-D20]
JUNOS Packet Forwarding Engine Support (qfx-x86-32) [13.2X51-D20]
JUNOS Routing Software Suite [13.2X51-D20]
JUNOS Enterprise Software Suite [13.2X51-D20]
JUNOS py-base-i386 [13.2X51-D20]
Puppet on Junos [2.7.19_1.junos.i386]
Ruby Interpreter [11.10.4_1.junos.i386]
Chef [11.10.4_1.junos.i386]
junos-ez-stdlib [11.10.4_1.junos.i386]
JUNOS Host Software [13.2X51-D20]
JUNOS for Automation Enhancement
```



NOTE: If you are upgrading a device from standard Junos OS to use Junos Automation Enhancements and you are *not* loading the new factory default configuration, you need to use the following procedure.

To upgrade an existing device from standard Junos to use Junos Automation Enhancements:

1. Edit your existing Junos OS configuration to include the following configuration statements:

```
[edit]
user@switch# set system extensions providers juniper license-type juniper
deployment-scope commercial
user@switch# set system extensions providers chef license-type juniper
deployment-scope commercial
```



NOTE: The factory default configuration of the QFX5100 switch `jinstall-qfx-5-flex-x.tgz` software bundle is a Layer 3 configuration, whereas the factory default configuration for QFX5100 switch software bundles is a Layer 2 configuration. Therefore, if you are running the `jinstall-qfx-5-flex-x.tgz` software bundle on a QFX5100 switch and you use the `load factory-default` command, the resulting factory default configuration is set up for Layer 3 interfaces.

This is the factory default configuration for QFX5100 switch `jinstall-qfx-5-flex-x.tgz` software bundle:

```
user@switch> show configuration
```

```
system syslog user * any emergency
system syslog file messages any notice
system syslog file messages authorization info
system syslog file interactive-commands interactive-commands any
system extensions providers juniper license-type juniper deployment-scope
commercial
system extensions providers chef license-type juniper deployment-scope commercial
system commit factory-settings reset-virtual-chassis-configuration
system commit factory-settings reset-chassis-lcd-menu
system processes app-engine-virtual-machine-management-service traceoptions level
notice
system processes app-engine-virtual-machine-management-service traceoptions flag
all
interfaces et-0/0/0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/0:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/0:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/0:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/0:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/1:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/1:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/1:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/1:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/2:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/2:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/2:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/2:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/3:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/3:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/3:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/3:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/4 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/4:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/4:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/4:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/4:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/5 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/5:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/5:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/5:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/5:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/6 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
```

Copyright © 2016, Juniper Networks, Inc. 43

```

interfaces xe-0/0/18:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/18:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/18:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/19 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/19:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/19:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/19:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/19:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/20 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/20:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/20:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/20:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/20:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/21 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/21:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/21:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/21:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/21:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/22 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/22:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/22:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/22:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/22:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/0/23 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/23:0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/23:1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/23:2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces xe-0/0/23:3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/1/0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/1/1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/1/2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/1/3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/2/0 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/2/1 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/2/2 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
interfaces et-0/2/3 unit 0 family inet dhcp vendor-id Juniper-qfx5100-24q-2p
forwarding-options storm-control-profiles default all
protocols lldp interface all
protocols lldp-med interface all
protocols igmp-snooping vlan default
vlans default vlan-id 1

```

- Related Documentation**
- [Overview of Junos Automation Enhancements on page 21](#)
 - [QFX5100 Switch with Automation Enhancements Frequently Asked Questions](#)

Invoking the Python Interpreter

The Python interpreter is available by default with the Junos Automation Enhancements. You can invoke Python by entering the **python** command at the shell script.

To invoke the Python interpreter:

1. Start the shell interface:

```
user@switch> start shell
```
2. Enter the **python** command without any parameters:

```
% python
```




NOTE: The Python interpreter is designated with the prompt `>>>` at the beginning of a line or `...` to indicate the continuation of a line.

Related Documentation

- [Overview of Python with Junos Automation Enhancements on page 22](#)
- [Overview of Junos Automation Enhancements on page 21](#)
- [Installing Junos OS Software with Junos Automation Enhancements on page 40](#)
- [QFX5100 Switch with Automation Enhancements Frequently Asked Questions](#)

Controlling the Execution of Commit Scripts

This document describes the tasks that affect the way commit scripts are executed. In the QFabric system, commit scripts are stored in the in the `/pbdata/mgd_shared/partition-ip/var/db/scripts/commit` directory that is shared among Director devices in a Director group.

To determine which commit scripts are currently enabled on the QFabric system, use the **show** command to display the files included at the **[edit system scripts commit]** hierarchy level. To ensure that the enabled files are on the device, list the contents of the `/pbdata/mgd_shared/partition-ip/var/db/scripts/commit` directory using the **file list** operational mode command.

See the following tasks:

- [Enabling Commit Scripts to Execute on page 45](#)
- [Removing Commit Scripts from the Configuration on page 46](#)
- [Deactivating Commit Scripts on page 47](#)
- [Activating Inactive Commit Scripts on page 47](#)

Enabling Commit Scripts to Execute

The commit operation requires that all scripts be included in configuration at the **[edit system scripts commit file]** hierarchy level for all QFabric Director devices.

If you need to temporarily remove a script from a commit operation but do not want to remove it from the configuration permanently, you may configure the **optional** statement at the **[edit system scripts commit file filename]** hierarchy level to enable the commit operation to succeed even if a script is missing from the commit script directory.



CAUTION: When you include the **optional** statement at the **[edit system scripts commit file filename]** hierarchy level, no error message is generated during the commit operation if the file does not exist. As a result, you might not be aware that a script has not been executed as expected.

The filename of a commit script written in SLAX must include the **.slax** extension for the script to be executed.

To enable a commit script to execute during a commit operation:

1. Ensure that the commit script is located in the correct directory:
/pbdata/mgd_shared/partition-ip/var/db/scripts/commit directory on the Director device.

2. Configure the commit script.

```
[edit system scripts commit]
user@switch# set file filename <optional>
```

3. Commit the configuration.

```
[edit system scripts commit]
user@switch# top
[edit]
user@switch# commit
```

Removing Commit Scripts from the Configuration

You can prevent commit scripts from executing during a commit operation by removing the scripts from the commit directory in the configuration.



NOTE: You can also deactivate a script using the **deactivate** statement instead of removing it from the configuration. Deactivated scripts may be reactivated later.

To prevent a commit script from executing during a commit operation:

1. Delete the commit script file from the commit directory in the configuration.

```
[edit system scripts commit]
user@switch# delete file filename
```

2. Commit the configuration.

```
[edit system scripts commit]
user@switch# top
[edit]
user@switch# commit
```

3. Remove the commit script from the **/pbdata/mgd_shared/** directory on the Director device.



BEST PRACTICE: Although removing the commit script is not necessary, we recommend deleting unused files from the system.

Deactivating Commit Scripts

Deactivating a commit script results in its being marked as inactive in the configuration. The script is not executed during the commit operation, but you can reactivate the script by using the **activate** statement.

To deactivate the commit script:

1. Deactivate the script.

```
[edit]
user@switch deactivate system scripts commit file filename
```

2. Commit your changes.

```
[edit]
user@switch# commit
```

3. Verify that the commit script is deactivated.

```
[edit]
user@switch# show system scripts commit
inactive: file mycommit.slax
```

Activating Inactive Commit Scripts

Deactivating a commit script results in its being marked as inactive in the configuration and is therefore not executed during the commit operation.

To activate an inactive commit script:

1. Activate the script.

```
[edit]
user@switch# activate system scripts commit file filename
```

2. Commit your changes.

```
[edit]
user@switch# commit
```

Displaying Commit Script Output

[Table 6 on page 47](#) summarizes the Junos OS command-line interface (CLI) commands you can use to monitor and troubleshoot commit scripts. For more information about the **cscript.log** file, see *Tracing Commit Script Processing*.

Table 6: Commit Script Configuration and Operational Mode Commands

Task	Command
Configuration Mode Commands	
Display errors and warnings generated by commit scripts.	commit or commit check

Table 6: Commit Script Configuration and Operational Mode Commands (*continued*)

Task	Command
Display detailed information.	commit display detail
Display the underlying Extensible Markup Language (XML) data.	commit display xml
Display the postinheritance contents of the configuration database. This view includes transient changes, but does not include changes made in configuration groups.	show display commit-scripts
Display the postinheritance contents of the configuration database. This view excludes transient changes.	show display commit-scripts no-transients
Display the postinheritance configuration in XML format. Viewing the configuration in XML format can be helpful when you are writing XML Path Language (XPath) expressions and configuration element tags.	show display commit-scripts view
Display the postinheritance configuration in XML format, but exclude transient changes.	show display commit-scripts view display commit-scripts no-transients
Display all configuration groups data, including script-generated changes to the groups.	show groups display commit-scripts
Display a particular configuration group, including script-generated changes to the group.	show groups <i>group-name</i> display commit-scripts
Operational Mode Commands	
Display logging data associated with all commit script processing.	show log cscript.log
Display processing for only the most recent commit operation.	show log cscript.log last
Display processing for script errors.	show log cscript.log match error
Display processing for a particular script.	show log cscript.log match <i>filename</i>

Related Documentation

- *Tracing Commit Script Processing*

CHAPTER 5

Configuring sFlow Technology

- [Understanding How to Use sFlow Technology for Network Monitoring on a Switch on page 51](#)
- [Example: Monitoring Network Traffic Using sFlow Technology on page 55](#)
- [Configuring sFlow Technology on page 59](#)

Understanding How to Use sFlow Technology for Network Monitoring on a Switch

The sFlow technology is a monitoring technology for high-speed switched or routed networks. sFlow monitoring technology randomly samples network packets and sends the samples to a monitoring station called a *collector*. You can configure sFlow technology on a Juniper Networks switch to continuously monitor traffic at wire speed on all interfaces simultaneously.

This topic describes:

- [Sampling Mechanism and Architecture of sFlow Technology on Switches on page 51](#)
- [Adaptive Sampling on page 53](#)
- [sFlow Agent Address Assignment on page 54](#)
- [sFlow Limitations on Switches on page 54](#)

Sampling Mechanism and Architecture of sFlow Technology on Switches

sFlow technology uses the following two sampling mechanisms:

- **Packet-based sampling**—Samples one packet out of a specified number of packets from an interface enabled for sFlow technology. Only the first 128 bytes of each packet are sent to the collector. Data collected include the Ethernet, IP, and TCP headers, along with other application-level headers (if present). Although this type of sampling might not capture infrequent packet flows, the majority of flows are reported over time, allowing the collector to generate a reasonably accurate representation of network activity. To configure packet-based sampling, you must specify a sample rate.
- **Time-based sampling**—Samples interface statistics at a specified interval from an interface enabled for sFlow technology. Statistics such as Ethernet interface errors are captured. To configure time-based sampling, you must specify a polling interval.

The sampling information is used to create a network traffic visibility picture. The Juniper Networks Junos operating system (Junos OS) fully supports the sFlow standard described in RFC 3176, *InMon Corporation's sFlow: A Method for Monitoring Traffic in Switched and Routed Networks* (see <http://faqs.org/rfcs/rfc3176.html>).



NOTE: sFlow technology on the switches samples only raw packet headers. A raw Ethernet packet is the complete Layer 2 network frame.

An sFlow monitoring system consists of an sFlow agent embedded in the switch and a centralized collector. The sFlow agent's two main activities are random sampling and statistics gathering. It combines interface counters and flow samples and sends them across the network to the sFlow collector as UDP datagrams, directing those datagrams to the IP address and UDP destination port of the collector. Each datagram contains the following information:

- The IP address of the sFlow agent
- The number of samples
- The interface through which the packets entered the agent
- The interface through which the packets exited the agent
- The source and destination interface for the packets
- The source and destination VLAN for the packets

EX Series switches, QFX Series switches, and the QFabric systems adopt the distributed sFlow architecture. The sFlow agent has two separate sampling entities that are associated with each Packet Forwarding Engine in case of switches and nodes in case of a QFabric system. These sampling entities are known as subagents. Each subagent has a unique ID that is used by the collector to identify the data source. A subagent has its own independent state and forwards its own sample messages to the sFlow agent. The sFlow agent is responsible for packaging the samples into datagrams and sending them to the sFlow collector. Because sampling is distributed across subagents, the protocol overhead associated with sFlow technology is significantly reduced at the collector.



NOTE: On the QFabric system, an sFlow collector must be reachable through the data network. Because each Node device has all routes stored in the default routing instance, the collector IP address should be included in the default routing instance to ensure the collector's reachability from the Node device.



NOTE: You cannot configure sFlow monitoring on a link aggregation group (LAG), but you can configure it individually on a LAG member interface.

Infrequent sampling flows might not be reported in the sFlow information, but over time the majority of flows are reported. Based on a configured sampling rate N , 1 out of N packets is captured and sent to the collector. This type of sampling does not provide a 100 percent accurate result in the analysis, but it does provide a result with quantifiable accuracy. A user-configured polling interval defines how often the sFlow data for a specific interface are sent to the collector, but an sFlow agent can also schedule polling.



NOTE: We recommend that you configure the same sample rate for all the ports in a line card. If you configure different sample rates, the lowest value is used for all ports on the line card..



NOTE: If the mastership assignment changes in a Virtual Chassis setup, sFlow technology continues to function.

Adaptive Sampling

To ensure sampling accuracy and efficiency, EX Series switches and QFX Series devices use adaptive sFlow sampling. Adaptive sampling monitors the overall incoming traffic rate on the device and provides feedback to the interfaces to dynamically adapt their sampling rate to traffic conditions. The sFlow agent reads the statistics on the interfaces every few seconds (12 seconds for EX Series switches and 5 seconds for QFX Series devices) and identifies five interfaces with the highest number of samples.

On a Flexible PIC Concentrator (FPC), when the CPU processing limit is reached because of sflow sample processing, a binary backoff algorithm is initiated. This reduces the sampling load, arriving through the top five sample-producing interfaces on that FPC by half. The backoff algorithm achieves this by doubling the sampling rate on these five earmarked interfaces. This process is repeated until the CPU-load due to sflow on the given FPC comes down to an acceptable level.

On a QFabric system, sFlow technology monitors the interfaces on each node device as a group, and implements the binary backoff algorithm based on the traffic on that group of interfaces.



NOTE: On the QFX Series standalone switches, if you configure sFlow technology monitoring on multiple interfaces and with a high sampling rate, we recommend that you specify a collector that is on the data network instead of on the management network. Having a high volume of sFlow technology monitoring traffic on the management network might interfere with other management interface traffic.

Using adaptive sampling prevents overloading of the CPU and keeps the device operating at its optimum level even when there is a change in traffic patterns on the interfaces. The reduced sampling rate is used until the device is rebooted or when a new sampling rate is configured.



NOTE: sFlow technology on EX Series switches does not support graceful restart. When a graceful restart occurs, the adaptive sampling rate is set to the user-configured sampling rate.

sFlow Agent Address Assignment

The sFlow collector uses the sFlow agent's IP address to determine the source of the sFlow data. You can configure the IP address of the sFlow agent to ensure that the agent ID of the sFlow agent remains constant. If you do not specify the IP address to be assigned to the agent, an IP address is automatically assigned to the agent based on the following order of priority of interfaces configured on the device:

EX Series Devices	QFX Series Devices
<ol style="list-style-type: none"> 1. Virtual Management Ethernet (VME) interface 2. Management Ethernet interface 	<ol style="list-style-type: none"> 1. Management Ethernet interface me0 IP address 2. Any Layer 3 interface if the me0 IP address is not available

If a particular interface is not configured, the IP address of the next interface in the priority list is used as the IP address for the agent. Once an IP address is assigned to the agent, the agent ID is not modified until the sFlow service is restarted. At least one interface has to be configured for an IP address to be assigned to the agent. When the agent's IP address is assigned automatically, the IP address is dynamic and changes when the switch reboots.

On the QFabric system, the following default values are used if the optional parameters are not configured:

- Agent ID is the management IP address of the default partition.
- Source IP is the management IP address of the default partition.

In addition, the QFabric system subagent ID (which is included in the sFlow datagrams) is the ID of the node group from which the datagram is sent to the collector.

sFlow data can be used to provide network traffic visibility information. You can explicitly configure the source IP address to be assigned to the sFlow datagrams. If you do not explicitly configure the IP address, the IP address of any of the configured Layer 3 network interfaces is used as the source IP address. If a Layer 3 IP address is not configured, then the agent IP address is used as the source IP address.

sFlow Limitations on Switches

On the QFX Series, limitations of sFlow traffic sampling include the following:

- sFlow sampling on ingress interfaces does not capture CPU-bound traffic.
- sFlow sampling on egress interfaces does not support broadcast and multicast packets.
- Egress samples do not contain modifications made to the packet in the egress pipeline.

- If a packet is discarded because of a firewall filter, the reason code for discarding the packet is not sent to the collector.
- The out-priority field for a VLAN is always set to 0 (zero) on ingress and egress samples.
- On QFX5100 standalone switches and the QFX Series Virtual Chassis (including mixed QFX Series Virtual Chassis), egress firewall filters are not applied to sFlow sampling packets. On these platforms, the software architecture is different from that on other QFX Series devices—sFlow packets are sent by the Routing Engine (not the line card on the host) and do not transit the switch. Egress firewall filters affect data packets that are transiting a switch, but do not affect packets sent by the Routing Engine. As a result, sFlow sampling packets are always sent to the sFlow collector.

EX9200 switches support configuration of only one sampling rate (inclusive of ingress and egress rates) on an FPC. To support compatibility with the sflow configuration of other Juniper Networks products, EX9200 switches still accept multiple rate configuration on different interfaces of the same FPC. However, the switch programs the lowest rate as the sampling rate for all the interfaces of that FPC. The sFlow show command (**show sflow interfaces**) displays the configured rate and the actual (effective) rate. However, different rates on different FPCs is still supported on EX9200 switches.

Related Documentation

- [Example: Monitoring Network Traffic Using sFlow Technology on page 55](#)
- [Example: Configuring sFlow Technology to Monitor Network Traffic on EX Series Switches](#)
- [Configuring sFlow Technology on page 59](#)
- [Configuring sFlow Technology for Network Monitoring \(CLI Procedure\)](#)
- [Monitoring Interface Status and Traffic](#)

Example: Monitoring Network Traffic Using sFlow Technology

The sFlow technology is a monitoring technology for high-speed switched or routed networks. sFlow monitoring technology collects samples of network packets and sends them in a UDP datagram to a monitoring station called a *collector*. You can configure sFlow technology on a device to monitor traffic continuously at wire speed on all interfaces simultaneously. You must enable sFlow monitoring on each interface individually; you cannot globally enable sFlow monitoring on all interfaces with a single configuration statement. Junos OS fully supports the sFlow technology standard described in RFC 3176, *InMon Corporation's sFlow: A Method for Monitoring Traffic in Switched and Routed Networks*.

This example describes how to configure and use sFlow monitoring on a QFX3500 switch in standalone mode.

- [Requirements on page 56](#)
- [Overview on page 56](#)
- [Configuration on page 57](#)
- [Verification on page 58](#)

Requirements

This example uses the following hardware and software components:


- Junos OS Release 11.3 or later
- One QFX3500 switch

Overview

An sFlow monitoring system consists of an sFlow agent embedded in the device and a centralized collector on the network. The two main activities of the sFlow agent are random sampling and statistics gathering. The sFlow agent combines interface counters and flow samples and sends them to the IP address and UDP destination port of the sFlow collector in UDP datagrams.

Figure 6 on page 56 depicts the basic elements of an sFlow system.

 Figure 6: sFlow Technology Monitoring System

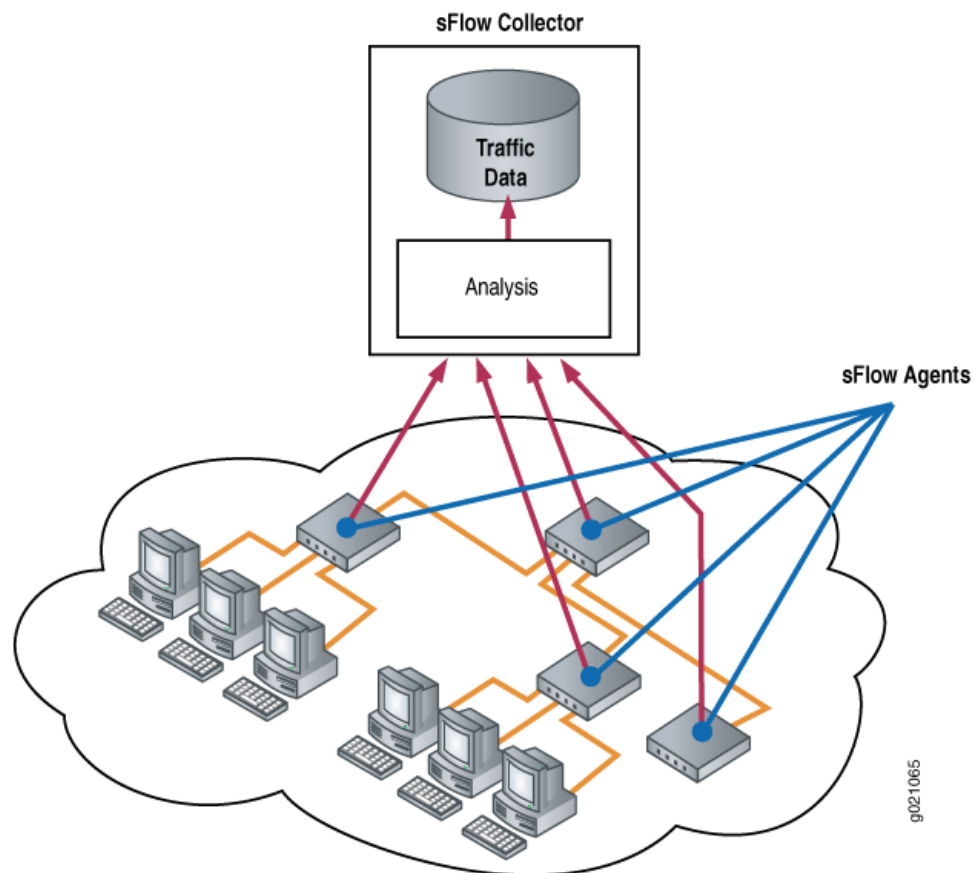

Configuration

CLI Quick Configuration To quickly configure sFlow technology, copy the following commands and paste them into the terminal window of the switch:

```
[edit protocols sflow]
set collector 10.204.32.46 udp-port 5600
set interfaces xe-0/0/1.0
set polling-interval 20
set sample-rate 1000
```

Step-by-Step Procedure To configure sFlow features using the CLI:

1. Configure the IP address and UDP port of at least one collector:

```
[edit protocols sflow]
user@switch# set collector 10.204.32.46 udp-port 5600
```

The default UDP port assigned is 6343.

2. Enable sFlow technology on a specific interface:

```
[edit protocols sflow]
user@switch# set interfaces xe-0/0/1.0
```



NOTE: You cannot enable sFlow technology on a Layer 3 VLAN-tagged interface.

You cannot enable sFlow technology on a LAG interface (for example, ae0), but you can enable sFlow technology on the member interfaces of the LAG (for example, xe-0/0/1).

3. Specify how often (in seconds) the sFlow agent polls all interfaces at the global level:

```
[edit protocols sflow]
user@switch# set polling-interval 20
```



NOTE: Specify 0 if you do not want to poll the interface.

4. Specify the rate at which packets must be sampled at the global level. The following example sets a sample rate of 1 in 1000 packets:

```
[edit protocols sflow]
user@switch# set sample-rate 1000
```

Results Check the results of the configuration:

```
[edit]
user@switch# show protocols
sflow {
  collector 10.204.32.46 {
    udp-port 5600;
```

```

    }
    interfaces xe-0/0/1.0 {
        polling-interval 20;
        sample-rate 1000;
    }
}

```

Verification

To confirm that the configuration is correct, perform these tasks:

- [Verifying That sFlow Technology Has Been Configured Properly on page 58](#)
- [Verifying That sFlow Technology Is Enabled on an Interface on page 58](#)
- [Verifying the sFlow Collector Configuration on page 59](#)

Verifying That sFlow Technology Has Been Configured Properly

Purpose Verify that sFlow technology has been configured properly.

Action Enter the **show sflow** operational mode command:

```

user@switch> show sflow
sFlow           : Enabled
Sample limit    : 300 packets/second
Polling interval : 20 second
Sample rate     : 1:1000
Agent ID        : 10.1.1.2

```



NOTE: The sample limit cannot be configured and is set to 300 packets per second.

Meaning The output shows that sFlow technology is enabled and specifies the values for the sampling limit, polling interval, and sampling rate.

Verifying That sFlow Technology Is Enabled on an Interface

Purpose Verify that sFlow technology is enabled on interfaces and display the sampling parameters.

Action Enter the **show sflow interface** operational mode command:

```

user@switch> show sflow interface
Interface      Status      Sample    Polling
                rate      interval
xe-0/0/1.0     Enabled     1000      20

```

Meaning The output indicates that sFlow technology is enabled on the **Node1:xe-0/0/1.0** interface on the Node device with a sampling rate of 1000 and a polling interval of 20 seconds.

Verifying the sFlow Collector Configuration

Purpose	Verify the sFlow collector configuration.						
Action	<p>Enter the show sflow collector operational mode command:</p> <pre>user@switch> show sflow collector</pre> <table><tr><th>Collector address</th><th>Udp-port</th><th>No. of samples</th></tr><tr><td>10.204.32.46</td><td>5600</td><td>7516</td></tr></table>	Collector address	Udp-port	No. of samples	10.204.32.46	5600	7516
Collector address	Udp-port	No. of samples					
10.204.32.46	5600	7516					
Meaning	The output displays the IP address of the collector, the UDP port, and the number of samples collected.						
Related Documentation	<ul style="list-style-type: none">• Configuring sFlow Technology on page 59• <i>Overview of sFlow Technology</i>						

Configuring sFlow Technology

The sFlow technology is a monitoring technology for high-speed switched or routed networks. sFlow monitoring technology collects samples of network packets and sends them in a UDP datagram to a monitoring station called a *collector*. You can configure sFlow technology on a device to monitor traffic continuously at wire speed on all interfaces simultaneously. You must enable sFlow monitoring on each interface individually; you cannot globally enable sFlow monitoring on all interfaces with a single configuration statement. Junos OS fully supports the sFlow technology standard described in RFC 3176, *InMon Corporation's sFlow: A Method for Monitoring Traffic in Switched and Routed Networks*.

On the QFabric system, the sFlow monitoring global configuration that is defined on the Director device is distributed to Node groups that have sFlow sampling configured on the interfaces.

To configure sFlow features using the CLI:

1. Configure the IP address and UDP port of at least one collector:

```
[edit protocols sflow]
user@host# set collector ip-address udp-port port-number
```

The default UDP port assigned is 6343.

2. Enable sFlow technology on a specific interface:

```
[edit protocols sflow]
user@host# set interfaces interface-name
```



NOTE: You cannot enable sFlow technology on a Layer 3 VLAN-tagged interface.

You cannot enable sFlow technology on a LAG interface (for example ae0), but you can enable sFlow technology on the member interfaces of the LAG (for example, xe-0/0/1).

3. Specify how often (in seconds) the sFlow agent polls all interfaces at the global level:

```
[edit protocols sflow]
user@host# set polling-interval seconds
```



NOTE: Specify 0 if you do not want to poll the interface.

4. Specify the rate at which packets are sampled at the global level. For example, configuring a *number* of 1000 sets a sample rate of 1 in 1000 packets.

```
[edit protocols sflow]
user@host# set sample-rate number
```

5. (Optional) You can also configure the polling interval and sample rate at the interface level:

```
[edit protocols sflow]
user@host# set interfaces interface-name polling-interval seconds sample-rate number
```



NOTE: The interface-level configuration overrides the global configuration for the specified interface.

**Related
Documentation**

- [Example: Monitoring Network Traffic Using sFlow Technology on page 55](#)
- [Overview of sFlow Technology](#)

CHAPTER 6

Configuring SNMP

- [Utility MIB on page 62](#)
- [SNMPv3 Overview on page 62](#)
- [Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63](#)
- [Understanding RMON on page 65](#)
- [RMON MIB Event, Alarm, Log, and History Control Tables on page 66](#)
- [Understanding Health Monitoring on page 69](#)
- [SNMP MIBs Support on page 70](#)
- [SNMP Traps Support on page 86](#)
- [MIB Objects for the QFX Series on page 99](#)
- [Configuring SNMP on page 101](#)
- [Configuring the SNMP Community String on page 105](#)
- [Configuring SNMP Trap Groups on page 106](#)
- [Adding a Group of Clients to an SNMP Community on page 107](#)
- [Configuring the Interfaces on Which SNMP Requests Can Be Accepted on page 108](#)
- [Configuring MIB Views on page 108](#)
- [Configuring RMON Alarms and Events on page 109](#)
- [Configuring Health Monitoring on page 111](#)
- [Creating SNMPv3 Users on page 112](#)
- [Configuring Access Privileges for a Group on page 113](#)
- [Assigning a Security Name to a Group on page 115](#)
- [Configuring SNMPv3 Traps on a Device Running Junos OS on page 116](#)
- [Configuring SNMP Informs on page 117](#)
- [Monitoring RMON MIB Tables on page 118](#)
- [Monitoring SNMP on page 118](#)
- [Tracing SNMP Activity on a Device Running Junos OS on page 120](#)
- [Using the Enterprise-Specific Utility MIB to Enhance SNMP Coverage on page 123](#)
- [Example: Configuring SNMP on page 125](#)

Utility MIB

The Juniper Networks enterprise-specific Utility MIB, whose object ID is `{jnxUtilMibRoot1}`, defines objects for counters, integers, and strings. The Utility MIB contains one table for each of the following five data types:

- 32-bit counters
- 64-bit counters
- Signed integers
- Unsigned integers
- Octet strings

Each data type has an arbitrary ASCII name, which is defined when the data is populated, and a timestamp that shows the last time when the data instance was modified.

For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos15.1x49/topics/reference/mibs/mib-jnx-util.txt.

For information about the enterprise-specific Utility MIB objects, see the following topics:

- *jnxUtilCounter32Table*
- *jnxUtilCounter64Table*
- *jnxUtilIntegerTable*
- *jnxUtilUintTable*
- *jnxUtilStringTable*

Related Documentation

- *Enterprise-Specific SNMP MIBs Supported by Junos OS*
- *Standard SNMP MIBs Supported by Junos OS*
- *Understanding the Implementation of SNMP on the QFabric System*

SNMPv3 Overview

The QFX3500 switch supports SNMP version 3 (SNMPv3). SNMPv3 enhances the functionality of SNMPv1 and SNMPv2c by supporting user authentication and data encryption. SNMPv3 uses the user-based security model (USM) to provide security for SNMP messages, and the view-based access control model (VACM) for user access control.

SNMPv3 features include:

- With USM, the SNMP messages between the SNMP manager and the agent can have the message source authenticated and the data integrity checked. USM reduces messaging delays and message replays by enforcing timeout limits and by checking for duplicate message request IDs.
- VACM complements USM by providing user access control for SNMP queries to the agent. You define access privileges that you wish to extend to a group of one or more users. Access privileges are determined by the security model parameters (**usm**, **v1**, or **v2**) and security level parameters (**authentication**, **privacy**, or **none**). For each security level, you must associate one MIB view for the group. Associating a MIB view with a group grants the read, write, or notify permission to a set of MIB objects for the group.
- You configure security parameters for each user, including the username, authentication type and authentication password, and privacy type and privacy password. The username given to each user is in a format that is dependent on the security model configured for that user.
- To ensure messaging security, another type of username, called the security name, is included in the messaging data that is sent between the local SNMP server and the destination SNMP server. Each user name is mapped to a security name, but the security name is in a format that is independent of the security model.
- Trap entries in SNMPv3 are created by configuring the notify, notify filter, target address, and target parameters. The **notify** statement specifies the type of notification (trap) and contains a single tag that defines a set of target addresses to receive a trap. The notify filter defines access to a collection of trap object identifiers (OIDs). The target address defines the address of an SNMP management application and other attributes used in sending notifications. Target parameters define the message processing and security parameters used in sending notifications to a particular target.

**Related
Documentation**

- [Assigning a Security Name to a Group on page 115](#)
- [Configuring Access Privileges for a Group on page 113](#)
- [Configuring SNMP Informs on page 117](#)
- [Creating SNMPv3 Users on page 112](#)

Minimum SNMPv3 Configuration on a Device Running Junos OS

To configure the minimum requirements for SNMPv3, include the following statements at the **[edit snmp v3]** and **[edit snmp]** hierarchy levels:



NOTE: You must configure at least one view (notify, read, or write) at the **[edit snmp view-name]** hierarchy level.

```
[edit snmp]
view view-name {
  oid object-identifier (include | exclude);
}
[edit snmp v3]
```

```

notify name {
    tag tag-name;
}
notify-filter profile-name {
    oid object-identifier (include | exclude);
}
snmp-community community-index {
    security-name security-name;
}
target-address target-address-name {
    address address;
    target-parameters target-parameters-name;
}
target-parameters target-parameters-name {
    notify-filter profile-name;
    parameters {
        message-processing-model (v1 | v2c | v3);
        security-level (authentication | none | privacy);
        security-model (usm | v1 | v2c);
        security-name security-name;
    }
}
usm {
    local-engine {
        user username {
        }
    }
}
vacm {
    access {
        group group-name {
            (default-context-prefix | context-prefix context-prefix){
                security-model (any | usm | v1 | v2c) {
                    security-level (authentication | none | privacy) {
                        notify-view view-name;
                        read-view view-name;
                        write-view view-name;
                    }
                }
            }
        }
    }
}
security-to-group {
    security-model (usm | v1 | v2c) {
        security-name security-name {
            group group-name;
        }
    }
}

```

Related Documentation

- [Creating SNMPv3 Users on page 112](#)
- [Configuring MIB Views on page 108](#)
- [Defining Access Privileges for an SNMP Group](#)

- [Configuring SNMPv3 Traps on a Device Running Junos OS on page 116](#)
- [Configuring SNMP Informs on page 117](#)
- [Complete SNMPv3 Configuration Statements](#)
- [Example: SNMPv3 Configuration](#)

Understanding RMON ---

- [RMON Overview on page 65](#)
- [Alarm Thresholds and Events on page 66](#)

RMON Overview

The Junos OS supports the *Remote Network Monitoring* (RMON) MIB (RFC 2819), which allows a management device to monitor the values of MIB objects, or variables, against configured thresholds. When the value of a variable crosses a threshold, an alarm and its corresponding event are generated. The event can be logged and can generate an SNMP trap.

An operational support system (OSS) or a fault-monitoring system can be used to automatically monitor events that track many different metrics, including performance, availability, faults, and environmental data. For example, an administrator might want to know when the internal temperature of a chassis has risen above a configured threshold, which might indicate that a chassis fan tray is faulty, the chassis air flow is impeded, or the facility cooling system in the vicinity of the chassis is not operating normally.

The RMON MIB also defines tables that store various statistics for Ethernet interfaces, including the **etherStatsTable** and the **etherHistoryTable**. The **etherStatsTable** contains cumulative real-time statistics for Ethernet interfaces, such as the number of unicast, multicast, and broadcast packets received on an interface. The **etherHistoryTable** maintains a historical sample of statistics for Ethernet interfaces. The control of the **etherHistoryTable**, including the interfaces to track and the sampling interval, is defined by the RMON **historyControlTable**.

To enable RMON alarms, you perform the following steps:


1. Configure SNMP, including trap groups. You configure SNMP at the **[edit snmp]** hierarchy level.
2. Configure rising and falling events in the **eventTable**, including the event types and trap groups. You can also configure events using the CLI at the **[edit snmp rmon event]** hierarchy level.
3. Configure alarms in the **alarmTable**, including the variables to monitor, rising and falling thresholds, the sampling types and intervals, and the corresponding events to generate when alarms occur. You can also configure alarms using the CLI at the **[edit snmp rmon alarm]** hierarchy level.

Extensions to the **alarmTable** are defined in the Juniper Networks enterprise-specific MIB **jnxRmon** (mib-jnx-rmon.txt).

Alarm Thresholds and Events

By setting a rising and a falling threshold for a monitored variable, you can be alerted whenever the value of the variable falls outside the allowable operational range (see [Figure 7 on page 66](#)).

 Figure 7: Setting Thresholds

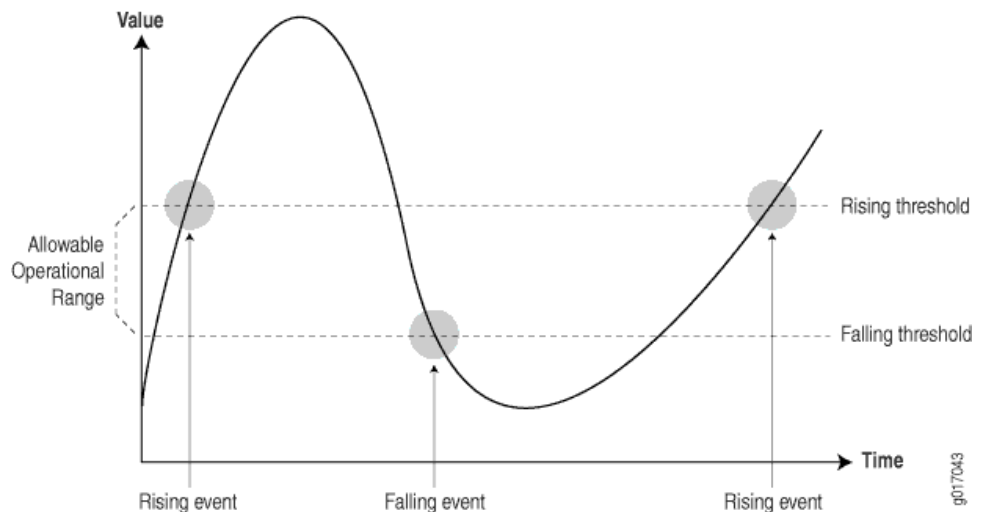

Events are only generated when the alarm threshold is first crossed in any one direction rather than after each sample interval. For example, if a rising threshold alarm, along with its corresponding event, is raised, no more threshold crossing events occur until a corresponding falling alarm occurs. This considerably reduces the quantity of events that are produced by the system, making it easier for operations staff to react when events do occur.

Before you configure remote monitoring, you should identify what variables need to be monitored and their allowable operational range. This requires some period of baselining to determine the allowable operational ranges. An initial baseline period of at least 3 months is not unusual when you first identify the operational ranges and define thresholds, but baseline monitoring should continue over the life span of each monitored variable.

Related Documentation

- [Configuring RMON Alarms and Events on page 109](#)
- [Juniper Networks Enterprise-Specific MIBs](#)
- [RMON MIB Event, Alarm, Log, and History Control Tables on page 66](#)

RMON MIB Event, Alarm, Log, and History Control Tables

The Junos OS supports the *Remote Network Monitoring* (RMON) MIB (RFC 2819), which allows a management device to monitor the values of MIB objects, or variables, against configured thresholds. When the value of a variable crosses a threshold, an alarm and

its corresponding event are generated. The event can be logged and can generate an SNMP trap.

[Table 7 on page 67](#) provides each field in the RMON eventTable, the description of the field, and the corresponding Junos OS statement that you can use to configure the field. The Junos OS statements reside at the `[edit snmp rmon]` hierarchy level.

Table 7: RMON Event Table

Field	Description	Statement [edit snmp rmon]
eventDescription	Text description of this event.	description
eventType	Type of event (for example, log, trap, or log and trap).	type
eventCommunity	Trap group to which to send this event, as defined in the Junos OS configuration. (This is not the same as the SNMP community.)	community
eventOwner	Entity (for example, manager) that created this event.	—
eventStatus	Status of this row (for example, valid, invalid, or createRequest).	—

[Table 8 on page 67](#) provides each field in the RMON alarmTable, the description of the field, and the corresponding Junos OS statement that you can use to configure the field. The Junos OS statements reside at the `[edit snmp rmon]` hierarchy level.

Table 8: RMON Alarm Table

Field	Description	Statement [edit snmp rmon]
alarmStatus	Status of this row (for example, valid, invalid, or createRequest)	—
alarmInterval	Sampling period (in seconds) of the monitored variable	interval
alarmVariable	Object identifier (OID) and instance of the variable to be monitored	—
alarmValue	Actual value of the sampled variable	—
alarmSampleType	Sample type (absolute or delta changes)	sample-type
alarmStartupAlarm	Initial alarm (rising, falling, or either)	startup-alarm
alarmRisingThreshold	Rising threshold against which to compare the value	rising-threshold
alarmFallingThreshold	Falling threshold against which to compare the value	falling-threshold
alarmRisingEventIndex	Index (row) of the rising event in the event table	rising-event-index
alarmFallingEventIndex	Index (row) of the falling event in the event table	falling-event-index

Table 9 on page 68 provides each field in the jnxRmon jnxRmonAlarmTable, which is an extension to the RMON alarmTable. You can troubleshoot the RMON agent, rmopd, that runs on a switch by inspecting the contents of the jnxRmonAlarmTable object.

Table 9: jnxRmon Alarm Table

Field	Description
jnxRmonAlarmGetFailCnt	Number of times the internal Get request for the variable failed
jnxRmonAlarmGetFailTime	Value of the sysUpTime object when the last failure occurred
jnxRmonAlarmGetFailReason	Reason why the Get request failed
jnxRmonAlarmGetOkTime	Value of the sysUpTime object when the variable moved out of failure state
jnxRmonAlarmState	Status of this alarm entry

Table 10 on page 68 provides each field in the RMON historyControlTable, the description of the field, and the corresponding Junos OS statement that you can use to configure the field. The Junos OS statements reside at the **[edit snmp rmon history]** hierarchy level. The historyControlTable controls the RMON etherHistoryTable.

Table 10: RMON History Control Table

Field	Description	Statement [edit snmp rmon history]
historyControlDataSource	Identifies the source of the data for which historical data was collected.	interface
historyControlBucketsRequested	Requested number of discrete time intervals over which data is to be saved.	bucket-size
historyControlBucketsGranted	Number of discrete sampling intervals over which data is to be saved.	—
historyControlInterval	Interval, in seconds, over which the data is sampled for each bucket.	interval
historyControlOwner	Entity that configured this entry.	owner
historyControlStatus	Status of this entry.	—

- Related Documentation**
- [Configuring RMON Alarms and Events on page 109](#)
 - [Juniper Networks Enterprise-Specific MIBs](#)
 - [Understanding RMON on page 65](#)

Understanding Health Monitoring

Health monitoring is an SNMP feature that extends the RMON alarm infrastructure to provide monitoring for a predefined set of objects (such as file system usage, CPU usage, and memory usage), and for Junos OS processes.

You enable the health monitor feature using the **health-monitor** statement at the **[edit snmp]** hierarchy level. You can also configure health monitor parameters such as a falling threshold, rising threshold, and interval. If the value of a monitored object exceeds the rising or falling threshold, an alarm is triggered and an event may be logged.

The falling threshold is the lower threshold for the monitored object instance. The rising threshold is the upper threshold for the monitored object instance. Each threshold is expressed as a percentage of the maximum possible value. The interval represents the period of time, in seconds, over which the object instance is sampled and compared with the rising and falling thresholds.

Events are only generated when a threshold is first crossed in any one direction, rather than after each sample interval. For example, if a rising threshold alarm, along with its corresponding event, is raised, no more threshold crossing events occur until a corresponding falling alarm occurs.

System log entries for health monitor events have a corresponding HEALTHMONITOR tag and not a generic SNMPD_RMON_EVENTLOG tag. However, the health monitor sends generic RMON risingThreshold and fallingThreshold traps. You can use the **show snmp health-monitor** operational command to view information about health monitor alarms and logs.

When you configure the health monitor, monitoring information for certain object instances is available, as shown in [Table 11 on page 69](#).

Table 11: Monitored Object Instances

Object	Description
jnxHrStoragePercentUsed.1	Monitors the /dev/ad0s1a: file system on the switch. This is the root file system mounted on / .
jnxHrStoragePercentUsed.2	Monitors the /dev/ad0s1e: file system on the switch. This is the configuration file system mounted on /config .
jnxOperatingCPU (RE0)	Monitors CPU usage by the Routing Engine (RE0).
jnxOperatingBuffer (RE0)	Monitors the amount of memory available on the Routing Engine (RE0).
sysAppElmtRunCPU	Monitors the CPU usage for each Junos OS process (also called daemon). Multiple instances of the same process are monitored and indexed separately.
sysAppElmtRunMemory	Monitors the memory usage for each Junos OS process. Multiple instances of the same process are monitored and indexed separately.

- Related Documentation**
- [Configuring Health Monitoring on page 111](#)
 - [falling-threshold \(Health Monitor\) on page 226](#)
 - [interval \(Health Monitor\) on page 235](#)
 - [rising-threshold \(Health Monitor\) on page 255](#)
 - [show snmp health-monitor on page 351](#)

SNMP MIBs Support

The QFX Series standalone switches, QFX Series Virtual Chassis, and QFabric systems support standard MIBs and Juniper Networks enterprise-specific MIBs.

For more information, see:

- [MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis on page 70](#)
- [MIBs Supported on QFabric Systems on page 80](#)

MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

The QFX Series standalone switches and QFX Series Virtual Chassis support both standard MIBs and Juniper Networks enterprise-specific MIBs. For more information, see:

- [Table 12 on page 70](#) for standard MIBs.
- [Table 13 on page 76](#) for Juniper Networks enterprise-specific MIBs.

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

RFC	Additional Information
IEEE 802.1ab section 12.1, <i>Link Layer Discovery Protocol (LLDP) MIB</i>	<p>Supported tables and objects:</p> <ul style="list-style-type: none"> • lldpRemManAddrOID • lldpLocManAddrOID • lldpReinitDelay • lldpNotificationInterval • lldpStatsRxPortFramesDiscardedTotal • lldpStatsRxPortFramesError • lldpStatsRxPortTLVsDiscardedTotal • lldpStatsRxPortTLVsUnrecognizedTotal • lldpStatsRxPortAgeoutsTotal

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

RFC	Additional Information
IEEE 802.3ad, <i>Aggregation of Multiple Link Segments</i>	<p>The following tables and objects are supported:</p> <ul style="list-style-type: none"> dot3adAggPortTable, dot3adAggPortListTable, dot3adAggTable, and dot3adAggPortStatsTable dot3adAggPortDebugTable (only dot3adAggPortDebugRxState, dot3adAggPortDebugMuxState, dot3adAggPortDebugActorSyncTransitionCount, dot3adAggPortDebugPartnerSyncTransitionCount, dot3adAggPortDebugActorChangeCount, and dot3adAggPortDebugPartnerChangeCount) dot3adTablesLastChanged
RFC 1155, <i>Structure and Identification of Management Information for TCP/IP-based Internets</i>	—
RFC 1157, <i>A Simple Network Management Protocol (SNMP)</i>	—
RFC 1212, <i>Concise MIB Definitions</i>	—
RFC 1213, <i>Management Information Base for Network Management of TCP/IP-Based Internets: MIB-II</i>	<p>The following areas are supported:</p> <ul style="list-style-type: none"> MIB II and its SNMP version 2 derivatives, including: <ul style="list-style-type: none"> Statistics counters IP, except for ipRouteTable, which has been replaced by ipCidrRouteTable (RFC 2096, <i>IP Forwarding Table MIB</i>) ipAddrTable SNMP management Interface management SNMPv1 Get, GetNext requests, and SNMPv2 GetBulk request Junos OS-specific secured access list Master configuration keywords Reconfigurations upon SIGHUP
RFC 1215, <i>A Convention for Defining Traps for use with the SNMP</i>	Support is limited to MIB II SNMP version 1 traps and version 2 notifications.
RFC 1286, <i>Definitions of Managed Objects for Bridges</i>	—
RFC 1657, <i>Definitions of Managed Objects for the Fourth Version of the Border Gateway Protocol (BGP-4) using SMIv2</i>	—

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (continued)

RFC	Additional Information
RFC 1850, <i>OSPF Version 2 Management Information Base</i>	The following table, objects, and traps are not supported: <ul style="list-style-type: none"> Host Table ospfOriginateNewLsas and ospfRxNewLsas objects ospfOriginateLSA, ospfLsdbOverflow, and ospfLsdbApproachingOverflow traps
RFC 1901, <i>Introduction to Community-based SNMPv2</i>	—
RFC 1905, <i>Protocol Operations for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	—
RFC 1907, <i>Management Information Base for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	—
RFC 2011, <i>SNMPv2 Management Information Base for the Internet Protocol Using SMIv2</i>	—
RFC 2012, <i>SNMPv2 Management Information Base for the Transmission Control Protocol Using SMIv2</i>	—
RFC 2013, <i>SNMPv2 Management Information Base for the User Datagram Protocol Using SMIv2</i>	—
RFC 2233, <i>The Interfaces Group MIB Using SMIv2</i>	NOTE: RFC 2233 has been replaced by RFC 2863. However, Junos OS supports both RFC 2233 and RFC 2863.
RFC 2287, <i>Definitions of System-Level Managed Objects for Applications</i>	The following objects are supported: <ul style="list-style-type: none"> sysApplInstallPkgTable sysApplInstallElmtTable sysApplElmtRunTable sysApplMapTable
RFC 2570, <i>Introduction to Version 3 of the Internet-standard Network Management Framework</i>	—
RFC 2571, <i>An Architecture for Describing SNMP Management Frameworks</i> (read-only access)	NOTE: RFC 2571 has been replaced by RFC 3411. However, Junos OS supports both RFC 2571 and RFC 3411.
RFC 2572, <i>Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)</i> (read-only access)	NOTE: RFC 2572 has been replaced by RFC 3412. However, Junos OS supports both RFC 2572 and RFC 3412.

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

RFC	Additional Information
RFC 2576, <i>Coexistence between Version 1, Version 2, and Version 3 of the Internet-standard Network Management Framework</i>	NOTE: RFC 2576 has been replaced by RFC 3584. However, Junos OS supports both RFC 2576 and RFC 3584.
RFC 2578, <i>Structure of Management Information Version 2 (SMIv2)</i>	—
RFC 2579, <i>Textual Conventions for SMIv2</i>	—
RFC 2580, <i>Conformance Statements for SMIv2</i>	—
RFC 2665, <i>Definitions of Managed Objects for the Ethernet-like Interface Types</i>	—
RFC 2787, <i>Definitions of Managed Objects for the Virtual Router Redundancy Protocol</i>	Support does not include row creation, the Set operation, and the vrrpStatsPacketLengthErrors object.
RFC 2790, <i>Host Resources MIB</i>	Support is limited to the following objects: <ul style="list-style-type: none"> Only hrStorageTable. The file systems <code>/</code>, <code>/config</code>, <code>/var</code>, and <code>/tmp</code> always return the same index number. When SNMP restarts, the index numbers for the remaining file systems might change. Only the objects of the hrSystem and hrSWInstalled groups.
RFC 2819, <i>Remote Network Monitoring Management Information Base</i>	The following objects are supported: <ul style="list-style-type: none"> etherStatsTable (for Ethernet interfaces only), alarmTable, eventTable, and logTable. historyControlTable and etherHistoryTable (except the etherHistoryUtilization object).
RFC 2863, <i>The Interfaces Group MIB</i>	NOTE: RFC 2233 has been replaced by RFC 2863. However, Junos OS supports both RFC 2233 and RFC 2863.
RFC 2932, <i>IPv4 Multicast Routing MIB</i>	—
RFC 2933, <i>Internet Group Management Protocol (IGMP) MIB</i>	—
RFC 2934, <i>Protocol Independent Multicast MIB for IPv4</i>	In Junos OS, RFC 2934 is implemented based on a draft version, <i>pimmib.mib</i> , of the now standard RFC.
RFC 3410, <i>Introduction and Applicability Statements for Internet Standard Management Framework</i>	—

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

RFC	Additional Information
RFC 3411, <i>An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks</i>	NOTE: RFC 3411 replaces RFC 2571. However, Junos OS supports both RFC 3411 and RFC 2571.
RFC 3412, <i>Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3412 replaces RFC 2572. However, Junos OS supports both RFC 3412 and RFC 2572.
RFC 3413, <i>Simple Network Management Protocol (SNMP) Applications</i>	All MIBs are supported except for the Proxy MIB.
RFC 3414, <i>User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)</i>	—
RFC 3415, <i>View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)</i>	—
RFC 3416, <i>Version 2 of the Protocol Operations for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3416 replaces RFC 1905, which was supported in earlier versions of Junos OS.
RFC 3417, <i>Transport Mappings for the Simple Network Management Protocol (SNMP)</i>	—
RFC 3418, <i>Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3418 replaces RFC 1907, which was supported in earlier versions of Junos OS.
RFC 3584, <i>Coexistence between Version 1, Version 2, and Version 3 of the Internet-standard Network Management Framework</i>	—
RFC 3826, <i>The Advanced Encryption Standard (AES) Cipher Algorithm in the SNMP User-based Security Model</i>	—

Table 12: Standard MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

RFC	Additional Information
RFC 4188, <i>Definitions of Managed Objects for Bridges</i>	<p>The QFX3500 and QFX3600 switches support 802.1D STP (1998) and the following subtrees and objects only:</p> <ul style="list-style-type: none"> dot1dTp subtree—dot1dTpFdbAddress, dot1dTpFdbPort, and dot1dTpFdbStatus objects from the dot1dTpFdbTable table. dot1dBase subtree—dot1dBasePort and dot1dBasePortIfIndex objects from the dot1dBasePortTable table. <p>NOTE: On QFX3500 and QFX3600 switches, the dot1dTpFdbTable table is populated only with MAC addresses learned on the default VLAN. To see the MAC addresses of all VLANs, specify the dot1qTpFdbTable table (RFC 4363b, <i>Q-Bridge VLAN MIB</i>) when you issue the show snmp mib walk command.</p> <p>Not supported on OCX Series devices.</p>
RFC 4293, <i>Management Information Base for the Internet Protocol (IP)</i>	Supports the ipAddrTable table only.
RFC 4318, <i>Definitions of Managed Objects for Bridges with Rapid Spanning Tree Protocol</i>	<p>Supports 802.1w and 802.1t extensions for RSTP.</p> <p>Not supported on OCX Series devices.</p>
RFC 4363b, <i>Q-Bridge VLAN MIB</i>	<p>NOTE: On QFX3500 and QFX3600 switches, the dot1dTpFdbTable table (RFC 4188, <i>Definitions of Managed Objects for Bridges</i>) is populated only with MAC addresses learned on the default VLAN. To see the MAC addresses of all VLANs, specify the dot1qTpFdbTable table (in this MIB) when you issue the show snmp mib walk command.</p> <p>Not supported on OCX Series devices.</p>
RFC 4444, <i>IS-IS MIB</i>	—
Internet Assigned Numbers Authority, <i>IANAiftype Textual Convention MIB</i> (referenced by RFC 2233)	See http://www.iana.org/assignments/ianaiftype-mib .
Internet draft draft-reeder-snmppv3-usm-3desede-00.txt, <i>Extension to the User-Based Security Model (USM) to Support Triple-DES EDE in 'Outside' CBC Mode</i>	—
Internet draft draft-ietf-idmr-igmp-mib-13.txt, <i>Internet Group Management Protocol (IGMP) MIB</i>	—
ESO Consortium MIB	<p>NOTE: The ESO Consortium MIB has been replaced by RFC 3826. See http://www.snmp.com/eso/.</p>

Table 13: Juniper Networks Enterprise-Specific MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

MIB	Description
Alarm MIB (mib-jnx-chassis-alarm)	<p>Provides support for alarms from the switch.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-chassis-alarm.txt.</p> <p>For more information, see <i>Alarm MIB</i>.</p>
Analyzer MIB (mib-jnx-analyzer)	<p>Contains analyzer and remote analyzer data related to port mirroring.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-analyzer.txt.</p> <p>For more information, see <i>Analyzer MIB</i>.</p> <p>Not supported on OCX Series devices.</p>
Chassis MIB (mib-jnx-chassis)	<p>Provides support for environmental monitoring (power supply state, board voltages, fans, temperatures, and airflow) and inventory support for the chassis, Flexible PIC Concentrators (FPCs), and PICs.</p> <p>NOTE: The jnxLEDTable table has been deprecated.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-chassis.txt.</p> <p>For more information, see <i>Chassis MIBs</i>.</p>
Chassis Definitions for Router Model MIB (mib-jnx-chas-defines)	<p>Contains the object identifiers (OIDs) that are used by the Chassis MIB to identify routing and switching platforms and chassis components. The Chassis MIB provides information that changes often, whereas the Chassis Definitions for Router Model MIB provides information that changes less often.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-chas-defines.txt.</p> <p>For more information, see <i>Chassis MIBs</i>.</p>
Class-of-Service MIB (mib-jnx-cos)	<p>Provides support for monitoring interface output queue statistics per interface and per forwarding class.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-cos.txt.</p> <p>For more information, see <i>Class-of-Service MIB</i>.</p>

Table 13: Juniper Networks Enterprise-Specific MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

MIB	Description
Configuration Management MIB (mib-jnx-cfgmgt)	<p>Provides notification for configuration changes and rescue configuration changes in the form of SNMP traps. Each trap contains the time at which the configuration change was committed, the name of the user who made the change, and the method by which the change was made.</p> <p>A history of the last 32 configuration changes is kept in jnxCmChgEventTable.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-cfgmgt.txt.</p> <p>For more information, see <i>Configuration Management MIB</i>.</p>
Ethernet MAC MIB (mib-jnx-mac)	<p>Monitors media access control (MAC) statistics on Gigabit Ethernet intelligent queuing (IQ) interfaces. It collects MAC statistics; for example, inoctets, inframes, outoctets, and outframes on each source MAC address and virtual LAN (VLAN) ID for each Ethernet port.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-mac.txt.</p> <p>For more information, see <i>Ethernet MAC MIB</i>.</p> <p>Not supported on OCX Series devices.</p>
Event MIB (mib-jnx-event)	<p>Defines a generic trap that can be generated using an operations script or event policy. This MIB provides the ability to specify a system log string and raise a trap if that system log string is found.</p> <p>In Junos OS release 13.2X51-D10 or later, if you configured an event policy to raise a trap when a new SNMP trap target is added, the SNMPD_TRAP_TARGET_ADD_NOTICE trap is generated with information about the new target.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-event.txt.</p> <p>For more information, see <i>Event MIB</i>.</p>
Firewall MIB (mib-jnx-firewall)	<p>Provides support for monitoring firewall filter counters.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-firewall.txt.</p> <p>For more information, see <i>Firewall MIB</i>.</p>

Table 13: Juniper Networks Enterprise-Specific MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

MIB	Description
Host Resources MIB (mib-jnx-hostresources)	<p>Extends the hrStorageTable object, providing a measure of the usage of each file system on the switch as a percentage. Previously, the objects in the hrStorageTable measured the usage in allocation units—hrStorageUsed and hrStorageAllocationUnits—only. Using the percentage measurement, you can more easily monitor and apply thresholds on usage.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-hostresources.txt.</p> <p>For more information, see <i>Host Resources MIB</i>.</p>
Interface MIB (Extensions) (mib-jnx-if-extensions)	<p>Extends the standard ifTable (RFC 2863) with additional statistics and Juniper Networks enterprise-specific chassis information in the ifJnxTable and ifChassisTable tables.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-if-extensions.txt.</p> <p>For more information, see <i>Interface MIB</i>.</p>
MPLS MIB (mib-jnx-mpls)	<p>Provides MPLS information and defines MPLS notifications.</p> <p>NOTE: This MIB is not supported on the QFX5100 switch.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-mpls.txt.</p> <p>For more information, see <i>MPLS MIB</i>.</p>
MPLS LDP MIB (mib-jnx-mpls-ldp)	<p>Contains object definitions as described in RFC 3815, <i>Definitions of Managed Objects for the Multiprotocol Label Switching (MPLS), Label Distribution Protocol (LDP)</i>.</p> <p>NOTE: This MIB is not supported on the QFX5100 switch.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-mpls-ldp.txt.</p> <p>For more information, see <i>MPLS LDP MIB</i>.</p>
Ping MIB (mib-jnx-ping)	<p>Extends the standard Ping MIB control table (RFC 2925). Items in this MIB are created when entries are created in pingCtlTable of the Ping MIB. Each item is indexed exactly as it is in the Ping MIB.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-ping.txt.</p> <p>For more information, see <i>PING MIB</i>.</p>

Table 13: Juniper Networks Enterprise-Specific MIBs Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

MIB	Description
RMON Events and Alarms MIB (mib-jnx-rmon)	<p>Supports Junos OS extensions to the standard Remote Monitoring (RMON) Events and Alarms MIB (RFC 2819). The extension augments the alarmTable object with additional information about each alarm. Two additional traps are also defined to indicate when problems are encountered with an alarm.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-rmon.txt.</p> <p>For more information, see <i>RMON Events and Alarms MIB</i>.</p>
Structure of Management Information MIB (mib-jnx-smi)	<p>Explains how the Juniper Networks enterprise-specific MIBs are structured.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-smi.txt.</p> <p>For more information, see <i>Structure of Management Information MIB</i>.</p>
System Log MIB (mib-jnx-syslog)	<p>Enables notification of an SNMP trap-based application when an important system log message occurs.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-syslog.txt.</p> <p>For more information, see <i>System Log MIB</i>.</p>
Utility MIB (mib-jnx-util)	<p>Provides you with SNMP MIB container objects of the following types: 32-bit counters, 64-bit counters, signed integers, unsigned integers, and octet strings. You can use these objects to store data that can be retrieved using other SNMP operations.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-util.txt.</p> <p>For more information, see “Utility MIB” on page 62 and “Using the Enterprise-Specific Utility MIB to Enhance SNMP Coverage” on page 123.</p>
VLAN MIB (mib-jnx-vlan)	<p>Contains information about prestandard IEEE 802.10 VLANs and their association with LAN emulation clients.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-vlan.txt.</p> <p>For more information, see <i>VLAN MIB</i>.</p> <p>Not supported on OCX Series devices.</p>

MIBs Supported on QFabric Systems

The QFabric systems support both standard MIBs and Juniper Networks enterprise-specific MIBs. For more information, see:

- [Table 14 on page 80](#) for standard MIBs.
- [Table 15 on page 84](#) for Juniper Networks enterprise-specific MIBs.

Table 14: Standard MIBs Supported on QFabric Systems

RFC	Additional Information
RFC 1155, <i>Structure and Identification of Management Information for TCP/IP-based Internets</i>	—
RFC 1157, <i>A Simple Network Management Protocol (SNMP)</i>	—
RFC 1212, <i>Concise MIB Definitions</i>	—
RFC 1213, <i>Management Information Base for Network Management of TCP/IP-Based Internets: MIB-II</i>	<p>The following areas are supported:</p> <ul style="list-style-type: none"> • MIB II and its SNMP version 2 derivatives, including: <ul style="list-style-type: none"> • Statistics counters • IP, except for ipRouteTable, which has been replaced by ipCidrRouteTable (RFC 2096, <i>IP Forwarding Table MIB</i>) • ipAddrTable • SNMP management • Interface management • SNMPv1 Get, GetNext requests, and version 2 GetBulk request • Junos OS-specific secured access list • Master configuration keywords • Reconfigurations upon SIGHUP
RFC 1215, <i>A Convention for Defining Traps for use with the SNMP</i>	Support is limited to MIB II SNMP version 1 traps and version 2 notifications.
RFC 1286, <i>Definitions of Managed Objects for Bridges</i>	—
RFC 1901, <i>Introduction to Community-based SNMPv2</i>	—
RFC 1905, <i>Protocol Operations for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	—
RFC 1907, <i>Management Information Base for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	—

Table 14: Standard MIBs Supported on QFabric Systems (*continued*)

RFC	Additional Information
RFC 2011, <i>SNMPv2 Management Information Base for the Internet Protocol Using SMIv2</i>	NOTE: On the QFabric system, for the SNMP mibwalk request to work, you must configure the IP address of at least one interface besides the management Ethernet interfaces (me0 and me1) in the Director group.
RFC 2012, <i>SNMPv2 Management Information Base for the Transmission Control Protocol Using SMIv2</i>	—
RFC 2013, <i>SNMPv2 Management Information Base for the User Datagram Protocol Using SMIv2</i>	—
RFC 2233, <i>The Interfaces Group MIB Using SMIv2</i>	<p>NOTE: RFC 2233 has been replaced by RFC 2863. However, Junos OS supports both RFC 2233 and RFC 2863.</p> <p>NOTE: The QFabric system supports the following objects only: ifNumber, ifTable, and ifxTable.</p>
RFC 2571, <i>An Architecture for Describing SNMP Management Frameworks</i> (read-only access)	NOTE: RFC 2571 has been replaced by RFC 3411. However, Junos OS supports both RFC 2571 and RFC 3411.
RFC 2572, <i>Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)</i> (read-only access)	NOTE: RFC 2572 has been replaced by RFC 3412. However, Junos OS supports both RFC 2572 and RFC 3412.
RFC 2576, <i>Coexistence between Version 1, Version 2, and Version 3 of the Internet-standard Network Management Framework</i>	NOTE: RFC 2576 has been replaced by RFC 3584. However, Junos OS supports both RFC 2576 and RFC 3584.
RFC 2578, <i>Structure of Management Information Version 2 (SMIv2)</i>	—
RFC 2579, <i>Textual Conventions for SMIv2</i>	—
RFC 2580, <i>Conformance Statements for SMIv2</i>	—

Table 14: Standard MIBs Supported on QFabric Systems (*continued*)

RFC	Additional Information
RFC 2665, <i>Definitions of Managed Objects for the Ethernet-like Interface Types</i>	<p>The QFabric system supports the following tables only:</p> <ul style="list-style-type: none"> dot3StatsTable—There is one row with statistics for each Ethernet-like interface in the QFabric system. The dot3StatsIndex is an interface index that is unique across the system. dot3ControlTable—There is one row in this table for each Ethernet-like interface in the QFabric system that implements the MAC control sublayer. OIDs supported are dot3ControlFunctionsSupported and dot3ControlInUnknownOpcode. dot3PauseTable—There is one row in this table for each Ethernet-like interface in the QFabric system that supports the MAC control PAUSE function. OIDs supported are dot3PauseAdminMode, dot3PauseOperMode, dot3InPauseFrames, and dot3OutPauseFrames. <p>NOTE: Scalar variables are not supported on the QFabric system.</p>
RFC 2863, <i>The Interfaces Group MIB</i>	<p>NOTE: RFC 2233 has been replaced by RFC 2863. However, Junos OS supports both RFC 2233 and RFC 2863.</p> <p>NOTE: The QFabric system supports the following objects only: ifNumber, ifTable, and ifxTable.</p>
RFC 2933, <i>Internet Group Management Protocol (IGMP) MIB</i>	—
RFC 3410, <i>Introduction and Applicability Statements for Internet Standard Management Framework</i>	—
RFC 3411, <i>An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks</i>	NOTE: RFC 3411 replaces RFC 2571. However, Junos OS supports both RFC 3411 and RFC 2571.
RFC 3412, <i>Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3412 replaces RFC 2572. However, Junos OS supports both RFC 3412 and RFC 2572.
RFC 3416, <i>Version 2 of the Protocol Operations for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3416 replaces RFC 1905, which was supported in earlier versions of Junos OS.
RFC 3417, <i>Transport Mappings for the Simple Network Management Protocol (SNMP)</i>	—
RFC 3418, <i>Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)</i>	NOTE: RFC 3418 replaces RFC 1907, which was supported in earlier versions of Junos OS.
RFC 3584, <i>Coexistence between Version 1, Version 2, and Version 3 of the Internet-standard Network Management Framework</i>	—

Table 14: Standard MIBs Supported on QFabric Systems (*continued*)

RFC	Additional Information
RFC 4188, <i>Definitions of Managed Objects for Bridges</i>	<p>The QFabric system support is limited to the following objects:</p> <ul style="list-style-type: none"> Under the dot1dBase OID, the dot1dBasePortTable table supports only the first two columns in the table: dot1dBasePort and dot1dBasePortIfIndex. The system does not implement the optional traps supporting dot1dNotifications (dot1dBridge 0). Under the dot1dStp OID, supports only the dot1dStpPortTable table. Does not support the scalar variables under dot1dStp. The system does not support scalar variables under dot1dTp, but under that, the dot1dTpFdbTable table is supported (dot1dBridge 4). For OIDs with tables support only, scalar values that are returned by the SNMP agent may not be meaningful and are therefore not recommended for use. <p>Not supported on OCX Series devices.</p>
RFC 4293, <i>Management Information Base for the Internet Protocol (IP)</i>	<p>Supports the ipAddrTable table only.</p> <p>On the QFabric system, supported objects in the ipAddrTable table include: ipAdEntAddr, ipAdEntIfIndex, ipAdEntNetMask, ipAdEntBcastAddr, and ipAdEntReasmMaxSize.</p> <p>NOTE: On the QFabric system, for the SNMP mibwalk request to work, you must configure the IP address of at least one interface besides the management Ethernet interfaces (me0 and me1) in the Director group.</p>
RFC 4363b, <i>Q-Bridge VLAN MIB</i>	<p>The QFabric system supports the following tables only:</p> <ul style="list-style-type: none"> dot1qTpFdbTable dot1qVlanStaticTable dot1qPortVlanTable dot1qFdbTable <p>Not supported on OCX Series devices.</p>



NOTE: QFabric-specific MIBs are not supported on OCX Series devices.

Table 15: Juniper Networks Enterprise-Specific MIBs Supported on QFabric Systems

MIB	Description
Analyzer MIB (mib-jnx-analyzer)	<p>Contains analyzer and remote analyzer data related to port mirroring.</p> <p>The QFabric system supports:</p> <ul style="list-style-type: none"> Analyzer table—jnxAnalyzerName, jnxMirroringRatio, jnxLossPriority. Analyzer input table—jnxAnalyzerInputValue, jnxAnalyzerInputOption, jnxAnalyzerInputType. Analyzer output table—jnxAnalyzerOutputValue, jnxAnalyzerOutputType. <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-analyzer.txt.</p> <p>For more information, see <i>Analyzer MIB</i>.</p>
Chassis MIB (mib-jnx-chassis)	<p>NOTE: The Chassis MIB has been deprecated for the QFabric system. We recommend that you use the Fabric Chassis MIB (mib-jnx-fabric-chassis) for information about the QFabric system.</p>
Class-of-Service MIB (mib-jnx-cos)	<p>Provides support for monitoring interface output queue statistics per interface and per forwarding class.</p> <p>The QFabric system supports the following tables and objects:</p> <ul style="list-style-type: none"> Jnxcosifstatflagtable—jnxCosIfstatFlags and jnxCosIfIndex. Jnxcosqstattable—jnxCosQstatTxedPkts, jnxCosQstatTxedPktRate, jnxCosQstatTxedBytes, and jnxCosQstatTxedByteRate. Jnxcosfcidtable—jnxCosFcIdToFcName. Jnxcosfctable—jnxCosFcQueueNr. <p>The QFabric system does not support any traps for this MIB.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-cos.txt.</p> <p>For more information, see <i>Class-of-Service MIB</i>.</p>

Table 15: Juniper Networks Enterprise-Specific MIBs Supported on QFabric Systems (*continued*)

MIB	Description
Configuration Management MIB (mib-jnx-cfgmgmt)	<p>Provides notification for configuration changes and rescue configuration changes in the form of SNMP traps. Each trap contains the time at which the configuration change was committed, the name of the user who made the change, and the method by which the change was made.</p> <p>A history of the last 32 configuration changes is kept in jnxCmChgEventTable.</p> <p>NOTE: On the QFabric system, these conditions apply:</p> <ul style="list-style-type: none"> • All scalar variables under the jnxCmCfgChg table are supported. • Supported scalar OIDs are jnxCmCfgChgLatestIndex, jnxCmCfgChgLatestTime, jnxCmCfgChgLatestDate, jnxCmCfgChgLatestSource, jnxCmCfgChgLatestUser, and jnxCmCfgChgMaxEventEntries. • Scalar variables under the jnxCmRescueChg table are not supported. <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-cfgmgmt.txt.</p> <p>For more information, see <i>Configuration Management MIB</i>.</p>
Fabric Chassis MIB (mib-jnx-fabric-chassis)	<p>Provides hardware information about the QFabric system and its component devices. This MIB is based on the Juniper Networks enterprise-specific Chassis MIB but adds another level of indexing that provides information for QFabric system component devices.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-fabric-chassis.txt.</p> <p>For more information, see <i>Fabric Chassis MIB</i>.</p>
Interface MIB (Extensions) (mib-jnx-if-extensions)	<p>Extends the standard ifTable (RFC 2863) with additional statistics and Juniper Networks enterprise-specific chassis information in the ifJnxTable and ifChassisTable tables.</p> <p>NOTE: On the QFabric system, scalar variables are not supported.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-if-extensions.txt.</p> <p>For more information, see <i>Interface MIB</i>.</p>
Power Supply Unit MIB (mib-jnx-power-supply-unit)	<p>Provides support for environmental monitoring of the power supply unit for the Interconnect device of the QFabric system.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-power-supply-unit.txt.</p> <p>For more information, see <i>Power Supply Unit MIB</i>.</p> <p>NOTE: On the QFabric system, scalar variables for the jnxPsuObjects 1 object ID in the jnxPsuScalars table are not supported.</p>

Table 15: Juniper Networks Enterprise-Specific MIBs Supported on QFabric Systems (*continued*)

MIB	Description
QFabric MIB (jnx-qf-smi)	<p>Explains how the Juniper Networks enterprise-specific QFabric MIBs are structured. Defines the MIB objects that are reported by the QFabric system and the contents of the traps that can be issued by the QFabric system.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-qf-smi.txt.</p>
Utility MIB (mib-jnx-util)	<p>Provides you with SNMP MIB container objects of the following types: 32-bit counters, 64-bit counters, signed integers, unsigned integers, and octet strings. You can use these objects to store data that can be retrieved using other SNMP operations.</p> <p>For a downloadable version of this MIB, see http://www.juniper.net/techpubs/en_US/junos13.2/topics/reference/mibs/mib-jnx-util.txt.</p> <p>For more information, see “Utility MIB” on page 62 and “Using the Enterprise-Specific Utility MIB to Enhance SNMP Coverage” on page 123.</p>

- Related Documentation**
- *SNMP MIBs and Traps Reference*
 - *Understanding the Implementation of SNMP*
 - *Understanding the Implementation of SNMP on the QFabric System*
 - *SNMP Traps Support on page 86*

SNMP Traps Support

The QFX Series standalone switches, QFX Series Virtual Chassis, and QFabric systems support standard SNMP traps and Juniper Networks enterprise-specific traps.

For more information, see:

- *SNMP Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis on page 86*
- *SNMP Traps Supported on QFabric Systems on page 95*

SNMP Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

QFX Series standalone switches and QFX Series Virtual Chassis support SNMPv1 and v2 traps. For more information, see:

- *SNMPv1 Traps on page 86*
- *SNMPv2 Traps on page 91*

SNMPv1 Traps

QFX Series standalone switches and QFX Series Virtual Chassis support both standard SNMPv1 traps and Juniper Networks enterprise-specific SNMPv1 traps. See:

- [Table 16 on page 87](#) for standard SNMPv1 traps.
- [Table 17 on page 89](#) for enterprise-specific SNMPv1 traps.

The traps are organized first by trap category and then by trap name. The system logging severity levels are listed for those traps that have them. Traps that do not have corresponding system logging severity levels are marked with an en dash (–).

Table 16: Standard SNMP Version 1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	Syslog Tag
Link Notifications						
RFC 1215, <i>Conventions for Defining Traps for Use with the SNMP</i>	linkDown	1.3.6.1.4.1.2636	2	0	Warning	SNMP_TRAP_LINK_DOWN
	linkUp	1.3.6.1.4.1.2636	3	0	Info	SNMP_TRAP_LINK_UP
Remote Operations Notifications						
RFC 2925, <i>Definitions of Managed Objects for Remote Ping, Traceroute, and Lookup Operations</i>	pingProbeFailed	1.3.6.1.2.1.80.0	6	1	Info	SNMP_TRAP_PING_PROBE_FAILED
	pingTestFailed	1.3.6.1.2.1.80.0	6	2	Info	SNMP_TRAP_PING_TEST_FAILED
	pingTestCompleted	1.3.6.1.2.1.80.0	6	3	Info	SNMP_TRAP_PING_TEST_COMPLETED
	traceRoutePathChange	1.3.6.1.2.1.81.0	6	1	Info	SNMP_TRAP_TRACE_ROUTE_PATH_CHANGE
	traceRouteTestFailed	1.3.6.1.2.1.81.0	6	2	Info	SNMP_TRAP_TRACE_ROUTE_TEST_FAILED
	traceRouteTestCompleted	1.3.6.1.2.1.81.0	6	3	Info	SNMP_TRAP_TRACE_ROUTE_TEST_COMPLETED
RMON Alarms						
RFC 2819a, <i>RMON MIB</i>	fallingAlarm	1.3.6.1.2.1.16	6	2	–	–
	risingAlarm	1.3.6.1.2.1.16	6	1	–	–
Routing Notifications						

Table 16: Standard SNMP Version 1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	Syslog Tag
<i>BGP 4 MIB</i>	bgpEstablished	1.3.6.1.2.1.15.7	6	1	–	–
	bgpBackwardTransition	1.3.6.1.2.1.15.7	6	2	–	–
<i>OSPF TRAP MIB</i>	ospfVirtIfStateChange	1.3.6.1.2.1.14.16.2	6	1	–	–
	ospfNbrStateChange	1.3.6.1.2.1.14.16.2	6	2	–	–
	ospfVirtNbrStateChange	1.3.6.1.2.1.14.16.2	6	3	–	–
	ospfIfConfigError	1.3.6.1.2.1.14.16.2	6	4	–	–
	ospfVirtIfConfigError	1.3.6.1.2.1.14.16.2	6	5	–	–
	ospfIfAuthFailure	1.3.6.1.2.1.14.16.2	6	6	–	–
	ospfVirtIfAuthFailure	1.3.6.1.2.1.14.16.2	6	7	–	–
	ospfIfRxBadPacket	1.3.6.1.2.1.14.16.2	6	8	–	–
	ospfVirtIfRxBadPacket	1.3.6.1.2.1.14.16.2	6	9	–	–
	ospfTxRetransmit	1.3.6.1.2.1.14.16.2	6	10	–	–
	ospfVirtIfTxRetransmit	1.3.6.1.2.1.14.16.2	6	11	–	–
	ospfMaxAgeLsa	1.3.6.1.2.1.14.16.2	6	13	–	–
	ospfIfStateChange	1.3.6.1.2.1.14.16.2	6	16	–	–
Startup Notifications						
RFC 1215, <i>Conventions for Defining Traps for Use with the SNMP</i>	authenticationFailure	1.3.6.1.4.1.2636	4	0	Notice	SNMPD_TRAP_GEN_FAILURE
	coldStart	1.3.6.1.4.1.2636	0	0	Critical	SNMPD_TRAP_COLD_START
	warmStart	1.3.6.1.4.1.2636	1	0	Error	SNMPD_TRAP_WARM_START
VRRP Notifications						

Table 16: Standard SNMP Version 1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	Syslog Tag
RFC 2787, <i>Definitions of Managed Objects for the Virtual Router Redundancy Protocol</i>	vrrpTrapNewMaster	1.3.6.1.2.1.68	6	1	Warning	VRRPD_NEW_MASTER_TRAP
	vrrpTrapAuthFailure	1.3.6.1.2.1.68	6	2	Warning	VRRPD_AUTH_FAILURE_TRAP

Table 17: Enterprise-Specific SNMPv1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	System Log Tag
Chassis Notifications (Alarm Conditions)						
<i>Chassis MIB</i> (jnx-chassis.mib)	jnxPowerSupplyFailure	1.3.6.1.4.1.2636.4.1	6	1	Warning	CHASSISD_SNMP_TRAP
	jnxFanFailure	1.3.6.1.4.1.2636.4.1	6	2	Critical	CHASSISD_SNMP_TRAP
	jnxOverTemperature	1.3.6.1.4.1.2636.4.1	6	3	Alert	CHASSISD_SNMP_TRAP
	jnxFruRemoval	1.3.6.1.4.1.2636.4.1	6	5	Notice	CHASSISD_SNMP_TRAP
	jnxFruInsertion	1.3.6.1.4.1.2636.4.1	6	6	Notice	CHASSISD_SNMP_TRAP
	jnxFruPowerOff	1.3.6.1.4.1.2636.4.1	6	7	Notice	CHASSISD_SNMP_TRAP
	jnxFruPowerOn	1.3.6.1.4.1.2636.4.1	6	8	Notice	CHASSISD_SNMP_TRAP
	jnxFruFailed	1.3.6.1.4.1.2636.4.1	6	9	Warning	CHASSISD_SNMP_TRAP
	jnxFruOffline	1.3.6.1.4.1.2636.4.1	6	10	Notice	CHASSISD_SNMP_TRAP
	jnxFruOnline	1.3.6.1.4.1.2636.4.1	6	11	Notice	CHASSISD_SNMP_TRAP

Table 17: Enterprise-Specific SNMPv1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	System Log Tag
	jnxFruCheck	1.3.6.1.4.1.2636.4.1	6	12	Warning	CHASSISD_SNMP_TRAP
	jnxPowerSupplyOk	1.3.6.1.4.1.2636.4.2	6	1	Critical	CHASSISD_SNMP_TRAP
	jnxFanOK	1.3.6.1.4.1.2636.4.2	6	2	Critical	CHASSISD_SNMP_TRAP
	jnxTemperatureOK	1.3.6.1.4.1.2636.4.2	6	3	Alert	CHASSISD_SNMP_TRAP
Configuration Notifications						
<i>Configuration Management MIB</i> (jnx-configmgmt.mib)	jnxCmCfgChange	1.3.6.1.4.1.2636.4.5	6	1	—	—
	jnxCmRescueChange	1.3.6.1.4.1.2636.4.5	6	2	—	—
Remote Operations						
<i>Ping MIB</i> (jnx-ping.mib)	jnxPingRttThresholdExceeded	1.3.6.1.4.1.2636.4.9	6	1	—	—
	jnxPingRttStdDevThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	2	—	—
	jnxPingRttJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	3	—	—
	jnxPingEgressThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	4	—	—
	jnxPingEgressStdDev ThresholdExceeded	1.3.6.1.4.1.2636.4.9	6	5	—	—
	jnxPingEgressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	6	—	—
	jnxPingIngressThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	7	—	—
	jnxPingIngressStddevThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	8	—	—
	jnxPingIngressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9	6	9	—	—

Table 17: Enterprise-Specific SNMPv1 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	Enterprise ID	Generic Trap Number	Specific Trap Number	System Logging Severity Level	System Log Tag
RMON Alarms						
<i>RMON MIB</i> (jnx-rmon. mib)	jnxRmonAlarmGetFailure	1.3.6.1.4.1.2636.4.3	6	1	–	–
	jnxRmonGetOk	1.3.6.1.4.1.2636.4.3	6	2	–	–

SNMPv2 Traps

- [Table 18 on page 91](#) lists the standard SNMP traps
- [Table 19 on page 93](#) lists the Juniper Networks enterprise-specific traps

Table 18: Standard SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

Defined in	Trap Name	SNMP Trap OID	System Logging Severity Level	Syslog Tag
Link Notifications				
RFC 2863, <i>The Interfaces Group MIB</i>	linkDown	1.3.6.1.6.3.1.1.5.3	Warning	SNMP_TRAP_LINK_DOWN
	linkUp	1.3.6.1.6.3.1.1.5.4	Info	SNMP_TRAP_LINK_UP
Remote Operations Notifications				
RFC 2925, <i>Definitions of Managed Objects for Remote Ping, Traceroute, and Lookup Operations</i>	pingProbeFailed	1.3.6.1.2.1.80.0.1	Info	SNMP_TRAP_PING_PROBE_FAILED
	pingTestFailed	1.3.6.1.2.1.80.0.2	Info	SNMP_TRAP_PING_TEST_FAILED
	pingTestCompleted	1.3.6.1.2.1.80.0.3	Info	SNMP_TRAP_PING_TEST_COMPLETED
	traceRoutePathChange	1.3.6.1.2.1.81.0.1	Info	SNMP_TRAP_TRACE_ROUTE_PATH_CHANGE
	traceRouteTestFailed	1.3.6.1.2.1.81.0.2	Info	SNMP_TRAP_TRACE_ROUTE_TEST_FAILED
	traceRouteTestCompleted	1.3.6.1.2.1.81.0.3	Info	SNMP_TRAP_TRACE_ROUTE_TEST_COMPLETED

Table 18: Standard SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	SNMP Trap OID	System Logging Severity Level	Syslog Tag
RMON Alarms				
RFC 2819a, <i>RMON MIB</i>	fallingAlarm	1.3.6.1.2.1.16.0.1	–	–
	risingAlarm	1.3.6.1.2.1.16.0.2	–	–
Routing Notifications				
<i>BGP 4 MIB</i>	bgpEstablished	1.3.6.1.2.1.15.7.1	–	–
	bgpBackwardTransition	1.3.6.1.2.1.15.7.2	–	–
<i>OSPF Trap MIB</i>	ospfVirtIfStateChange	1.3.6.1.2.1.14.16.2.1	–	–
	ospfNbrStateChange	1.3.6.1.2.1.14.16.2.2	–	–
	ospfVirtNbrStateChange	1.3.6.1.2.1.14.16.2.3	–	–
	ospfIfConfigError	1.3.6.1.2.1.14.16.2.4	–	–
	ospfVirtIfConfigError	1.3.6.1.2.1.14.16.2.5	–	–
	ospfIfAuthFailure	1.3.6.1.2.1.14.16.2.6	–	–
	ospfVirtIfAuthFailure	1.3.6.1.2.1.14.16.2.7	–	–
	ospfIfRxBadPacket	1.3.6.1.2.1.14.16.2.8	–	–
	ospfVirtIfRxBadPacket	1.3.6.1.2.1.14.16.2.9	–	–
	ospfTxRetransmit	1.3.6.1.2.1.14.16.2.10	–	–
	ospfVirtIfTxRetransmit	1.3.6.1.2.1.14.16.2.11	–	–
	ospfMaxAgeLsa	1.3.6.1.2.1.14.16.2.13	–	–
	ospfIfStateChange	1.3.6.1.2.1.14.16.2.16	–	–
Startup Notifications				
RFC 1907, <i>Management Information Base for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	coldStart	1.3.6.1.6.3.1.1.5.1	Critical	SNMPD_TRAP_COLD_START
	warmStart	1.3.6.1.6.3.1.1.5.2	Error	SNMPD_TRAP_WARM_START

Table 18: Standard SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Defined in	Trap Name	SNMP Trap OID	System Logging Severity Level	Syslog Tag
	authenticationFailure	1.3.6.1.6.3.1.1.5.5	Notice	SNMPD_TRAP_GEN_FAILURE
VRRP Notifications				
RFC 2787, <i>Definitions of Managed Objects for the Virtual Router Redundancy Protocol</i>	vrrpTrapNewMaster	1.3.6.1.2.1.68.0.1	Warning	VRRPD_NEWMASTER_TRAP
	vrrpTrapAuthFailure	1.3.6.1.2.1.68.0.2	Warning	VRRPD_AUTH_FAILURE_TRAP

Table 19: Enterprise-Specific SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis

Source MIB	Trap Name	SNMP Trap OID	System Logging Severity Level	System Log Tag
Chassis (Alarm Conditions) Notifications				
<i>Chassis MIB</i> (mib-jnx-chassis)	jnxPowerSupplyFailure	1.3.6.1.4.1.2636.4.1.1	Alert	CHASSISD_SNMP_TRAP
	jnxFanFailure	1.3.6.1.4.1.2636.4.1.2	Critical	CHASSISD_SNMP_TRAP
	jnxOverTemperature	1.3.6.1.4.1.2636.4.1.3	Critical	CHASSISD_SNMP_TRAP
	jnxFruRemoval	1.3.6.1.4.1.2636.4.1.5	Notice	CHASSISD_SNMP_TRAP
	jnxFruInsertion	1.3.6.1.4.1.2636.4.1.6	Notice	CHASSISD_SNMP_TRAP
	jnxFruPowerOff	1.3.6.1.4.1.2636.4.1.7	Notice	CHASSISD_SNMP_TRAP
	jnxFruPowerOn	1.3.6.1.4.1.2636.4.1.8	Notice	CHASSISD_SNMP_TRAP
	jnxFruFailed	1.3.6.1.4.1.2636.4.1.9	Warning	CHASSISD_SNMP_TRAP
	jnxFruOffline	1.3.6.1.4.1.2636.4.1.10	Notice	CHASSISD_SNMP_TRAP

Table 19: Enterprise-Specific SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Source MIB	Trap Name	SNMP Trap OID	System Logging Severity Level	System Log Tag
	jnxFruOnline	1.3.6.1.4.1.2636.4.1.11	Notice	CHASSISD_SNMP_TRAP
	jnxFruCheck	1.3.6.1.4.1.2636.4.1.12	Notice	CHASSISD_SNMP_TRAP
	jnxPowerSupplyOK	1.3.6.1.4.1.2636.4.2.1	Critical	CHASSISD_SNMP_TRAP
	jnxFanOK	1.3.6.1.4.1.2636.4.2.2	Critical	CHASSISD_SNMP_TRAP
	jnxTemperatureOK	1.3.6.1.4.1.2636.4.2.3	Alert	CHASSISD_SNMP_TRAP
Configuration Notifications				
<i>Configuration Management MIB</i> (mib-jnx-cfgmgmt)	jnxCmCfgChange	1.3.6.1.4.1.2636.4.5.0.1	–	–
	jnxCmRescueChange	1.3.6.1.4.1.2636.4.5.0.2	–	–
Remote Operations Notifications				

Table 19: Enterprise-Specific SNMPv2 Traps Supported on QFX Series Standalone Switches and QFX Series Virtual Chassis (*continued*)

Source MIB	Trap Name	SNMP Trap OID	System Logging Severity Level	System Log Tag
<i>Ping MIB</i> (mib-jnx-ping)	jnxPingRttThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.1	–	–
	jnxPingRttStdDevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.2	–	–
	jnxPingRttJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.3	–	–
	jnxPingEgressThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.4	–	–
	jnxPingEgressStdDevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.5	–	–
	jnxPingEgressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.6	–	–
	jnxPingIngressThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.7	–	–
	jnxPingIngressStddevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.8	–	–
	jnxPingIngressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.9	–	–
RMON Alarms				
<i>RMON MIB</i> (mib-jnx-rmon)	jnxRmonAlarmGetFailure	1.3.6.1.4.1.2636.4.3.0.1	–	–
	jnxRmonGetOk	1.3.6.1.4.1.2636.4.3.0.2	–	–

SNMP Traps Supported on QFabric Systems

QFabric systems support standard SNMPv2 traps and Juniper Networks enterprise-specific SNMPv2 traps.



NOTE: QFabric systems do not support SNMPv1 traps.

For more information, see:

- [Table 20 on page 96](#) for standard SNMPv2 traps

- [Table 21 on page 97](#) for Juniper Networks enterprise-specific SNMPv2 traps

Table 20: Standard SNMPv2 Traps Supported on QFabric Systems

Defined in	Trap Name	SNMP Trap OID	System Logging Severity Level	Syslog Tag
Link Notifications				
RFC 2863, <i>The Interfaces Group MIB</i>	linkDown	1.3.6.1.6.3.1.1.5.3	Warning	SNMP_TRAP_LINK_DOWN
	linkUp	1.3.6.1.6.3.1.1.5.4	Info	SNMP_TRAP_LINK_UP
Startup Notifications				
RFC 1907, <i>Management Information Base for Version 2 of the Simple Network Management Protocol (SNMPv2)</i>	coldStart	1.3.6.1.6.3.1.1.5.1	Critical	SNMPD_TRAP_COLD_START
	warmStart	1.3.6.1.6.3.1.1.5.2	Error	SNMPD_TRAP_WARM_START
	authenticationFailure	1.3.6.1.6.3.1.1.5.5	Notice	SNMPD_TRAP_GEN_FAILURE

Table 21: Enterprise-Specific SNMPv2 Traps Supported on QFabric Systems

Source MIB	Trap Name	SNMP Trap OID	System Logging Severity Level	System Log Tag
<i>Fabric Chassis MIB</i> (mib-jnx-fabric-chassis)	Fabric Chassis (Alarm Conditions) Notifications			
	jnxFabricPowerSupplyFailure	1.3.6.1.4.1.2636.4.19.1	Warning	–
	jnxFabricFanFailure	1.3.6.1.4.1.2636.4.19.2	Critical	–
	jnxFabricOverTemperature	1.3.6.1.4.1.2636.4.19.3	Alert	–
	jnxFabricRedundancySwitchover	1.3.6.1.4.1.2636.4.19.4	Notice	–
	jnxFabricFruRemoval	1.3.6.1.4.1.2636.4.19.5	Notice	–
	jnxFabricFruInsertion	1.3.6.1.4.1.2636.4.19.6	Notice	–
	jnxFabricFruPowerOff	1.3.6.1.4.1.2636.4.19.7	Notice	–
	jnxFabricFruPowerOn	1.3.6.1.4.1.2636.4.19.8	Notice	–
	jnxFabricFruFailed	1.3.6.1.4.1.2636.4.19.9	Warning	–
	jnxFabricFruOffline	1.3.6.1.4.1.2636.4.19.10	Notice	–
	jnxFabricFruOnline	1.3.6.1.4.1.2636.4.19.11	Notice	–
	jnxFabricFruCheck	1.3.6.1.4.1.2636.4.19.12	Warning	–
	jnxFabricFEBSwitchover	1.3.6.1.4.1.2636.4.19.13	Warning	–
	jnxFabricHardDiskFailed	1.3.6.1.4.1.2636.4.19.14	Warning	–
	jnxFabricHardDiskMissing	1.3.6.1.4.1.2636.4.19.15	Warning	–
	jnxFabricBootFromBackup	1.3.6.1.4.1.2636.4.19.16	Warning	–
	Fabric Chassis (Alarm Cleared Conditions) Notifications			
	jnxFabricPowerSupplyOK	1.3.6.1.4.1.2636.4.20.1	Critical	–
	jnxFabricFanOK	1.3.6.1.4.1.2636.4.20.2	Critical	–
	jnxFabricTemperatureOK	1.3.6.1.4.1.2636.4.20.3	Alert	–
	jnxFabricFruOK	1.3.6.1.4.1.2636.4.20.4	–	–

Table 21: Enterprise-Specific SNMPv2 Traps Supported on QFabric Systems (*continued*)

Source MIB	Trap Name	SNMP Trap OID	System Logging Severity Level	System Log Tag
<i>QFabric MIB</i> (mib-jnx-qf-smi)	QFabric MIB Notifications			
	jnxQFabricDownloadIssued	1.3.6.1.4.1.2636.3.42.1.0.1	–	–
	jnxQFabricDownloadFailed	1.3.6.1.4.1.2636.3.42.1.0.2	–	–
	jnxQFabricDownloadSucceeded	1.3.6.1.4.1.2636.3.42.1.0.3	–	–
	jnxQFabricUpgradeIssued	1.3.6.1.4.1.2636.3.42.1.0.4	–	–
	jnxQFabricUpgradeFailed	1.3.6.1.4.1.2636.3.42.1.0.5	–	–
	jnxQFabricUpgradeSucceeded	1.3.6.1.4.1.2636.3.42.1.0.6	–	–
Configuration Notifications				
<i>Configuration Management MIB</i> (mib-jnx-cfgmgmt)	jnxCmCfgChange	1.3.6.1.4.1.2636.4.5.0.1	–	–
	jnxCmRescueChange	1.3.6.1.4.1.2636.4.5.0.2	–	–
Remote Operations Notifications				
<i>Ping MIB</i> (mib-jnx-ping)	jnxPingRttThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.1	–	–
	jnxPingRttStdDevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.2	–	–
	jnxPingRttJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.3	–	–
	jnxPingEgressThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.4	–	–
	jnxPingEgressStdDevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.5	–	–
	jnxPingEgressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.6	–	–
	jnxPingIngressThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.7	–	–
	jnxPingIngressStddevThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.8	–	–
	jnxPingIngressJitterThreshold Exceeded	1.3.6.1.4.1.2636.4.9.0.9	–	–

- Related Documentation**
- [SNMP MIBs and Traps Reference](#)
 - [Understanding the Implementation of SNMP](#)
 - [Understanding the Implementation of SNMP on the QFabric System](#)
 - [SNMP MIBs Support on page 70](#)

MIB Objects for the QFX Series

This topic lists the Juniper Networks enterprise-specific SNMP Chassis MIB definition objects for the QFX Series:

- [QFX Series Standalone Switches on page 99](#)
- [QFabric Systems on page 99](#)
- [QFabric System QFX3100 Director Device on page 100](#)
- [QFabric System QFX3008-I Interconnect Device on page 100](#)
- [QFabric System QFX3600-I Interconnect Device on page 100](#)
- [QFabric System Node Devices on page 101](#)

QFX Series Standalone Switches

```
jnxProductLineQFXSwitch      OBJECT IDENTIFIER ::= { jnxProductLine      82 }
jnxProductNameQFXSwitch      OBJECT IDENTIFIER ::= { jnxProductName      82 }
jnxProductModelQFXSwitch     OBJECT IDENTIFIER ::= { jnxProductModel     82 }
jnxProductVariationQFXSwitch OBJECT IDENTIFIER ::= { jnxProductVariation 82 }
jnxProductQFX3500s          OBJECT IDENTIFIER ::= { jnxProductVariationQFXSwitch 1 }
jnxProductQFX360016QS       OBJECT IDENTIFIER ::= { jnxProductVariationQFXSwitch 2 }
jnxProductQFX350048T4QS     OBJECT IDENTIFIER ::= { jnxProductVariationQFXSwitch 3 }
jnxProductQFX510024Q        OBJECT IDENTIFIER ::= { jnxProductVariationQFXSwitch 4 }
jnxProductQFX510048S6Q      OBJECT IDENTIFIER ::= { jnxProductVariationQFXSwitch 5 }

jnxChassisQFXSwitch          OBJECT IDENTIFIER ::= { jnxChassis          82 }

jnxSlotQFXSwitch             OBJECT IDENTIFIER ::= { jnxSlot             82 }
jnxQFXSwitchSlotFPC          OBJECT IDENTIFIER ::= { jnxSlotQFXSwitch      1 }
jnxQFXSwitchSlotHM           OBJECT IDENTIFIER ::= { jnxSlotQFXSwitch      2 }
jnxQFXSwitchSlotPower        OBJECT IDENTIFIER ::= { jnxSlotQFXSwitch      3 }
jnxQFXSwitchSlotFan          OBJECT IDENTIFIER ::= { jnxSlotQFXSwitch      4 }
jnxQFXSwitchSlotFPB          OBJECT IDENTIFIER ::= { jnxSlotQFXSwitch      5 }

jnxMediaCardSpaceQFXSwitch   OBJECT IDENTIFIER ::= { jnxMediaCardSpace 82 }
jnxQFXSwitchMediaCardSpacePIC OBJECT IDENTIFIER ::= { jnxMediaCardSpaceQFXSwitch 1 }
```

QFabric Systems

```
jnxProductLineQFX3000       OBJECT IDENTIFIER ::= { jnxProductLine 84 }
jnxProductNameQFX3000       OBJECT IDENTIFIER ::= { jnxProductName 84 }
jnxProductModelQFX3000      OBJECT IDENTIFIER ::= { jnxProductModel 84 }
jnxProductVariationQFX3000  OBJECT IDENTIFIER ::= { jnxProductVariation 84 }
jnxProductQFX3000-G         OBJECT IDENTIFIER ::= { jnxProductVariationQFX3000 1 }
jnxProductQFX3000-M         OBJECT IDENTIFIER ::= { jnxProductVariationQFX3000 2 }
jnxChassisQFX3000           OBJECT IDENTIFIER ::= { jnxChassis      84 }
```

QFabric System QFX3100 Director Device

```
jnxProductLineQFX3100 OBJECT IDENTIFIER ::= { jnxProductLine      100 }
jnxProductNameQFX3100 OBJECT IDENTIFIER ::= { jnxProductName      100 }
jnxProductModelQFX3100 OBJECT IDENTIFIER ::= { jnxProductModel    100 }
jnxProductVariationQFX3100 OBJECT IDENTIFIER ::= { jnxProductVariation 100 }
jnxChassisQFX3100      OBJECT IDENTIFIER ::= { jnxChassis         100 }

jnxSlotQFX3100          OBJECT IDENTIFIER ::= { jnxSlot            100 }
jnxQFX3100SlotCPU       OBJECT IDENTIFIER ::= { jnxSlotQFX3100    1 }
jnxQFX3100SlotMemory    OBJECT IDENTIFIER ::= { jnxSlotQFX3100    2 }
jnxQFX3100SlotPower     OBJECT IDENTIFIER ::= { jnxSlotQFX3100    3 }
jnxQFX3100SlotFan       OBJECT IDENTIFIER ::= { jnxSlotQFX3100    4 }
jnxQFX3100SlotHardDisk  OBJECT IDENTIFIER ::= { jnxSlotQFX3100    5 }
jnxQFX3100SlotNIC       OBJECT IDENTIFIER ::= { jnxSlotQFX3100    6 }
```

QFabric System QFX3008-I Interconnect Device

```
jnxProductLineQFXInterconnect OBJECT IDENTIFIER ::= { jnxProductLine      60 }
jnxProductNameQFXInterconnect OBJECT IDENTIFIER ::= { jnxProductName      60 }
jnxProductModelQFXInterconnect OBJECT IDENTIFIER ::= { jnxProductModel    60 }
jnxProductVariationQFXInterconnect OBJECT IDENTIFIER ::= { jnxProductVariation 60 }
jnxProductQFX3008          OBJECT IDENTIFIER ::= { jnxProductVariationQFXInterconnect 1 }
jnxProductQFXC083008       OBJECT IDENTIFIER ::= { jnxProductVariationQFXInterconnect 2 }
jnxProductQFX3008I         OBJECT IDENTIFIER ::= { jnxProductVariationQFXInterconnect 3 }

jnxChassisQFXInterconnect   OBJECT IDENTIFIER ::= { jnxChassis         60 }

jnxSlotQFXInterconnect      OBJECT IDENTIFIER ::= { jnxSlot            60 }
jnxQFXInterconnectSlotFPC   OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 1 }
jnxQFXInterconnectSlotHM    OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 2 }
jnxQFXInterconnectSlotPower OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 3 }
jnxQFXInterconnectSlotFan   OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 4 }
jnxQFXInterconnectSlotCBD   OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 5 }
jnxQFXInterconnectSlotFPB   OBJECT IDENTIFIER ::= { jnxSlotQFXInterconnect 6 }

jnxMediaCardSpaceQFXInterconnect OBJECT IDENTIFIER ::= { jnxMediaCardSpace 60 }
jnxQFXInterconnectMediaCardSpacePIC OBJECT IDENTIFIER ::= { jnxMediaCardSpaceQFXInterconnect 1 }

jnxMidplaneQFXInterconnect  OBJECT IDENTIFIER ::= { jnxBackplane        60 }
```

QFabric System QFX3600-I Interconnect Device

```
jnxProductLineQFXMInterconnect OBJECT IDENTIFIER ::= { jnxProductLine      91 }
jnxProductNameQFXMInterconnect OBJECT IDENTIFIER ::= { jnxProductName      91 }
jnxProductModelQFXMInterconnect OBJECT IDENTIFIER ::= { jnxProductModel    91 }
jnxProductVariationQFXMInterconnect OBJECT IDENTIFIER ::= { jnxProductVariation 91 }
jnxProductQFX3600I         OBJECT IDENTIFIER ::= { jnxProductVariationQFXMInterconnect 1 }

jnxChassisQFXMInterconnect   OBJECT IDENTIFIER ::= { jnxChassis         91 }

jnxSlotQFXMInterconnect      OBJECT IDENTIFIER ::= { jnxSlot            91 }
jnxQFXMInterconnectSlotFPC   OBJECT IDENTIFIER ::= { jnxSlotQFXMInterconnect 1 }
jnxQFXMInterconnectSlotHM    OBJECT IDENTIFIER ::= { jnxSlotQFXMInterconnect 2 }
jnxQFXMInterconnectSlotPower OBJECT IDENTIFIER ::= { jnxSlotQFXMInterconnect 3 }
jnxQFXMInterconnectSlotFan   OBJECT IDENTIFIER ::= { jnxSlotQFXMInterconnect 4 }
jnxQFXMInterconnectSlotFPB   OBJECT IDENTIFIER ::= { jnxSlotQFXMInterconnect 5 }
```



```
jnxMediaCardSpaceQFXMInterconnect OBJECT IDENTIFIER ::= { jnxMediaCardSpace 91 }
jnxQFXMInterconnectMediaCardSpacePIC OBJECT IDENTIFIER ::= { jnxMediaCardSpaceQFXMInterconnect 1 }
```

QFabric System Node Devices

```
jnxProductLineQFXNode OBJECT IDENTIFIER ::= { jnxProductLine 61 }
jnxProductNameQFXNode OBJECT IDENTIFIER ::= { jnxProductName 61 }
jnxProductModelQFXNode OBJECT IDENTIFIER ::= { jnxProductModel 61 }
jnxProductVariationQFXNode OBJECT IDENTIFIER ::= { jnxProductVariation 61 }
  jnxProductQFX3500 OBJECT IDENTIFIER ::= { jnxProductVariationQFXNode 1 }
  jnxProductQFX360016Q OBJECT IDENTIFIER ::= { jnxProductVariationQFXNode 3 }

jnxChassisQFXNode OBJECT IDENTIFIER ::= { jnxChassis 61 }

jnxSlotQFXNode OBJECT IDENTIFIER ::= { jnxSlot 61 }
  jnxQFXNodeSlotFPC OBJECT IDENTIFIER ::= { jnxSlotQFXNode 1 }
  jnxQFXNodeSlotHMM OBJECT IDENTIFIER ::= { jnxSlotQFXNode 2 }
  jnxQFXNodeSlotPower OBJECT IDENTIFIER ::= { jnxSlotQFXNode 3 }
  jnxQFXNodeSlotFan OBJECT IDENTIFIER ::= { jnxSlotQFXNode 4 }
  jnxQFXNodeSlotFPB OBJECT IDENTIFIER ::= { jnxSlotQFXNode 5 }

jnxMediaCardSpaceQFXNode OBJECT IDENTIFIER ::= { jnxMediaCardSpace 61 }
jnxQFXNodeMediaCardSpacePIC OBJECT IDENTIFIER ::= { jnxMediaCardSpaceQFXNode 1 }
```

- Related Documentation**
- *Understanding the Implementation of SNMP on the QFabric System*
 - *Fabric Chassis MIB*

Configuring SNMP

SNMP is implemented in the Junos OS Software running on the QFX Series and OCX Series products. By default, SNMP is not enabled. To enable SNMP, you must include the SNMP configuration statements at the **[edit]** hierarchy level.

To configure the minimum requirements for SNMP, include the following statements at the **[edit]** hierarchy level of the configuration:

```
[edit]
snmp {
  community public;
}
```

To configure complete SNMP features, include the following statements at the **[edit]** hierarchy level of the configuration:

```
snmp {
  client-list client-list-name {
    ip-addresses;
  }
  community community-name {
    authorization authorization;
    client-list-name client-list-name;
    clients {
      address restrict;
    }
  }
}
```

```

logical-system logical-system-name {
  routing-instance routing-instance-name {
    clients {
      addresses;
    }
  }
}
routing-instance routing-instance-name {
  clients {
    addresses;
  }
}
view view-name;
}
contact contact;
description description;
filter-duplicates;
filter-interfaces;
health-monitor {
  falling-threshold integer;
  interval seconds;
  rising-threshold integer;
}
interface [ interface-names ];
location location;
name name;
nonvolatile {
  commit-delay seconds;
}
rmon {
  alarm index {
    description description;
    falling-event-index index;
    falling-threshold integer;
    falling-threshold-interval seconds;
    interval seconds;
    request-type;
    rising-event-index index;
    rising-threshold integer;
    sample-type (absolute-value | delta-value);
    startup-alarm (falling-alarm | rising-alarm | rising-or-falling alarm);
    syslog-subtag syslog-subtag;
    variable oid-variable;
  }
  event index {
    community community-name;
    description description;
    type type;
  }
  history history-index {
    bucket-size number;
    interface interface-name;
    interval seconds;
    owner owner-name;
  }
}

```

```

traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable> <match
    regular-expression>;
  flag flag;
}
trap-group group-name {
  categories {
    category;
  }
  destination-port port-number;
  routing-instance routing-instance-name;
  targets {
    address;
  }
  version (all | v1 | v2);
}
trap-options {
  agent-address outgoing-interface;
  source-address address;
}
v3 {
  notify name {
    tag tag-name;
    type trap;
  }
  notify-filter profile-name {
    oid object-identifier (include | exclude);
  }
  snmp-community community-index {
    community-name community-name;
    security-name security-name;
    tag tag-name;
  }
  target-address target-address-name {
    address address;
    address-mask address-mask;
    logical-system logical-system;
    port port-number;
    retry-count number;
    routing-instance routing-instance-name;
    tag-list tag-list;
    target-parameters target-parameters-name;
    timeout seconds;
  }
  target-parameters target-parameters-name {
    notify-filter profile-name;
    parameters {
      message-processing-model (v1 | v2c | V3);
      security-level (authentication | none | privacy);
      security-model (usm | v1 | v2c);
      security-name security-name;
    }
  }
}
usm {
  local-engine {
    user username {

```

```

    authentication-sha {
        authentication-password authentication-password;
    }
    authentication-md5 {
        authentication-password authentication-password;
    }
    authentication-none;
    privacy-aes128 {
        privacy-password privacy-password;
    }
    privacy-des {
        privacy-password privacy-password;
    }
    privacy-3des {
        privacy-password privacy-password;
    }
    privacy-none;
}
}
remote-engine engine-id {
    user username {
        authentication-sha {
            authentication-password authentication-password;
        }
        authentication-md5 {
            authentication-password authentication-password;
        }
        authentication-none;
        privacy-aes128 {
            privacy-password privacy-password;
        }
        privacy-des {
            privacy-password privacy-password;
        }
        privacy-3des {
            privacy-password privacy-password;
        }
        privacy-none {
            privacy-password privacy-password;
        }
    }
}
}
}
vacm {
    access {
        group group-name {
            (default-context-prefix | context-prefix context-prefix) {
                security-model (any | usm | v1 | v2c) {
                    security-level (authentication | none | privacy) {
                        notify-view view-name;
                        read-view view-name;
                        write-view view-name;
                    }
                }
            }
        }
    }
}
}

```

```

    }
    security-to-group {
        security-model (usm | v1 | v2c) {
            security-name security-name {
                group group-name;
            }
        }
    }
}
}
}
view view-name {
    oid object-identifier (include | exclude);
}
}

```

- Related Documentation
- [Understanding the Implementation of SNMP](#)
 - [snmp on page 267](#)

Configuring the SNMP Community String

The SNMP community string defines the relationship between an SNMP server system and the client systems. This string acts like a password to control the clients' access to the server. To configure a community string in a Junos OS configuration, include the **community** statement at the **[edit snmp]** hierarchy level:

```

[edit snmp]
community name {
    authorization authorization;
    clients {
        default restrict;
        address restrict;
    }
    view view-name;
}

```

If the community name contains spaces, enclose it in quotation marks (" ").

The default authorization level for a community is **read-only**. To allow **Set** requests within a community, you need to define that community as **authorization read-write**. For **Set** requests, you also need to include the specific MIB objects that are accessible with read-write privileges using the **view** statement. The default view includes all supported MIB objects that are accessible with read-only privileges; no MIB objects are accessible with read-write privileges. For more information about the **view** statement, see [“Configuring MIB Views” on page 108](#).

The **clients** statement lists the IP addresses of the clients (community members) that are allowed to use this community. If no **clients** statement is present, all clients are allowed. For **address**, you must specify an IPv4 address, not a hostname. Include the **default restrict** option to deny access to all SNMP clients for which access is not explicitly granted. We recommend that you always include the **default restrict** option to limit SNMP client access to the local switch.



NOTE: Community names must be unique within each SNMP system.

**Related
Documentation**

- [Configuring SNMP on page 101](#)

Configuring SNMP Trap Groups

Before any SNMP traps can be sent, you must configure a trap group, the categories of traps the group can receive, and the targets (systems) that will receive the traps. To create and name an SNMP trap group, include the **trap-group** statement at the **[edit snmp]** hierarchy level:

```
[edit snmp]
trap-group group-name {
  categories {
    category;
  }
  destination-port port-number;
  targets {
    address;
  }
  version (all | v1 | v2);
}
```

The trap group name can be any string and is embedded in the community name field of the trap. To configure your own trap group port, include the **destination-port** statement. The default destination port is port 162.

For each trap group that you define, you must include the **target** statement to define at least one system as the recipient of the SNMP traps in the trap group. Specify the IPv4 address of each recipient and not its hostname.

Specify the types of traps the trap group can receive in the **categories** statement.

A trap group can receive the following categories of traps:

- **authentication**—Authentication failures
- **chassis**—Chassis or environment notifications
- **configuration**—Configuration notifications
- **link**—Link-related notifications such as up-down transitions
- **remote-operations**—Remote operation notifications
- **startup**—System warm and cold starts

The **version** statement allows you to specify the SNMP version of the traps sent to targets of the trap group. If you specify **v1** only, SNMPv1 traps are sent. If you specify **v2** only, SNMPv2 traps are sent. If you specify **all**, both an SNMPv1 and an SNMPv2 trap are sent for every trap condition. For more information about the **version** statement, see [version](#).

Adding a Group of Clients to an SNMP Community

Junos OS enables you to add one or more groups of clients to an SNMP community. You can include the **client-list-name** *name* statement at the **[edit snmp community community-name]** hierarchy level to add all the members of the client list or prefix list to an SNMP community.

To define a list of clients, include the **client-list** statement followed by the IP addresses of the clients at the **[edit snmp]** hierarchy level:

```
[edit snmp]
  client-list client-list-name {
    ip-addresses;
  }
```

You can configure a prefix list at the **[edit policy options]** hierarchy level. Support for prefix lists in the SNMP community configuration enables you to use a single list to configure the SNMP and routing policies. For more information about the **prefix-list** statement, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

To add a client list or prefix list to an SNMP community, include the **client-list-name** statement at the **[edit snmp community community-name]** hierarchy level:

```
[edit snmp community community-name]
  client-list-name client-list-name;
```



NOTE: The client list and prefix list must not have the same name.

The following example shows how to define a client list:

```
[edit]
snmp {
  client-list clentlist1 {
    10.1.1.1/32;
    10.2.2.2/32;
  }
}
```

The following example shows how to add a client list to an SNMP community:

```
[edit]
snmp {
  community community1 {
    authorization read-only;
    client-list-name clientlist1;
  }
}
```

The following example shows how to add a prefix list to an SNMP community:

```
[edit]
policy-options {
  prefix-list prefixlist {
```

```
10.3.3.3/32;  
10.5.5.5/32;  
}  
}  
snmp {  
  community community2 {  
    client-list-name prefixlist;  
  }  
}
```

- Related Documentation**
- [client-list on page 215](#)
 - [client-list-name on page 216](#)

Configuring the Interfaces on Which SNMP Requests Can Be Accepted

By default, all router or switch interfaces have SNMP access privileges. To limit the access through certain interfaces only, include the **interface** statement at the **[edit snmp]** hierarchy level:

```
[edit snmp]  
interface [ interface-names ];
```

Specify the names of any logical or physical interfaces that should have SNMP access privileges. Any SNMP requests entering the router or switch from interfaces not listed are discarded.

- Related Documentation**
- *Configuring SNMP on a Device Running Junos OS*
 - *Configuration Statements at the [edit snmp] Hierarchy Level*
 - *Example: Configuring Secured Access List Checking*

Configuring MIB Views

SNMPv3 defines the concept of MIB views in RFC 3415, *View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)*. MIB views provide an agent better control over who can access specific branches and objects within its MIB tree. A view consists of a name and a collection of SNMP object identifiers, which are either explicitly included or excluded. Once defined, a view is then assigned to an SNMPv3 group or SNMPv1/v2c community (or multiple communities), automatically masking which parts of the agent's MIB tree members of the group or community can (or cannot) access.

By default, an SNMP community grants read access and denies write access to all supported MIB objects (even communities configured as **authorization read-write**). To restrict or grant read or write access to a set of MIB objects, you must configure a MIB view and associate the view with a community.

To configure MIB views, include the **view** statement at the **[edit snmp]** hierarchy level:

```
[edit snmp]  
view view-name {
```



```
oid object-identifier (include | exclude);
}
```

The **view** statement defines a MIB view and identifies a group of MIB objects. Each MIB object of a view has a common object identifier (OID) prefix. Each object identifier represents a subtree of the MIB object hierarchy. The subtree can be represented either by a sequence of dotted integers (such as **1.3.6.1.2.1.2**) or by its subtree name (such as **interfaces**). A configuration statement uses a view to specify a group of MIB objects on which to define access. You can also use a wildcard character asterisk (*) to include OIDs that match a particular pattern in the SNMP view. To enable a view, you must associate the view with a community.



NOTE: To remove an OID completely, use the **delete view all oid *oid-number*** command but omit the **include** parameter.

To associate MIB views with a community, include the **view** statement at the **[edit snmp community *community-name*]** hierarchy level:

```
[edit snmp community community-name]
view view-name;
```

For more information about the Ping MIB, see RFC 2925 and the *PING MIB* topic.

Related Documentation

- [PING MIB](#)
- [Configuring SNMP on a Device Running Junos OS](#)
- [Configuration Statements at the \[edit snmp\] Hierarchy Level](#)
- [Example: Ping Proxy MIB](#)
- [view \(Configuring a MIB View\)](#)
- [view \(Associating MIB View with a Community\) on page 292](#)
- [oid](#)

Configuring RMON Alarms and Events

The Junos OS supports the *Remote Network Monitoring* (RMON) MIB (RFC 2819), which allows a management device to monitor the values of MIB objects, or variables, against configured thresholds. When the value of a variable crosses a threshold, an alarm and its corresponding event are generated. The event can be logged and can generate an SNMP trap.

To configure RMON alarms and events using the CLI, perform these tasks:

1. [Configuring SNMP on page 110](#)
2. [Configuring an Event on page 110](#)
3. [Configuring an Alarm on page 111](#)

Configuring SNMP

To configure SNMP:

1. Grant read-only access to all SNMP clients:

```
[edit snmp]
user@switch# set community community-name authorization authorization
```

For example:

```
[edit snmp]
user@switch# set community public authorization read-only
```

2. Grant read-write access to the RMON and jnx-rmon MIBs:

```
[edit snmp]
user@switch# set view view-name oid object-identifier include
user@switch# set view view-name oid object-identifier include
user@switch# set community community-name authorization authorization view view-name
```

For example:

```
[edit snmp]
user@switch# set view rmon-mib-view oid .1.3.6.1.2.1.16 include
user@switch# set view rmon-mib-view oid .1.3.6.1.4.1.2636.13 include
user@switch# set community private authorization read-write view rmon-mib-view
```

OIDs 1.3.6.1.2.1.16 and 1.3.6.1.4.1.2636.13 correspond to the RMON and jnxRmon MIBs.

3. Configure an SNMP trap group:

```
[edit snmp]
user@switch# set trap-group group-name categories category
user@switch# set trap-group group-name targets address
```

For example:

```
[edit snmp]
user@switch# set trap-group rmon-trap-group categories rmon-alarm
user@switch# set trap-group rmon-trap-group targets 192.168.5.5
```

The trap group **rmon-trap-group** is configured to send RMON traps to 192.168.5.5.

Configuring an Event

To configure an event:

1. Configure an event index, community name, and type:

```
[edit snmp rmon]
user@switch# set event index community community-name type type
```

For example:

```
[edit snmp rmon]
user@switch# set event 1 community rmon-trap-group type log-and-trap
```

The event community corresponds to the SNMP trap group and is not the same as an SNMP community. This event generates an SNMP trap and adds an entry to the **logTable** in the RMON MIB.

2. Configure a description for the event:

```
[edit snmp rmon]
user@switch# set event index description description
```

For example:

```
[edit snmp rmon]
user@switch# set event 1 description "rmon event"
```

Configuring an Alarm

To configure an alarm:

1. Configure an alarm index, the variable to monitor, the rising and falling thresholds, and the corresponding rising and falling events:

```
[edit snmp rmon]
user@switch# set alarm index variable oid-variable falling-threshold integer rising-threshold
integer rising-event-index index falling-event-index index
```

For example:

```
[edit snmp rmon]
user@switch# set alarm 5 variable .1.3.6.1.4.1.2636.3.1.13.1.8.9.1.0.0 falling-threshold 75
rising-threshold 90 rising-event-index 1 falling-event-index 1
```

The variable .1.3.6.1.4.1.2636.3.1.13.1.8.9.1.0.0 corresponds to the `jnxRmon` MIB object `jnxOperatingCPU`, which represents the CPU utilization of the Routing Engine. The falling and rising threshold integers are 75 and 90. The rising and falling events both generate the same event (event index 1).

2. Configure the sample interval and type and the alarm type:

```
[edit snmp rmon]
user@switch# set alarm index interval seconds sample-type (absolute-value | delta-value)
startup-alarm (falling-alarm | rising-alarm | rising-or-falling-alarm)
```

For example:

```
[edit snmp rmon]
user@switch# set alarm 5 interval 30 sample-type absolute-value
startup-alarm rising-or-falling-alarm
```

The absolute value of the monitored variable is sampled every 30 seconds. The initial alarm can occur because of rising above the rising threshold or falling below the falling threshold.

Related Documentation

- [Configuring SNMP on page 101](#)
- [Juniper Networks Enterprise-Specific MIBs](#)
- [Monitoring RMON MIB Tables on page 118](#)
- [RMON MIB Event, Alarm, Log, and History Control Tables on page 66](#)
- [Understanding RMON on page 65](#)

Configuring Health Monitoring

This topic describes how to configure the health monitor feature for QFX Series and OCX Series devices.

The health monitor feature extends the SNMP RMON alarm infrastructure to provide predefined monitoring for a selected set of object instances (such as file system usage,

CPU usage, and memory usage) and dynamic object instances (such as Junos OS processes).

To configure health monitoring:

1. Configure the health monitor:

```
[edit snmp]
user@switch# set health-monitor
```

2. Configure the falling threshold:

```
[edit snmp]
user@switch# set health-monitor falling-threshold percentage
```

For example:

```
user@switch# set health-monitor falling-threshold 85
```

3. Configure the rising threshold:

```
[edit snmp]
user@switch# set health-monitor rising-threshold percentage
```

For example:

```
user@switch# set health-monitor rising-threshold 75
```

4. Configure the interval:

```
[edit snmp]
user@switch# set health-monitor interval seconds
```

For example:

```
user@switch# set health-monitor interval 600
```

Related Documentation

- [Understanding Health Monitoring on page 69](#)
- [falling-threshold on page 226](#)
- [interval \(Health Monitor\) on page 235](#)
- [rising-threshold \(Health Monitor\) on page 255](#)

Creating SNMPv3 Users

For each SNMPv3 user, you can specify the username, authentication type, authentication password, privacy type, and privacy password. After a user enters a password, a key based on the engine ID and password is generated and is written to the configuration file. After the generation of the key, the password is deleted from this configuration file.



NOTE: You can configure only one encryption type for each SNMPv3 user.

To create users, include the `user` statement at the `[edit snmp v3 usm local-engine]` hierarchy level:

```
[edit snmp v3 usm local-engine]
user username;
```

`username` is the name that identifies the SNMPv3 user.

To configure user authentication and encryption, include the following statements at the `[edit snmp v3 usm local-engine user username]` hierarchy level:

```
[edit snmp v3 usm local-engine user username]
authentication-md5 {
  authentication-password authentication-password;
}
authentication-sha {
  authentication-password authentication-password;
}
authentication-none;
privacy-aes128 {
  privacy-password privacy-password;
}
privacy-des {
  privacy-password privacy-password;
}
privacy-3des {
  privacy-password privacy-password;
}
privacy-none;
```

Related Documentation

- [Complete SNMPv3 Configuration Statements](#)
- [Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63](#)
- [Example: Creating SNMPv3 Users](#)
- [Example: SNMPv3 Configuration](#)

Configuring Access Privileges for a Group

In SNMPv3, you can configure a group that sets the same access privileges for one or more users. Configuring a group includes defining the security model and security level, and associating one or more MIB view permissions for the group.



NOTE: You must associate at least one MIB view with the group. You can associate multiple MIB views (read, notify, write) to authorize different permissions based on the view. The view name cannot exceed 32 characters.

To configure access privileges for a group:

1. To configure the group:

```
[edit snmp v3 vacm access]
user@switch# edit group group-name
```

2. To configure the context prefix of the SNMP instance for the group:

```
[edit snmp v3 vacm access group group-name]
user@switch# edit (default-context-prefix | context-prefix context-prefix)
```

For example, to configure the default context prefix:

```
[edit snmp v3 vacm access group group-name]
user@switch# edit default-context-prefix
```

3. To configure the security model:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix)]
user@switch# edit security-model (any | usm | v1 | v2c)
```

For example, to configure the SNMPv3 user-based security model (USM):

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix)]
user@switch# edit security-model usm
```

4. To configure the security level:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix) security-model (any | usm | v1 | v2c)]
user@switch# edit security-level (authentication | none | privacy)
```

For example, to configure a security level requiring user authentication and encryption:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix) security-model (any | usm | v1 | v2c)]
user@switch# edit security-level privacy
```



NOTE: Access privileges are granted to all packets with a security level equal to or greater than that configured. If you are configuring the SNMPv1 or v2c security model, use *none* as your security level. If you are configuring the SNMPv3 security model (USM), use the *authentication*, *none*, or *privacy* security level.

5. (Optional) To associate a read-only MIB view with an SNMP group:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix) security-model (any | usm | v1 | v2c) security-level (authentication |
none | privacy)]
user@switch# edit read-view view-name
```

6. (Optional) To associate a MIB view with an SNMP notification permission for an SNMP group:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix) security-model (any | usm | v1 | v2c) security-level (authentication |
none | privacy)]
user@switch# edit notify-view view-name
```

7. (Optional) To associate a MIB view with write permission for an SNMP group:

```
[edit snmp v3 vacm access group group-name (default-context-prefix | context-prefix
context-prefix) security-model (any | usm | v1 | v2c) security-level (authentication |
none | privacy)]
user@switch# edit write-view view-name
```

- Related Documentation**
- [SNMPv3 Overview on page 62](#)
 - [Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63](#)

Assigning a Security Name to a Group

In SNMPv3, each username is associated with a security name. The security name, together with the SNMP engine ID, is included in SNMP messages to ensure messaging security.

Before you assign a security name to a group, first create the security name. For an SNMPv3 client, the security name is the username configured at the **[edit snmp v3 usm local-engine user *username*]** hierarchy level. For SNMPv1 or v2c clients, the security name is the community string configured at the **[edit snmp v3 snmp-community *community-index*]** hierarchy level.

Assigning a security name to a group includes configuring a security model for the group, assigning the security name to the group, and configuring the group.

To assign an SNMP security name to a group:

1. To configure a security model for the group:

```
[edit snmp v3 vacm security-to-group]
user@switch# edit security-model (usm | v1 | v2c)
```

For example, to configure the SNMPv3 user-based security model (USM):

```
[edit snmp v3 vacm security-to-group]
user@switch# edit security-model usm
```

2. To associate the security name with a group:

```
[edit snmp v3 vacm security-to-group security-model (usm | v1 | v2c)]
user@switch# edit security-name security-name
```

3. To configure a group of SNMPv3 security names with the same security policy:

```
[edit snmp v3 vacm security-to-group security-model (usm | v1 | v2c) security-name
security-name]
user@switch# edit group group-name
```

- Related Documentation**
- [Creating SNMPv3 Users on page 112](#)
 - [group \(Associating a Security Name\) on page 229](#)
 - [security-model \(Group\) on page 262](#)
 - [security-name \(Community String\) on page 263](#)
 - [security-name \(Security Group\) on page 264](#)

Configuring SNMPv3 Traps on a Device Running Junos OS

In SNMPv3, you create traps and informs by configuring the **notify**, **target-address**, and **target-parameters** parameters. Traps are unconfirmed notifications, whereas informs are confirmed notifications. This section describes how to configure SNMP traps. For information about configuring SNMP informs, see “Configuring SNMP Informs” on page 117.

The target address defines a management application’s address and parameters to be used in sending notifications. Target parameters define the message processing and security parameters that are used in sending notifications to a particular management target. SNMPv3 also lets you define SNMPv1 and SNMPv2c traps.



NOTE: When you configure SNMP traps, make sure your configured access privileges allow the traps to be sent. Access privileges are configured at the [edit snmp v3 vacm access] and [edit snmp v3 vacm security-to-group] hierarchy levels.

To configure SNMP traps, include the following statements at the [edit snmp v3] hierarchy level:

```
[edit snmp v3]
  notify name {
    tag tag-name;
    type trap;
  }
  notify-filter name {
    oid object-identifier (include | exclude);
  }
  target-address target-address-name {
    address address;
    address-mask address-mask;
    logical-system (SNMP) logical-system;
    port port-number;
    routing-instance instance;
    tag-list tag-list;
    target-parameters target-parameters-name;
  }
  target-parameters target-parameters-name {
    notify-filter profile-name;
    parameters {
      message-processing-model (v1 | v2c | v3);
      security-level (authentication | none | privacy);
      security-model (usm | v1 | v2c);
      security-name security-name;
    }
  }
}
```

- Related Documentation**
- [Configuring the SNMPv3 Trap Notification](#)
 - [Configuring the Trap Notification Filter](#)
 - [Configuring the Trap Target Address](#)

- *Defining and Configuring the Trap Target Parameters*
- [Configuring SNMP Informs on page 117](#)
- *Configuring the Remote Engine and Remote User*
- *Configuring the Inform Notification Type and Target Address*

Configuring SNMP Informs


Junos OS supports two types of notifications: traps and informs. With traps, the receiver does not send any acknowledgment when it receives a trap. Therefore, the sender cannot determine if the trap was received. A trap may be lost because a problem occurred during transmission. To increase reliability, an inform is similar to a trap except that the inform is stored and retransmitted at regular intervals until one of these conditions occurs:

- The receiver (target) of the inform returns an acknowledgment to the SNMP agent.
- A specified number of unsuccessful retransmissions have been attempted and the agent discards the inform message.

If the sender never receives a response, the inform can be sent again. Thus, informs are more likely to reach their intended destination than traps are. Informs use the same communications channel as traps (same socket and port) but have different protocol data unit (PDU) types.

Informs are more reliable than traps, but they consume more network, router, and switch resources (see [Figure 8 on page 117](#)). Unlike a trap, an inform is held in memory until a response is received or the timeout is reached. Also, traps are sent only once, whereas an inform may be retried several times. Use informs when it is important that the SNMP manager receive all notifications. However, if you are more concerned about network traffic, or router and switch memory, use traps.

 Figure 8: Inform Request and Response

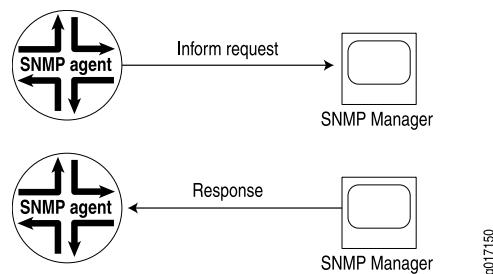

For information about configuring SNMP traps, see [“Configuring SNMPv3 Traps on a Device Running Junos OS” on page 116](#).

Related Documentation

- [Configuring SNMPv3 Traps on a Device Running Junos OS on page 116](#)
- *Configuring the Remote Engine and Remote User*
- *Configuring the Inform Notification Type and Target Address*
- *Complete SNMPv3 Configuration Statements*

- [Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63](#)

Monitoring RMON MIB Tables

Purpose Monitor remote monitoring (RMON) alarm, event, and log tables.

Action To display the RMON tables:

```
user@switch> show snmp rmon
Alarm
Index  Variable description                               Value State

      5  monitor
      jnxOperatingCPU.9.1.0.0                        5 falling threshold

Event
Index  Type                               Last Event
      1  log and trap                    2010-07-10 11:34:17 PDT
Event Index: 1
  Description: Event 1 triggered by Alarm 5, rising threshold (90) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 100)
  Time: 2010-07-10 11:34:07 PDT
  Description: Event 1 triggered by Alarm 5, falling threshold (75) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 5)
  Time: 2010-07-10 11:34:17 PDT
```

Meaning The display shows that an alarm has been defined to monitor jnxRmon MIB object jnxOperatingCPU, which represents the CPU utilization of the Routing Engine. The alarm is configured to generate an event that sends an SNMP trap and adds an entry to the logTable in the RMON MIB. The log table shows that two occurrences of the event have been generated—one for rising above a threshold of 90 percent, and one for falling below a threshold of 75 percent.

Related Documentation

- [Configuring RMON Alarms and Events on page 109](#)
- [show snmp rmon on page 361](#)
- [show snmp rmon history on page 365](#)
- [clear snmp statistics on page 341](#)
- [clear snmp history on page 340](#)

Monitoring SNMP

There are several commands that you can access in Junos OS operational mode to monitor SNMP information. Some of the commands are:

- **show snmp health-monitor**, which displays the health monitor log and alarm information.
- **show snmp mib**, which displays information from the MIBs, such as device and system information.

- **show snmp statistics**, which displays SNMP statistics such as the number of packets, silent drops, and invalid output values.
- **show snmp rmon**, which displays the RMON alarm, event, history, and log information

The following example provides sample output from the **show snmp health-monitor** command:

```
user@switch> show snmp health-monitor
Alarm
Index  Variable description                               Value State

32768 Health Monitor: root file system utilization
      jnxHrStoragePercentUsed.1                      58 active

32769 Health Monitor: /config file system utilization
      jnxHrStoragePercentUsed.2                      0 active

32770 Health Monitor: RE 0 CPU utilization
      jnxOperatingCPU.9.1.0.0                        0 active

32773 Health Monitor: RE 0 Memory utilization
      jnxOperatingBuffer.9.1.0.0                    35 active

32775 Health Monitor: jkernel daemon CPU utilization
      Init daemon                                   0 active
      Chassis daemon                               50 active
      Firewall daemon                              0 active
      Interface daemon                             5 active
      SNMP daemon                                  11 active
      MIB2 daemon                                  42 active
      ...
```

The following example provides sample output from the **show snmp mib** command:

```
user@switch> show snmp mib walk system

sysDescr.0    = Juniper Networks, Inc. qfx3500s internet router, kernel
JUNOS 11.1-20100926.0 #0: 2010-09-26 06:17:38 UTC builder@abc.juniper.net:
/volume/build/junos/11.1/production/20100926.0/obj-xlr/bsd/sys/compile/JUNIPER-xxxxx

Build date: 2010-09-26 06:00:10 U
sysObjectID.0 = jnxProductQFX3500
sysUpTime.0   = 24444184
sysContact.0  = J Smith
sysName.0     = Lab QFX3500
sysLocation.0 = Lab
sysServices.0 = 4
```

The following example provides sample output from the **show snmp statistics** command:

```
user@switch> show snmp statistics

SNMP statistics:
Input:
Packets: 0, Bad versions: 0, Bad community names: 0,
Bad community uses: 0, ASN parse errors: 0,
Too big: 0, No such names: 0, Bad values: 0,
Read only: 0, General errors: 0,
```

```
Total request varbinds: 0, Total set varbinds: 0,  
Get requests: 0, Get nexts: 0, Set requests: 0,  
Get responses: 0, Traps: 0,  
Silent drops: 0, Proxy drops: 0, Commit pending drops: 0,  
Throttle drops: 0, Duplicate request drops: 0  
Output:  
Packets: 0, Too bigs: 0, No such names: 0,  
Bad values: 0, General errors: 0,  
Get requests: 0, Get nexts: 0, Set requests: 0,  
Get responses: 0, Traps: 0
```

- Related Documentation
- [health-monitor on page 231](#)
 - [show snmp mib on page 358](#)
 - [show snmp statistics on page 366](#)

Tracing SNMP Activity on a Device Running Junos OS

SNMP tracing operations track activity for SNMP agents and record the information in log files. The logged error descriptions provide detailed information to help you solve problems faster.

By default, Junos OS does not trace any SNMP activity. If you include the **traceoptions** statement at the **[edit snmp]** hierarchy level, the default tracing behavior is:

- Important activities are logged in files located in the **/var/log** directory. Each log is named after the SNMP agent that generates it. Currently, the following log files are created in the **/var/log** directory when the **traceoptions** statement is used:
 - chassisd
 - craftd
 - ilmid
 - mib2d
 - rmopd
 - serviced
 - snmpd
- When a trace file named **filename** reaches its maximum size, it is renamed **filename.0**, then **filename.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. (For more information about how log files are created, see the *Junos OS System Log Messages Reference*.)
- Log files can be accessed only by the user who configured the tracing operation.

You cannot change the directory (**/var/log**) in which trace files are located. However, you can customize the other trace file settings by including the following statements at the **[edit snmp]** hierarchy level:

```
[edit snmp]  
traceoptions {
```

```

file <files number> <match regular-expression> <size size> <world-readable |
no-world-readable>;
flag flag;
memory-trace;
no-remote-trace;
no-default-memory-trace;
}

```

These statements are described in the following sections:

- [Configuring the Number and Size of SNMP Log Files on page 121](#)
- [Configuring Access to the Log File on page 121](#)
- [Configuring a Regular Expression for Lines to Be Logged on page 122](#)
- [Configuring the Trace Operations on page 122](#)

Configuring the Number and Size of SNMP Log Files

By default, when the trace file reaches 128 kilobytes (KB) in size, it is renamed *filename.0*, then *filename.1*, and so on, until there are three trace files. Then the oldest trace file (*filename.2*) is overwritten.

You can configure the limits on the number and size of trace files by including the following statements at the **[edit snmp traceoptions]** hierarchy level:

```

[edit snmp traceoptions]
file files number size size;

```

For example, set the maximum file size to 2 MB, and the maximum number of files to 20. When the file that receives the output of the tracing operation (*filename*) reaches 2 MB, *filename* is renamed *filename.0*, and a new file called *filename* is created. When the new *filename* reaches 2 MB, *filename.0* is renamed *filename.1* and *filename* is renamed *filename.0*. This process repeats until there are 20 trace files. Then the oldest file (*filename.19*) is overwritten by the newest file (*filename.0*).

The number of files can be from 2 through 1000 files. The file size of each file can be from 10 KB through 1 gigabyte (GB).

Configuring Access to the Log File

By default, log files can be accessed only by the user who configured the tracing operation.

To specify that any user can read all log files, include the **file world-readable** statement at the **[edit snmp traceoptions]** hierarchy level:

```

[edit snmp traceoptions]
file world-readable;

```

To explicitly set the default behavior, include the **file no-world-readable** statement at the **[edit snmp traceoptions]** hierarchy level:

```

[edit snmp traceoptions]
file no-world-readable;

```

Configuring a Regular Expression for Lines to Be Logged

By default, the trace operation output includes all lines relevant to the logged activities.

You can refine the output by including the **match** statement at the **[edit snmp traceoptions file *filename*]** hierarchy level and specifying a regular expression (regex) to be matched:

```
[edit snmp traceoptions]
file filename match regular-expression;
```

Configuring the Trace Operations

By default, only important activities are logged. You can specify which trace operations are to be logged by including the following **flag** statement (with one or more tracing flags) at the **[edit snmp traceoptions]** hierarchy level:

```
[edit snmp traceoptions]
flag {
  all;
  configuration;
  database;
  events;
  general;
  interface-stats;
  nonvolatile-sets;
  pdu;
  policy;
  protocol-timeouts;
  routing-socket;
  server;
  subagent;
  timer;
  varbind-error;
}
```

Table 22 on page 122 describes the meaning of the SNMP tracing flags.

Table 22: SNMP Tracing Flags

Flag	Description	Default Setting
all	Log all operations.	Off
configuration	Log reading of the configuration at the [edit snmp] hierarchy level.	Off
database	Log events involving storage and retrieval in the events database.	Off
events	Log important events.	Off
general	Log general events.	Off
interface-stats	Log physical and logical interface statistics.	Off

Table 22: SNMP Tracing Flags (*continued*)

Flag	Description	Default Setting
nonvolatile-set	Log nonvolatile SNMP set request handling.	Off
pdu	Log SNMP request and response packets.	Off
policy	Log policy processing.	Off
protocol-timeouts	Log SNMP response timeouts.	Off
routing-socket	Log routing socket calls.	Off
server	Log communication with processes that are generating events.	Off
subagent	Log subagent restarts.	Off
timer	Log internal timer events.	Off
varbind-error	Log variable binding errors.	Off

To display the end of the log for an agent, issue the **show log agentd | last** operational mode command:

```
[edit]
user@host# run show log agentd | last
```

where **agent** is the name of an SNMP agent.

Related Documentation

- [Configuring SNMP on a Device Running Junos OS](#)
- [Configuration Statements at the \[edit snmp\] Hierarchy Level](#)
- [Example: Tracing SNMP Activity](#)
- [Configuring SNMP on page 101](#)

Using the Enterprise-Specific Utility MIB to Enhance SNMP Coverage

Even though the Junos OS has built-in performance metrics and monitoring options, you might need to have customized performance metrics. To make it easier for you to monitor such customized data through a standard monitoring system, the Junos OS provides you with an enterprise-specific Utility MIB that can store such data and thus extend SNMP support for managing and monitoring the data of your choice.

The enterprise-specific Utility MIB provides you with container objects of the following types: **32-bit counters**, **64-bit counters**, **signed integers**, **unsigned integers**, and **octet strings**. You can use these container MIB objects to store the data that are otherwise not supported for SNMP operations. You can populate data for these objects either by using

CLI commands or with the help of Op scripts and an RPC API that can invoke the CLI commands.

The following CLI commands enable you to set and clear Utility MIB object values:

- **request snmp utility-mib set** instance *name* object-type <counter | counter 64 | integer | string | unsigned integer> object-value *value*
- **request snmp utility-mib clear** instance *name* object-type <counter | counter 64 | integer | string | unsigned integer>

The **instance *name*** option of the **request snmp utility-mib <set | clear>** command specifies the name of the data instance and is the main identifier of the data. The **object-type <counter | counter 64 | integer | string | unsigned integer>** option enables you specify the object type, and the **object-value *value*** option enables you to set the value of the object.

To automate the process of populating Utility MIB data, you can use a combination of an event policy and event script. The following examples show the configuration for an event policy to run **show system buffers** every hour and to store the **show system buffers** data in Utility MIB objects by running an event script (**check-mbufs.slax**).

Event Policy Configuration

To configure an event policy that runs the **show system buffers** command every hour and invokes **check-mbufs.slax** to store the **show system buffers** data into Utility MIB objects, include the following statements at the **[edit]** hierarchy level:

```
event-options {
  generate-event {
    1-HOUR time-interval 3600;
  }
  policy MBUFS {
    events 1-HOUR;
    then {
      event-script check-mbufs.slax; # script stored at /var/db/scripts/event/
    }
  }
  event-script {
    file check-mbufs.slax;
  }
}
```

check-mbufs.slax Script

The following example shows the **check-mbufs.slax** script that is stored under **/var/db/scripts/event/**:

```
----- script START -----
version 1.0;

ns junos = "http://xml.juniper.net/junos/*/junos";
ns xnm = "http://xml.juniper.net/xnm/1.1/xnm";
ns jcs = "http://xml.juniper.net/junos/commit-scripts/1.0";
ns ext = "http://xmlsoft.org/XSLT/namespace";

match / {
  <op-script-results>{
    var $cmd = <command> "show system buffers";
    var $out = jcs:invoke($cmd);
```



```

var $lines = jcs:break_lines($out);
for-each ($lines) {
    if (contains(., "current/peak/max")) {
        var $pattern = "([0-9]+)/([0-9]+)/([0-9]+) mbufs";
        var $split = jcs:regex($pattern, .);
        var $result = $split[2];

        var $rpc = <request-snmp-utility-mib-set> {
            <object-type> "integer";
            <instance> "current-mbufs";
            <object-value> $result;
        }
        var $res = jcs:invoke($rpc);
    }
}
}
----- script END -----

```

You can run the following command to check the data stored in the Utility MIB as a result of the event policy and script shown in the preceding examples:

```

user@host> show snmp mib walk jnxUtilData ascii jnxUtilIntegerValue."current-mbufs"
= 0 jnxUtilIntegerTime."current-mbufs" = 07 da 05 0c 03 14 2c 00 2d 07 00
regress@caramels>

```



NOTE: The `show snmp mib walk` command is not available on the QFabric system, but you can use external SNMP client applications to perform this operation.

Related Documentation

- [Understanding SNMP Implementation in Junos OS](#)
- [Configuring SNMP on Devices Running Junos OS](#)
- [Monitoring SNMP Activity and Tracking Problems That Affect SNMP Performance on a Device Running Junos OS](#)
- [Optimizing the Network Management System Configuration for the Best Results](#)
- [Configuring Options on Managed Devices for Better SNMP Response Time](#)
- [Managing Traps and Informs](#)
- [Understanding the Implementation of SNMP on the QFabric System](#)

Example: Configuring SNMP

By default, SNMP is disabled on devices running Junos OS. This example describes the steps for configuring SNMP on the QFabric system.

- [Requirements on page 126](#)
- [Overview on page 126](#)
- [Configuration on page 126](#)

Requirements

This example uses the following hardware and software components:

- Junos OS Release 12.2
- Network management system (NMS) (running the SNMP manager)
- QFabric system (running the SNMP agent) with multiple Node devices

Overview

Because SNMP is disabled by default on devices running Junos OS, you must enable SNMP on your device by including configuration statements at the **[edit snmp]** hierarchy level. At a minimum, you must configure the **community public** statement. The community defined as public grants read-only access to MIB data to any client.

If no **clients** statement is configured, all clients are allowed. We recommend that you always include the **restrict** option to limit SNMP client access to the switch.

The network topology in this example includes an NMS, a QFabric system with four Node devices, and external SNMP servers that are configured for receiving traps.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set snmp name "snmp qfabric" description "qfabric0 switch"
set snmp location "Lab 4 Row 11" contact "qfabric-admin@qfabric0"
set snmp community public authorization read-only
set snmp client-list list0 192.168.0.0/24
set snmp community public client-list-name list0
set snmp community public clients 192.170.0.0/24 restrict
set snmp trap-group "qf-traps" destination-port 155 targets 192.168.0.100
```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure SNMP on the QFabric system:



NOTE: If the name, description, location, contact, or community name contains spaces, enclose the text in quotation marks (" ").

1. Configure the SNMP system name:

```
[edit snmp]
user@switch# set name "snmp qfabric"
```

2. Specify a description.

```
[edit snmp]
user@switch# set description "qfabric0 system"
```

This string is placed into the MIB II sysDescription object.

3. Specify the physical location of the QFabric system.

```
[edit snmp]
user@switch# set location "Lab 4 Row 11"
```

This string is placed into the MIB II sysLocation object.

4. Specify an administrative contact for the SNMP system.

```
[edit snmp]
user@switch# set contact "qfabric-admin@qfabric0"
```

This name is placed into the MIB II sysContact object.

5. Specify a unique SNMP community name and the read-only authorization level.



NOTE: The read-write option is not supported on the QFabric system.

```
[edit snmp]
user@switch# set community public authorization read-only
```

6. Create a client list with a set of IP addresses that can use the SNMP community.

```
[edit snmp]
user@switch# set client-list list0 192.168.0.0/24
user@switch# set community public client-list-name list0
```

7. Specify IP addresses of clients that are restricted from using the community.

```
[edit snmp]
user@switch# set community public clients 192.170.0.0/24 restrict
```

8. Configure a trap group, destination port, and a target to receive the SNMP traps in the trap group.

```
[edit snmp]
user@switch# set trap-group "qf-traps" destination-port 155 targets 192.168.0.100
```



NOTE: You do not need to include the destination-port statement if you use the default port 162.

The trap group qf-traps is configured to send traps to 192.168.0.100.

Results From configuration mode, confirm your configuration by entering the **show** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
```

```
user@switch# show
snmp {
  name "snmp qfabric";
  description "qfabric0 system";
  location "Lab 4 Row 11";
  contact "qfabric-admin@qfabric0";
  client-list list0 {
    192.168.0.0/24;
  }
  community public {
    authorization read-only;
    clients {
      197.170.0.0/24 restrict;
    }
  }
  trap-group qf-traps {
    destination-port 155;
    targets {
      192.168.0.100;
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

- Related Documentation**
- *Understanding the Implementation of SNMP on the QFabric System*
 - [snmp on page 267](#)

CHAPTER 7

Configuring System Logging

- Overview of Junos OS System Log Messages on page 130
- Overview of Single-Chassis System Logging Configuration on page 130
- Junos OS Minimum System Logging Configuration on page 132
- Junos OS System Log Configuration Statements on page 132
- Adding a Text String to System Log Messages on page 133
- Directing System Log Messages to a Log File on page 134
- Directing System Log Messages to a Remote Machine on page 135
- Directing System Log Messages to a User Terminal on page 135
- Directing System Log Messages to the Console on page 136
- Disabling the System Logging of a Facility on page 136
- Displaying a Log File from a Single-Chassis System on page 137
- Including Priority Information in System Log Messages on page 138
- Including the Year or Millisecond in Timestamps on page 139
- Logging Messages in Structured-Data Format on page 140
- Interpreting Messages Generated in Structured-Data Format on page 141
- Interpreting Messages Generated in Standard Format on page 144
- Specifying Log File Size, Number, and Archiving Properties on page 145
- Specifying the Facility and Severity of Messages to Include in the Log on page 146
- Junos OS System Logging Facilities and Message Severity Levels on page 148
- Default Facilities for System Log Messages Directed to a Remote Destination on page 150
- Junos OS System Log Alternate Facilities for Remote Logging on page 150
- Changing the Alternative Facility Name for System Log Messages Directed to a Remote Destination on page 151
- Using Regular Expressions to Refine the Set of Logged Messages on page 153
- Managing Host OS System Log and Core Files on page 155
- Monitoring System Log Messages on page 157
- Examples: Configuring System Logging on page 158

- [Examples: Assigning an Alternative Facility on page 160](#)
- [Example: Configuring System Log Messages on page 161](#)

Overview of Junos OS System Log Messages

The Junos OS generates system log messages (also called *syslog messages*) to record events that occur on the switch, including the following:

- Routine operations, such as a user login into the configuration database.
- Failure and error conditions, such as failure to access a configuration file.
- Emergency or critical conditions, such as power-down of the switch due to excessive temperature.

Each system log message identifies the Junos OS process that generated the message and briefly describes the operation or error that occurred. For detailed information about specific system log messages, see the *Junos OS System Log Messages Reference*.



NOTE: OCX Series switches comprise both the Junos OS and the host operating system (OS). For information about system logging on the host OS, see [“Managing Host OS System Log and Core Files” on page 155](#).

Related Documentation

- [Junos OS System Log Configuration Statements on page 132](#)
- [Junos OS Minimum System Logging Configuration on page 132](#)

Overview of Single-Chassis System Logging Configuration

The Junos OS system logging utility on the QFX Series is similar to the UNIX **syslogd** utility. This topic describes how to configure system logging for a single-chassis system that runs the Junos OS.

Each system log message belongs to a *facility*, which groups together related messages. Each message is also preassigned a *severity level*, which indicates how seriously the triggering event affects router functions. You always specify the facility and severity of the messages to include in the log. For more information, see [“Specifying the Facility and Severity of Messages to Include in the Log” on page 146](#).

You direct messages to one or more destinations by including the appropriate statement at the **[edit system syslog]** hierarchy level:

- To a named file in a local file system, by including the **file** statement. See [“Directing System Log Messages to a Log File” on page 134](#).
- To the terminal session of one or more specific users (or all users) when they are logged in to the switch, by including the **user** statement. See [“Directing System Log Messages to a User Terminal” on page 135](#).

- To the switch console, by including the **console** statement. See [“Directing System Log Messages to the Console” on page 136](#).
- To a remote machine that is running the **syslogd** utility, by including the **host** statement. See [“Directing System Log Messages to a Remote Machine” on page 135](#).

By default, messages are logged in a standard format, which is based on a UNIX system log format; for detailed information about message formatting, see the *Junos OS System Log Messages Reference*. You can alter the content and format of logged messages in the following ways:

- You can log messages to a file in structured-data format instead of the standard Junos OS format. Structured-data format provides more information without adding significant length, and makes it easier for automated applications to extract information from the message. For more information, see [“Logging Messages in Structured-Data Format” on page 140](#).
- A message’s facility and severity level are together referred to as its *priority*. By default, the standard Junos OS format for messages does not include priority information (structured-data format includes a priority code by default). To include priority information in standard-format messages directed to a file or a remote destination, include the **explicit-priority** statement. For more information, see [“Including Priority Information in System Log Messages” on page 138](#).
- By default, the standard Junos OS format for messages specifies the month, date, hour, minute, and second when the message was logged. You can modify the timestamp on standard-format system log messages to include the year, the millisecond, or both. (Structured-data format specifies the year and millisecond by default.) For more information, see [“Including the Year or Millisecond in Timestamps” on page 139](#).
- When directing messages to a remote machine, you can specify the IP address that is reported in messages as their source. You can also configure features that make it easier to separate messages generated by Junos OS or messages generated on particular switches. For more information, see [“Directing System Log Messages to a Remote Machine” on page 135](#).
- The predefined facilities group together related messages, but you can also use regular expressions to specify more exactly which messages from a facility are logged to a file, a user terminal, or a remote destination. For more information, see [“Using Regular Expressions to Refine the Set of Logged Messages” on page 153](#).



NOTE: During a commit check, warnings about the **traceoptions** configuration (for example, mismatch in trace file sizes or number of trace files) are not displayed on the console. However, these warnings are logged in the system log messages when the new configuration is committed.

Related Documentation

- [Examples: Configuring System Logging on page 158](#)
- [Specifying the Facility and Severity of Messages to Include in the Log on page 146](#)
- [Junos OS System Logging Facilities and Message Severity Levels on page 148](#)

- [Directing System Log Messages to a Log File on page 134](#)
- [Directing System Log Messages to a Remote Machine on page 135](#)
- [Directing System Log Messages to a User Terminal on page 135](#)
- [Directing System Log Messages to the Console on page 136](#)

Junos OS Minimum System Logging Configuration

To record or view system log messages, you must include the **syslog** statement at the **[edit system]** hierarchy level. Specify at least one destination for the messages, as described in [Table 23 on page 132](#). For more information about the configuration statements, see *Single-Chassis System Logging Configuration Overview*.

Table 23: Minimum Configuration Statements for System Logging

Destination	Minimum Configuration Statements
File	<pre>[edit system syslog] file filename { facility severity; }</pre>
Terminal session of one, several, or all users	<pre>[edit system syslog] user (username *) { facility severity; }</pre>
Router or switch console	<pre>[edit system syslog] console { facility severity; }</pre>
Remote machine or the other Routing Engine on the router or switch	<pre>[edit system syslog] host (hostname other-routing-engine) { facility severity; }</pre>

Related Documentation

- [Junos OS System Log Overview](#)

Junos OS System Log Configuration Statements

To configure the switch to log system messages, include the **syslog** statement at the **[edit system]** hierarchy level:

```
[edit system]
syslog {
  archive <files number> <size size> <world-readable | no-world-readable>;
  console {
    facility severity;
  }
  file filename {
```



```

    facility severity;
    archive <archive-sites (ftp-url <password password>)> <files number> <size size>
      <start-time "YYYY-MM-DD.hh:mm"> <transfer-interval minutes> <world-readable |
        no-world-readable>;
    explicit-priority;
    match "regular-expression";
    structured-data {
      brief;
    }
  }
  host hostname {
    facility severity;
    explicit-priority;
    facility-override facility;
    log-prefix string
    match "regular-expression";
  }
  source-address source-address;
  time-format (year | millisecond | year millisecond);
  user (username | *) {
    facility severity;
    match "regular-expression";
  }
}

```

Related Documentation • [Overview of Junos OS System Log Messages on page 130](#)

Adding a Text String to System Log Messages

To add a text string to every system log message directed to a remote machine or to the other Routing Engine, include the **log-prefix** statement at the **[edit system syslog host]** hierarchy level:

```

[edit system syslog host (hostname | other-routing-engine)]
facility severity;
log-prefix string;

```

The string can contain any alphanumeric or special character except the equal sign (=) and the colon (:). It also cannot include the space character; do not enclose the string in quotation marks (" ") in an attempt to include spaces in it.

The Junos OS system logging utility automatically appends a colon and a space to the specified string when the system log messages are written to the log. The string is inserted after the identifier for the Routing Engine that generated the message.

The following example shows how to add the string M120 to all messages to indicate that the router is an M120 router, and direct the messages to the remote machine hardware-logger.mycompany.com:

```

[edit system syslog]
host hardware-logger.mycompany.com {
  any info;
  log-prefix M120;
}

```

When these configuration statements are included on an M120 router called origin1, a message in the system log on hardware-logger.mycompany.com looks like the following:

```
Mar 9 17:33:23 origin1 M120: mgd[477]: UI_CMDLINE_READ_LINE: user 'root', command 'run show version'
```

- Related Documentation**
- [Single-Chassis System Logging Configuration Overview](#)
 - [Specifying Log File Size, Number, and Archiving Properties on page 145](#)

Directing System Log Messages to a Log File

To direct system log messages to a file in the `/var/log` directory of the local Routing Engine, include the `file` statement at the `[edit system syslog]` hierarchy level:

```
[edit system syslog]
file filename {
    facility severity;
    archive <archive-sites (ftp-url <password password>) > <files number> <size size>
        <start-time "YYYY-MM-DD.hh:mm"> <transfer-interval minutes> <world-readable |
        no-world-readable>;
    explicit-priority;
    match "regular-expression";
    structured-data {
        brief;
    }
}
```

For the list of facilities and severity levels, see [“Specifying the Facility and Severity of Messages to Include in the Log” on page 146](#).

To prevent log files from growing too large, the Junos OS system logging utility by default writes messages to a sequence of files of a defined size. By including the `archive` statement, you can configure the number of files, their maximum size, and who can read them, either for all log files or for a certain log file. For more information, see [“Specifying Log File Size, Number, and Archiving Properties” on page 145](#).

For information about the following statements, see the indicated sections:

- **explicit-priority**—See [“Including Priority Information in System Log Messages” on page 138](#)
- **match**—See [“Using Regular Expressions to Refine the Set of Logged Messages” on page 153](#)
- **structured-data**—See [Logging Messages in Structured-Data Format](#)

- Related Documentation**
- [Single-Chassis System Logging Configuration Overview](#)
 - [Examples: Configuring System Logging](#)

Directing System Log Messages to a Remote Machine

To direct system log messages to a remote machine, include the **host** statement at the **[edit system syslog]** hierarchy level:

```
[edit system syslog]
host (hostname | other-routing-engine) {
  facility severity;
  explicit-priority;
  facility-override facility;
  log-prefix string;
  match "regular-expression";
}
source-address source-address;
```

To direct system log messages to a remote machine, include the **host hostname** statement to specify the remote machine's IP version 4 (IPv4) address or fully qualified hostname. The remote machine must be running the standard **syslogd** utility. We do not recommend directing messages to another Juniper Networks switch. In each system log message directed to the remote machine, the hostname of the local Routing Engine appears after the timestamp to indicate that it is the source for the message.

For the list of logging facilities and severity levels to configure under the **host** statement, see [“Specifying the Facility and Severity of Messages to Include in the Log” on page 146](#).

To record facility and severity level information in each message, include the **explicit-priority** statement. For more information, see [“Including Priority Information in System Log Messages” on page 138](#).

For information about the **match** statement, see [“Using Regular Expressions to Refine the Set of Logged Messages” on page 153](#).

When directing messages to remote machines, you can include the **source-address** statement to specify the IP address of the switch that is reported in the messages as their source. In each **host** statement, you can also include the **facility-override** statement to assign an alternative facility and the **log-prefix** statement to add a string to each message.

Related Documentation

- [Overview of Single-Chassis System Logging Configuration on page 130](#)

Directing System Log Messages to a User Terminal

To direct system log messages to the terminal session of one or more specific users (or all users) when they are logged in to the local Routing Engine, include the **user** statement at the **[edit system syslog]** hierarchy level:

```
[edit system syslog]
user (username | *) {
  facility severity;
  match "regular-expression";
}
```

Specify one or more Junos OS usernames, separating multiple values with spaces, or use the asterisk (*) to indicate all users who are logged in to the local Routing Engine.

For the list of logging facilities and severity levels, see [“Specifying the Facility and Severity of Messages to Include in the Log” on page 146](#). For information about the **match** statement, see [“Using Regular Expressions to Refine the Set of Logged Messages” on page 153](#).

- Related Documentation**
- *Single-Chassis System Logging Configuration Overview*
 - *Examples: Configuring System Logging*

Directing System Log Messages to the Console

To direct system log messages to the console of the local Routing Engine, include the **console** statement at the **[edit system syslog]** hierarchy level:

```
[edit system syslog]
  console {
    facility severity;
  }
```

For the list of logging facilities and severity levels, see [“Specifying the Facility and Severity of Messages to Include in the Log” on page 146](#).

- Related Documentation**
- *Single-Chassis System Logging Configuration Overview*
 - *Examples: Configuring System Logging*

Disabling the System Logging of a Facility

To disable the logging of messages that belong to a particular facility, include the **facility none** statement in the configuration. This statement is useful when, for example, you want to log messages that have the same severity level and belong to all but a few facilities. Instead of including a statement for each facility you want to log, you can include the **any severity** statement and then a **facility none** statement for each facility that you do not want to log. For example, the following logs all messages at the **error** level or higher to the console, except for messages from the **daemon** and **kernel** facilities. Messages from those facilities are logged to the file **>/var/log/internals** instead:

```
[edit system syslog]
  console {
    any error;
    daemon none;
    kernel none;
  }
  file internals {
    daemon info;
    kernel info;
  }
```

- Related Documentation**
- *Single-Chassis System Logging Configuration Overview*

Displaying a Log File from a Single-Chassis System

To display a log file stored on a single-chassis system, enter Junos OS CLI operational mode and issue the following commands:

```
user@switch> show log log-filename
user@switch> file show log-file-pathname
```

By default, the commands display the file stored on the local Routing Engine.

The following example shows the output from the **show log messages** command:

```
user@switch1> show log messages
Nov  4 11:30:01 switch1 newsyslog[2283]: logfile turned over due to size>128K
Nov  4 11:30:01 switch1 newsyslog[2283]: logfile turned over due to size>128K
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
for Fan 1
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
for Fan 2
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
for Fan 3
...
Nov  4 11:52:53 switch1 snmpd[944]: SNMPD_HEALTH_MON_INSTANCE: Health Monitor:
jroute daemon memory usage (Management
process): new instance detected (variable: sysApp1ElmtRunMemory.5.6.2293)
Nov  4 11:52:53 switch1 snmpd[944]: SNMPD_HEALTH_MON_INSTANCE: Health Monitor:
jroute daemon memory usage (Command-line
interface): new instance detected (variable: sysApp1ElmtRunMemory.5.8.2292)
...
Nov  4 12:08:30 switch1 rpdf[957]: task_connect: task BGP_100.10.10.1.6+179 addr
10.10.1.6+179: Can't assign requested
address
Nov  4 12:08:30 switch1 rpdf[957]: bgp_connect_start: connect 10.10.1.6 (Internal
AS 100): Can't assign requested address
Nov  4 12:10:24 switch1 mgd[2293]: UI_CMDLINE_READ_LINE: User 'jsmith', command
'exit '
Nov  4 12:10:27 switch1 mgd[2293]: UI_DBASE_LOGOUT_EVENT: User 'jsmith' exiting
configuration mode
Nov  4 12:10:31 switch1 mgd[2293]: UI_CMDLINE_READ_LINE: User 'jsmith', command
'show log messages'
```

The following example shows the output from the **file show** command. The file in the pathname **/var/log/processes** has been previously configured to include messages from the daemon facility.

```
user@switch1> file show /var/log/processes
Feb 22 08:58:24 switch1 snmpd[359]: SNMPD_TRAP_WARM_START: trap_generate_warm:
SNMP trap: warm start
Feb 22 20:35:07 switch1 snmpd[359]: SNMPD_THROTTLE_QUEUE_DRAINED:
trap_throttle_timer_handler: cleared all throttled traps
Feb 23 07:34:56 switch1 snmpd[359]: SNMPD_TRAP_WARM_START: trap_generate_warm:
SNMP trap: warm start
Feb 23 07:38:19 switch1 snmpd[359]: SNMPD_TRAP_COLD_START: trap_generate_cold:
SNMP trap: cold start
...
```

Related Documentation

- [Interpreting Messages Generated in Standard Format on page 144](#)

- [Interpreting Messages Generated in Structured-Data Format on page 141](#)

Including Priority Information in System Log Messages

The facility and severity level of a message are together referred to as its *priority*. By default, messages logged in the standard Junos OS format do not include information about priority. To include priority information in standard-format messages directed to a file, include the **explicit-priority** statement at the **[edit system syslog file *filename*]** hierarchy level:

```
[edit system syslog file filename]  
facility severity;  
explicit-priority;
```



NOTE: Messages logged in structured-data format include priority information by default. If you include the **structured-data** statement at the **[edit system syslog file *filename*]** hierarchy level along with the **explicit-priority** statement, the **explicit-priority** statement is ignored and messages are logged in structured-data format.

For information about the **structured-data** statement, see *Logging Messages in Structured-Data Format*. For information about the contents of a structured-data message, see the *Junos OS System Log Reference for Security Devices*.

To include priority information in messages directed to a remote machine or the other Routing Engine, include the **explicit-priority** statement at the **[edit system syslog host (*hostname* | other-routing-engine)]** hierarchy level:

```
[edit system syslog host (hostname | other-routing-engine)]  
facility severity;  
explicit-priority;
```



NOTE: The **other-routing-engine** option does not apply to the QFX Series.

The priority recorded in a message always indicates the original, local facility name. If the **facility-override** statement is included for messages directed to a remote destination, the Junos OS system logging utility still uses the alternative facility name for the messages themselves when directing them to the remote destination. For more information, see [“Changing the Alternative Facility Name for System Log Messages Directed to a Remote Destination” on page 151](#).

When the **explicit-priority** statement is included, the Junos OS logging utility prepends codes for the facility name and severity level to the message tag name, if the message has one:

```
FACILITY-severity[-TAG]
```

(The tag is a unique identifier assigned to some Junos OS system log messages.)

In the following example, the **CHASSISD_PARSE_COMPLETE** message belongs to the **daemon** facility and is assigned severity **info** (6):

```
Aug 21 12:36:30 router1 chassisd[522]: %DAEMON-6-CHASSISD_PARSE_COMPLETE:
Using new configuration
```

When the **explicit-priority** statement is not included, the priority does not appear in the message:

```
Aug 21 12:36:30 router1 chassisd[522]: CHASSISD_PARSE_COMPLETE: Using new
configuration
```

For more information about message formatting, see the *Junos OS System Log Reference for Security Devices*.

Related Documentation

- *Single-Chassis System Logging Configuration Overview*
- *Examples: Configuring System Logging*

Including the Year or Millisecond in Timestamps

By default, the timestamp recorded in a standard-format system log message specifies the month, date, hour, minute, and second when the message was logged, as in the following example:

```
Aug 21 15:36:30
```

To include the year, the millisecond, or both, in the timestamp, include the **time-format** statement at the **[edit system syslog]** hierarchy level:

```
[edit system syslog]
time-format (year | millisecond | year millisecond);
```

The modified timestamp is used in messages directed to each destination configured by a **file**, **console**, or **user** statement at the **[edit system syslog]** hierarchy level, but not to destinations configured by a **host** statement.

The following example illustrates the format for a timestamp that includes both the millisecond (401) and the year (2010):

```
Aug 21 15:36:30.401 2010
```



NOTE: By default, messages logged in structured-data format include the year and millisecond. If you include the structured-data statement at the [edit system syslog file *filename*] hierarchy level along with the time-format statement, the time-format statement is ignored and messages are logged in structured-data format.

For information about the structured-data statement, see [“Logging Messages in Structured-Data Format” on page 140](#). For information about interpreting messages in a structured-data format, see [“Interpreting Messages Generated in Structured-Data Format” on page 141](#).

Logging Messages in Structured-Data Format

You can log messages to a file in structured-data format instead of the standard Junos OS format. The structured-data format provides more information without adding significant length, and makes it easier for automated applications to extract information from a message.

The structured-data format complies with Internet draft **draft-ietf-syslog-protocol-21.txt**. The draft establishes a standard message format regardless of the source or transport protocol for logged messages.

To output messages to a file in structured-data format, include the **structured-data** statement at the [edit system syslog file *filename*] hierarchy level:

```
[edit system syslog file filename]  
  facility severity;  
  structured-data {  
    brief;  
  }
```

The optional **brief** statement suppresses the English-language text that appears by default at the end of a message to describe the error or event. For information about the fields in a structured-data-format message, see [“Interpreting Messages Generated in Structured-Data Format” on page 141](#).

The structured format is used for all messages logged to the file that are generated by a Junos OS process or software library.



NOTE: If you include either or both of the explicit-priority and time-format statements along with the structured-data statement, they are ignored. These statements apply to the standard Junos OS system log format, not to structured-data format.

Interpreting Messages Generated in Structured-Data Format

By default, Junos OS processes and software libraries write messages to the system log file in structured-data format. For information about the **structured-data** statement, see *Logging Messages in Structured-Data Format*.

Structured-format makes it easier for automated applications to extract information from the message. In particular, the standardized format for reporting the value of variables (elements in the English-language message that vary depending on the circumstances that triggered the message) makes it easy for an application to extract those values.

The structured-data format for a message includes the following fields (which appear here on two lines only for legibility):

```
<priority code>version timestamp hostname process processID TAG [junos@2636.platform
variable-value-pairs] message-text
```

Table 24 on page 141 describes the fields. If the system logging utility cannot determine the value in a particular field, a hyphen (-) appears instead.

Table 24: Fields in Structured-Data Messages

Field	Description	Examples
<priority code>	Number that indicates the facility and severity of a message. It is calculated by multiplying the facility number by 8 and then adding the numerical value of the severity. For a mapping of the numerical codes to facility and severity, see “Specifying the Facility and Severity of Messages to Include in the Log” on page 146 .	<165> for a message from the pfe facility (facility=20) with severity notice (severity=5).
version	Version of the Internet Engineering Task Force (IETF) system logging protocol specification.	1 for the initial version
timestamp	Time when the message was generated, in one of two representations: <ul style="list-style-type: none"> YYYY-MM-DDTHH:MM:SS.MSZ is the year, month, day, hour, minute, second and millisecond in Universal Coordinated Time (UTC) YYYY-MM-DDTHH:MM:SS.MS+/-HH:MM is the year, month, day, hour, minute, second and millisecond in local time; the hour and minute that follows the plus sign (+) or minus sign (-) is the offset of the local time zone from UTC 	2007-02-15T09:17:15.719Z is 9:17 AM UTC on 15 February 2007. 2007-02-15T01:17:15.719-08:00 is the same timestamp expressed as Pacific Standard Time in the United States.
hostname	Name of the host that originally generated the message.	switch1

Table 24: Fields in Structured-Data Messages (*continued*)

Field	Description	Examples
<i>process</i>	Name of the Junos OS process that generated the message.	mgd
<i>processID</i>	UNIX process ID (PID) of the Junos process that generated the message.	3046
<i>TAG</i>	Junos OS system log message tag, which uniquely identifies the message.	UI_DBASE_LOGOUT_EVENT
<i>junos@2636.platform</i>	An identifier for the type of hardware platform that generated the message. The junos@2636 prefix indicates that the platform runs the Junos OS. It is followed by a dot-separated numerical identifier for the platform type.	junos@2636.1.1.1.2.18
<i>variable-value-pairs</i>	A variable-value pair for each element in the <i>message-text</i> string that varies depending on the circumstances that triggered the message. Each pair appears in the format <i>variable</i> = " <i>value</i> ".	username="regress"
<i>message-text</i>	English-language description of the event or error (omitted if the brief statement is included at the [edit system syslog file <i>filename</i> structured-data] hierarchy level).	User 'regress' exiting configuration mode

By default, the structured-data version of a message includes English text at the end, as in the following example (which appears on multiple lines only for legibility):

```
<165>1 2007-02-15T09:17:15.719Z router1 mgd 3046 UI_DBASE_LOGOUT_EVENT
[junos@2636.1.1.1.2.18 username="regress"] User 'regress' exiting configuration mode
```

When the brief statement is included at the [edit system syslog file *filename* structured-data] hierarchy level, the English text is omitted, as in this example:

```
<165>1 2007-02-15T09:17:15.719Z router1 mgd 3046 UI_DBASE_LOGOUT_EVENT
[junos@2636.1.1.1.2.18 username="regress"]
```

Table 25 on page 143 maps the codes that appear in the *priority-code* field to facility and severity level.



NOTE: Not all of the facilities and severities listed in Table 25 on page 143 can be included in statements at the [edit system syslog] hierarchy level (some are used by internal processes). For a list of the facilities and severity levels that can be included in the configuration, see “Specifying the Facility and Severity of Messages to Include in the Log” on page 146.

Table 25: Facility and Severity Codes in the priority-code Field

Facility (number)	Severity emergency	alert	critical	error	warning	notice	info	debug
kernel (0)	1	1	2	3	4	5	6	7
user (1)	8	9	10	11	12	13	14	15
mail (2)	16	17	18	19	20	21	22	23
daemon (3)	24	25	26	27	28	29	30	31
authorization (4)	32	33	34	35	36	37	38	39
syslog (5)	40	41	42	43	44	45	46	47
printer (6)	48	49	50	51	52	53	54	55
news (7)	56	57	58	59	60	61	62	63
uucp (8)	64	65	66	67	68	69	70	71
clock (9)	72	73	74	75	76	77	78	79
authorization-private (10)	80	81	82	83	84	85	86	87
ftp (11)	88	89	90	91	92	93	94	95
ntp (12)	96	97	98	99	100	101	102	103
security (13)	104	105	106	107	108	109	110	111
console (14)	112	113	114	115	116	117	118	119
local0 (16)	128	129	130	131	132	133	134	135
dfc (17)	136	137	138	139	140	141	142	143
local2 (18)	144	145	146	147	148	149	150	151
firewall (19)	152	153	154	155	156	157	158	159
pfe (20)	160	161	162	163	164	165	166	167
conflict-log (21)	168	169	170	171	172	173	174	175
change-log (22)	176	177	178	179	180	181	182	183
interactive-commands (23)	184	185	186	187	188	189	190	191

Interpreting Messages Generated in Standard Format

The syntax of a standard-format message generated by a Junos OS process or subroutine library depends on whether it includes priority information:

- When the **explicit-priority** statement is included at the `[edit system syslog file filename]` or `[edit system syslog host hostname]` hierarchy level, a system log message has the following syntax:

```
timestamp message-source: %facility-severity-TAG: message-text
```

- When directed to the console or to users, or when the **explicit-priority** statement is not included for files or remote hosts, a system log message has the following syntax:

```
timestamp message-source: TAG: message-text
```

Table 26 on page 144 describes the message fields.

Table 26: Fields in Standard-Format Messages

Field	Description
<i>timestamp</i>	Time at which the message was logged.
<i>message-source</i>	Identifier of the process or component that generated the message and the routing platform on which the message was logged. This field includes two or more subfields: hostname, process and process ID (PID). If the process does not report its PID, the PID is not displayed. The message source subfields are displayed in the following format: <i>hostname process[process-ID]</i>
<i>facility</i>	Code that specifies the facility to which the system log message belongs. For a mapping of codes to facility names, see Table: Facility Codes Reported in Priority Information in “Including Priority Information in System Log Messages” on page 138.
<i>severity</i>	Numerical code that represents the severity level assigned to the system log message. For a mapping of codes to severity names, see Table: Numerical Codes for Severity Levels Reported in Priority Information in “Including Priority Information in System Log Messages” on page 138.
<i>TAG</i>	Text string that uniquely identifies the message, in all uppercase letters and using the underscore (_) to separate words. The tag name begins with a prefix that indicates the generating software process or library. The entries in this reference are ordered alphabetically by this prefix. Not all processes on a routing platform use tags, so this field does not always appear.
<i>message-text</i>	Text of the message.

Specifying Log File Size, Number, and Archiving Properties

To prevent log files from growing too large, by default the Junos OS system logging utility writes messages to a sequence of files of a defined size. The files in the sequence are referred to as *archive* files to distinguish them from the *active* file to which messages are currently being written. The default maximum size depends on the platform type:

- 128 kilobytes (KB) for EX Series switches
- 1 megabyte (MB) for M Series, MX Series, and T Series routers
- 10 MB for TX Matrix or TX Matrix Plus routers
- 1 MB for the QFX Series

When an active log file called **logfile** reaches the maximum size, the logging utility closes the file, compresses it, and names the compressed archive file **logfile.0.gz**. The logging utility then opens and writes to a new active file called **logfile**. This process is also known as file rotation. When the new **logfile** reaches the configured maximum size, **logfile.0.gz** is renamed **logfile.1.gz**, and the new **logfile** is closed, compressed, and renamed **logfile.0.gz**. By default, the logging utility creates up to 10 archive files in this manner. When the maximum number of archive files is reached and when the size of the active file reaches the configured maximum size, the contents of the last archived file are overwritten by the current active file. The logging utility by default also limits the users who can read log files to the **root** user and users who have Junos OS **maintenance** permission.

Junos OS provides a configuration statement **log-rotate-frequency** that configures the system log file rotation frequency by configuring the time interval for checking the log file size. The frequency can be set to a value of 1 minute through 59 minutes. The default frequency is 15 minutes.

To configure the log rotation frequency, include the **log-rotate-frequency** statement at the **[edit system syslog]** hierarchy level.

You can include the **archive** statement to change the maximum size of each file, how many archive files are created, and who can read log files.

To configure values that apply to all log files, include the **archive** statement at the **[edit system syslog]** hierarchy level:

```
archive <files number> <size size> <world-readable | no-world-readable>;
```

To configure values that apply to a specific log file, include the **archive** statement at the **[edit system syslog file filename]** hierarchy level:

```
archive <archive-sites (ftp-url <password password>)> <files number> <size size>
  <start-time "YYYY-MM-DD.hh:mm"> <transfer-interval minutes> <world-readable |
  no-world-readable>;
```

archive-sites site-name specifies a list of archive sites that you want to use for storing files. The **site-name** value is any valid FTP URL to a destination. If more than one site name is configured, a list of archive sites for the system log files is created. When a file is archived, the router or switch attempts to transfer the file to the first URL in the list,

moving to the next site only if the transfer does not succeed. The log file is stored at the archive site with the specified log filename. For information about how to specify valid FTP URLs, see [Format for Specifying Filenames and URLs in Junos OS CLI Commands](#).

binary-data Mark file as containing binary data. This allows proper archiving of binary files, such as WTMP files (login records for UNIX based systems). To restore the default setting, include the **no-binary-data** statement.

files *number* specifies the number of files to create before the oldest file is overwritten. The value can be from 1 through 1000.

size *size* specifies the maximum size of each file. The value can be from 64 KB (64k) through 1 gigabyte (1g); to represent megabytes, use the letter **m** after the integer. There is no space between the digits and the **k**, **m**, or **g** units letter.

start-time "YYYY-MM-DD.hh:mm" defines the date and time in the local time zone for a one-time transfer of the active log file to the first reachable site in the list of sites specified by the **archive-sites** statement.

transfer-interval *interval* defines the amount of time the current log file remains open (even if it has not reached the maximum possible size) and receives new statistics before it is closed and transferred to an archive site. This interval value can be from 5 through 2880 minutes.

world-readable enables all users to read log files. To restore the default permissions, include the **no-world-readable** statement.

**Related
Documentation**

- *Single-Chassis System Logging Configuration Overview*
- *Examples: Configuring System Logging*
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

Specifying the Facility and Severity of Messages to Include in the Log

Each system log message belongs to a facility, which groups together messages that either are generated by the same source (such as a software process) or concern a similar condition or activity (such as authentication attempts). Each message is also preassigned a *severity level*, which indicates how seriously the triggering event affects routing platform functions.

When you configure logging for a facility and destination, you specify a severity level for each facility. Messages from the facility that are rated at that level and higher are logged to the following destination:

```
[edit system syslog]
(console | file filename | host destination | user username) {
  facility severity ;
}
```

For more information about the destinations, see [“Directing System Log Messages to a User Terminal” on page 135](#), and, [“Directing System Log Messages to the Console” on page 136](#).

To log messages belonging to more than one facility to a particular destination, specify each facility and associated severity as a separate statement within the set of statements for the destination.

[Table 27 on page 147](#) lists the Junos OS system logging facilities that you can specify in configuration statements at the **[edit system syslog]** hierarchy level.

Table 27: Junos OS System Logging Facilities

Facility	Type of Event or Error
any	All (messages from all facilities)
authorization	Authentication and authorization attempts
change-log	Changes to the Junos OS configuration
conflict-log	Specified configuration is invalid on the router type
daemon	Actions performed or errors encountered by system processes
dfc	Events related to dynamic flow capture
firewall	Packet filtering actions performed by a firewall filter
ftp	Actions performed or errors encountered by the FTP process
interactive-commands	Commands issued at the Junos OS command-line interface (CLI) prompt or by a client application such as a Junos XML protocol or NETCONF XML client
kernel	Actions performed or errors encountered by the Junos OS kernel
pfe	Actions performed or errors encountered by the Packet Forwarding Engine
user	Actions performed or errors encountered by user-space processes

[Table 28 on page 148](#) lists the severity levels that you can specify in configuration statements at the **[edit system syslog]** hierarchy level. The levels from **emergency** through **info** are in order from highest severity (greatest effect on functioning) to lowest.

Unlike the other severity levels, the **none** level disables logging of a facility instead of indicating how seriously a triggering event affects routing functions. For more information, see [“Disabling the System Logging of a Facility” on page 136](#).

Table 28: System Log Message Severity Levels

Severity Level	Description
any	Includes all severity levels
none	Disables logging of the associated facility to a destination
emergency	System panic or other condition that causes the router to stop functioning
alert	Conditions that require immediate correction, such as a corrupted system database
critical	Critical conditions, such as hard errors
error	Error conditions that generally have less serious consequences than errors at the emergency, alert, and critical levels
warning	Conditions that warrant monitoring
notice	Conditions that are not errors but might warrant special handling
info	Events or nonerror conditions of interest

Related Documentation

- [Junos OS System Logging Facilities and Message Severity Levels on page 148](#)
- [Single-Chassis System Logging Configuration Overview](#)
- [Examples: Configuring System Logging](#)

Junos OS System Logging Facilities and Message Severity Levels

Table 27 on page 147 lists the Junos OS system logging facilities that you can specify in configuration statements at the **[edit system syslog]** hierarchy level.

Table 29: Junos OS System Logging Facilities

Facility	Type of Event or Error
any	All (messages from all facilities)
authorization	Authentication and authorization attempts
change-log	Changes to the Junos OS configuration
conflict-log	Specified configuration is invalid on the router type
daemon	Actions performed or errors encountered by system processes
dfc	Events related to dynamic flow capture

Table 29: Junos OS System Logging Facilities (*continued*)

Facility	Type of Event or Error
firewall	Packet filtering actions performed by a firewall filter
ftp	Actions performed or errors encountered by the FTP process
interactive-commands	Commands issued at the Junos OS command-line interface (CLI) prompt or by a client application such as a Junos XML protocol or NETCONF XML client
kernel	Actions performed or errors encountered by the Junos OS kernel
pfe	Actions performed or errors encountered by the Packet Forwarding Engine
user	Actions performed or errors encountered by user-space processes

Table 28 on page 148 lists the severity levels that you can specify in configuration statements at the **[edit system syslog]** hierarchy level. The levels from **emergency** through **info** are in order from highest severity (greatest effect on functioning) to lowest.

Unlike the other severity levels, the **none** level disables logging of a facility instead of indicating how seriously a triggering event affects routing functions. For more information, see “Disabling the System Logging of a Facility” on page 136.

Table 30: System Log Message Severity Levels

Severity Level	Description
any	Includes all severity levels
none	Disables logging of the associated facility to a destination
emergency	System panic or other condition that causes the router to stop functioning
alert	Conditions that require immediate correction, such as a corrupted system database
critical	Critical conditions, such as hard errors
error	Error conditions that generally have less serious consequences than errors at the emergency, alert, and critical levels
warning	Conditions that warrant monitoring
notice	Conditions that are not errors but might warrant special handling
info	Events or nonerror conditions of interest

- Related Documentation**
- [Single-Chassis System Logging Configuration Overview](#)
 - [Examples: Configuring System Logging](#)

Default Facilities for System Log Messages Directed to a Remote Destination

Table 31 on page 150 lists the default alternative facility name next to the Junos OS-specific facility name for which it is used. For facilities that are not listed, the default alternative name is the same as the local facility name.

Table 31: Default Facilities for Messages Directed to a Remote Destination

Junos OS–Specific Local Facility	Default Facility When Directed to Remote Destination
change-log	local6
conflict-log	local5
dfc	local1
firewall	local3
interactive-commands	local7
pfe	local4

- Related Documentation**
- [Single-Chassis System Logging Configuration Overview](#)

Junos OS System Log Alternate Facilities for Remote Logging

Table 32 on page 150 lists the facilities that you can specify in the **facility-override** statement.

Table 32: Facilities for the facility-override Statement

Facility	Description
authorization	Authentication and authorization attempts
daemon	Actions performed or errors encountered by system processes
ftp	Actions performed or errors encountered by the FTP process
kernel	Actions performed or errors encountered by the Junos OS kernel
local0	Local facility number 0
local1	Local facility number 1

Table 32: Facilities for the facility-override Statement (*continued*)

Facility	Description
local2	Local facility number 2
local3	Local facility number 3
local4	Local facility number 4
local5	Local facility number 5
local6	Local facility number 6
local7	Local facility number 7
user	Actions performed or errors encountered by user-space processes

We do not recommend including the **facility-override** statement at the **[edit system syslog host other-routing-engine]** hierarchy level. It is not necessary to use alternative facility names when directing messages to the other Routing Engine, because its Junos OS system logging utility can interpret the Junos OS-specific names.

Related Documentation

- *Examples: Assigning an Alternative Facility to System Log Messages Directed to a Remote Destination*
- *Single-Chassis System Logging Configuration Overview*

Changing the Alternative Facility Name for System Log Messages Directed to a Remote Destination

Some facilities assigned to messages logged on the local router or switch have Junos OS-specific names (see “[Junos OS System Logging Facilities and Message Severity Levels](#)” on page 148). In the recommended configuration, a remote machine designated at the **[edit system syslog host *hostname*]** hierarchy level is not a Juniper Networks router or switch, so its syslogd utility cannot interpret the Junos OS-specific names. To enable the standard syslogd utility to handle messages from these facilities when messages are directed to a remote machine, a standard **localX** facility name is used instead of the Junos OS-specific facility name.

[Table 31 on page 150](#) lists the default alternative facility name next to the Junos OS-specific facility name it is used for.

The syslogd utility on a remote machine handles all messages that belong to a facility in the same way, regardless of the source of the message (the Juniper Networks router or switch or the remote machine itself). For example, the following statements in the configuration of the router called **local-router** direct messages from the **authorization** facility to the remote machine *monitor.mycompany.com*:

```
[edit system syslog]
```

```
host monitor.mycompany.com {  
    authorization info;  
}
```

The default alternative facility for the local **authorization** facility is also **authorization**. If the syslogd utility on **monitor** is configured to write messages belonging to the **authorization** facility to the file `/var/log/auth-attempts`, then the file contains the messages generated when users log in to **local-router** and the messages generated when users log in to **monitor**. Although the name of the source machine appears in each system log message, the mixing of messages from multiple machines can make it more difficult to analyze the contents of the **auth-attempts** file.

To make it easier to separate the messages from each source, you can assign an alternative facility to all messages generated on **local-router** when they are directed to **monitor**. You can then configure the syslogd utility on **monitor** to write messages with the alternative facility to a different file from messages generated on **monitor** itself.

To change the facility used for all messages directed to a remote machine, include the **facility-override** statement at the `[edit system syslog host hostname]` hierarchy level:

```
[edit system syslog host hostname]  
    facility severity;  
    facility-override facility;
```

In general, it makes sense to specify an alternative facility that is not already in use on the remote machine, such as one of the **localX** facilities. On the remote machine, you must also configure the syslogd utility to handle the messages in the desired manner.

[Table 32 on page 150](#) lists the facilities that you can specify in the **facility-override** statement.

We do not recommend including the **facility-override** statement at the `[edit system syslog host other-routing-engine]` hierarchy level. It is not necessary to use alternative facility names when directing messages to the other Routing Engine, because its Junos OS system logging utility can interpret the Junos OS-specific names.

The following example shows how to log all messages generated on the local router at the error level or higher to the local0 facility on the remote machine called **monitor.mycompany.com**:

```
[edit system syslog]  
host monitor.mycompany.com {  
    any error;  
    facility-override local0;  
}
```

The following example shows how to configure routers located in California and routers located in New York to send messages to a single remote machine called **central-logger.mycompany.com**. The messages from California are assigned to alternative facility **local0** and the messages from New York are assigned to alternative facility **local2**.

- Configure California routers to aggregate messages in the local0 facility:

```
[edit system syslog]  
host central-logger.mycompany.com {
```

```
change-log info;
facility-override local0;
}
```

- Configure New York routers to aggregate messages in the local2 facility:

```
[edit system syslog]
host central-logger.mycompany.com {
  change-log info;
  facility-override local2;
}
```

On central-logger, you can then configure the system logging utility to write messages from the local0 facility to the file **change-log** and the messages from the local2 facility to the file **new-york-config**.

Related Documentation

- [Table 31 on page 150](#)
- [Alternate Facilities for System Log Messages Directed to a Remote Destination on page 150](#)
- *Examples: Assigning an Alternative Facility to System Log Messages Directed to a Remote Destination*

Using Regular Expressions to Refine the Set of Logged Messages

The predefined facilities group together related messages, but you can also use regular expression matching to specify more exactly which messages from a facility are logged to a file, a user terminal, or a remote destination.

To specify the text string that must (or must not) appear in a message for the message to be logged to a destination, include the **match** statement and specify the regular expression which the text string must match:

```
match "regular-expression";
```

You can include this statement at the following hierarchy levels:

- **[edit system syslog file *filename*]** (for a file)
- **[edit system syslog user (*username* | *)]** (for a specific user session or for all user sessions on a terminal)
- **[edit system syslog host (*hostname* | other-routing-engine)]** (for a remote destination)

In specifying the regular expression, use the notation defined in POSIX Standard 1003.2 for extended (modern) UNIX regular expressions. Explaining regular expression syntax is beyond the scope of this document, but POSIX standards are available from the Institute of Electrical and Electronics Engineers (IEEE, <http://www.ieee.org>).

[Table 33 on page 154](#) specifies which character or characters are matched by some of the regular expression operators that you can use in the match statement. In the descriptions, the term *term* refers to either a single alphanumeric character or a set of characters enclosed in square brackets, parentheses, or braces.



NOTE: The match statement is not case-sensitive.

Table 33: Regular Expression Operators for the match Statement

Operator	Matches
. (period)	One instance of any character except the space.
* (asterisk)	Zero or more instances of the immediately preceding term.
+ (plus sign)	One or more instances of the immediately preceding term.
? (question mark)	Zero or one instance of the immediately preceding term.
(pipe)	One of the terms that appears on either side of the pipe operator.
! (exclamation point)	Any string except the one specified by the expression, when the exclamation point appears at the start of the expression. Use of the exclamation point is Junos OS-specific.
^ (caret)	Start of a line, when the caret appears outside square brackets. One instance of any character that does not follow it within square brackets, when the caret is the first character inside square brackets.
\$ (dollar sign)	End of a line.
[] (paired square brackets)	One instance of one of the enclosed alphanumeric characters. To indicate a range of characters, use a hyphen (-) to separate the beginning and ending characters of the range. For example, [a-z0-9] matches any letter or number.
() (paired parentheses)	One instance of the evaluated value of the enclosed term. Parentheses are used to indicate the order of evaluation in the regular expression.

Using Regular Expressions

Filter messages that belong to the **interactive-commands** facility, directing those that include the string **configure** to the terminal of the root user:

```
[edit system syslog]
user root {
  interactive-commands any;
  match ".*configure.*";
}
```

Messages like the following appear on the **root** user's terminal when a user issues a **configure** command to enter configuration mode:

```
timestamp router-name mgd[PID]: UI_CMDLINE_READ_LINE: User 'user', command
'configure private'
```

Filter messages that belong to the **daemon** facility and have a severity of **error** or higher, directing them to the file **/var/log/process-errors**. Omit messages generated by the SNMP process (**snmpd**), instead directing them to the file **/var/log/snmpd-errors**:

```
[edit system syslog]
file process-errors {
  daemon error;
  match "!(.*snmpd.*)";
}
file snmpd-errors {
  daemon error;
  match ".*snmpd.*";
}
```

- Related Documentation**
- *Single-Chassis System Logging Configuration Overview*
 - *Examples: Configuring System Logging*

Managing Host OS System Log and Core Files

On Junos OS switches with a host OS, the Junos OS might generate system log messages (also called *syslog messages*) to record events that occur on the switch, including the following:

- Routine operations, such as a user login into the configuration database.
- Failure and error conditions.
- Emergency or critical conditions, such as power-down of the switch due to excessive temperature.

On OCX Series switches:

- System log messages are logged in the **/var/log/dcpfe.log** file in the host OS in the following scenarios:
 - When the forwarding daemon is initialized.
 - Messages are tagged as emergency (LOG_EMERG). A copy of the message is also sent to the **/var/log** directory on the switch.
- Messages from processes are available on the host system in the **/var/log** directory. System log messages from the host chassis management process are recorded in the **lcmd.log** file in the **/var/log** directory.

On QFX switches with a host OS:

- The Junos OS and host OS record log messages for system and process events, and generate core files upon certain system failures.
- These files are stored in directories such as **/var/log** for log messages, and **/var/tmp** or **/var/crash** for core files, depending on the type of host OS running on the switch.

For diagnostic purposes, you can access these host OS system log and core files from the Junos OS CLI on the switch. You can also clean up directories where the host OS stores temporary log and other files.

This topic includes these sections:

- [Viewing Log Files On the Host OS System on page 156](#)
- [Copying Log Files From the Host System To the Switch on page 156](#)
- [Viewing Core Files On the Host OS System on page 156](#)
- [Copying Core Files From the Host System To the Switch on page 156](#)
- [Cleaning Up Temporary Files on the Host OS on page 157](#)

Viewing Log Files On the Host OS System

To view a list of the log files created on the host OS, enter the following command:

```
user@switch> show app-engine logs
```

Copying Log Files From the Host System To the Switch

To copy log files from the host OS to the switch, enter the following command:

```
user@switch> request app-engine file-copy log from-jhost source to-vjunos destination
```

For example, to copy the *lcmd log* file to the switch, enter the following command:

```
user@switch> request app-engine file-copy log from-jhost lcmd.log to-vjunos /var/tmp
```

Viewing Core Files On the Host OS System

To view the list of core files generated and stored on the host OS system, enter the following command:

```
user@switch> show app-engine crash
```

The list might look like this example output:

```
Compute cluster: default-cluster
Compute node: default-node

Crash Info
=====
total 13480
-rw-r--r-- 1 root root 178046 Feb 14 23:08 localhost.lcmd.26653.1455520135.core.tgz

-rw-r--r-- 1 root root 4330343 Feb 15 00:45 localhost.dcpfe.7155.1455525926.core.tgz

-rw-r--r-- 1 root root 4285901 Feb 15 01:49 localhost.dcpfe.25876.1455529782.core.tgz

-rw-r--r-- 1 root root 4288508 Feb 15 02:39 localhost.dcpfe.713.1455532774.core.tgz
-rw-r--r-- 1 root root 264079 Feb 15 17:02 localhost.lcmd.1144.1455584540.core.tgz
```

Copying Core Files From the Host System To the Switch

To copy core files from the host OS to the switch, enter the following command:


```
user@switch> request app-engine file-copy crash from-jhost source to-vjunos
destination-dir-or-file-path
```

When the destination Junos OS path is a directory, the source filename is used by default. To rename the file at the destination, enter the destination argument as a full path including the desired filename.

For example, to copy the *localhost.lcmd.26653.1455520135.core.tgz* core archive file to the switch, enter the following command:

```
user@switch> request app-engine file-copy crash from-jhost
localhost.lcmd.26653.1455520135.core.tgz to-vjunos /var/tmp
```

To see the results on the switch, enter the following command:

```
user@switch> show system core-dumps
re0:
-----
-rw-r--r-- 1 root field 178046 Feb 15 17:15
/var/tmp/localhost.lcmd.26653.1455520135.core.tgz
total files: 1
```

Cleaning Up Temporary Files on the Host OS

To remove temporary files created on the host OS, enter the following command:

```
user@switch> request app-engine cleanup
```

For example, the following sample output on a switch with a Linux host OS shows cleanup of temporary files stored in */var/tmp*:

```
Compute cluster: default-cluster
```

```
Compute node: default-node
```

```
Cleanup (/var/tmp)
=====
```

Related Documentation

- [Overview of Junos OS System Log Messages on page 130](#)

Monitoring System Log Messages

Purpose Display system log messages about the QFX Series. By looking through a system log file for any entries pertaining to the interface that you are interested in, you can further investigate a problem with an interface on the switch.

Action To view system log messages:

```
user@switch1> show log messages
```

Sample Output

```
Nov  4 11:30:01 switch1 newsyslog[2283]: logfile turned over due to size>128K
Nov  4 11:30:01 switch1 newsyslog[2283]: logfile turned over due to size>128K
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
```

```
for Fan 1
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
for Fan 2
Nov  4 11:30:06 switch1 chassism[952]: CM ENV Monitor: set fan speed is 65 percent
for Fan 3
...
Nov  4 11:52:53 switch1 snmpd[944]: SNMPD_HEALTH_MON_INSTANCE: Health Monitor:
jroute daemon
memory usage (Management process): new instance detected (variable:
sysApp1ElmtRunMemory.5.6.2293)
Nov  4 11:52:53 switch1 snmpd[944]: SNMPD_HEALTH_MON_INSTANCE: Health Monitor:
jroute daemon
memory usage (Command-line interface): new instance detected (variable:
sysApp1ElmtRunMemory.5.8.2292)
...
Nov  4 12:10:24 switch1 mgd[2293]: UI_CMDLINE_READ_LINE: User 'jsmith', command
'exit '
Nov  4 12:10:27 switch1 mgd[2293]: UI_DBASE_LOGOUT_EVENT: User 'jsmith' exiting
configuration mode
Nov  4 12:10:31 switch1 mgd[2293]: UI_CMDLINE_READ_LINE: User 'jsmith', command
'show log messages'
```

Meaning The sample output shows the following entries in the **messages** file:

- A new log file was created when the previous file reached the maximum size of 128 kilobytes (KB).
- The fan speed for Fan 1, 2, and 3 is set at 65 percent.
- Health monitoring activity is detected.
- CLI commands were entered by the user jsmith.

**Related
Documentation**

- [Overview of Junos OS System Log Messages on page 130](#)
- [Understanding the Implementation of System Log Messages on the QFabric System](#)
- [Example: Configuring System Log Messages on page 161](#)
- [clear log](#)
- [show log on page 386](#)
- [syslog on page 306](#)

Examples: Configuring System Logging

The system log provides an excellent way of tracking all management activity on the switch by recording events such as user authentication, access authorization, and command execution. Logged command executions include commands entered by users at the CLI prompt or by client applications such as the Junos XML protocol or NETCONF XML client. Because system log files contain information about commands executed on the switch and the user who executed the commands, checking system log files for failed authentication events can help identify attempts to hack in to the switch. You can also analyze network activity by correlating executed commands with events and changes that occurred on the network at a particular time.

System log files are stored locally on the switch in the default `/var/log` directory.

The following example shows how to configure system log messages to record all commands entered by users and all authentication or authorization attempts. Logged commands include those entered by users at the CLI prompt and by client applications. Authentication and authorization attempts include events that are saved in the file named `cli-commands` and those that are sent to the terminal of a user who is logged in.

```
[edit system]
syslog {
  file cli-commands {
    interactive-commands info;
    authorization info;
  }
  user * {
    interactive-commands info;
    authorization info;
  }
}
```

The following example shows how to log all alarms state changes to the file `/var/log/alarms`:

```
[edit system]
syslog {
  file alarms {
    kernel warning;
  }
}
```

The following example shows how to configure the handling of messages of various types, as described in the comments. Information is logged to two files, to the terminal of user alex, to a remote machine, and to the console:

```
[edit system]
syslog {
  /* write all security-related messages to file /var/log/security */
  file security {
    authorization info;
    interactive-commands info;
  }
  /* write messages about potential problems to file /var/log/messages: */
  /* messages from "authorization" facility at level "notice" and above, */
  /* messages from all other facilities at level "warning" and above */
  file messages {
    authorization notice;
    any warning;
  }
  /* write all messages at level "critical" and above to terminal of user
  "alex" if */
  /* that user is logged in */
  user alex {
    any critical;
  }
}
```

```
/* write all messages from the &ldquo;daemon&rdquo; facility at level &ldquo;info&rdquo;
and above, and */
/* messages from all other facilities at level &ldquo;warning&rdquo; and above, to the
*/
/* machine monitor.mycompany.com */
host monitor.mycompany.com {
    daemon info;
    any warning;
}
/* write all messages at level &ldquo;error&rdquo; and above to the system console */
console {
    any error;
}
}
```

The following example shows how to configure the handling of messages generated when users issue Junos OS CLI commands, by specifying the interactive-commands facility at the info, notice, and warning severity levels:

```
[edit system]
file user-actions {
    interactive-commands info;
}
user philip {
    interactive-commands notice;
}
console {
    interactive-commands warning;
}
}
```

The following list describes the security levels used in the example:

- **info**—Logs a message when users issue any command at the CLI operational or configuration mode prompt. The example writes the messages to the file `/var/log/user-actions`.
- **notice**—Logs a message when users issue the configuration mode command **commit**. The example writes the messages to the terminal of user philip.
- **warning**—Logs a message when users issue a command that restarts a software process. The example writes the messages to the console.

Related Documentation

- [Overview of Single-Chassis System Logging Configuration on page 130](#)

Examples: Assigning an Alternative Facility

This topic contains examples of configuring system log messages to use an alternative facility for logging.

The following example shows how to log all messages generated on the switch at the **error** level or higher to the **local0** facility on the remote host called **monitor.mycompany.com**:

```
[edit system syslog]
host monitor.mycompany.com {
  any error;
  facility-override local0;
}
```

The following example contains two sets of statements that show how to configure switches located in California and in New York to send messages to a single remote host called **central-logger.mycompany.com**. The messages from California are assigned to alternative facility **local0** and the messages from New York are assigned to alternative facility **local2**.

- The following statements configure the California switch to aggregate messages in the **local0** facility:

```
[edit system syslog]
host central-logger.mycompany.com {
  change-log info;
  facility-override local0;
}
```

- The following statements configure the New York switch to aggregate messages in the **local2** facility:

```
[edit system syslog]
host central-logger.mycompany.com {
  change-log info;
  facility-override local2;
}
```

On the remote host named **central-logger** you can subsequently configure the system logging utility to write messages from the **local0** facility to one file (for example, **california-config**) and the messages from the **local2** facility to another file (for example, **new-york-config**).

Related Documentation

- [Alternate Facilities for System Log Messages Directed to a Remote Destination on page 150](#)

Example: Configuring System Log Messages

The QFabric system monitors events that occur on its component devices and distributes system log messages about those events to all external system log message servers (hosts) that are configured. Component devices may include Node devices, Interconnect devices, Director devices, and the Virtual Chassis. Messages are stored for viewing only in the QFabric system database. To view the messages, issue the **show log** command.

This example describes how to configure system log messages on the QFabric system.

- [Requirements on page 162](#)
- [Overview on page 162](#)
- [Configuration on page 162](#)

Requirements

This example uses the following hardware and software components:

- Junos OS Release 12.2
- QFabric system
- External servers that can be configured as system log message hosts

Overview

Component devices that generate system log message events may include Node devices, Interconnect devices, Director devices, and the control plane switches. The following configuration example includes these components in the QFabric system:

- Director software running on the Director group
- Control plane switches
- Interconnect device
- Multiple Node devices

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set system syslog host 10.1.1.12 any error
set system syslog file qflogs
set system syslog file qflogs structured-data brief
set system syslog file qflogs archive size 1g
```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure system messages from the QFabric Director device:

1. Specify a host, any facility, and the **error** severity level.

```
[edit system syslog]
user@switch# set host 10.1.1.12 any error
```



NOTE: You can configure more than one system log message server (host). The QFabric system sends the messages to each server configured.

2. (Optional) Specify a filename to capture log messages.



NOTE: On the QFabric system, a syslog file named **messages** is configured implicitly with facility and severity levels of **any any** and a file size of 100 MBs. Therefore, you cannot specify the filename **messages** in your configuration, and automatic command completion does not work for that filename.

```
[edit system syslog]
user@switch# set file qflogs structured-data brief
user@switch# set file qflogs
```

3. (Optional) Configure the maximum size of your system log message archive file. This example specifies an archive size of 1 GB.

```
[edit system syslog]
user@switch# set file qflogs archive size 1g
```

Results From configuration mode, confirm your configuration by entering the **show system** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
user@switch# show system
syslog {
  file qflogs {
  }
  host 10.1.1.12 {
    any error;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

- Related Documentation**
- *Understanding the Implementation of System Log Messages on the QFabric System*
 - *syslog (QFabric System)*
 - [show log on page 386](#)

PART 3

Configuration Statements

- [Network Management on page 167](#)
- [Automation on page 175](#)
- [sFlow Technology on page 193](#)
- [SNMP on page 203](#)
- [System Logging on page 293](#)

CHAPTER 8

Network Management

- [connection-limit on page 168](#)
- [destination-override on page 169](#)
- [no-remote-trace on page 169](#)
- [protocol-version on page 170](#)
- [rate-limit on page 171](#)
- [ssh on page 172](#)
- [telnet on page 173](#)
- [tracing on page 174](#)

connection-limit

Syntax	<code>connection-limit <i>limit</i>;</code>
Hierarchy Level	<code>[edit system services finger],</code> <code>[edit system services ftp],</code> <code>[edit system services netconf ssh],</code> <code>[edit system services ssh],</code> <code>[edit system services telnet],</code> <code>[edit system services xnm-clear-text],</code> <code>[edit system services xnm-ssl]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure the maximum number of connections sessions for each type of system services (finger, ftp, ssh, telnet, xnm-clear-text, or xnm-ssl) per protocol (either IPv6 or IPv4).
Options	<p>limit—(Optional) Maximum number of established connections per protocol (either IPv6 or IPv4).</p> <p>Range: 1 through 250</p> <p>Default: 75</p>



NOTE: The actual number of maximum connections depends on the availability of system resources, and might be fewer than the configured `connection-limit` value if the system resources are limited.

Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring clear-text or SSL Service for Junos XML Protocol Client Applications • Configuring DTCP-over-SSH Service for the Flow-Tap Application • Configuring Finger Service for Remote Access to the Router • Configuring FTP Service for Remote Access to the Router or Switch • Configuring SSH Service for Remote Access to the Router or Switch on page 14 • Configuring Telnet Service for Remote Access to a Router or Switch

destination-override

Syntax	<code>destination-override { syslog host <i>ip-address</i>; }</code>
Hierarchy Level	[edit system tracing]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Override the system-wide configuration of the switch at the [edit system tracing] hierarchy level. This statement has no effect if system tracing is not configured.
Options	<p>syslog—System process log files to send to the remote tracing host.</p> <ul style="list-style-type: none"> • syslog—System process log files to send to the remote tracing host. • host <i>ip-address</i>—IP address to which to send tracing information.
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Understanding Tracing and Logging Operations on page 11 • tracing on page 174

no-remote-trace

Syntax	<code>no-remote-trace</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the switch to disable remote tracing after remote tracing has been enabled.
Default	Remote tracing is disabled.
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • tracing on page 174

protocol-version

Syntax	<code>protocol-version <i>version</i>;</code>
Hierarchy Level	[edit system services ssh]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Description	Specify the secure shell (SSH) protocol version.
Default	v2 —SSH protocol version 2 is the default, introduced in Junos OS Release 11.4.
Options	<i>version</i> —SSH protocol version: v1 , v2 , or both.
Required Privilege Level	admin —To view this statement in the configuration. admin-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the SSH Protocol Version on page 15

rate-limit

Syntax	<code>rate-limit <i>limit</i>;</code>
Hierarchy Level	<code>[edit system services finger],</code> <code>[edit system services ftp],</code> <code>[edit system services netconf ssh],</code> <code>[edit system services ssh],</code> <code>[edit system services telnet],</code> <code>[edit system services tftp-server],</code> <code>[edit system services xnm-clear-text],</code> <code>[edit system services xnm-ssl]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure the maximum number of connections attempts per minute, per protocol (either IPv6 or IPv4) on an access service. For example, a rate limit of 10 allows 10 IPv6 telnet session connection attempts per minute and 10 IPv4 telnet session connection attempts per minute.
Default	150 connections
Options	<p>rate-limit <i>limit</i>—(Optional) Maximum number of connection attempts allowed per minute, per IP protocol (either IPv4 or IPv6).</p> <p>Range: 1 through 250</p> <p>Default: 150</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring clear-text or SSL Service for Junos XML Protocol Client Applications</i>


ssh

Syntax	<pre>ssh { authentication-order [<i>authentication-methods</i>]; ciphers [<i>cipher-1 cipher-2 cipher-3 ...</i>]; client-alive-count-max <i>seconds</i>; client-alive-interval <i>seconds</i>; connection-limit <i>limit</i>; hostkey-algorithm <<i>algorithm</i> no-<i>algorithm</i>>; key-exchange <<i>algorithm</i>>; macs <<i>algorithm</i>>; max-sessions-per-connection <<i>number</i>>; no-passwords; no-public-keys; no-tcp-forwarding; protocol-version [<i>v1 v2</i>]; rate-limit <i>limit</i>; root-login (<i>allow</i> <i>deny</i> <i>deny-password</i>); }</pre> <p>tcp-forwarding (JDM)</p>
Hierarchy Level	[edit system services]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>client-alive-interval and client-alive-max-count statements introduced in Junos OS Release 12.2.</p> <p>no-passwords statement introduced in Junos OS Release 13.3.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.</p> <p>no-public-keys statement introduced in Junos OS release 15.1.</p> <p>tcp-forwarding statement introduced in Junos OS Release 15.1X53-D50 for the NFX250 Network Services Platform.</p>
Description	<p>Allow SSH requests from remote systems to the local router or switch.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring SSH Service for Remote Access to the Router or Switch on page 14

telnet

Syntax	<pre>telnet { authentication-order [<i>authentication-methods</i>]; connection-limit <i>limit</i>; rate-limit <i>limit</i>; }</pre>
Hierarchy Level	[edit system services]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Provide Telnet connections from remote systems to the local router or switch. The remaining statements are explained separately.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Telnet Service for Remote Access to a Router or Switch</i>

tracing

Syntax	<pre>tracing { destination-override syslog host <i>ip-address</i>; }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the switch to enable remote tracing to a specified host IP address.
<hr/>	
<div> NOTE: The tracing statement is not supported on the QFX3000 QFabric system.</div> <hr/>	
The following processes are supported:	
<ul style="list-style-type: none">• chassisd—Chassis-control process• eventd—Event-processing process• cosd—Class-of-service process	
If you enabled remote tracing but wish to disable it for specific processes on the switch, use the no-remote-trace statement at the [edit system <i>process-name</i> traceoptions] hierarchy level.	
Default	Remote tracing is disabled by default.
Options	destination-override syslog host <i>ip-address</i> —Overrides the global configuration for system tracing and has no effect if the tracing statement is not configured.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Tracing and Logging Operations on page 11• destination-override on page 169

CHAPTER 9

Automation

- [allow-transients on page 176](#)
- [apply-macro on page 177](#)
- [checksum on page 178](#)
- [command on page 179](#)
- [commit on page 180](#)
- [description on page 181](#)
- [direct-access on page 181](#)
- [file \(Commit Scripts\) on page 182](#)
- [file \(Op Scripts\) on page 183](#)
- [no-allow-url on page 184](#)
- [op on page 185](#)
- [optional on page 186](#)
- [refresh \(Commit Scripts\) on page 186](#)
- [refresh \(Op Scripts\) on page 187](#)
- [refresh-from \(Commit Scripts\) on page 187](#)
- [refresh-from \(Op Scripts\) on page 188](#)
- [scripts on page 189](#)
- [source \(Commit Scripts\) on page 191](#)
- [source \(Op Scripts\) on page 191](#)

allow-transients

Syntax	allow-transients;
Hierarchy Level	[edit system scripts commit]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit scripts, enable transient configuration changes to be committed.
Default	Transient changes are disabled by default. If you do not include the allow-transients statement, and an enabled script generates transient changes, the command-line interface (CLI) generates an error message and the commit operation fails.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Generating a Persistent or Transient Configuration Change Using Commit Scripts</i>• <i>Creating a Commit Script Macro to Read the Custom Syntax and Generate Related Configuration Statements</i>

apply-macro

Syntax	<pre>apply-macro <i>apply-macro-name</i> { <i>parameter-name parameter-value</i>; }</pre>
Hierarchy Level	All hierarchy levels
Release Information	Statement introduced in Junos OS Release 7.4.
Description	<p>With commit script macros, use custom syntax in your configuration.</p> <p>Macros work by locating apply-macro statements that you include in the candidate configuration and using the values specified in the apply-macro statement as parameters to a set of instructions (the macro) defined in a commit script. The commit script alters your configuration from one that contains custom syntax into a full configuration containing standard Junos OS statements.</p> <p>In effect, your custom configuration syntax serves a dual purpose. The syntax allows you to simplify your configuration tasks, and it provides data (or <i>hooks</i>) that are used by a commit script macros.</p> <p>You can include the apply-macro statement at any level of the configuration hierarchy. You can include multiple apply-macro statements at each level of the configuration hierarchy; however, each must have a unique name.</p>
Options	<p><i>apply-macro-name</i>—Name of the apply-macro statement.</p> <p><i>parameter-name</i>—One or more parameters. Parameters can be any text you want to include in your configuration.</p> <p><i>parameter-value</i>—A value that corresponds to the parameter name. Parameter values can be any text you want to include in your configuration.</p>
Required Privilege Level	configure—To enter configuration mode; other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"> • <i>Overview of Creating Custom Configuration Syntax with Commit Script Macros</i>

checksum

Syntax	<code>checksum (md5 sha-256 sha1) hash;</code>
Hierarchy Level	[edit event-options event-script file <i>filename</i>], [edit system scripts commit file <i>filename</i>], [edit system scripts op file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 9.5. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For Junos OS commit scripts and op scripts, specify the MD5, SHA-1, or SHA-256 checksum hash. When it executes a local event, commit, or op script, Junos OS verifies the authenticity of the script by using the configured checksum hash.
Options	md5 hash —MD5 checksum of this script. sha-256 hash —SHA-256 checksum of this script. sha1 hash —SHA-1 checksum of this script.
Required Privilege Level	maintenance —To view this statement in the configuration. maintenance-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Checksum Hashes for a Commit Script</i>• <i>Configuring Checksum Hashes for an Event Script</i>• <i>Configuring Checksum Hashes for an Op Script</i>• <i>Executing an Op Script from a Remote Site</i>• <i>file checksum md5</i> command in the <i>System Basics and Services Command Reference</i>• <i>file checksum sha-256</i> command in the <i>System Basics and Services Command Reference</i>• <i>file checksum sha1</i> command in the <i>System Basics and Services Command Reference</i>

command

Syntax	<code>command filename-alias;</code>
Hierarchy Level	[edit system scripts op file filename]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Junos OS op scripts, configure a filename alias for the script file. This allows you to run the script by referencing either the script filename or the filename alias.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling an Op Script and Defining a Script Alias</i>

commit

Syntax

```
commit {
  allow-transients;
  dampen {
    dampen-options {
      cpu-factor cpu-factor;
      line-interval line-interval;
      time-interval time-interval;
    }
  }
  direct-access;
  file filename {
    checksum (md5 | sha-256 | sha1) hash;
    optional;
    refresh;
    refresh-from url;
    source url;
  }
  max-datasize;
  refresh;
  refresh-from url;
  traceoptions {
    file <filename> <files number> <size size> <world-readable | no-world-readable>;
    flag flag;
    no-remote-trace;
  }
}
```

Hierarchy Level [edit system [scripts](#)]

Release Information Statement introduced in Junos OS Release 7.4.
Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description For Junos OS commit scripts, configure the commit-time scripting mechanism.

Options The statements are explained separately.

Required Privilege Level maintenance—To view this statement in the configuration.
maintenance-control—To add this statement to the configuration.

Related Documentation

- *Storing and Enabling Scripts*

description

Syntax	<code>description <i>descriptive-text</i>;</code>
Hierarchy Level	[edit system scripts op file filename] [edit system scripts op file filename arguments <i>argument-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Junos OS op scripts, provide a help-text string that appears in the command-line interface (CLI).
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Help Text for Op Scripts</i> • <i>Declaring Arguments in Op Scripts</i> • file (Op Scripts) on page 183

direct-access

Syntax	<code>direct-access;</code>
Hierarchy Level	[edit system scripts commit]
Release Information	Statement introduced in Junos OS Release 9.1. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Specify that commit scripts read input configurations directly from the database when inspecting these scripts for errors.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Executing Large Commit Scripts</i>

file (Commit Scripts)

Syntax	<pre>file <i>filename</i> { checksum (md5 sha-256 sha1) <i>hash</i>; optional; refresh; refresh-from <i>url</i>; source <i>url</i>; }</pre>
Hierarchy Level	[edit system scripts commit]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For Junos OS commit scripts, enable a commit script that is located in the <code>/var/db/scripts/commit</code> directory.
Options	<p><i>filename</i>—Name of an Extensible Stylesheet Language Transformations (XSLT) or Stylesheet Language Alternative Syntax (SLAX) file containing a commit script.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>maintenance—To view this statement in the configuration.</p> <p>maintenance-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><i>Controlling Execution of Commit Scripts During Commit Operations</i>

file (Op Scripts)

Syntax	<pre> file <i>filename</i> { arguments { <i>argument-name</i> { description <i>descriptive-text</i>; } } checksum (md5 sha-256 sha1) <i>hash</i>; command <i>filename-alias</i>; description <i>descriptive-text</i>; refresh; refresh-from <i>url</i>; source <i>url</i>; } </pre>
Hierarchy Level	[edit system scripts op]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Junos OS op scripts, enable an op script that is located in the <code>/var/db/scripts/op</code> directory.
Options	<p>filename—The name of an Extensible Stylesheet Language Transformations (XSLT) or Stylesheet Language Alternative Syntax (SLAX) file containing an op script.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>maintenance—To view this statement in the configuration.</p> <p>maintenance-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Enabling an Op Script and Defining a Script Alias</i>

no-allow-url

Syntax	no-allow-url;
Hierarchy Level	[edit system scripts op]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	For Junos OS op scripts, prohibit the remote execution of scripts. When you include this configuration statement, the op url operational mode command generates an error and does not permit you to execute the op script from a remote site.
Default	If you do not include the no-allow-url statement, authorized users can issue the op url command to execute op scripts from a remote site.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• file (Op Scripts) on page 183• <i>Executing an Op Script from a Remote Site</i>

op

```
Syntax  op {
    dampen {
        dampen-options {
            cpu-factor cpu-factor;
            line-interval line-interval;
            time-interval time-interval;
        }
    }
    file filename {
        allow-commands "regular-expression";
        arguments {
            argument-name {
                description descriptive-text;
            }
        }
        checksum (md5 | sha-256 | sha1) hash;
        command filename-alias;
        dampen {
            dampen-options {
                cpu-factor cpu-factor;
                line-interval line-interval;
                time-interval time-interval;
            }
        }
        description descriptive-text;
        refresh;
        refresh-from url;
        source url;
    }
    max-datasize;
    no-allow-url
    refresh;
    refresh-from url;
    traceoptions {
        file <filename> <files number> <size size> <world-readable | no-world-readable>;
        flag flag;
        no-remote-trace;
    }
}
```

Hierarchy Level [edit system [scripts](#)]

Release Information Statement introduced in Junos OS Release 7.6.

Description For Junos OS op scripts, configure an operation scripting mechanism.

Options The statements are explained separately.

Required Privilege Level maintenance—To view this statement in the configuration.
maintenance-control—To add this statement to the configuration.

Related Documentation

- *Storing and Enabling Scripts*

optional

Syntax	optional;
Hierarchy Level	[edit system scripts commit file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit scripts, allow a commit operation to succeed even if the script specified in the file statement is missing from the /var/db/scripts/commit directory on the device.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Controlling Execution of Commit Scripts During Commit Operations</i>

refresh (Commit Scripts)

Syntax	refresh;
Hierarchy Level	[edit system scripts commit], [edit system scripts commit file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit scripts, overwrite the local copy of all enabled commit scripts or a single enabled script located in the /var/db/scripts/commit directory with the copy located at the source URL, as specified in the source statement at the same hierarchy level.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Using a Master Source Location for a Script</i>• refresh-from (Commit Scripts) on page 187• source (Commit Scripts) on page 191

refresh (Op Scripts)

Syntax	refresh;
Hierarchy Level	[edit system scripts op], [edit system scripts op file filename]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Junos OS op scripts, overwrite the local copy of all enabled op scripts or a single enabled script located in the <code>/var/db/scripts/op</code> directory with the copy located at the source URL, specified in the source statement at the same hierarchy level.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Using a Master Source Location for a Script</i> • refresh-from (Op Scripts) on page 188 • source (Op Scripts) on page 191

refresh-from (Commit Scripts)

Syntax	refresh-from <i>url</i> ;
Hierarchy Level	[edit system scripts commit], [edit system scripts commit file filename]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit scripts, overwrite the local copy of all enabled commit scripts or a single enabled script located in the <code>/var/db/scripts/commit</code> directory with the copy located at a URL other than the URL specified in the source statement.
Options	<i>url</i> —The source specified as a Hypertext Transfer Protocol (HTTP) URL, FTP URL, or secure copy (scp)-style remote file specification.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Using an Alternate Source Location for a Script</i> • refresh (Commit Scripts) on page 186 • source (Commit Scripts) on page 191

refresh-from (Op Scripts)

Syntax	<code>refresh-from url;</code>
Hierarchy Level	[edit system scripts op], [edit system scripts op file filename]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Junos OS op scripts, overwrite the local copy of all enabled op scripts or a single enabled script located in the <code>/var/db/scripts/op</code> directory with the copy located at a URL other than the URL specified in the source statement.
Options	url —Source specified as a Hypertext Transfer Protocol (HTTP) URL, FTP URL, or secure copy (scp)-style remote file specification.
Required Privilege Level	maintenance —To view this statement in the configuration. maintenance-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Using an Alternate Source Location for a Script</i>• refresh (Op Scripts) on page 187• source (Op Scripts) on page 191

scripts

```

Syntax  scripts {
        commit {
            allow-transients;
            dampen {
                dampen-options {
                    cpu-factor cpu-factor;
                    line-interval line-interval;
                    time-interval time-interval;
                }
            }
        }
        direct-access;
        file filename {
            checksum (md5 | sha-256 | sha1) hash;
            optional;
            refresh;
            refresh-from url;
            source url;
        }
        max-datasize;
        refresh;
        refresh-from url;
        traceoptions {
            file <filename> <files number> <size size> <world-readable | no-world-readable>;
            flag flag;
            no-remote-trace;
        }
    }
    load-scripts-from-flash;
    op {
        dampen {
            dampen-options {
                cpu-factor cpu-factor;
                line-interval line-interval;
                time-interval time-interval;
            }
        }
        file filename {
            allow-commands "regular-expression";
            arguments {
                argument-name {
                    description descriptive-text;
                }
            }
            checksum (md5 | sha-256 | sha1) hash;
            command filename-alias;
            dampen {
                dampen-options {
                    cpu-factor cpu-factor;
                    line-interval line-interval;
                    time-interval time-interval;
                }
            }
        }
    }
}

```

```

    description descriptive-text;
    refresh;
    refresh-from url;
    source url;
  }
  max-datasize;
  no-allow-url
  refresh;
  refresh-from url;
  traceoptions {
    file <filename> <files number> <size size> <world-readable | no-world-readable>;
    flag flag;
    no-remote-trace;
  }
}
snmp {
  file filename {
    checksum (md5 | sha-256 | sha1) hash;
    oid id {
      priority;
    }
    refresh;
    refresh-from;
    source;
  }
  max-datasize;
  refresh;
  refresh-from;
  traceoptions {
    file <filename> <files number> <size size> <world-readable | no-world-readable>;
    flag flag;
    no-remote-trace;
  }
}
synchronize;
}

```

Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit or op scripts, configure scripting mechanisms.
Options	The statements are explained separately.
Required Privilege Level	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Storing and Enabling Scripts</i>

source (Commit Scripts)

Syntax	<code>source url;</code>
Hierarchy Level	[edit system scripts commit file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS commit scripts, specify the location of the source file for an enabled script located in the <code>/var/db/scripts/commit</code> directory. When you include the refresh statement at the same hierarchy level and commit the configuration, the local copy is overwritten by the version stored at the specified URL.
Options	<i>url</i> —The source specified as an HTTP URL, FTP URL, or scp-style remote file specification.
Required Privilege Level	<i>maintenance</i> —To view this statement in the configuration. <i>maintenance-control</i> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Using a Master Source Location for a Script</i> • <i>Overview of Updating Scripts from a Remote Source</i> • refresh (Commit Scripts) on page 186 • refresh-from (Commit Scripts) on page 187

source (Op Scripts)

Syntax	<code>source url;</code>
Hierarchy Level	[edit system scripts op file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For Junos OS op scripts, specify the location of the source file for an enabled script located in the <code>/var/db/scripts/op</code> directory. When you include the refresh statement at the same hierarchy level, the local copy is overwritten by the version stored at the specified URL.
Options	<i>url</i> —Master source file for an op script specified as an HTTP URL, FTP URL, or scp-style remote file specification.
Required Privilege Level	<i>maintenance</i> —To view this statement in the configuration. <i>maintenance-control</i> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Using a Master Source Location for a Script</i> • refresh (Op Scripts) on page 187 • refresh-from (Op Scripts) on page 188

CHAPTER 10

sFlow Technology

- [agent-id on page 193](#)
- [collector \(sFlow Technology\) on page 194](#)
- [interfaces \(sFlow\) on page 195](#)
- [polling-interval on page 196](#)
- [sample-rate on page 197](#)
- [sflow on page 198](#)
- [source-ip on page 199](#)
- [traceoptions \(sFlow Technology\) on page 200](#)
- [udp-port on page 201](#)

agent-id

Syntax	<code>agent-id <i>ip-address</i>;</code>
Hierarchy Level	[edit protocols sflow]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the IP address of the sFlow agent. If you do not configure the sFlow agent ID, the IP address for the agent is dynamically created using the IP address of an interface configured on the QFX Series device.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring sFlow Technology on page 59• sflow on page 198

collector (sFlow Technology)

Syntax	<code>collector <i>ip-address</i> { udp-port <i>port-number</i>; }</code>
Hierarchy Level	[edit protocols sflow]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure a remote collector for sFlow network traffic monitoring. The device sends sFlow UDP datagrams to the configured collector for analysis. You can configure up to four collectors on the device. You specify the IP address for each collector you configure.</p> <p>The remaining statement is explained separately.</p>
Options	<i>ip-address</i> —IP address of the collector.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring sFlow Technology on page 59• Example: Monitoring Network Traffic Using sFlow Technology on page 55

interfaces (sFlow)

Syntax	<pre> interfaces <i>interface-name</i> { polling-interval <i>seconds</i>; sample-rate <i>number</i>; } </pre>
Hierarchy Level	[edit protocols sflow]
Release Information	<p>Statement introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Configure sFlow network traffic monitoring on the specified interface on the device. You can configure sFlow parameters (polling interval, sample rate) with different values on different interfaces.</p> <p>The remaining statements are explained separately.</p>
Options	<i>interface-name</i> —Name of the interface on which to configure sFlow parameters.
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring sFlow Technology on page 59 • Example: Monitoring Network Traffic Using sFlow Technology on page 55

polling-interval

Syntax	<code>polling-interval <i>seconds</i>;</code>
Hierarchy Level	[edit protocols sflow], [edit protocols sflow interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the rate (in seconds) at which successive samples of interface statistics (counters) are taken.
Default	If no polling interval is configured for a particular interface, the device uses the global polling interval configured at the [edit protocols sflow] hierarchy level. If no global interval is configured, the device uses the default polling interval of 20 seconds.
Options	<i>seconds</i> —Number of seconds between successive samples of interface statistics. Specifying a value of 0 (zero) disables the polling. Range: 0 through 3600 seconds
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring sFlow Technology on page 59• Example: Monitoring Network Traffic Using sFlow Technology on page 55

sample-rate

Syntax	<code>sample-rate <i>number</i>;</code>
Hierarchy Level	[edit protocols sflow], [edit protocols sflow interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the denominator (<i>number</i>) of the ratio that is the sample rate in sFlow traffic monitoring. For example, to configure a sample rate of 1 in 1000 packets, you specify a <i>number</i> of 1000.
Default	If no sample rate is configured for a particular interface, the device uses the global sample rate configured at the [edit protocols sflow] hierarchy level. If no global rate is configured, the device uses the default sample rate of 1 in 2000 packets.
Options	<i>number</i> —Denominator of the ratio representing the sample rate (one packet out of <i>number</i>). Range: 1 through 16,777,215
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring sFlow Technology on page 59 • Example: Monitoring Network Traffic Using sFlow Technology on page 55

sflow

Syntax	<pre> sflow { agent-id <i>ip-address</i>; collector <i>ip-address</i> { udp-port <i>port-number</i>; } interfaces <i>interface-name</i> { polling-interval <i>number</i>; sample-rate { egress <i>number</i>; ingress <i>number</i>; } } polling-interval <i>number</i>; sample-rate { egress <i>number</i>; ingress <i>number</i>; } source-ip <i>ip-address</i>; traceoptions { file <i>filename</i> <files <i>number</i>> <no-stamp> <replace> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; } } </pre>
Hierarchy Level	[edit protocols]
Release Information	<p>Statement introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Configure sFlow technology to monitor traffic continuously on specified interfaces simultaneously. sFlow data can be used to characterize network activity.</p> <p>The remaining statements are explained separately.</p>
Default	The sFlow protocol is disabled by default.
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring sFlow Technology on page 59 Example: Monitoring Network Traffic Using sFlow Technology on page 55

source-ip

Syntax	<code>source-ip <i>ip-address</i>;</code>
Hierarchy Level	[edit protocols sflow]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the source IP address to be used for sFlow datagrams. If you do not configure a source IP address, it is dynamically created based on the IP address of an Ethernet interface configured on the QFX Series device.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring sFlow Technology on page 59• sflow on page 198

traceoptions (sFlow Technology)

Syntax	<pre>traceoptions { file <i>filename</i> <files <i>number</i>> <no-stamp> <replace> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; }</pre>
Hierarchy Level	[edit protocols sflow]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Define tracing operations for sFlow technology.
Default	The traceoptions feature is disabled.
Options	<p>file <i>filename</i>—Name of the file to receive the tracing operation output. Enclose the name in quotation marks. Output files are located in the <code>/var/log/</code> directory.</p> <p>files <i>number</i>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0. Incoming trace file data is logged in the now empty trace-file. When trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify the maximum number of files, you must also specify the maximum file size using the size option.</p> <p>Range: 2 through 1000 files Default: 1 trace file</p> <p>flag <i>flag</i>—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements.</p> <ul style="list-style-type: none">• all—Trace all sFlow monitoring events.• client-server—Trace sFlow monitoring client-server events.• configuration—Trace sFlow monitoring configuration events.• interface—Trace sFlow monitoring interface events.• rtsock—Trace routing socket code events. <p>no-stamp—(Optional) Do not place timestamp information at the beginning of each line in the trace file.</p> <p>no-world-readable—(Optional) Prevent any user from reading the trace file.</p> <p>replace—(Optional) Replace an existing trace file if there is one.</p>

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**. Incoming trace file data is logged in the now empty **trace-file**. When **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum file size, you must also specify a maximum number of trace files with the **files** option.

Syntax: **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

Range: 10 KB through the maximum file size of 4 GB

Default: 128 KB

world-readable—(Optional) Allow any user to read the trace file.

Required Privilege Level	routing and trace—To view this statement in the configuration.
	routing-control and trace-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Overview of sFlow Technology

udp-port

Syntax	<code>udp-port port-number;</code>
Hierarchy Level	[edit protocols sflow collector]
Release Information	Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the UDP port for a remote collector for sFlow network traffic monitoring. The device sends sFlow UDP datagrams to the collector for analysis.
Default	Port 6343
Options	port-number —UDP port number for this collector.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring sFlow Technology on page 59 • Example: Monitoring Network Traffic Using sFlow Technology on page 55

CHAPTER 11

SNMP

- [access \(SNMP\) on page 206](#)
- [address \(SNMP\) on page 206](#)
- [address-mask on page 207](#)
- [agent-address on page 207](#)
- [alarm \(SNMP RMON\) on page 208](#)
- [authentication-md5 on page 209](#)
- [authentication-none on page 210](#)
- [authentication-password on page 211](#)
- [authentication-sha on page 212](#)
- [authorization on page 213](#)
- [bucket-size on page 214](#)
- [categories on page 215](#)
- [client-list on page 215](#)
- [client-list-name on page 216](#)
- [clients on page 216](#)
- [commit-delay on page 217](#)
- [community \(SNMP\) on page 218](#)
- [community \(RMON\) on page 219](#)
- [community-name on page 220](#)
- [contact on page 221](#)
- [description on page 221](#)
- [description \(RMON\) on page 222](#)
- [destination-port \(SNMP\) on page 222](#)
- [engine-id on page 223](#)
- [event on page 224](#)
- [falling-event-index \(RMON\) on page 225](#)
- [falling-threshold \(Health Monitor\) on page 226](#)
- [falling-threshold \(RMON\) on page 227](#)

- [falling-threshold-interval](#) on page 228
- [filter-duplicates](#) on page 228
- [filter-interfaces](#) on page 229
- [group \(Defining Access Privileges for an SNMPv3 Group\)](#) on page 229
- [group \(Configuring Group Name\)](#) on page 230
- [health-monitor](#) on page 231
- [history](#) on page 232
- [interface \(SNMP\)](#) on page 233
- [interface \(RMON\)](#) on page 234
- [interval \(Health Monitor\)](#) on page 235
- [interval \(RMON\)](#) on page 236
- [local-engine](#) on page 237
- [location](#) on page 238
- [message-processing-model](#) on page 238
- [name](#) on page 239
- [nonvolatile](#) on page 239
- [notify](#) on page 240
- [notify-filter \(Applying to the Management Target\)](#) on page 241
- [notify-filter \(Configuring the Profile Name\)](#) on page 241
- [notify-view](#) on page 242
- [oid](#) on page 242
- [oid \(SNMPv3\)](#) on page 243
- [owner](#) on page 244
- [parameters](#) on page 244
- [port](#) on page 245
- [privacy-3des](#) on page 246
- [privacy-aes128](#) on page 247
- [privacy-des](#) on page 248
- [privacy-none](#) on page 248
- [privacy-password](#) on page 249
- [read-view](#) on page 250
- [remote-engine](#) on page 251
- [request-type](#) on page 252
- [retry-count](#) on page 253
- [rising-event-index](#) on page 254
- [rising-threshold \(Health Monitor\)](#) on page 255
- [rising-threshold \(RMON\)](#) on page 256

- rmon on page 257
- sample-type on page 258
- security-level (Defining Access Privileges) on page 259
- security-level (Generating SNMP Notifications) on page 260
- security-model (Access Privileges) on page 261
- security-model (Group) on page 262
- security-model (SNMP Notifications) on page 262
- security-name (Community String) on page 263
- security-name (Security Group) on page 264
- security-name (SNMP Notifications) on page 265
- security-to-group on page 266
- snmp on page 267
- snmp-community on page 271
- source-address (SNMP) on page 271
- startup-alarm on page 272
- syslog-subtag on page 273
- tag (Configuring Notification Targets) on page 273
- tag (Configuring the SNMP Community) on page 274
- tag-list on page 274
- target-address on page 275
- target-parameters on page 276
- targets on page 277
- timeout on page 277
- traceoptions (SNMP) on page 278
- trap-group on page 280
- trap-options on page 281
- type (RMON Notification) on page 282
- type on page 283
- user on page 283
- usm on page 284
- v3 on page 286
- vacm on page 288
- variable on page 289
- version on page 290
- view (Configuring a MIB View) on page 291
- view (Associating MIB View with a Community) on page 292
- write-view on page 292

access (SNMP)

Syntax	<pre>access { group group-name { (default-context-prefix context-prefix context-prefix) { security-model (any usm v1 v2c) { security-level (authentication none privacy) { notify-view view-name; read-view view-name; write-view view-name; } } } } }</pre>
Hierarchy Level	[edit snmp v3 vacm]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set SNMP access limits. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.

address (SNMP)

Syntax	<pre>address address;</pre>
Hierarchy Level	[edit snmp v3 target-address target-address-name]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the SNMP target address for receiving traps or informs.
Options	address —IPv4 address of the system to receive traps or informs. You must specify an address, not a hostname.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding the Implementation of SNMP on the QFabric System• Configuring SNMP on page 101• Example: Configuring SNMP on page 125

address-mask

Syntax	<code>address-mask <i>address-mask</i>;</code>
Hierarchy Level	<code>[edit snmp v3 target-address <i>target-address-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 on the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Verify the source addresses for a group of target addresses.
Options	<i>address-mask</i> combined with the address defines a range of addresses.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Address Mask</i>

agent-address

Syntax	<code>agent-address outgoing-interface;</code>
Hierarchy Level	<code>[edit snmp trap-options]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Description	Set the agent address of all SNMPv1 traps generated by this router or switch. Currently, the only option is outgoing-interface , which sets the agent address of each SNMPv1 trap to the address of the outgoing interface of that trap.
Options	outgoing-interface —Value of the agent address of all SNMPv1 traps generated by this router or switch. The outgoing-interface option sets the agent address of each SNMPv1 trap to the address of the outgoing interface of that trap. Default: Disabled (the agent address is not specified in SNMPv1 traps).
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Agent Address for SNMP Traps</i>

alarm (SNMP RMON)

Syntax alarm *index* {
 description *description*;
 falling-event-index *index*;
 falling-threshold *integer*;
 falling-threshold-interval *seconds*;
 interval *seconds*;
 request-type (get-next-request | get-request | walk-request);
 rising-event-index *index*;
 rising-threshold *integer*;
 sample-type (absolute-value | delta-value);
 startup-alarm (falling-alarm | rising-alarm | rising-or-falling alarm);
 syslog-subtag *syslog-subtag*;
 variable *oid-variable*;
 }

Hierarchy Level [edit snmp rmon]

Release Information Statement introduced before Junos OS Release 7.4.
 Statement introduced in Junos OS Release 9.0 for EX Series switches.
 Statement introduced in Junos OS Release 11.1 for the QFX Series.
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure RMON alarm entries.

Options *index*—Identifies this alarm entry as an integer.

 The remaining statements are explained separately.

Required Privilege Level snmp—To view this statement in the configuration.
 snmp-control—To add this statement to the configuration.

Related Documentation

- [Configuring an RMON Alarm Entry and Its Attributes](#)
- [event \(SNMP\)](#)
- [RMON MIB Event, Alarm, Log, and History Control Tables on page 66](#)
- [Monitoring RMON MIB Tables on page 118](#)
- [Understanding RMON on page 65](#)

authentication-md5

Syntax	authentication-md5 { authentication-password authentication-password; }
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure MD5 as the authentication type for the SNMPv3 user.



NOTE: You can only configure one authentication type for each SNMPv3 user.

The remaining statement is explained separately.

Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring MD5 Authentication

authentication-none

Syntax	authentication-none;
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure that there should be no authentication for the SNMPv3 user.



NOTE: You can configure only one authentication type for each SNMPv3 user.

Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring No Authentication</i>

authentication-password

Syntax	<code>authentication-password <i>authentication-password</i>;</code>
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i> authentication-md5], [edit snmp v3 usm local-engine user <i>username</i> authentication-sha], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i> authentication-md5], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i> authentication-sha]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the password for user authentication.
Options	<p><i>authentication-password</i>—Password that a user enters. The password is then converted into a key that is used for authentication.</p> <p>SNMPv3 has special requirements when you create plain-text passwords on a router or switch:</p> <ul style="list-style-type: none"> • The password must be at least eight characters long. • The password can include alphabetic, numeric, and special characters, but it cannot include control characters.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring MD5 Authentication</i> • <i>Configuring SHA Authentication</i>

authentication-sha

Syntax	<code>authentication-sha { authentication-password authentication-password; }</code>
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the secure hash algorithm (SHA) as the authentication type for the SNMPv3 user.




NOTE: You can configure only one authentication type for each SNMPv3 user.

The remaining statement is explained separately.

Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SHA Authentication</i>

authorization

Syntax	<code>authorization <i>authorization</i>;</code>
Hierarchy Level	<code>[edit snmp community <i>community-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Description	Set the access authorization for SNMP Get , GetBulk , GetNext , and Set requests.
Options	<p><i>authorization</i>—Access authorization level:</p> <ul style="list-style-type: none"> • read-only—Enable Get, GetNext, and GetBulk requests. • read-write—Enable all requests, including Set requests. You must configure a view to enable Set requests.
<div>  <p>NOTE: The read-write option is not supported on the QFX3000 QFabric system.</p> </div>	
Default: read-only	
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the SNMP Community String on page 105

bucket-size

Syntax	<code>bucket-size <i>number</i>;</code>
Hierarchy Level	<code>[edit snmp rmon history <i>index</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the sampling of Ethernet statistics for network fault diagnosis, planning, and performance tuning.
Default	50
Options	<i>number</i> —Number of discrete samples of Ethernet statistics requested.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

categories

Syntax	<code>categories { category; }</code>
Hierarchy Level	<code>[edit snmp trap-group group-name]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Description	Define the types of traps that are sent to the targets of the named trap group.
Default	If you omit the categories statement, all trap types are included in trap notifications.
Options	category —Name of a trap type: authentication , chassis , configuration , link , remote-operations , rmon-alarm , or startup .
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring SNMP Trap Groups on page 106

client-list

Syntax	<code>client-list client-list-name { ip-addresses; }</code>
Hierarchy Level	<code>[edit snmp]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Description	Define a list of SNMP clients.
Options	client-list-name —Name of the client list. ip-addresses —IP addresses of the SNMP clients to be added to the client list,
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Adding a Group of Clients to an SNMP Community on page 107

client-list-name

Syntax	<code>client-list-name <i>client-list-name</i>;</code>
Hierarchy Level	[edit snmp community <i>community-name</i>]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Add a client list or prefix list to an SNMP community.
Options	<i>client-list-name</i> —Name of the client list or prefix list.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Adding a Group of Clients to an SNMP Community on page 107


clients

Syntax	<pre>clients { <i>address</i> <restrict>; }</pre>
Hierarchy Level	[edit snmp community <i>community-name</i>]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Specify the IPv4 or IPv6 addresses of the SNMP client hosts that are authorized to use this community.
Default	If you omit the clients statement, all SNMP clients using this community string are authorized to access the switch.
Options	<i>address</i> —Address of an SNMP client that is authorized to access this switch. You must specify an address, not a hostname. To specify more than one client, include multiple <i>address</i> options. <i>restrict</i> —(Optional) Do not allow the specified SNMP client to access the switch.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring SNMP Communities

commit-delay

Syntax	commit-delay <i>seconds</i> ;
Hierarchy Level	[edit snmp nonvolatile]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the timer for the SNMP Set reply and start of the commit.
Options	seconds —Delay between an affirmative SNMP Set reply and start of the commit operation. Default: 5 seconds
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Commit Delay Timer</i>


community (SNMP)

Syntax	<pre>community <i>community-name</i> { authorization <i>authorization</i>; client-list-name <i>client-list-name</i>; clients { address restrict; } view <i>view-name</i>; }</pre>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Define an SNMP community. An SNMP community authorizes SNMP clients based on the source IP address of incoming SNMP request packets. A community also defines which MIB objects are available and the operations (read-only or read-write) allowed on those objects.
<div>  <p>NOTE: The authorization read-write option is not supported on the QFX3000 QFabric system.</p> </div>	
<p>The SNMP client application specifies an SNMP community name in Get, GetBulk, GetNext, and Set SNMP requests.</p>	
Default	If you omit the community statement, all SNMP requests are denied.
Options	<p><i>community-name</i>—Community string. If the name includes spaces, enclose it in quotation marks (" ").</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring the SNMP Community String on page 105

community (RMON)

Syntax	<code>community <i>community-name</i>;</code>
Hierarchy Level	[edit snmp rmon event <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure the SNMP trap group that is used when generating a trap (if the eventType object is configured to send traps). If that trap group has the rmon-alarm trap category configured, a trap is sent to all the targets configured for that trap group. The community string in the trap matches the name of the trap group (and hence, the value of eventCommunity). If nothing is configured, traps are sent to each group that has the rmon-alarm category configured.</p> <p>The event community is not the same as an SNMP community.</p>
Options	<i>community-name</i> —Name of the trap group that is used when generating a trap if the event is configured to send traps.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Configuring RMON Alarms and Events on page 109 • Monitoring RMON MIB Tables on page 118 • Understanding RMON on page 65 • Junos OS Network Management Configuration Guide

community-name

Syntax	<code>community-name <i>community-name</i>;</code>
Hierarchy Level	<code>[edit snmp v3 snmp-community <i>community-index</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	The community name defines an SNMP community. The SNMP community authorizes SNMPv1 or SNMPv2 clients. The access privileges associated with the configured security name define which MIB objects are available and the operations (notify, read, or write) allowed on those objects.
Options	<i>community-name</i> —Community string for an SNMPv1 or SNMPv2c community. If unconfigured, it is the same as the community index. If the name includes spaces, enclose it in quotation marks (" ").
<div> NOTE: Community names must be unique. You cannot configure the same community name at the <code>[edit snmp community]</code> and <code>[edit snmp v3 snmp-community <i>community-index</i>]</code> hierarchy levels.</div> <p>The community name at the <code>[edit snmp v3 snmp-community <i>community-index</i>]</code> hierarchy level is encrypted and not displayed in the command-line interface (CLI).</p>	
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the SNMPv3 Community</i>

contact

Syntax	<code>contact <i>contact</i>;</code>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Define the value of the MIB II sysContact object, which is the contact person for the managed system.
Options	contact —Name of the contact person. If the name includes spaces, enclose it in quotation marks (" ").
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the System Contact on a Device Running Junos OS</i>

description

Syntax	<code>description <i>description</i>;</code>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Define the value of the MIB II sysDescription object, which is the description of the system being managed.
Options	description —System description. If the name includes spaces, enclose it in quotation marks (" ").
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the System Description on a Device Running Junos OS</i>


description (RMON)

Syntax	<code>description</code> <i>description</i> ;
Hierarchy Level	[edit snmp rmon alarm <i>index</i>], [edit snmp rmon event <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Text description of alarm or event.
Options	<i>description</i> —Text description of an alarm or event entry. If the description includes spaces, enclose it in quotation marks (" ").
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

destination-port (SNMP)

Syntax	<code>destination-port</code> <i>port-number</i> ;
Hierarchy Level	[edit snmp trap-group]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Assign a trap port number other than the default.
Default	If you omit this statement, the default port is 162.
Options	<i>port-number</i> —SNMP trap port number.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring SNMP Trap Groups on page 106

engine-id

Syntax	engine-id { (local <i>engine-id-suffix</i> use-default-ip-address use-mac-address); }
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Define a unique identifier for an SNMPv3 engine by configuring the suffix of the engine ID. The engine ID is used for identification only and not for addressing. There are two parts of an engine ID: the prefix and the suffix. The prefix is formatted according to the specifications defined in RFC 3411, <i>An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks</i> and cannot be configured. The suffix is configured here.
	<div>  <p>NOTE: SNMPv3 authentication and encryption keys are generated based on the associated user passwords and the engine ID. If you configure or change the engine ID, you must commit the user passwords and new engine ID before you configure SNMPv3 users, or the authentication will fail.</p> <p>By default, the engine ID suffix is configured with the MAC address of the management interface (the <i>use-mac-address</i> option) on the QFX Series and OCX Series. You can override this configuration by using the local <i>engine-id-suffix</i> or <i>use-default-ip-address</i> option.</p> </div>
Default	use-mac-address
Options	<p>local <i>engine-id-suffix</i>—The engine ID suffix is set based on the data entered.</p> <p>use-default-ip-address—The engine ID suffix is generated from the default IP address.</p> <p>use-mac-address—The engine ID suffix is generated from the MAC address of the management interface on the switch.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • SNMPv3 Overview on page 62 • Configuring SNMP on page 101 • Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63

event

Syntax	<pre>event <i>index</i> { community <i>community-name</i>; description <i>description</i>; type (RMON Notification) <i>type</i>; }</pre>
Hierarchy Level	[edit snmp rmon]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure RMON event entries.
Options	<p><i>index</i>—Identifier for a specific event entry.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

falling-event-index (RMON)

Syntax	<code>falling-event-index <i>index</i>;</code>
Hierarchy Level	<code>[edit snmp rmon alarm <i>index</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the index number of the event entry that is used when a falling threshold is crossed. You specify the falling-event index when you configure an SNMP RMON alarm. If this value is zero, no event is triggered.
Options	<i>index</i> —Index of the event entry that is used when a falling threshold is crossed. Range: 0 through 65,535 Default: 0
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

falling-threshold (Health Monitor)

Syntax	<code>falling-threshold <i>percentage</i>;</code>
Hierarchy Level	[edit snmp health-monitor]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Set the lower threshold for the monitored object when you configure a health monitor alarm. By setting a rising and a falling threshold for a monitored variable, you can be alerted whenever the value of the variable falls outside the allowable operational range.
Options	<i>percentage</i> —Lower threshold for the alarm entry. Range: 1 through 100 Default: 70 percent of the maximum possible value
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• rising-threshold on page 255• Configuring Health Monitoring on page 111

falling-threshold (RMON)

Syntax	<code>falling-threshold <i>integer</i>;</code>
Hierarchy Level	<code>[edit snmp rmon alarm <i>index</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the lower threshold for the sampled variable (monitored object) when you configure an SNMP RMON alarm. By setting a rising and a falling threshold for a variable, you can be alerted whenever the value of the variable falls outside the allowable operational range.
Options	<p><i>integer</i>—Lower threshold for the alarm entry.</p> <p>Range: -2,147,483,648 through 2,147,483,647</p> <p>Default: 20 percent less than the rising-threshold value</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Configuring RMON Alarms and Events on page 109 • Monitoring RMON MIB Tables on page 118 • Understanding RMON on page 65 • Junos OS Network Management Configuration Guide

falling-threshold-interval

Syntax	<code>falling-threshold-interval seconds;</code>
Hierarchy Level	<code>[edit snmp rmon alarm index]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the interval between samples after the rising threshold is exceeded and the value of the sample starts to drop. If the value of the sample drops and exceeds the falling threshold, the regular sampling interval is used.
Options	interval —Time between samples, in seconds. Range: 1 through 2,147,483,647 seconds Default: 60 seconds
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

filter-duplicates

Syntax	<code>filter-duplicates;</code>
Hierarchy Level	<code>[edit snmp]</code>
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Filter duplicate Get , GetNext , or GetBulk SNMP requests.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding the Implementation of SNMP on the QFabric System• Example: Configuring SNMP on page 125

filter-interfaces

Syntax	<code>filter-interfaces { all-internal-interfaces; interfaces <i>interface</i> }</code>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Filter out information related to specific interfaces from the output of SNMP Get and GetNext requests performed on interface-related MIBs.
Options	all-internal-interfaces —Filter out information from SNMP Get and GetNext requests for all internal interfaces. interfaces —Filter out information from SNMP Get and GetNext requests for the specified interface.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Filtering Interface Information Out of SNMP Get and GetNext Output</i>

group (Defining Access Privileges for an SNMPv3 Group)

Syntax	<code>group <i>group-name</i>;</code>
Hierarchy Level	[edit snmp v3 vacm security-to-group security-model (usm v1 v2c) <i>security-name security-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Define access privileges granted to a group.
Options	group-name —Identifies a collection of SNMP security names that belong to the same access policy SNMP.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Group</i>

group (Configuring Group Name)

Syntax `group group-name {
 (default-context-prefix | context-prefix context-prefix){
 security-model (any | usm | v1 | v2c) {
 security-level (authentication | none | privacy) {
 notify-view view-name;
 read-view view-name;
 write-view view-name;
 }
 }
 }
 }`

Hierarchy Level [edit snmp v3 vacm access]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Assign the security name to a group, and specify the SNMPv3 context applicable to the group. The **default-context-prefix** statement, when included, adds all the contexts configured on the device to the group, whereas the **context-prefix context-prefix** statement enables you to specify a context and to add that particular context to the group.

(Not applicable to the QFX Series and OCX Series.) When the context prefix is specified as default (for example, **context-prefix default**), the context associated with the master routing instance is added to the group. To specify a routing instance that is part of a logical system, specify it as **logical system/routing instance**. For example, to specify routing instance ri1 in logical system ls1, include **context-prefix ls1/ri1**.

The remaining statements under this hierarchy are explained separately.

Options *group-name*—SNMPv3 group name created for the SNMPv3 group.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Documentation • *Configuring the Group*

health-monitor

Syntax	health-monitor { falling-threshold <i>percentage</i> ; interval <i>seconds</i> ; rising-threshold <i>percentage</i> ; }
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure health monitoring. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Health Monitoring on page 111• Understanding Health Monitoring on page 69

history

Syntax	<pre>history <i>history-index</i> { <i>bucket-size</i> <i>number</i>; <i>interface</i> <i>interface-name</i>; <i>interval</i> <i>seconds</i>; <i>owner</i> <i>owner-name</i>; }</pre>
Hierarchy Level	[edit snmp rmon]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Configure RMON history group entries. This RMON feature can be used with the Simple Network Management Protocol (SNMP) agent on the network to monitor all the traffic flowing among devices on all connected LAN segments. The RMON history feature collects statistics in accordance with user-configurable parameters.</p> <p>The history group controls the periodic statistical sampling of data from various types of networks. This group contains configuration entries that specify an interface, polling period, and other parameters. If you use the history statement, you must also configure the interface <i>interface-name</i> statement.</p>
Options	<p>history-index—Provide a number for this history entry.</p> <p>Range: 1 through 65535</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

interface (SNMP)

Syntax	<code>interface [<i>interface-names</i>];</code>
Hierarchy Level	<code>[edit snmp]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the interfaces on which SNMP requests can be accepted.
Default	If you omit this statement, SNMP requests entering the router or switch through any interface are accepted.
Options	<i>interface-names</i> —Names of one or more logical interfaces.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Interfaces on Which SNMP Requests Can Be Accepted on page 108

interface (RMON)

Syntax	<code>interface <i>interface-name</i>;</code>
Hierarchy Level	[edit snmp rmon history <i>history-index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Specify the interface to be monitored in the specified RMON history entry.</p> <p>Only one interface can be specified for a particular RMON history index. There is a one-to-one relationship between the interface and the history index. The interface must be specified in order for the RMON history to be created.</p>
Options	<i>interface-name</i> —Specify the interface to be monitored within the specified entry of the RMON history of Ethernet statistics.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

interval (Health Monitor)

Syntax	<code>interval <i>seconds</i>;</code>
Hierarchy Level	[edit snmp health-monitor]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the interval between sampling of the object being monitored by the health monitor.
Options	<i>seconds</i> —Time between samples, in seconds. Range: 1 through 2147483647 seconds Default: 300 seconds
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Health Monitoring on page 111

interval (RMON)

Syntax	<code>interval <i>seconds</i>;</code>
Hierarchy Level	[edit snmp rmon alarm <i>index</i>], [edit snmp rmon history <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the interval over which data is to be sampled for the specified alarm or interface.
Default	60 sec for alarm sampling. 1800 sec for history sampling.
Options	<i>seconds</i> —Interval at which data is to be sampled for the specified alarm or interface.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

local-engine

```
Syntax  local-engine {
        user username {
            authentication-md5 {
                authentication-password authentication-password;
            }
            authentication-none;
            authentication-sha {
                authentication-password authentication-password;
            }
            privacy-aes128 {
                privacy-password privacy-password;
            }
            privacy-des {
                privacy-password privacy-password;
            }
            privacy-3des {
                privacy-password privacy-password;
            }
            privacy-none {
                privacy-password privacy-password;
            }
        }
    }
```

Hierarchy Level [edit snmp v3 [usm](#)]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure local engine information for the user-based security model (USM).

The remaining statements are explained separately.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Documentation • [Creating SNMPv3 Users on page 112](#)

location

Syntax	<code>location location;</code>
Hierarchy Level	<code>[edit snmp]</code>
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Define the value of the MIB II sysLocation object, which is the physical location of the managed system.
Options	location —Location of the local system. You must enclose the name within quotation marks (" ").
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring the System Location for a Device Running Junos OS</i>

message-processing-model

Syntax	<code>message-processing-model (v1 v2c v3);</code>
Hierarchy Level	<code>[edit snmp v3 target-parameters target-parameter-name parameters]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the message processing model to be used when generating SNMP notifications.
Options	v1 —SNMPv1 message process model. v2c —SNMPv2c message process model. v3 —SNMPv3 message process model.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring the Message Processing Model</i>

name

Syntax	<code>name <i>name</i>;</code>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Set the system name from the command-line interface.
Options	<i>name</i> —System name override.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a Different System Name</i>

nonvolatile

Syntax	<pre>nonvolatile { <i>commit-delay seconds</i>; }</pre>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure options for SNMP Set requests. The statement is explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Commit Delay Timer</i> • <i>commit-delay</i>

notify

Syntax	<pre>notify <i>name</i> { tag <i>tag-name</i>; type (trap inform); }</pre>
Hierarchy Level	[edit snmp v3]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>type inform option added in Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Select management targets for SNMPv3 notifications as well as the type of notifications. Notifications can be either traps or informs.
Options	<p><i>name</i>—Name assigned to the notification.</p> <p><i>tag-name</i>—Notifications are sent to all targets configured with this tag.</p> <p><i>type</i>—Notification type is trap or inform. Traps are unconfirmed notifications. Informs are confirmed notifications.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Inform Notification Type and Target Address</i>• <i>Configuring the SNMPv3 Trap Notification</i>

notify-filter (Applying to the Management Target)

Syntax	<code>notify-filter <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit snmp v3 target-parameters <i>target-parameters-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the notify filter to be used by a specific set of target parameters.
Options	<i>profile-name</i> —Name of the notify filter to apply to notifications.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Applying the Trap Notification Filter</i>

notify-filter (Configuring the Profile Name)

Syntax	<code>notify-filter <i>profile-name</i> { oid <i>oid</i> (include exclude); }</code>
Hierarchy Level	<code>[edit snmp v3]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify a group of MIB objects for which you define access. The notify filter limits the type of traps or informs sent to the network management system.
Options	<i>profile-name</i> —Name assigned to the notify filter. The remaining statement is explained separately.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Trap Notification Filter</i> • <i>oid (SNMP)</i>

notify-view

Syntax	<code>notify-view view-name;</code>
Hierarchy Level	<code>[edit snmp v3 vacm access group group-name (default-context-prefix context-prefix context-prefix) security-model (any usm v1 v2c) security-level (authentication none privacy)]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Associate the notify view with a community (for SNMPv1 or SNMPv2c clients) or a group name (for SNMPv3 clients).
Options	view-name —Name of the view to which the SNMP user group has access.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring MIB Views on page 108• Configuring the Notify View

oid

Syntax	<code>oid object-identifier (exclude include);</code>
Hierarchy Level	<code>[edit snmp view view-name]</code>
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Specify an object identifier (OID) used to represent a subtree of MIB objects.
Options	exclude —Exclude the subtree of MIB objects represented by the specified OID. include —Include the subtree of MIB objects represented by the specified OID. object-identifier —OID used to represent a subtree of MIB objects. All MIB objects represented by this statement have the specified OID as a prefix. You can specify the OID using either a sequence of dotted integers or a subtree name.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring MIB Views on page 108

oid (SNMPv3)

Syntax	oid <i>oid</i> (include exclude);
Hierarchy Level	[edit snmp v3 notify-filter <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify an object identifier (OID) used to represent a subtree of MIB objects. This OID is a prefix that the represented MIB objects have in common.
Options	<p>exclude—Exclude the subtree of MIB objects represented by the specified OID.</p> <p>include—Include the subtree of MIB objects represented by the specified OID.</p> <p>oid—Object identifier used to represent a subtree of MIB objects. All MIB objects represented by this statement have the specified OID as a prefix. You can specify the OID using either a sequence of dotted integers or a subtree name.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • SNMPv3 Overview on page 62 • Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63 • Configuring SNMP on page 101 • Configuring the SNMPv3 Trap Notification

owner

Syntax	<code>owner owner-name;</code>
Hierarchy Level	<code>[edit snmp rmon history index]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the user or group responsible for this RMON history configuration.
Options	owner-name —User or group responsible for this configuration. Range: 0 through 32 alphanumeric characters
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

parameters

Syntax	<pre>parameters { message-processing-model (v1 v2c v3); security-level (none authentication privacy); security-model (usm v1 v2c); security-name security-name; }</pre>
Hierarchy Level	<code>[edit snmp v3 target-parameters target-parameters-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure a set of target parameters for message processing and security. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Defining and Configuring the Trap Target Parameters

port

Syntax	<code>port port-number;</code>
Hierarchy Level	[edit snmp v3 target-address <i>target-address-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure a UDP port number for an SNMP target.
Default	If you omit this statement, the default port is 162.
Options	<i>port-number</i> —Port number for the SNMP target.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Port</i>

privacy-3des

Syntax	<pre>privacy-3des { privacy-password <i>privacy-password</i>; }</pre>
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the triple Data Encryption Standard (3DES) as the privacy type for the SNMPv3 user.
Options	<p>privacy-password <i>privacy-password</i>—Password that a user enters. The password is then converted into a key that is used for encryption.</p> <p>SNMPv3 has special requirements when you create plain-text passwords on a router or switch:</p> <ul style="list-style-type: none">• The password must be at least eight characters long.• The password can include alphabetic, numeric, and special characters, but it cannot include control characters.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the SNMPv3 Encryption Type</i>

privacy-aes128

Syntax	<pre>privacy-aes128 { privacy-password <i>privacy-password</i>; }</pre>
Hierarchy Level	<pre>[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>Configure the Advanced Encryption Standard encryption algorithm (CFB128-AES-128 Privacy Protocol) for the SNMPv3 user.</p>
Options	<p>privacy-password <i>privacy-password</i>—Password that a user enters. The password is then converted into a key that is used for encryption.</p> <p>SNMPv3 has special requirements when you create plain-text passwords on a router or switch:</p> <ul style="list-style-type: none"> • The password must be at least eight characters long. • The password can include alphabetic, numeric, and special characters, but it cannot include control characters.
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the SNMPv3 Encryption Type</i>

privacy-des

Syntax	<code>privacy-des { privacy-password <i>privacy-password</i>; }</code>
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the Data Encryption Standard (DES) as the privacy type for the SNMPv3 user.
Options	privacy-password <i>privacy-password</i> —Password that a user enters. The password is then converted into a key that is used for encryption. SNMPv3 has special requirements when you create plain-text passwords on a router or switch: <ul style="list-style-type: none">• The password must be at least eight characters long.• The password can include alphabetic, numeric, and special characters, but it cannot include control characters.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the SNMPv3 Encryption Type</i>

privacy-none

Syntax	<code>privacy-none;</code>
Hierarchy Level	[edit snmp v3 usm local-engine user <i>username</i>], [edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure that no encryption be used for the SNMPv3 user.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the SNMPv3 Encryption Type</i>

privacy-password

Syntax	<code>privacy-password <i>privacy-password</i>;</code>
Hierarchy Level	<code>[edit snmp v3 usm local-engine user <i>username</i> privacy-3des],</code> <code>[edit snmp v3 usm local-engine user <i>username</i> privacy-aes128],</code> <code>[edit snmp v3 usm local-engine user <i>username</i> privacy-des],</code> <code>[edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i> privacy-3des],</code> <code>[edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i> privacy-aes128],</code> <code>[edit snmp v3 usm remote-engine <i>engine-id</i> user <i>username</i> privacy-des]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure a privacy password for the SNMPv3 user.
Options	<p><i>privacy-password</i>—Password that a user enters. The password is then converted into a key that is used for encryption.</p> <p>SNMPv3 has special requirements when you create plain-text passwords on a router or switch:</p> <ul style="list-style-type: none"> • The password must be at least eight characters long. • The password can include alphabetic, numeric, and special characters, but it cannot include control characters.
Required Privilege Level	<p><code>snmp</code>—To view this statement in the configuration.</p> <p><code>snmp-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the SNMPv3 Encryption Type</i>

read-view

Syntax	<code>read-view view-name;</code>
Hierarchy Level	[edit snmp v3 vacm access group <i>group-name</i> (default-context-prefix context-prefix <i>context-prefix</i>) security-model (any usm v1 v2c) security-level (authentication none privacy)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Associate the read-only view with a community (for SNMPv1 or SNMPv2c clients) or a group name (for SNMPv3 clients).
Options	<i>view-name</i> —The name of the view to which the SNMP user group has access.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Read View</i>• Configuring MIB Views on page 108

remote-engine

Syntax	<pre> remote-engine <i>engine-id</i> { user <i>username</i> { authentication-md5 { authentication-password <i>authentication-password</i>; } authentication-none; authentication-sha { authentication-password <i>authentication-password</i>; } privacy-aes128 { privacy-password <i>privacy-password</i>; } privacy-des { privacy-password <i>privacy-password</i>; } privacy-3des { privacy-password <i>privacy-password</i>; } privacy-none { privacy-password <i>privacy-password</i>; } } } </pre>
Hierarchy Level	[edit snmp v3 usm]
Release Information	<p>Statement introduced in Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure the remote engine information for the user-based security model (USM). To send inform messages to an SNMPv3 user on a remote device, you must configure the engine identifier for the SNMP agent on the remote device where the user resides.
Options	<p><i>engine-id</i>—Specify engine identifier in hexadecimal format. Used to compute the security digest for authenticating and encrypting packets sent to a user on the remote host.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the Remote Engine and Remote User</i>

request-type

Syntax	request-type (get-next-request get-request walk-request);
Hierarchy Level	[edit snmp rmon alarm <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Extend monitoring to a specific SNMP object instance (get-request), to all object instances belonging to a MIB branch (walk-request), or to the next object instance after the instance specified in the configuration (get-next-request).
Default	walk-request
Options	get-next-request —Perform an SNMP get next request. get-request —Perform an SNMP get request. walk-request —Perform an SNMP walk request.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

retry-count

Syntax	<code>retry-count <i>number</i>;</code>
Hierarchy Level	[edit snmp v3 target-address <i>target-address-name</i>]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	Configure the retry count for SNMP informs.
Options	<i>number</i> —Maximum number of times the inform is transmitted if no acknowledgment is received. If no acknowledgment is received after the inform is transmitted the maximum number of times, the inform message is discarded. Default: 3 times
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring SNMP Informs on page 117• <i>timeout (SNMP)</i>

rising-event-index

Syntax	<code>rising-event-index <i>index</i>;</code>
Hierarchy Level	[edit snmp rmon alarm index]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the index of the event entry that is used when a rising alarm threshold is exceeded. The rising-event index is specified when you configure an SNMP RMON alarm. If this value is zero, no event is triggered.
Options	<i>index</i> —Index of the event entry that is used when a rising threshold is exceeded. Range: 0 through 65,535 Default: 0
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

rising-threshold (Health Monitor)

Syntax	rising-threshold <i>percentage</i> ;
Hierarchy Level	[edit snmp health-monitor]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Set the upper threshold for the monitored object when you configure a health monitor alarm. By setting a rising and a falling threshold for a monitored object, you can be alerted whenever the value of the variable falls outside the allowable operational range.
Options	<i>percentage</i> —Upper threshold for the alarm entry. Range: 1 through 100 Default: 80 percent of the maximum possible value
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Health Monitoring on page 111• falling-threshold on page 226

rising-threshold (RMON)

Syntax	<code>rising-threshold <i>integer</i>;</code>
Hierarchy Level	<code>[edit snmp rmon alarm <i>index</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the upper threshold for the sampled variable (monitored object) when you configure an SNMP RMON alarm. By setting a rising and a falling threshold for a variable, you can be alerted whenever the value of the variable falls outside the allowable operational range.
Options	<i>integer</i> —Upper threshold for the alarm entry. Range: -2,147,483,648 through 2,147,483,647
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

rmon

```
Syntax  rmon {
        alarm index {
            description description;
            falling-event-index index;
            falling-threshold integer;
            falling-threshold-interval seconds;
            interval seconds;
            request-type;
            rising-event-index index;
            rising-threshold integer;
            sample-type (absolute-value | delta-value);
            startup-alarm (falling-alarm | rising-alarm | rising-or-falling alarm);
            syslog-subtag syslog-subtag;
            variable oid-variable;
        }
        event index {
            community community-name;
            description description;
            type (RMON Notification) type;
        }
        history history-index {
            bucket-size number;
            interface interface-name;
            interval seconds;
            owner owner-name;
        }
    }
```

Hierarchy Level [edit snmp]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Provide comprehensive network fault diagnosis, planning, and performance tuning information. RMON delivers this information in nine groups of monitoring elements, each providing specific sets of data to meet common network monitoring requirements. Each group is optional, so that vendors do not need to support all the groups within the MIB.

Junos OS supports the RMON statistics, history, alarm, and event groups.

The remaining statements are explained separately.

Default Disabled.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Documentation

- [RMON MIB Event, Alarm, Log, and History Control Tables on page 66](#)
- [Monitoring RMON MIB Tables on page 118](#)

- [Understanding RMON on page 65](#)
- [Junos OS Network Management Configuration Guide](#)

sample-type

Syntax	sample-type (absolute-value delta-value);
Hierarchy Level	[edit snmp rmon alarm <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the method of sampling the selected variable (monitored object). When you configure an SNMP RMON alarm, you can specify the sample type.
Options	absolute-value —Actual value of the selected variable is used when comparing against the thresholds. delta-value —Difference between samples of the selected variable is used when comparing against the thresholds.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

security-level (Defining Access Privileges)

Syntax	<pre>security-level (authentication none privacy) { notify-view view-name; read-view view-name; write-view view-name; }</pre>
Hierarchy Level	[edit snmp v3 vacm access group <i>group-name</i> (default-context-prefix context-prefix <i>context-prefix</i>) security-model (any usm v1 v2c)]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Define the security level used for access privileges.
Default	none
Options	<p>authentication—Provide authentication but no encryption.</p> <p>none—No authentication and no encryption.</p> <p>privacy—Provide authentication and encryption.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Security Level</i>

security-level (Generating SNMP Notifications)

Syntax	security-level (authentication none privacy);
Hierarchy Level	[edit snmp v3 target-parameters <i>target-parameters-name</i> parameters]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the security level to use when generating SNMP notifications.
Default	none
Options	authentication —Provide authentication but no encryption. none —No authentication and no encryption. privacy —Provide authentication and encryption.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Security Level</i>

security-model (Access Privileges)

Syntax	<code>security-model (usm v1 v2c);</code>
Hierarchy Level	<code>[edit snmp v3 vacm access group <i>group-name</i> (default-context-prefix context-prefix <i>context-prefix</i>)]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the security model for an SNMPv3 group. The security model is used to determine access privileges for the group.
Options	<code>usm</code> —SNMPv3 security model. <code>v1</code> —SNMPv1 security model. <code>v2c</code> —SNMPv2c security model.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Security Model</i>

security-model (Group)

Syntax	<pre>security-model (usm v1 v2c) { security-name security-name { group group-name; } }</pre>
Hierarchy Level	[edit snmp v3 vacm security-to-group]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Define a security model for a group.
Options	usm —SNMPv3 security model. v1 —SNMPv1 security model. v2c —SNMPv2c security model.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Security Model</i>

security-model (SNMP Notifications)

Syntax	<pre>security-model (usm v1 v2c);</pre>
Hierarchy Level	[edit snmp v3 target-parameters target-parameters-name parameters]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the security model for an SNMPv3 group. The security model is used for SNMP notifications.
Options	usm —SNMPv3 security model. v1 —SNMPv1 security model. v2c —SNMPv2c security model.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Security Model</i>

security-name (Community String)

Syntax	<code>security-name <i>security-name</i>;</code>
Hierarchy Level	<code>[edit snmp v3 <i>snmp-community</i> <i>community-index</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Associate a community string with the security name of a user. The community string, which is used for SNMPv1 and SNMPv2c clients in an SNMPv3 system, is configured at the <code>[edit snmp v3 snmp-community <i>community-index</i>]</code> hierarchy level.
Options	<i>security-name</i> —Name that is used for messaging security and user access control.




NOTE: The security name must match the configured security name at the `[edit snmp v3 target-parameters target-parameters-name parameters]` hierarchy level when you configure traps or informs.

Required Privilege	snmp—To view this statement in the configuration.
Level	snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Security Names</i>

security-name (Security Group)

Syntax	<code>security-name <i>security-name</i> { <i>group</i> <i>group-name</i>; }</code>
Hierarchy Level	[edit snmp v3 vacm security-to-group security-model (usm v1 v2c)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Associate a group or a community string with a configured security group.
Options	security-name —Username configured at the [edit snmp v3 usm local-engine user <i>username</i>] hierarchy level. For SNMPv1 and SNMPv2c, the security name is the community string configured at the [edit snmp v3 snmp-community <i>community-index</i>] hierarchy level.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Assigning Security Names to Groups</i>

security-name (SNMP Notifications)

Syntax	<code>security-name <i>security-name</i>;</code>
Hierarchy Level	<code>[edit snmp v3 target-parameters <i>target-parameters-name</i> parameters]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the security name used when generating SNMP notifications.
Options	<i>security-name</i> —If the SNMPv3 USM security model is used, identify the user when generating the SNMP notification. If the v1 or v2c security models are used, identify the SNMP community used when generating the notification.
<div>  <p>NOTE: The access privileges for the group associated with this security name must allow this notification to be sent.</p> <p>If you are using the v1 or v2 security models, the security name at the <code>[edit snmp v3 vacm security-to-group]</code> hierarchy level must match the security name at the <code>[edit snmp v3 snmp-community <i>community-index</i>]</code> hierarchy level.</p> </div>	
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Security Name</i>

security-to-group

Syntax	<pre>security-to-group { security-model (usm v1 v2c) { group group-name; security-name security-name; } }</pre>
Hierarchy Level	[edit snmp v3 vacm]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	<p>Configure the group to which a specific SNMPv3 security name belongs. The security name is used for messaging security.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Assigning Security Model and Security Name to a Group</i>

snmp

```

Syntax  snmp {
    client-list client-list-name {
        ip-addresses;
    }
    community community-name {
        authorization authorization;
        client-list-name client-list-name;
        clients {
            address restrict;
        }
        logical-system logical-system-name {
            routing-instance routing-instance-name {
                clients {
                    addresses;
                }
            }
        }
        routing-instance routing-instance-name {
            clients {
                addresses;
            }
        }
        view view-name;
    }
    contact contact;
    description description;
    filter-duplicates;
    filter-interfaces;
    health-monitor {
        falling-threshold integer;
        interval seconds;
        rising-threshold integer;
    }
    interface [ interface-names ];
    location location;
    name name;
    nonvolatile {
        commit-delay seconds;
    }
    rmon {
        alarm index {
            description description;
            falling-event-index index;
            falling-threshold integer;
            falling-threshold-interval seconds;
            interval seconds;
            request-type;
            rising-event-index index;
            rising-threshold integer;
            sample-type (absolute-value | delta-value);
            startup-alarm (falling-alarm | rising-alarm | rising-or-falling alarm);
            syslog-subtag syslog-subtag;
        }
    }
}

```

```

    variable oid-variable;
}
event index {
    community community-name;
    description description;
    type type;
}
history history-index {
    bucket-size number;
    interface interface-name;
    interval seconds;
    owner owner-name;
}
}
traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable> <match
        regular-expression>;
    flag flag;
}
trap-group group-name {
    categories {
        category;
    }
    destination-port port-number;
    routing-instance routing-instance-name;
    targets {
        address;
    }
    version (all | v1 | v2);
}
trap-options {
    agent-address outgoing-interface;
    source-address address;
}
v3 {
    notify name {
        tag tag-name;
        type trap;
    }
    notify-filter profile-name {
        oid object-identifier (include | exclude);
    }
    snmp-community community-index {
        community-name community-name;
        security-name security-name;
        tag tag-name;
    }
    target-address target-address-name {
        address address;
        address-mask address-mask;
        logical-system logical-system;
        port port-number;
        retry-count number;
        routing-instance routing-instance-name;
        tag-list tag-list;
        target-parameters target-parameters-name;
    }
}

```



```

    timeout seconds;
}
target-parameters target-parameters-name {
    notify-filter profile-name;
    parameters {
        message-processing-model (v1 | v2c | V3);
        security-level (authentication | none | privacy);
        security-model (usm | v1 | v2c);
        security-name security-name;
    }
}
usm {
    local-engine {
        user username {
            authentication-sha {
                authentication-password authentication-password;
            }
            authentication-md5 {
                authentication-password authentication-password;
            }
            authentication-none;
            privacy-aes128 {
                privacy-password privacy-password;
            }
            privacy-des {
                privacy-password privacy-password;
            }
            privacy-3des {
                privacy-password privacy-password;
            }
            privacy-none;
        }
    }
    remote-engine engine-id {
        user username {
            authentication-sha {
                authentication-password authentication-password;
            }
            authentication-md5 {
                authentication-password authentication-password;
            }
            authentication-none;
            privacy-aes128 {
                privacy-password privacy-password;
            }
            privacy-des {
                privacy-password privacy-password;
            }
            privacy-3des {
                privacy-password privacy-password;
            }
            privacy-none {
                privacy-password privacy-password;
            }
        }
    }
}

```

```

}
vacm {
  access {
    group group-name {
      (default-context-prefix | context-prefix context-prefix) {
        security-model (any | usm | v1 | v2c) {
          security-level (authentication | none | privacy) {
            notify-view view-name;
            read-view view-name;
            write-view view-name;
          }
        }
      }
    }
  }
}
security-to-group {
  security-model (usm | v1 | v2c) {
    security-name security-name {
      group group-name;
    }
  }
}
}
view view-name {
  oid object-identifier (include | exclude);
}
}

```

Hierarchy Level [edit]

Release Information Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure SNMP.

The remaining statements are explained separately.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Documentation

- *Understanding the Implementation of SNMP*
- [Configuring SNMP on page 101](#)

snmp-community

Syntax	snmp-community <i>community-index</i> { <i>community-name</i> <i>community-name</i> ; <i>security-name</i> <i>security-name</i> ; tag <i>tag-name</i> ; }
Hierarchy Level	[edit snmp v3]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Configure the SNMP community.
Options	<i>community-index</i> —(Optional) String that identifies an SNMP community. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the SNMPv3 Community</i>

source-address (SNMP)

Syntax	source-address <i>address</i> ;
Hierarchy Level	[edit snmp trap-options]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the source address of every SNMP trap packet sent by this switch to a single address regardless of the outgoing interface. If the source address is not specified, the default is to use the address of the outgoing interface as the source address.
Options	<p><i>address</i>—Source address of SNMP traps. You can configure the source address of trap packets two ways: lo0 or a valid IPv4 address configured on one of the interfaces. The value lo0 indicates that the source address of all SNMP trap packets is set to the lowest loopback address configured at interface lo0.</p> <p>Default: Disabled. (The source address is the address of the outgoing interface.)</p>
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the Source Address for SNMP Traps</i>

startup-alarm

Syntax	startup-alarm (falling-alarm rising-alarm rising-or-falling-alarm);
Hierarchy Level	[edit snmp rmon alarm <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set an initial alarm that is sent after the configured SNMP RMON alarm becomes active.
Default	rising-or-falling-alarm
Options	<p>falling-alarm—Generated if the first sample after the alarm becomes active is equal to or greater than the falling threshold.</p> <p>rising-alarm—Generated if the first sample after the alarm becomes active is equal to or greater than the rising threshold.</p> <p>rising-or-falling-alarm—Generated if the first sample after the alarm entry becomes active is equal to or greater than either the rising threshold or the falling threshold.</p>
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

syslog-subtag

Syntax	<code>syslog-subtag <i>syslog-subtag</i>;</code>
Hierarchy Level	[edit snmp rmon alarm <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Add the syslog-subtag tag to the system log message. The tag should not exceed 80 uppercase characters.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Monitoring RMON MIB Tables on page 118 • Understanding RMON on page 65 • Junos OS Network Management Configuration Guide

tag (Configuring Notification Targets)

Syntax	<code>tag <i>tag-name</i>;</code>
Hierarchy Level	[edit snmp v3 notify <i>name</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a set of target addresses to receive SNMP traps or informs (for IPv4 packets only).
Options	tag-name —Define the target addresses to which an SNMP notification is sent. Target addresses containing the same tag in their tag list are sent the same notification. The tag-name is not included in the notification.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • SNMPv3 Overview on page 62 • Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63 • Configuring SNMP on page 101 • Configuring the SNMPv3 Trap Notification

tag (Configuring the SNMP Community)

Syntax	<code>tag tag-name;</code>
Hierarchy Level	<code>[edit snmp v3 snmp-community community-index]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a set of SNMP managers that are authorized to use a community string.
Options	tag-name —Identify the set of addresses for the SNMP managers authorized to use the community string.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• SNMPv3 Overview on page 62• Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63• Configuring SNMP on page 101• Configuring the SNMPv3 Trap Notification

tag-list

Syntax	<code>tag-list tag-list;</code>
Hierarchy Level	<code>[edit snmp v3 target-address target-address-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure an SNMP tag list used to select target addresses.
Options	tag-list —Define sets of target addresses (tags). To specify more than one tag, specify the tag names as a space-separated list enclosed within double quotes.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Trap Target Address

target-address

Syntax	<pre>target-address <i>target-address-name</i> { address <i>address</i>; address-mask <i>address-mask</i>; port <i>port-number</i>; retry-count <i>number</i>; tag-list <i>tag-list</i>; target-parameters <i>target-parameters-name</i>; timeout <i>seconds</i>; }</pre>
Hierarchy Level	[edit snmp v3]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Configure the address of an SNMP management application and the parameters to be used in sending notifications.
Options	<p><i>target-address-name</i>—String that identifies the target address.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Understanding the Implementation of SNMP • SNMP MIBs Support on page 70 • SNMP Traps Support on page 86 • snmp on page 267 • Configuring SNMP on page 101 • Monitoring SNMP on page 118 • Example: Configuring SNMP on page 125

target-parameters

Syntax At the `[edit snmp v3]` hierarchy level:

```
target-parameters target-parameters-name {  
  profile-name;  
  parameters {  
    message-processing-model (v1 | v2c | V3);  
    security-level (authentication | none | privacy);  
    security-model (usm | v1 | v2c);  
    security-name security-name;  
  }  
}
```

At the `[edit snmp v3 target-address target-address-name]` hierarchy level:

```
target-parameters target-parameters-name;
```

Hierarchy Level `[edit snmp v3]`
`[edit snmp v3 target-address target-address-name]`

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure the message processing and security parameters for sending notifications to a particular management target. The target parameters are configured at the `[edit snmp v3]` hierarchy level. The remaining statements at this level are explained separately.

Then apply the target parameters configured at the `[edit snmp v3 target-parameters target-parameters-name]` hierarchy level to the target address configuration at the `[edit snmp v3]` hierarchy level.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Documentation

- *Defining and Configuring the Trap Target Parameters*
- *Applying Target Parameters*

targets

Syntax	<code>targets { <i>address</i>; }</code>
Hierarchy Level	<code>[edit snmp trap-group <i>group-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure one or more systems to receive SNMP traps.
Options	<i>address</i> —IPv4 or IPv6 address of the system to receive traps. You must specify an address, not a hostname.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring SNMP Trap Groups on page 106

timeout

Syntax	<code>timeout <i>seconds</i>;</code>
Hierarchy Level	<code>[edit snmp v3 target-address <i>target-address-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the timeout period (in seconds) for SNMP informs.
Default	15 seconds
Options	<i>seconds</i> —Number of seconds to wait for an inform acknowledgment. If no acknowledgment is received within the timeout period, the inform is retransmitted.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding the Implementation of SNMP • Configuring SNMP Informs on page 117 • retry-count (SNMPv3) on page 253

traceoptions (SNMP)

Syntax	<pre> traceoptions { file <i>filename</i> <files <i>number</i>> <match <i>regular-expression</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; no-remote-trace; } </pre>
Hierarchy Level	[edit snmp]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Track the activities of SNMP agents on the switch and record the information in log files.



NOTE: The **traceoptions** statement is not supported on the QFabric system.

The output of the tracing operations is placed into log files in the **/var/log** directory. Each log file is named after the SNMP agent that generates it. The following logs are created in the **/var/log** directory when the **traceoptions** statement is used:

- chassisd
- craftd
- ilmid
- mib2d
- rmopd
- serviced
- snmpd

Options **file *filename***—By default, the name of the log file that records trace output is the name of the process being traced (for example, mib2d or snmpd). Use this option to specify another name.

files *number*—(Optional) Maximum number of trace files per SNMP subagent. When a trace file (for example, snmpd) reaches its maximum size, it is archived by being renamed to snmpd.0. The previous snmpd.1 is renamed to snmpd.2, and so on. The oldest archived file is deleted.

Range: 2 through 1000 files

Default: 10 files

flag *flag*—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements:

- **all**—Log all SNMP events.

- **configuration**—Log reading of configuration at the **[edit snmp]** hierarchy level.
- **database**—Log events involving storage and retrieval in the events database.
- **events**—Log important events.
- **general**—Log general events.
- **interface-stats**—Log physical and logical interface statistics.
- **nonvolatile-sets**—Log nonvolatile SNMP set request handling.
- **pdu**—Log SNMP request and response packets.
- **policy**—Log policy processing.
- **protocol-timeouts**—Log SNMP response timeouts.
- **routing-socket**—Log routing socket calls.
- **server**—Log communication with processes that are generating events.
- **subagent**—Log subagent restarts.
- **timer-events**—Log internally generated events.
- **varbind-error**—Log variable binding errors.

match *regular-expression*—(Optional) Refine the output to include lines that contain the regular expression.

size *size*—(Optional) Maximum size, in kilobytes (KB), of each trace file before it is closed and archived.

Range: 10 KB through 1 GB

Default: 1000 KB

world-readable | no-world-readable—(Optional) By default, log files can be accessed only by the user who configures the tracing operation. The **world-readable** option enables any user to read the file. To explicitly set the default behavior, use the **no-world-readable** option.

Required Privilege Level snmp—To view this statement in the configuration.
 snmp-control—To add this statement to the configuration.

Related Documentation

- [Understanding Tracing and Logging Operations on page 11](#)
- [Tracing SNMP Activity on a Device Running Junos OS on page 120](#)

trap-group

Syntax	<pre>trap-group group-name { categories { category; } destination-port port-number; targets { address; } }</pre>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 11.1 for QFX Series switches. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Create a named group of hosts to receive the specified trap notifications. The name of the trap group is embedded in SNMP trap notification packets as one variable binding (varbind) known as the community name. At least one trap group must be configured for SNMP traps to be sent.
Options	<p>group-name—Name of the trap group. If the name includes spaces, enclose it in quotation marks (" ").</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring SNMP Trap Groups on page 106

trap-options

Syntax	<pre>trap-options { agent-address outgoing-interface; source-address address; }</pre>
Hierarchy Level	[edit snmp]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	<p>Using SNMP trap options, you can set the source address of every SNMP trap packet sent by the router or switch to a single address, regardless of the outgoing interface. In addition, you can set the agent address of each SNMPv1 trap. For more information about the contents of SNMPv1 traps, see RFC 1157.</p> <p>The remaining statements are explained separately.</p>
Default	Disabled
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SNMP Trap Options</i>

type (RMON Notification)

Syntax	<code>type type;</code>
Hierarchy Level	<code>[edit snmp rmon event <i>index</i>]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the type of notification generated when a rising or falling threshold is crossed.
Default	<code>log-and-trap</code>
Options	type —Type of notification. It can be one of the following: <ul style="list-style-type: none">• log—Add an entry to the logTable object.• log-and-trap—Send an SNMP trap and add a log entry.• none—No notifications are sent.• snmptrap—Send an SNMP trap.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RMON MIB Event, Alarm, Log, and History Control Tables on page 66• Configuring RMON Alarms and Events on page 109• Monitoring RMON MIB Tables on page 118• Understanding RMON on page 65• Junos OS Network Management Configuration Guide

type

Syntax	<code>type (inform trap);</code>
Hierarchy Level	<code>[edit snmp v3 notify <i>name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. inform option added in Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the type of SNMP notification.
Options	inform —Defines the type of notification as an inform. SNMP informs are confirmed notifications. trap —Defines the type of notification as a trap. SNMP traps are unconfirmed notifications.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring SNMP Informs on page 117 • Configuring the SNMPv3 Trap Notification

user

Syntax	<code>user <i>username</i>;</code>
Hierarchy Level	<code>[edit snmp v3 usm local-engine],</code> <code>[edit snmp v3 usm remote-engine <i>engine-id</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify a user associated with an SNMPv3 group on a local or remote SNMP engine.
Options	<i>username</i> —SNMPv3 user-based security model (USM) username.
Required Privilege Level	<code>snmp</code> —To view this statement in the configuration. <code>snmp-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Creating SNMPv3 Users on page 112

usm

```

Syntax  usm {
        local-engine {
            user username {
                authentication-md5 {
                    authentication-password authentication-password;
                }
                authentication-none;
                authentication-sha {
                    authentication-password authentication-password;
                }
                privacy-aes128 {
                    privacy-password privacy-password;
                }
                privacy-des {
                    privacy-password privacy-password;
                }
                privacy-3des {
                    privacy-password privacy-password;
                }
                privacy-none {
                    privacy-password privacy-password;
                }
            }
        }
        remote-engine engine-id {
            user username {
                authentication-md5 {
                    authentication-password authentication-password;
                }
                authentication-none;
                authentication-sha {
                    authentication-password authentication-password;
                }
                privacy-aes128 {
                    privacy-password privacy-password;
                }
                privacy-des {
                    privacy-password privacy-password;
                }
                privacy-3des {
                    privacy-password privacy-password;
                }
                privacy-none {
                    privacy-password privacy-password;
                }
            }
        }
    }
}

```

Hierarchy Level [edit snmp v3]

Release Information Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure user-based security model (USM) information.

The remaining statements are explained separately.

Required Privilege snmp—To view this statement in the configuration.
Level snmp-control—To add this statement to the configuration.

Related • [Creating SNMPv3 Users on page 112](#)
Documentation • *Configuring the Remote Engine and Remote User*

v3

```

Syntax v3 {
    notify name {
        tag tag-name;
        type trap;
    }
    notify-filter profile-name {
        oid object-identifier (include | exclude);
    }
    snmp-community community-index {
        community-name community-name;
        security-name security-name;
        tag tag-name;
    }
    target-address target-address-name {
        address address;
        address-mask address-mask;
        port port-number;
        retry-count number;
        tag-list tag-list;
        target-parameters target-parameters-name;
        timeout seconds;
    }
    target-parameters target-parameters-name {
        notify-filter profile-name;
        parameters {
            message-processing-model (v1 | v2c | v3);
            security-level (authentication | none | privacy);
            security-model (usm | v1 | v2c);
            security-name security-name;
        }
    }
    usm {
        local-engine {
            user username {
                authentication-md5 {
                    authentication-password authentication-password;
                }
                authentication-sha {
                    authentication-password authentication-password;
                }
                authentication-none;
            }
            privacy-aes128 {
                privacy-password privacy-password;
            }
            privacy-des {
                privacy-password privacy-password;
            }
            privacy-3des {
                privacy-password privacy-password;
            }
            privacy-none;
        }
    }
}

```

```

}
remote-engine engine-id {
  user username {
    authentication-md5 {
      authentication-password authentication-password;
    }
    authentication-sha {
      authentication-password authentication-password;
    }
    authentication-none;
    privacy-aes128 {
      privacy-password privacy-password;
    }
    privacy-des {
      privacy-password privacy-password;
    }
    privacy-3des {
      privacy-password privacy-password;
    }
    privacy-none {
      privacy-password privacy-password;
    }
  }
}
}
vacm {
  access {
    group group-name {
      (default-context-prefix | context-prefix context-prefix) {
        security-model (any | usm | v1 | v2c) {
          security-level (authentication | none | privacy) {
            notify-view view-name;
            read-view view-name;
            write-view view-name;
          }
        }
      }
    }
  }
}
security-to-group {
  security-model (usm | v1 | v2c) {
    security-name security-name {
      group group-name;
    }
  }
}
}
}

```

Hierarchy Level [edit snmp]

Release Information Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description	Configure SNMPv3. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63

vacm

Syntax	<pre> vacm { access { group group-name { (default-context-prefix context-prefix context-prefix){ security-model (any usm v1 v2c) { security-level (authentication none privacy) { notify-view view-name; read-view view-name; write-view view-name; } } } } } security-to-group { security-model (usm v1 v2c); security-name security-name { group group-name; } } } </pre>
Hierarchy Level	[edit snmp v3]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Configure view-based access control model (VACM) information. The remaining statements are explained separately.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Defining Access Privileges for an SNMP Group


variable

Syntax	<code>variable <i>oid-variable</i>;</code>
Hierarchy Level	[edit snmp rmon alarm <i>index</i>]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the object identifier (OID) of the MIB object (also called variable) to be monitored when you configure an SNMP RMON alarm. If the value of the monitored variable exceeds the configured rising threshold or falling threshold, an alarm is triggered and a corresponding event may be generated.
Options	<i>oid-variable</i> —OID of the MIB variable that is being monitored. The OID can be a dotted decimal (for example, 1.3.6.1.2.1.2.1.2.1.10.1) or the name of the MIB object—for example, ifInOctets.1 .
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Configuring RMON Alarms and Events on page 109 • Monitoring RMON MIB Tables on page 118 • Understanding RMON on page 65 • Junos OS Network Management Configuration Guide

version

Syntax	version (all v1 v2);
Hierarchy Level	[edit snmp trap-group <i>group-name</i>]
Release Information	Statement introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Specify the version number of SNMP traps.
Default	all—Send an SNMPv1 and SNMPv2 trap for every trap condition.
Options	all—Send an SNMPv1 and SNMPv2 trap for every trap condition. v1—Send SNMPv1 traps only. v2—Send SNMPv2 traps only.
Required Privilege Level	snmp—To view this statement in the configuration. snmp-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring SNMP Trap Groups on page 106

view (Configuring a MIB View)

Syntax	<pre>view view-name { oid object-identifier (include exclude); }</pre>
Hierarchy Level	[edit snmp]
Release Information	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Define a MIB view. A MIB view identifies a group of MIB objects. Each MIB object in a view has a common OID prefix. Each object identifier represents a subtree of the MIB object hierarchy. The view statement uses a view to specify a group of MIB objects on which to define access. To enable a view, you must associate the view with a community by including the view statement at the [edit snmp community community-name] hierarchy level.</p>
	<div>  <p>NOTE: To remove an OID completely, use the delete view all oid oid-number command but omit the include parameter.</p> </div>
Options	<p>view-name—Name of the view.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>snmp—To view this statement in the configuration.</p> <p>snmp-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring MIB Views on page 108 • <i>Associating MIB Views with an SNMP User Group</i> • community on page 218

view (Associating MIB View with a Community)

Syntax	<code>view view-name;</code>
Hierarchy Level	<code>[edit snmp community community-name]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Associate a view with a community. A view represents a group of MIB objects.
Options	view-name —Name of the view. You must use a view name already configured in the view statement at the <code>[edit snmp]</code> hierarchy level.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SNMP Communities</i>

write-view

Syntax	<code>write-view view-name;</code>
Hierarchy Level	<code>[edit snmp v3 vacm access group group-name (default-context-prefix context-prefix context-prefix) security-model (any usm v1 v2c) security-level (authentication none privacy)]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series switches. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Associate the write view with a community (for SNMPv1 or SNMPv2c clients) or a group name (for SNMPv3 clients).
Options	view-name —Name of the view for which the SNMP user group has write permission.
Required Privilege Level	snmp —To view this statement in the configuration. snmp-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring MIB Views on page 108• <i>Configuring the Write View</i>

CHAPTER 12

System Logging

- [archive \(All System Log Files\) on page 294](#)
- [archive \(Individual System Log File\) on page 296](#)
- [console \(System Logging\) on page 297](#)
- [explicit-priority on page 298](#)
- [facility-override on page 298](#)
- [file \(System Logging\) on page 299](#)
- [files on page 300](#)
- [host on page 301](#)
- [log-prefix \(System\) on page 303](#)
- [match on page 303](#)
- [size \(System\) on page 304](#)
- [structured-data on page 305](#)
- [syslog \(System\) on page 306](#)
- [time-format on page 308](#)
- [user \(System Logging\) on page 309](#)

archive (All System Log Files)

Syntax	<code>archive <files <i>number</i>> <size <i>size</i>> <start-time <i>time</i>> <transfer-interval <i>interval</i>> <binary-data no-binary-data>; <world-readable no-world-readable> ;</code>
Hierarchy Level	[edit system syslog]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure archiving properties for all system log files.
Options	<p>files <i>number</i>—Maximum number of archived log files to retain. When the Junos OS logging utility has written a defined maximum amount of data to a log file logfile, it closes the file, compresses it, and renames it logfile.0.gz (the amount of data is determined by the size statement at this hierarchy level). The utility then opens and writes to a new file called logfile. When the new file reaches the maximum size, the logfile.0.gz file is renamed to logfile.1.gz, and the new file is closed, compressed, and renamed logfile.0.gz. By default, the logging facility creates up to ten archive files in this manner. Once the maximum number of archive files exists, each time the active log file reaches the maximum size, the contents of the oldest archive file are lost (overwritten by the next oldest file).</p> <p>Range: 1 through 1000</p> <p>Default: 10 files</p> <p>size <i>size</i>—Maximum amount of data that the Junos OS logging utility writes to a log file logfile before archiving it (closing it, compressing it, and changing its name to logfile.0.gz). The utility then opens and writes to a new file called logfile.</p> <p>Syntax: <i>x k</i> to specify the number of kilobytes, <i>x m</i> for the number of megabytes, or <i>x g</i> for the number of gigabytes</p> <p>Range: 64 KB through 1 GB</p> <p>Default:</p> <ul style="list-style-type: none">• 128 KB for EX Series switches• 1 MB for M Series, MX Series, and T Series routers, OCX Series, and the QFX3500 switch• 10 MB for TX Matrix and TX Matrix Plus routers <p>binary-data no-binary-data—Mark file as containing binary data. This allows proper archiving of binary files, such as WTMP files (login records for UNIX based systems)..</p> <p>Default: no-binary-data</p> <p>world-readable no-world-readable—Grant all users permission to read archived log files, or restrict the permission only to the root user and users who have the Junos OS maintenance permission.</p>

Default: no-world-readable

Required Privilege Level	system—To view this statement in the configuration.
	system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying Log File Size, Number, and Archiving Properties on page 145

archive (Individual System Log File)

Syntax	<code>archive <archive-sites (ftp-url <password password>)> <files number> <size size> <start-time "YYYY-MM-DD.hh:mm"> <transfer-interval minutes> <world-readable no-world-readable>;</code>
Hierarchy Level	<code>[edit system syslog file filename]</code>
Release Information	Statement introduced before Junos OS Release 7.4. start-time and transfer-interval statements introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure archiving properties for a specific system log file.
Options	<p>archive-sites <i>site-name</i>—FTP URL representing the destination for the archived log file (for information about how to specify valid FTP URLs, see <i>Format for Specifying Filenames and URLs in Junos OS CLI Commands</i>). If more than one site name is configured, a list of archive sites for the system log files is created. When a file is archived, the router attempts to transfer the file to the first URL in the list, moving to the next site only if the transfer does not succeed. The log file is stored at the archive site with the filename specified at the <code>[edit system syslog]</code> hierarchy level.</p> <p>files <i>number</i>—Maximum number of archived log files to retain. When the Junos OS logging utility has written a defined maximum amount of data to a log file logfile, it closes the file, compresses it, and renames it logfile.0.gz (the amount of data is determined by the size statement at this hierarchy level). The utility then opens and writes to a new file called logfile. When the new file reaches the maximum size, the logfile.0.gz file is renamed to logfile.1.gz, and the new file is closed, compressed, and renamed logfile.0.gz. By default, the logging facility creates up to ten archive files in this manner. Once the maximum number of archive files exists, each time the active log file reaches the maximum size, the contents of the oldest archive file are lost (overwritten by the next oldest file).</p> <p>Range: 1 through 1000</p> <p>Default: 10 files</p> <p>password <i>password</i>—Password for authenticating with the site specified by the archive-sites statement.</p> <p>size <i>size</i>—Maximum amount of data that the Junos OS logging utility writes to a log file logfile before archiving it (closing it, compressing it, and changing its name to logfile.0.gz). The utility then opens and writes to a new file called logfile.</p> <p>Syntax: xk to specify the number of kilobytes, xm for the number of megabytes, or xg for the number of gigabytes</p> <p>Range: 64 KB through 1 GB</p> <p>Default: 128 KB for J Series routers; 1 MB for M Series, MX Series, and T Series routers, and the QFX3500 switch; 10 MB for TX Matrix and TX Matrix Plus routers</p>

start-time "YYYY-MM-DD.hh:mm"—Date and time in the local time zone for a one-time transfer of the active log file to the first reachable site in the list of sites specified by the **archive-sites** statement.

transfer-interval *interval*—Interval at which to transfer the log file to an archive site.

Range: 5 through 2880 minutes

world-readable | **no-world-readable**—Grant all users permission to read archived log files, or restrict the permission only to the **root** user and users who have the Junos OS **maintenance** permission.

Default: no-world-readable

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- [Specifying Log File Size, Number, and Archiving Properties on page 145](#)

console (System Logging)

Syntax console {
 facility severity;
}

Hierarchy Level [edit system [syslog](#)]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure the logging of system messages to the system console.

Options **facility**—Class of messages to log. To specify multiple classes, include multiple **facility severity** statements. For a list of the facilities, see “[Junos OS System Logging Facilities and Message Severity Levels](#)” on page 148.

severity—Severity of the messages that belong to the facility specified by the paired **facility** name. Messages with severities of the specified level and higher are logged. For a list of the severities, see “[Junos OS System Logging Facilities and Message Severity Levels](#)” on page 148.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- [Directing System Log Messages to the Console on page 136](#)
- [Junos OS System Log Messages Reference](#)

explicit-priority

Syntax	explicit-priority;
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> system syslog file <i>filename</i>], [edit logical-systems <i>logical-system-name</i> system syslog host], [edit system syslog file <i>filename</i>], [edit system syslog host]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Record the priority (facility and severity level) in each standard-format system log message directed to a file or remote destination. When the structured-data statement is also included at the [edit system syslog file <i>filename</i>] hierarchy level, this statement is ignored for the file.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Including Priority Information in System Log Messages on page 138• <i>Junos OS System Log Reference for Security Devices</i>• structured-data on page 305

facility-override

Syntax	facility-override <i>facility</i> ;
Hierarchy Level	[edit system syslog host]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Substitute an alternate facility for the default facilities used when messages are directed to a remote destination.
Options	<i>facility</i> —Alternate facility to substitute for the default facilities. For a list of the possible facilities, see Table 32 on page 150 .
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Changing the Alternative Facility Name for System Log Messages Directed to a Remote Destination on page 151• <i>Junos OS System Log Reference</i>

file (System Logging)

Syntax	<pre>file <i>filename</i> { <i>facility severity</i>; archive { <i>files number</i>; <i>size size</i>; (no-world-readable world-readable); } <i>explicit-priority</i>; <i>match "regular-expression"</i>; <i>structured-data</i> { <i>brief</i>; } }</pre>
Hierarchy Level	[edit system syslog]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure the logging of system messages to a file.
Options	<p><i>facility</i>—Class of messages to log. To specify multiple classes, include multiple <i>facility severity</i> statements. For a list of the facilities, see “Junos OS System Logging Facilities and Message Severity Levels” on page 148.</p> <p><i>file filename</i>—File in the <code>/var/log</code> directory in which to log messages from the specified facility. To log messages to more than one file, include more than one <i>file</i> statement.</p> <p><i>severity</i>—Severity of the messages that belong to the facility specified by the paired <i>facility</i> name. Messages with severities of the specified level and higher are logged. For a list of the severities, see “Junos OS System Logging Facilities and Message Severity Levels” on page 148.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Directing System Log Messages to a Log File on page 134 • Junos OS System Log Reference for Security Devices

files

Syntax	<code>files <i>number</i>;</code>
Hierarchy Level	[edit system syslog archive], [edit system syslog file <i>filename</i> archive]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for EX Series switches.
Description	Configure the maximum number of archived log files to retain. When the Junos OS logging utility has written a defined maximum amount of data to a log file <i>logfile</i> , it closes the file, compresses it, and renames it to <i>logfile.0.gz</i> (for information about the maximum file size, see size). The utility then opens and writes to a new file called <i>logfile</i> . When the new file reaches the maximum size, the <i>logfile.0.gz</i> file is renamed to <i>logfile.1.gz</i> , and the new file is closed, compressed, and renamed <i>logfile.0.gz</i> . By default, the logging facility creates up to ten archive files in this manner. Once the maximum number of archive files exists, each time the active log file reaches the maximum size, the contents of the oldest archive file are lost (overwritten by the next oldest file).
Options	<i>number</i> —Maximum number of archived files. Range: 1 through 1000 Default: 10 files
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Junos OS System Log Reference for Security Devicessize on page 304

host

Syntax	<pre>host (hostname other-routing-engine) { facility severity; explicit-priority; facility-override facility; log-prefix (System) string; match "regular-expression"; source-address source-address; structured-data { brief; } }</pre>
QFX Series	<pre>host (hostname { facility severity; explicit-priority; facility-override facility; log-prefix (System) string; match "regular-expression"; port; source-address source-address; }</pre>
TX Matrix Router and EX Series Switches	<pre>host (hostname other-routing-engine scc-master) { facility severity; explicit-priority; facility-override facility; log-prefix (System) string; match "regular-expression"; port; source-address source-address; }</pre>
TX Matrix Plus Router	<pre>host (hostname other-routing-engine sfc0-master) { facility severity; explicit-priority; facility-override facility; log-prefix (System) string; match "regular-expression"; port; source-address source-address; }</pre>
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> system syslog], [edit system syslog]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure the logging of system messages to a remote destination.

Options *facility*—Class of messages to log. To specify multiple classes, include multiple *facility severity* statements. For a list of the facilities, see [“Junos OS System Logging Facilities and Message Severity Levels” on page 148](#).

hostname—IPv4 address, IPv6 address, or fully qualified hostname of the remote machine to which to direct messages. To direct messages to multiple remote machines, include a **host** statement for each one.

other-routing-engine—Direct messages to the other Routing Engine on a router or switch with two Routing Engines installed and operational.



NOTE: The **other-routing-engine** option is not applicable to the QFX Series.

port—Port number of the remote syslog server that can be modified.

scc-master—(TX Matrix routers only) On a T640 router that is part of a routing matrix, direct messages to the TX Matrix router.

severity—Severity of the messages that belong to the facility specified by the paired *facility* name. Messages with severities of the specified level and higher are logged. For a list of the severities, see [“Junos OS System Logging Facilities and Message Severity Levels” on page 148](#).

sfc0-master—(TX Matrix Plus routers only) On a T1600 router that is part of a routing matrix, direct messages to the TX Matrix Plus router.

The remaining statements are explained separately.

Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none">• <i>Directing System Log Messages to a Remote Machine or the Other Routing Engine</i>• <i>Junos OS System Log Reference</i>
------------------------------	---

log-prefix (System)

Syntax	<code>log-prefix <i>string</i>;</code>
Hierarchy Level	[edit system syslog host]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Include a text string in each message directed to a remote destination.
Options	<i>string</i> —Text string to include in each message.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Adding a Text String to System Log Messages Directed to a Remote Destination on page 133 • <i>Junos OS System Log Reference for Security Devices</i>


match

Syntax	<code>match "regular-expression";</code>
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> system syslog file <i>filename</i>], [edit logical-systems <i>logical-system-name</i> system syslog user (<i>username</i> *)], [edit system syslog file <i>filename</i>], [edit system syslog host <i>hostname</i> other-routing-engine scc-master)], [edit system syslog user (<i>username</i> *)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify a text string that must (or must not) appear in a message for the message to be logged to a destination.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Using Regular Expressions to Refine the Set of Logged Messages on page 153

size (System)

Syntax	<code>size size;</code>
Hierarchy Level	[edit system syslog archive], [edit system syslog file <i>filename</i> archive]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the maximum amount of data that the Junos OS logging utility writes to a log file <i>logfile</i> before archiving it (closing it, compressing it, and changing its name to <i>logfile.0.gz</i>). The utility then opens and writes to a new file called <i>logfile</i> . For information about the number of archive files that the utility creates in this way, see files .
Options	size —Maximum size of each system log file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). Syntax: <i>xk</i> to specify the number of kilobytes, <i>xm</i> for the number of megabytes, or <i>xg</i> for the number of gigabytes Range: 64 KB through 1 GB Default: 1 MB for MX Series routers the QFX Series, and the OCX Series
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying Log File Size, Number, and Archiving Properties on page 145• Junos OS System Log Messages Reference• files on page 300

structured-data

Syntax	structured-data { brief; }
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> system syslog file <i>filename</i>], [edit system syslog file <i>filename</i>]
Release Information	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Write system log messages to the log file in structured-data format, which complies with Internet draft draft-ietf-syslog-protocol-23, <i>The syslog Protocol</i> (http://tools.ietf.org/html/draft-ietf-syslog-protocol-23).
<div>  <p>NOTE: When this statement is included, other statements that specify the format for messages written to the file are ignored (the <code>explicit-priority</code> statement at the [edit system syslog file <i>filename</i>] hierarchy level and the <code>time-format</code> statement at the [edit system syslog] hierarchy level).</p> </div>	
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Logging Messages in Structured-Data Format</i> • <i>Junos OS System Log Reference for Security Devices</i> • explicit-priority on page 298 • time-format on page 308


syslog (System)

```
Syntax  syslog {
        allow-duplicates;
        archive {
            (binary-data | no-binary-data);
            files number;
            size maximum-file-size;
            start-time "YYYY-MM-DD.hh:mm";
            transfer-interval minutes;
            (world-readable | no-world-readable);
        }
        console {
            facility severity;
        }
        file filename {
            facility severity;
            explicit-priority;
            match "regular-expression";
            archive {
                (binary-data | no-binary-data);
                files number;
                size maximum-file-size;
                start-time "YYYY-MM-DD.hh:mm";
                transfer-interval minutes;
                (world-readable | no-world-readable);
            }
            structured-data {
                brief;
            }
        }
        host (hostname | other-routing-engine | scc-master) {
            facility severity;
            explicit-priority;
            facility-override facility;
            log-prefix string;
            match "regular-expression";
            source-address source-address;
            structured-data {
                brief;
            }
            port port number;
        }
        log-rotate-frequency frequency;
        server server name;
        source-address source-address;
        time-format (millisecond | year | year millisecond);
        user (username | *) {
            facility severity;
            match "regular-expression";
        }
    }
```

Hierarchy Level [edit system]

Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the types of system log messages to send to files, to a remote destination, to user terminals, or to the system console. The remaining statements are explained separately.
Options	archive —Define parameters for archiving log messages. console —Send log messages of a specified class and severity to the console. file —Send log messages to a named file. host —Remote location to be notified of specific log messages. log-rotate-frequency —Configure the interval for checking logfile size and archiving messages. server —Name of the system log server in the inet.0 routing instance. source-address —Include a specified address as the source address for log messages. time-format —Additional information to include in the system log time stamp. user —Notify a specific user of the log event.
Required Privilege Level	system —To view this statement in the configuration. system-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS System Log Overview</i>• <i>Junos OS System Log Messages Reference</i>

time-format

Syntax	<code>time-format (year millisecond year millisecond);</code>
Hierarchy Level	<code>[edit system syslog]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Include the year, the millisecond, or both, in the timestamp on every standard-format system log message. The additional information is included for messages directed to each destination configured by a file, console, or user statement at the <code>[edit system syslog]</code> hierarchy level, but not to destinations configured by a host statement.</p> <p>By default, the timestamp specifies the month, date, hour, minute, and second when the message was logged—for example, Aug 21 12:36:30. However, the timestamp for traceoption messages is specified in milliseconds by default, and is independent of the <code>[edit system syslog time-format]</code> statement.</p>
	<div> NOTE: When the <code>structured-data</code> statement is included at the <code>[edit system syslog file filename]</code> hierarchy level, this statement is ignored for the file.</div>
Options	<p>millisecond—Include the millisecond in the timestamp.</p> <p>year—Include the year in the timestamp.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Including the Year or Millisecond in Timestamps</i>• <i>Junos OS System Log Messages Reference</i>• structured-data on page 305

user (System Logging)

Syntax	<pre> user (username *) { facility severity; match "regular-expression"; } </pre>
Hierarchy Level	[edit system syslog]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure the logging of system messages to user terminals.
Options	<p>* (the asterisk)—Log messages to the terminal sessions of all users who are currently logged in.</p> <p>facility—Class of messages to log. To specify multiple classes, include multiple facility severity statements. For a list of the facilities, see “Junos OS System Logging Facilities and Message Severity Levels” on page 148.</p> <p>severity—Severity of the messages that belong to the facility specified by the paired facility name. Messages with severities the specified level and higher are logged. For a list of the severities, see “Junos OS System Logging Facilities and Message Severity Levels” on page 148.</p> <p>username—Junos OS login name of the user whose terminal session is to receive system log messages. To log messages to more than one user’s terminal session, include more than one user statement.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Directing System Log Messages to a User Terminal on page 135 • Junos OS System Logging Facilities and Message Severity Levels on page 148 • Junos OS System Log Reference for Security Devices

PART 4

Operational Commands

- [Network Management on page 313](#)
- [sFlow Technology on page 331](#)
- [SNMP on page 339](#)
- [System Logging on page 377](#)

CHAPTER 13

Network Management

- monitor traffic
- ping

monitor traffic

Syntax monitor traffic
 <brief | detail | extensive>
 <absolute-sequence>
 <count *count*>
 <interface *interface-name*>
 <layer2-headers>
 <matching *matching*>
 <no-domain-names>
 <no-promiscuous>
 <no-resolve>
 <no-timestamp>
 <print-ascii>
 <print-hex>
 <resolve-timeout>
 <size *size*>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display packet headers or packets received and sent from the Routing Engine.



NOTE:

- Using the **monitor-traffic** command can degrade router or switch performance.
- Delays from DNS resolution can be eliminated by using the **no-resolve** option.



NOTE: This command is not supported on the QFabric system.

Options **none**—(Optional) Display packet headers transmitted through **fxp0**. On a TX Matrix Plus router, display packet headers transmitted through **em0**.

brief | detail | extensive—(Optional) Display the specified level of output.

absolute-sequence—(Optional) Display absolute TCP sequence numbers.

count *count*—(Optional) Specify the number of packet headers to display (0 through 1,000,000). The monitor traffic command quits automatically after displaying the number of packets specified.

interface *interface-name*—(Optional) Specify the interface on which the **monitor traffic** command displays packet data. If no interface is specified, the **monitor traffic** command displays packet data arriving on the lowest-numbered interface.

layer2-headers—(Optional) Display the link-level header on each line.

matching *matching*—(Optional) Display packet headers that match a regular expression. Use matching expressions to define the level of detail with which the **monitor traffic** command filters and displays packet data.

no-domain-names—(Optional) Suppress the display of the domain portion of hostnames. With the **no-domain-names** option enabled, the **monitor traffic** command displays only **team** for the hostname **team.company.net**.

no-promiscuous—(Optional) Do not put the interface into promiscuous mode.

no-resolve—(Optional) Suppress reverse lookup of the IP addresses.

no-timestamp—(Optional) Suppress timestamps on displayed packets.

print-ascii—(Optional) Display each packet in ASCII format.

print-hex—(Optional) Display each packet, except the link-level header, in hexadecimal format.

resolve-timeout *timeout*—(Optional) Amount of time the router or switch waits for each reverse lookup before timing out. You can set the timeout for 1 through 4,294,967,295 seconds. The default is 4 seconds. To display each packet, use the **print-ascii**, **print-hex**, or **extensive** option.

size *size*—(Optional) Read but do not display up to the specified number of bytes for each packet. When set to **brief** output, the default packet size is 96 bytes and is adequate for capturing IP, ICMP, UDP, and TCP packet data. When set to **detail** and **extensive** output, the default packet size is 1514. The **monitor traffic** command truncates displayed packets if the matched data exceeds the configured size.

Additional Information In the **monitor traffic** command, you can specify an expression to match by using the **matching** option and including the expression in quotation marks:

```
monitor traffic matching "expression"
```

Replace *expression* with one or more of the match conditions listed in [Table 34 on page 316](#).

Table 34: Match Conditions for the monitor traffic Command

Match Type	Condition	Description
Entity	host [<i>address</i> <i>hostname</i>]	Matches packets that contain the specified address or hostname. The protocol match conditions arp , ip , or rarp , or any of the directional match conditions can be prepended to the host match condition.
	net <i>address</i>	Matches packets with source or destination addresses containing the specified network address.
	net <i>address mask mask</i>	Matches packets containing the specified network address and subnet mask.
	port (<i>port-number</i> <i>port-name</i>)	Matches packets containing the specified source or destination TCP or UDP port number or port name. In place of the numeric port address, you can specify a text synonym, such as bgp (179), dhcp (67), or domain (53) (the port numbers are also listed).
Directional	dst	Matches packets going to the specified destination. This match condition can be prepended to any of the entity type match conditions.
	src	Matches packets from a specified source. This match condition can be prepended to any of the entity type match conditions.
	src and dst	Matches packets that contain the specified source and destination addresses. This match condition can be prepended to any of the entity type match conditions.
	src or dst	Matches packets containing either of the specified addresses. This match condition can be prepended to any of the entity type match conditions.
Packet Length	less <i>value</i>	Matches packets shorter than or equal to the specified value, in bytes.
	greater <i>value</i>	Matches packets longer than or equal to the specified value, in bytes.

Table 34: Match Conditions for the monitor traffic Command (*continued*)

Match Type	Condition	Description
Protocol	amt	Matches all AMT packets. Use the extensive level of output to decode the inner IGMP packets in addition to the AMT outer packet.
	arp	Matches all ARP packets.
	ether	Matches all Ethernet packets.
	ether (broadcast multicast)	Matches broadcast or multicast Ethernet frames. This match condition can be prepended with src and dst .
	ether protocol (address (arp ip rarp))	Matches packets with the specified Ethernet address or Ethernet packets of the specified protocol type. The ether protocol arguments arp , ip , and rarp are also independent match conditions, so they must be preceded by a backslash (\) when used in the ether protocol match condition.
	icmp	Matches all ICMP packets.
	ip	Matches all IP packets.
	ip (broadcast multicast)	Matches broadcast or multicast IP packets.
	ip protocol (address (icmp igmp tcp udp))	Matches packets with the specified address or protocol type. The ip protocol arguments icmp , tcp , and udp are also independent match conditions, so they must be preceded by a backslash (\) when used in the ip protocol match condition.
	isis	Matches all IS-IS routing messages.
	proto ip-protocol-number	Matches packets whose headers contain the specified IP protocol number.
	rarp	Matches all RARP packets.
	tcp	Matches all TCP datagrams.
	udp	Matches all UDP datagrams.

To combine expressions, use the logical operators listed in [Table 35 on page 318](#).

Table 35: Logical Operators for the monitor traffic Command

Logical Operator (Highest to Lowest Precedence)	Description
!	Logical NOT. If the first condition does not match, the next condition is evaluated.
&&	Logical AND. If the first condition matches, the next condition is evaluated. If the first condition does not match, the next condition is skipped.
	Logical OR. If the first condition matches, the next condition is skipped. If the first condition does not match, the next condition is evaluated.
()	Group operators to override default precedence order. Parentheses are special characters, each of which must be preceded by a backslash (\).

You can use relational operators to compare arithmetic expressions composed of integer constants, binary operators, a length operator, and special packet data accessors. The arithmetic expression matching condition uses the following syntax:

```
monitor traffic matching "ether[0] & 1 != 0"arithmetic_expression relational_operator arithmetic_expression
```

The packet data accessor uses the following syntax:

```
protocol [byte-offset <size>]
```

The optional *size* field represents the number of bytes examined in the packet header. The available values are 1, 2, or 4 bytes. The following sample command captures all multicast traffic:

```
user@host> monitor traffic matching "ether[0] & 1 != 0"
```

To specify match conditions that have a numeric value, use the arithmetic and relational operators listed in [Table 36 on page 319](#).



NOTE: Because the Packet Forwarding Engine removes Layer 2 header information before sending packets to the Routing Engine:

- The **monitor traffic** command cannot apply match conditions to inbound traffic.
- The **monitor traffic interface** command also cannot apply match conditions for Layer 3 and Layer 4 packet data, resulting in the match pipe option (**| match**) for this command for Layer 3 and Layer 4 packets not working either. Therefore, ensure that you specify match conditions as described in this command summary. For more information about match conditions, see [Table 34 on page 316](#).
- The 802.1Q VLAN tag information included in the Layer 2 header is removed from all inbound traffic packets. Because the **monitor traffic interface ae[x]** command for aggregated Ethernet interfaces (such as ae0) only shows inbound traffic data, the command does not show VLAN tag information in the output.

Table 36: Arithmetic and Relational Operators for the monitor traffic Command

Arithmetic or Relational Operator	Description
Arithmetic Operator	
+	Addition operator.
-	Subtraction operator.
/	Division operator.
&	Bitwise AND.
*	Bitwise exclusive OR.
	Bitwise inclusive OR.
Relational Operator (Highest to Lowest Precedence)	
<=	If the first expression is less than or equal to the second, the packet matches.
>=	If the first expression is greater than or equal to the second, the packet matches.
<	If the first expression is less than the second, the packet matches.
>	If the first expression is greater than the second, the packet matches.

Table 36: Arithmetic and Relational Operators for the monitor traffic Command (*continued*)

Arithmetic or Relational Operator	Description
=	If the compared expressions are equal, the packet matches.
!=	If the compared expressions are unequal, the packet matches.

Required Privilege Level trace
maintenance

List of Sample Output [monitor traffic count on page 320](#)
[monitor traffic detail count on page 320](#)
[monitor traffic extensive \(Absolute Sequence\) on page 321](#)
[monitor traffic extensive \(Relative Sequence\) on page 321](#)
[monitor traffic extensive count on page 321](#)
[monitor traffic interface on page 321](#)
[monitor traffic matching on page 322](#)
[monitor traffic \(TX Matrix Plus Router\) on page 322](#)
[monitor traffic \(QFX3500 Switch\) on page 323](#)
[monitor traffic matching icmp on page 323](#)
[monitor traffic matching IP protocol number on page 324](#)
[monitor traffic matching arp on page 324](#)
[monitor traffic matching port on page 325](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

monitor traffic count

```
user@host> monitor traffic count 2
listening on fxp0
04:35:49.814125 In my-server.home.net.1295 > my-server.work.net.telnet: . ack
4122529478 win 16798 (DF)
04:35:49.814185
Out my-server.work.net.telnet > my-server.home.net.1295: P
1:38(37) ack 0 win 17680 (DF) [tos 0x10]
```

monitor traffic detail count

```
user@host> monitor traffic detail count 2
listening on fxp0
04:38:16.265864 In my-server.home.net.1295 > my-server.work.net.telnet: . ack
4122529971 win 17678 (DF) (ttl 121, id 6812)
04:38:16.265926
Out my-server.work.net.telnet.telnet > my-server.home.net.1295: P 1:38(37) ack 0
win 17680 (DF) [tos 0x10] (ttl 6)
```

monitor traffic extensive (Absolute Sequence)

```

user@host> monitor traffic extensive no-domain-names no-resolve no-timestamp count 20
matching "tcp" absolute-sequence
listening on fxp0
In 207.17.136.193.179 > 192.168.4.227.1024: . 4042780859:4042780859(0)
ack 1845421797 win 16384 <nop,nop,timestamp 4935628 965951> [tos 0xc0] (ttl )
In 207.17.136.193.179 > 192.168.4.227.1024: P 4042780859:4042780912(53)
ack 1845421797 win 16384
<nop,nop,timestamp 4935628 965951>:
BGP [|BGP UPDAT)
In 192.168.4.227.1024 > 207.17.136.193.179:
P 1845421797:1845421852(55) ack 4042780912 win 16384 <nop,nop,timestamp 965951
4935628>: BGP [|BGP UPDAT)
...

```

monitor traffic extensive (Relative Sequence)

```

user@host> monitor traffic extensive no-domain-names no-resolve no-timestamp count 20
matching "tcp"
listening on fxp0
In 172.24.248.221.1680 > 192.168.4.210.23: . 396159737:396159737(0)
ack 1664980689 win 17574 (DF) (ttl 121, id 50003)
Out 192.168.4.210.23 > 172.24.248.221.1680: P 1:40(39)
ack 0 win 17680 (DF) [tos 0x10] (ttl 64, id 5394)
In 207.17.136.193.179 > 192.168.4.227.1024: P 4042775817:4042775874(57)
ack 1845416593 win 16384 <nop,nop,timestamp 4935379 965690>: BGP [|BGP UPDAT)
...

```

monitor traffic extensive count

```

user@host> monitor traffic extensive count 5 no-domain-names no-resolve
listening on fxp013:18:17.406933
In 192.168.4.206.2723610880 > 172.17.28.8.2049:
40 null (ttl 64, id 38367)13:18:17.407577
In 172.17.28.8.2049 > 192.168.4.206.2723610880:
reply ok 28 null (ttl 61, id 35495)13:18:17.541140
In 0:e0:1e:42:9c:e0 0:e0:1e:42:9c:e0 9000 60:
0000 0100 0000 0000
0000 0000 0000 0000
0000 0000 0000 0000
0000 0000 0000 0000
0000 0000 0000 0000
0000 0000 000013:18:17.591513
In 172.24.248.156.4139 > 192.168.4.210.23:
3556964918:3556964918(0)
ack 295526518 win 17601 (DF)
(ttl 121, id 14)13:18:17.591568
Out 192.168.4.210.23 >
172.24.248.156.4139: P 1:40(39)
ack 0 win 17680 (DF) [tos 0x10]
(ttl 64, id 52376)

```

monitor traffic interface

```

user@host> monitor traffic interface fxp0
listening on fxp0.0
18:17:28.800650 In server.home.net.723 > host1-0.lab.home.net.log
18:17:28.800733 Out host2-0.lab.home.net.login > server.home.net.7
18:17:28.817813 In host30.lab.home.net.syslog > host40.home0

```

```
18:17:28.817846 In host30.lab.home.net.syslog > host40.home0
...
```

monitor traffic matching

```
user@host> monitor traffic matching "net 192.168.1.0/24"
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is ON. Use <no-resolve> to avoid any reverse lookup delay.
Address resolution timeout is 4s.
Listening on fxp0, capture size 96 bytes

Reverse lookup for 192.168.1.255 failed (check DNS reachability).
Other reverse lookup failures will not be reported.
Use no-resolve to avoid reverse lookups on IP addresses.

21:55:54.003511 In IP truncated-ip - 18 bytes missing!
192.168.1.17.netbios-ns > 192.168.1.255.netbios-ns: UDP, length 50
21:55:54.003585 Out IP truncated-ip - 18 bytes missing!
192.168.1.17.netbios-ns > 192.168.1.255.netbios-ns: UDP, length 50
21:55:54.003864 In arp who-has 192.168.1.17 tell 192.168.1.9
...
```

monitor traffic (TX Matrix Plus Router)

```
user@host> monitor traffic
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is ON. Use <no-resolve> to avoid any reverse lookup delay.
Address resolution timeout is 4s.
Listening on em0, capture size 96 bytes
04:11:59.862121 Out IP truncated-ip - 25 bytes missing!
summit-em0.englab.juniper.net.syslog > sv-log-01.englab.juniper.net.syslog:
SYSLOG kernel.info, length: 57
04:11:59.862303
Out IP truncated-ip - 25 bytes missing!
summit-em0.englab.juniper.net.syslog >
sv-log-02.englab.juniper.net.syslog: SYSLOG kernel.info, length: 57
04:11:59.923948
In IP aj-em0.englab.juniper.net.65235 >
summit-em0.englab.juniper.net.telnet: .
ack 1087492766 win 33304 <nop,nop,timestamp 42366734 993490>
04:11:59.923983 Out IP truncated-ip - 232 bytes missing!
summit-em0.englab.juniper.net.telnet > aj-em0.englab.juniper.net.65235: P
1:241(240) ack 0 win 33304
<nop,nop,timestamp 993590 42366734>
04:12:00.022900
In IP aj-em0.englab.juniper.net.65235 >
summit-em0.englab.juniper.net.telnet: . ack 241 win 33304 <nop,nop,timestamp
42366834 993590>
04:12:00.141204
In IP truncated-ip - 40 bytes missing!
ipg-lnx-shell1.juniper.net.46182 > summit-em0.englab.juniper.net.telnet: P
2950530356:2950530404(48) ack 485494987 win 63712
<nop,nop,timestamp 1308555294 987086>
04:12:00.141345
Out IP summit-em0.englab.juniper.net.telnet >
ipg-lnx-shell1.juniper.net.46182: P 1:6(5)
ack 48 win 33304
<nop,nop,timestamp 993809 1308555294>
04:12:00.141572
In IP ipg-lnx-shell1.juniper.net.46182 >
summit-em0.englab.juniper.net.telnet: .
```

```

ack 6 win 63712
<nop,nop,timestamp 1308555294 993809>
04:12:00.141597
Out IP summit-em0.englab.juniper.net.telnet >
ipg-lnx-shell11.juniper.net.46182: P 6:10(4) ack 48 win 33304
<nop,nop,timestamp 993810 1308555294>
04:12:00.141821
In IP ipg-lnx-shell11.juniper.net.46182 >
summit-em0.englab.juniper.net.telnet: .
ack 10 win 63712 <nop,nop,timestamp 1308555294 993810>
04:12:00.141837 Out IP truncated-ip - 2 bytes missing!
summit-em0.englab.juniper.net.telnet >
ipg-lnx-shell11.juniper.net.46182: P 10:20(10) ack 48 win 33304
<nop,nop,timestamp 993810 1308555294>
04:12:00.142072
In IP ipg-lnx-shell11.juniper.net.46182 >
summit-em0.englab.juniper.net.telnet: . ack 20 win 63712
<nop,nop,timestamp 1308555294 993810>
04:12:00.142089 Out IP summit-em0.englab.juniper.net.telnet >
ipg-lnx-shell11.juniper.net.46182: P 20:28(8) ack 48 win 33304 <nop,nop,timestamp
 993810 1308555294>
04:12:00.142321
In IP ipg-lnx-shell11.juniper.net.46182 >
summit-em0.englab.juniper.net.telnet: .
ack 28 win 63712 <nop,nop,timestamp 1308555294 993810>
04:12:00.142337
Out IP truncated-ip - 1 bytes missing!
summit-em0.englab.juniper.net.telnet >
ipg-lnx-shell11.juniper.net.46182: P 28:37(9) ack 48 win 33304 <nop,nop,timestamp
 993810 1308555294>
...

```

monitor traffic (QFX3500 Switch)

```

user@switch> monitor traffic
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is ON. Use <no-resolve> to avoid any reverse lookup delay.
Address resolution timeout is 4s.
Listening on me4, capture size 96 bytes
Reverse lookup for 172.22.16.246 failed (check DNS reachability).
Other reverse lookup failures will not be reported.
Use <no-resolve> to avoid reverse lookups on IP addresses.
16:35:32.240873 Out IP truncated-ip - 112 bytes missing!
labqfx-me0.lab4.juniper.net.ssh >
172.22.16.246.telefinder: P 4200727624:4200727756(132) ack 2889954831 win 65535
16:35:32.240900 Out IP truncated-ip - 176 bytes missing!
labqfx-me0.lab4.juniper.net.ssh >
172.22.16.246.telefinder: P 132:328(196) ack 1 win 65535
...

```

monitor traffic matching icmp

```

user@host> monitor traffic matching "icmp" no-resolve
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is OFF.
Listening on me0, capture size 96 bytes

09:23:17.728737 In IP 172.19.10.9 > 10.10.211.93: ICMP echo request, id 1, seq
322, length 40
09:23:17.728780 Out IP 10.10.211.93 > 172.19.10.9: ICMP echo reply, id 1, seq
322, length 40

```

```

09:23:18.735848 In IP 172.19.10.9 > 10.10.211.93: ICMP echo request, id 1, seq
323, length 40
09:23:18.735891 Out IP 10.10.211.93 > 172.19.10.9: ICMP echo reply, id 1, seq
323, length 40
09:23:19.749732 In IP 172.19.10.9 > 10.10.211.93: ICMP echo request, id 1, seq
324, length 40
09:23:19.749775 Out IP 10.10.211.93 > 172.19.10.9: ICMP echo reply, id 1, seq
324, length 40
09:23:20.749747 In IP 172.19.10.9 > 10.10.211.93: ICMP echo request, id 1, seq
325, length 40
09:23:20.749791 Out IP 10.10.211.93 > 172.19.10.9: ICMP echo reply, id 1, seq
325, length 40
...

```

monitor traffic matching IP protocol number

```

user@host> monitor traffic matching "proto 89" no-resolve
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is OFF.
Listening on me0, capture size 96 bytes

13:06:14.700311 In IP truncated-ip - 16 bytes missing! 10.94.211.254 > 224.0.0.
5: OSPFv2, Hello, length 56
13:06:16.067010 In IP truncated-ip - 20 bytes missing! 10.94.211.102 > 224.0.0.
5: OSPFv2, Hello, length 60
13:06:16.287566 In IP truncated-ip - 20 bytes missing! 10.94.211.142 > 224.0.0.
5: OSPFv2, Hello, length 60
13:06:20.758500 In IP truncated-ip - 16 bytes missing! 10.200.211.254 > 224.0.0.
5: OSPFv2, Hello, length 56
13:06:24.309882 In IP truncated-ip - 20 bytes missing! 10.94.211.102 > 224.0.0.
5: OSPFv2, Hello, length 60
13:06:24.396699 In IP truncated-ip - 16 bytes missing! 10.94.211.254 > 224.0.0.
5: OSPFv2, Hello, length 56
13:06:25.067386 In IP truncated-ip - 20 bytes missing! 10.94.211.142 > 224.0.0.
5: OSPFv2, Hello, length 60
13:06:29.499988 In IP truncated-ip - 16 bytes missing! 10.200.211.254 > 224.0.0.
5: OSPFv2, Hello, length 56
13:06:32.858753 In IP truncated-ip - 20 bytes missing! 10.94.211.102 > 224.0.0.
5: OSPFv2, Hello, length 60
...

```

monitor traffic matching arp

```

user@host> monitor traffic matching "arp" no-resolve
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is OFF.
Listening on me0, capture size 96 bytes

11:57:54.664501 In arp who-has 10.10.213.109 (00:1f:d5:f3:28:30) tell 10.10.213.31
11:57:56.828387 In arp who-has 10.10.213.233 (00:24:9d:06:77:4f) tell 10.10.213.31
11:58:01.735803 In arp who-has 10.10.213.251 (88:e0:f4:1d:41:40) tell 10.10.213.31
11:58:04.663241 In arp who-has 10.10.213.254 tell 10.94.211.170
11:58:28.488191 In arp who-has 10.10.213.149 (00:e0:91:c2:ff:8d) tell 10.10.213.31
11:58:41.858612 In arp who-has 10.10.213.148 tell 10.94.211.254
11:58:42.621533 In arp who-has 10.10.213.254 (5f:5e:ac:79:49:81) tell 10.10.213.31
11:58:44.533391 In arp who-has 10.10.213.186 tell 10.94.211.254
11:58:45.170405 In arp who-has 10.10.213.186 tell 10.94.211.254
11:58:45.770512 In arp who-has 10.10.213.186 tell 10.94.211.254

```


monitor traffic matching port

```

user@host> monitor traffic matching "port 22" no-resolve
verbose output suppressed, use <detail> or <extensive> for full protocol decode
Address resolution is OFF.
Listening on me0, capture size 96 bytes

13:14:19.108089 In IP 172.44.33.22.56714 > 10.19.300.05.22: S
2210742342:2210742342(0) win 65535 <mss 1360,nop,wscale 7,nop,nop,sackOK>
13:14:19.108165 Out IP 10.19.300.05.22 > 172.44.33.22.56714: S 23075150:23075150(0)
ack 2210742343 win 65535 <mss 1460,nop,wscale 1,sackOK,eol>
13:14:19.136883 In IP 172.44.33.22.56714 > 10.19.300.05.22: . ack 1 win 32768
13:14:19.231364 Out IP truncated-ip - 1 bytes missing! 10.19.300.05.22 >
172.29.102.9.56714: P 1:22(21) ack 1 win 33320
13:14:19.260174 In IP truncated-ip - 10 bytes missing! 172.44.33.22.56714 >
10.94.211.93.22: P 1:31(30) ack 22 win 32767
13:14:19.284865 Out IP truncated-ip - 964 bytes missing! 10.19.300.05.22 >
172.29.102.9.56714: P 22:1006(984) ack 31 win 33320
13:14:19.314549 In IP truncated-ip - 652 bytes missing! 172.44.33.22.56714 >
10.94.211.93.22: P 31:703(672) ack 1006 win 32760
13:14:19.414135 Out IP 10.19.300.05.22 > 172.44.33.22.56714: . ack 703 win 33320
13:14:19.443858 In IP 172.44.33.22.56714 > 10.19.300.05.22: P 703:719(16) ack
1006 win 32760
13:14:19.467379 Out IP truncated-ip - 516 bytes missing! 10.19.300.05.22 >
172.29.102.9.56714: P 1006:1542(536) ack 719 win 33320
13:14:19.734097 In IP 172.44.33.22.56714 > 10.19.300.05.22: . ack 1542 win 32768
13:14:19.843574 In IP truncated-ip - 508 bytes missing! 172.44.33.22.56714 >
10.94.211.93.22: P 719:1247(528) ack 1542 win 32768
...

```


ping

List of Syntax [Syntax on page 326](#)
[Syntax \(QFX Series\) on page 326](#)

Syntax `ping host`
`<bypass-routing>`
`<count requests>`
`<detail>`
`<do-not-fragment>`
`<inet | inet6>`
`<interface source-interface>`
`<interval seconds>`
`<logical-system logical-system-name>`
`<loose-source value>`
`<mac-address mac-address>`
`<no-resolve>`
`<pattern string>`
`<rapid>`
`<record-route>`
`<routing-instance routing-instance-name>`
`<size bytes>`
`<source source-address>`
`<strict >`
`<strict-source value.>`
`<tos type-of-service>`
`<ttl value>`
`<verbose>`
`<vpls instance-name>`
`<wait seconds>`

Syntax (QFX Series) `ping host`
`<bypass-routing>`
`<count requests>`
`<detail>`
`<do-not-fragment>`
`<inet>`
`<interface source-interface>`
`<interval seconds>`
`<logical-system logical-system-name>`
`<loose-source value>`
`<mac-address mac-address>`
`<no-resolve>`
`<pattern string>`
`<rapid>`
`<record-route>`
`<routing-instance routing-instance-name>`
`<size bytes>`
`<source source-address>`
`<strict>`
`< strict-source value>`
`<tos type-of-service>`
`<ttl value>`
`<verbose>`

<wait *seconds*>

Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Check host reachability and network connectivity. The ping command sends Internet Control Message Protocol (ICMP) ECHO_REQUEST messages to elicit ICMP ECHO_RESPONSE messages from the specified host. Press Ctrl+c to interrupt a ping command.</p>
Options	<p>host—IP address or hostname of the remote system to ping.</p> <p>bypass-routing—(Optional) Bypass the normal routing tables and send ping requests directly to a system on an attached network. If the system is not on a directly attached network, an error is returned. Use this option to ping a local system through an interface that has no route through it.</p> <p>count requests—(Optional) Number of ping requests to send. The range of values is 1 through 2,000,000,000. The default value is an unlimited number of requests.</p> <p>detail—(Optional) Include in the output the interface on which the ping reply was received.</p> <p>do-not-fragment—(Optional) Set the do-not-fragment (DF) flag in the IP header of the ping packets. For IPv6 packets, this option disables fragmentation.</p> <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <p> NOTE: In Junos OS Release 11.1 and later, when issuing the ping command for an IPv6 route with the do-not-fragment option, the maximum ping packet size is calculated by subtracting 48 bytes (40 bytes for the IPV6 header and 8 bytes for the ICMP header) from the MTU. Therefore, if the ping packet size (including the 48-byte header) is greater than the MTU, the ping operation might fail.</p> </div> <p>inet—(Optional) Ping Packet Forwarding Engine IPv4 routes.</p> <p>inet6—(Optional) Ping Packet Forwarding Engine IPv6 routes.</p> <p>interface source-interface—(Optional) Interface to use to send the ping requests.</p> <p>interval seconds—(Optional) How often to send ping requests. The range of values, in seconds, is 1 through infinity. The default value is 1.</p> <p>logical-system logical-system-name—(Optional) Name of logical system from which to send the ping requests.</p> <p>Alternatively, enter the set cli logical-system logical-system-name command and then run the ping command. To return to the main router or switch, enter the clear cli logical-system command.</p>

loose-source value—(Optional) Intermediate loose source route entry (IPv4). Open a set of values.

mac-address mac-address—(Optional) Ping the physical or hardware address of the remote system you are trying to reach.

no-resolve—(Optional) Do not attempt to determine the hostname that corresponds to the IP address.

pattern string—(Optional) Specify a hexadecimal fill pattern to include in the ping packet.

rapid—(Optional) Send ping requests rapidly. The results are reported in a single message, not in individual messages for each ping request. By default, five ping requests are sent before the results are reported. To change the number of requests, include the **count** option.

record-route—(Optional) Record and report the packet's path (IPv4).

routing-instance routing-instance-name—(Optional) Name of the routing instance for the ping attempt.

size bytes—(Optional) Size of ping request packets. The range of values, in bytes, is 0 through 65,468. The default value is 56, which is effectively 64 bytes because 8 bytes of ICMP header data are added to the packet.

source source-address—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

strict—(Optional) Use the strict source route option (IPv4).

strict-source value—(Optional) Intermediate strict source route entry (IPv4). Open a set of values.

tos type-of-service—(Optional) Set the type-of-service (ToS) field in the IP header of the ping packets. The range of values is 0 through 255.

If the device configuration includes the **dscp-code-point value** statement at the **[edit class-of-service host-outbound-traffic]** hierarchy level, the configured DSCP value overrides the value specified in this command option. In this case, the ToS field of ICMP echo request packets sent on behalf of this command carries the DSCP value specified in the **dscp-code-point** configuration statement instead of the value you specify in this command option.

ttl value—(Optional) Time-to-live (TTL) value to include in the ping request (IPv6). The range of values is 0 through 255.

verbose—(Optional) Display detailed output.

vpls instance-name—(Optional) Ping the instance to which this VPLS belongs.

wait seconds—(Optional) Maximum wait time, in seconds, after the final packet is sent. If this option is not specified, the default delay is 10 seconds. If this option is used without the count option, a default count of 5 packets is used.

Required Privilege Level	network
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages</i>
List of Sample Output	ping hostname on page 329 ping hostname rapid on page 329 ping hostname size count on page 329
Output Fields	<p>When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. These packets are not counted in the received packets count. They are accounted for separately.</p>

Sample Output

ping hostname

```
user@host> ping skye
PING skye.net (192.168.169.254): 56 data bytes
64 bytes from 192.168.169.254: icmp_seq=0 ttl=253 time=1.028 ms
64 bytes from 192.168.169.254: icmp_seq=1 ttl=253 time=1.053 ms
64 bytes from 192.168.169.254: icmp_seq=2 ttl=253 time=1.025 ms
64 bytes from 192.168.169.254: icmp_seq=3 ttl=253 time=1.098 ms
64 bytes from 192.168.169.254: icmp_seq=4 ttl=253 time=1.032 ms
64 bytes from 192.168.169.254: icmp_seq=5 ttl=253 time=1.044 ms
^C [abort]
```

ping hostname rapid

```
user@host> ping skye rapid
PING skye.net (192.168.169.254): 56 data bytes
!!!!
--- skye.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.956/0.974/1.025/0.026 ms
```

ping hostname size count

```
user@host> ping skye size 200 count 5
PING skye.net (192.168.169.254): 200 data bytes
208 bytes from 192.168.169.254: icmp_seq=0 ttl=253 time=1.759 ms
208 bytes from 192.168.169.254: icmp_seq=1 ttl=253 time=2.075 ms
208 bytes from 192.168.169.254: icmp_seq=2 ttl=253 time=1.843 ms
208 bytes from 192.168.169.254: icmp_seq=3 ttl=253 time=1.803 ms
208 bytes from 192.168.169.254: icmp_seq=4 ttl=253 time=17.898 ms

--- skye.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.759/5.075/17.898 ms
```


CHAPTER 14

sFlow Technology

- clear sflow collector statistics
- show sflow
- show sflow collector
- show sflow interface

clear sflow collector statistics

Syntax	clear sflow collector statistics
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear the sample counters for all sFlow collectors.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• Example: Monitoring Network Traffic Using sFlow Technology on page 55• Configuring sFlow Technology on page 59• show sflow collector on page 335
List of Sample Output	clear sflow collector statistics on page 332

Sample Output

clear sflow collector statistics

The following example shows two output examples for the **show sflow collector** command, one before and one after the **clear sflow collector statistics** command was issued.

```
user@host> show sflow collector
Collector      Udp-port      No. of samples
address
 10.1.1.1      6343          3174
 10.1.2.1      6343          3562

user@host> clear sflow collector statistics

user@host> show sflow collector
Collector      Udp-port      No. of samples
address
 10.1.1.1      6343          0
 10.1.2.1      6343          0
```


show sflow

Syntax	show sflow <collector> <interface>
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display sFlow configuration information.
Options	<p>none—Display all sFlow configuration information.</p> <p>collector—(Optional) Display a list of configured sFlow collectors and their properties.</p> <p>interface—(Optional) Display the interfaces on which sFlow technology is enabled and the sampling parameters.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show sflow interface on page 336 • show sflow collector on page 335 • clear sflow collector statistics on page 332 • Example: Monitoring Network Traffic Using sFlow Technology on page 55 • Configuring sFlow Technology on page 59
List of Sample Output	show sflow on page 334
Output Fields	Table 37 on page 333 lists the output fields for the show sflow command. Output fields are listed in the approximate order in which they appear.

Table 37: show sflow Output Fields

Field Name	Field Description	Level of Output
sFlow	Status of the feature: Enabled or Disabled .	All levels
Sample limit	Number of packets sampled per second. This sample limit cannot be configured and is set to 300 packets per second.	All levels
Polling interval	Interval at which the sFlow agent polls the interface.	All levels
Sample rate egress	Rate at which egress packets are sampled.	All levels
Sample rate ingress	Rate at which ingress packets are sampled.	All levels
Agent ID	IP address assigned to the sFlow agent.	All levels

Table 37: show sflow Output Fields (*continued*)

Field Name	Field Description	Level of Output
Source IP address	Source IP address for the sFlow packets.	All levels

Sample Output

show sflow

```
user@host> show sflow
```

```
sFlow           : Enabled
Sample limit    : 300 packets/second
Polling interval : 20 second
Sample rate egress : 1:2048: Disabled
Sample rate ingress : 1:1000: Enabled
Agent ID        : 10.93.54.7
Source IP address : 10.93.54.7
```

show sflow collector

Syntax	show sflow collector
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display a list of configured sFlow collectors and their properties.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear sflow collector statistics on page 332 • show sflow on page 333 • show sflow interface on page 336 • Example: Monitoring Network Traffic Using sFlow Technology on page 55 • Configuring sFlow Technology on page 59
List of Sample Output	show sflow collector on page 335
Output Fields	Table 38 on page 335 lists the output fields for the show sflow collector command. Output fields are listed in the approximate order in which they appear.

Table 38: show sflow collector Output Fields

Field Name	Field Description	Level of Output
Collector address	IP address of the collector.	All levels
UDP-Port	UDP port number of the collector.	All levels
No. of samples	Number of samples collected.	All levels

Sample Output

show sflow collector

```
user@host> show sflow collector
```

```

Collector      Udp-port      No. of samples
address
10.204.32.46   6343          1000
100.204.32.76 3400          1000
```

show sflow interface

Syntax	show sflow interface
Release Information	Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the interfaces on which sFlow is enabled and the sampling parameters for the interface.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show sflow on page 333 • show sflow collector on page 335 • Example: Monitoring Network Traffic Using sFlow Technology on page 55 • Configuring sFlow Technology on page 59
List of Sample Output	show sflow interface (QFX3500 Switch in Standalone Mode) on page 336 show sflow interface (QFabric System) on page 337
Output Fields	Table 39 on page 336 lists the output fields for the show sflow interface command. Output fields are listed in the approximate order in which they appear.

Table 39: show sflow interface Output Fields

Field Name	Field Description	Level of Output
Interface	Interface on which sFlow technology is enabled.	All levels
Status Egress	Indicates whether an egress sample rate is enabled.	All levels
Status Ingress	Indicates whether an ingress sample rate is enabled.	All levels
Sample rate Egress	Rate at which egress packets are sampled.	All levels
Sample rate Ingress	Rate at which ingress packets are sampled.	All levels
Adapted sample rate Egress	Adapted rate at which egress packets are sampled.	All levels
Adapted sample rate Ingress	Adapted rate at which ingress packets are sampled.	All levels
Polling-interval	Interval at which the sFlow agent polls the interface.	All levels

Sample Output

show sflow interface (QFX3500 Switch in Standalone Mode)

```
user@host> show sflow interface
```

Interface	Status	Sample rate		Adapted sample rate		Polling-interval	
		Egress	Ingress	Egress	Ingress		
xe-0/0/0.0	Enabled	Disabled	1000	2048	1000	2048	20
xe-1/0/1.0	Enabled	Disabled	1000	2048	1000	2048	20

Sample Output

show sflow interface (QFabric System)

```

user@host> show sflow interface
Interface  Status      Sample rate    Adapted sample rate  Polling-interval
          Egress Ingress  Egress Ingress  Egress Ingress
node1:xe-0/0/0.0  Enabled Disabled 1000    2048    1000    2048
20
node2:xe-1/0/1.0  Enabled Disabled 1000    2048    1000    2048
20
node4:xe-1/0/0.0  Enabled Disabled 1000    2048    1000    2048
20

```


CHAPTER 15

SNMP

- clear snmp history
- clear snmp statistics
- request snmp spoof-trap
- request snmp utility-mib clear instance
- request snmp utility-mib set instance
- show snmp health-monitor
- show snmp inform-statistics
- show snmp mib
- show snmp rmon
- show snmp rmon history
- show snmp statistics
- show snmp v3

clear snmp history

Syntax	clear snmp history (<i>index</i> all)
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Delete the samples of Ethernet statistics collected for a history group.
Options	all —Clear all the entries in the history index. index —Clear the contents of the specified entry in the history index.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• clear snmp statistics on page 341

clear snmp statistics

Syntax	clear snmp statistics
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series.
Description	Clear Simple Network Management Protocol (SNMP) statistics.
Options	This command has no options.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show snmp statistics on page 366
List of Sample Output	clear snmp statistics on page 341
Output Fields	See show snmp statistics for an explanation of output fields.

Sample Output

clear snmp statistics

In the following example, SNMP statistics are displayed before and after the **clear snmp statistics** command is issued:

```
user@host> show snmp statistics
SNMP statistics:
  Input:
    Packets: 8, Bad versions: 0, Bad community names: 0,
    Bad community uses: 0, ASN parse errors: 0,
    Too bigs: 0, No such names: 0, Bad values: 0,
    Read onlys: 0, General errors: 0,
    Total request varbinds: 8, Total set varbinds: 0,
    Get requests: 0, Get nexts: 8, Set requests: 0,
    Get responses: 0, Traps: 0,
    Silent drops: 0, Proxy drops: 0
  Output:
    Packets: 2298, Too bigs: 0, No such names: 0,
    Bad values: 0, General errors: 0,
    Get requests: 0, Get nexts: 0, Set requests: 0,
    Get responses: 8, Traps: 2290
```

```
user@host> clear snmp statistics
```

```
user@host> show snmp statistics
SNMP statistics:
  Input:
    Packets: 0, Bad versions: 0, Bad community names: 0,
    Bad community uses: 0, ASN parse errors: 0,
    Too bigs: 0, No such names: 0, Bad values: 0,
    Read onlys: 0, General errors: 0,
```

```
Total request varbinds: 0, Total set varbinds: 0,  
Get requests: 0, Get nexts: 0, Set requests: 0,  
Get responses: 0, Traps: 0,  
Silent drops: 0, Proxy drops 0  
Output:  
Packets: 0, Too bigs: 0, No such names: 0,  
Bad values: 0, General errors: 0,  
Get requests: 0, Get nexts: 0, Set requests: 0,  
Get responses: 0, Traps: 0
```

request snmp spoof-trap

Syntax	request snmp spoof-trap <trap> variable-bindings <object> <instance> <value>
Release Information	Command introduced in Junos OS Release 8.2. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Spoof (mimic) the behavior of a Simple Network Management Protocol (SNMP) trap.
Options	<p><trap>—Name of the trap to spoof.</p> <p>variable-bindings <object> <instance> <value>—(Optional) List of variables and values to include in the trap. Each variable binding is specified as an object name, the object instance, and the value (for example, ifIndex[14] = 14). Enclose the list of variable bindings in quotation marks (" ") and use a comma to separate each object name, instance, and value definition (for example, variable-bindings "ifIndex[14] = 14, ifAdminStatus[14] = 1, ifOperStatus[14] = 2"). Objects included in the trap definition that do not have instances and values specified as part of the command are included in the trap and spoofed with automatically generated instances and values.</p> <p><dummy name>—A dummy trap name to display the list of available traps.</p> <p>Question mark (?)—Question mark? to display possible completions.</p>
Required Privilege Level	request
List of Sample Output	request snmp spoof-trap (with Variable Bindings) on page 343 request snmp spoof-trap (Illegal Trap Name) on page 343 request snmp spoof-trap (Question Mark ?) on page 347

Sample Output

request snmp spoof-trap (with Variable Bindings)

```
user@host> request snmp spoof-trap linkUp variable-bindings "ifIndex[14] = 14, ifAdminStatus[14] = 1, ifOperStatus[14] = 2"
Spoof trap request result: trap sent successfully
```

request snmp spoof-trap (Illegal Trap Name)

```
user@host> request snmp spoof-trap xx
Spoof trap request result: trap not found
```

```
Allowed Traps:
ads1AtucInitFailureTrap
ads1AtucPerfESsThreshTrap
ads1AtucPerfLofsThreshTrap
ads1AtucPerfLolsThreshTrap
ads1AtucPerfLossThreshTrap
ads1AtucPerfLprsThreshTrap
ads1AtucRateChangeTrap
```

ads1AturPerfESsThreshTrap
ads1AturPerfLofsThreshTrap
ads1AturPerfLossThreshTrap
ads1AturPerfLprsThreshTrap
ads1AturRateChangeTrap
apsEventChannelMismatch
apsEventFEPLF
apsEventModeMismatch
apsEventPSBF
apsEventSwitchover
authenticationFailure
bfdSessDown
bfdSessUp
bgpBackwardTransition
bgpEstablished
coldStart
d1swTrapCircuitDown
d1swTrapCircuitUp
d1swTrapTConnDown
d1swTrapTConnPartnerReject
d1swTrapTConnProtViolation
d1swTrapTConnUp
dsx1LineStatusChange
dsx3LineStatusChange
entConfigChange
fallingAlarm
frDLCIStatusChange
ggsnTrapChanged
ggsnTrapCleared
ggsnTrapNew
gmplsTunnelDown
ifMauJabberTrap
ipv6IfStateChange
isisAreaMismatch
isisAttemptToExceedMaxSequence
isisAuthenticationFailure
isisAuthenticationTypeFailure
isisCorruptedLSPDetected
isisDatabaseOverload
isisIDLenMismatch
isisLSPTooLargeToPropagate
isisManualAddressDrops
isisMaxAreaAddressesMismatch
isisOriginatingLSPBufferSizeMismatch
isisOwnLSPPurge
isisProtocolsSupportedMismatch
isisRejectedAdjacency
isisSequenceNumberSkip
isisVersionSkew
jnxAccessAuthServerDisabled
jnxAccessAuthServerEnabled
jnxAccessAuthServiceDown
jnxAccessAuthServiceUp
jnxBfdSessDetectionTimeHigh
jnxBfdSessTxIntervalHigh
jnxBgpM2BackwardTransition
jnxBgpM2Established
jnxCmCfgChange
jnxCmRescueChange
jnxCollFlowOverload
jnxCollFlowOverloadCleared

jnxCollFtpSwitchover
jnxCollMemoryAvailable
jnxCollMemoryUnavailable
jnxCollUnavailableDest
jnxCollUnavailableDestCleared
jnxCollUnsuccessfulTransfer
jnxDfcHardMemThresholdExceeded
jnxDfcHardMemUnderThreshold
jnxDfcHardPpsThresholdExceeded
jnxDfcHardPpsUnderThreshold
jnxDfcSoftMemThresholdExceeded
jnxDfcSoftMemUnderThreshold
jnxDfcSoftPpsThresholdExceeded
jnxDfcSoftPpsUnderThreshold
jnxEventTrap
jnxExampleStartup
jnxFEBSwitchover
jnxFanFailure
jnxFanOK
jnxFruCheck
jnxFruFailed
jnxFruInsertion
jnxFruOK
jnxFruOffline
jnxFruOnline
jnxFruPowerOff
jnxFruPowerOn
jnxFruRemoval
jnxHardDiskFailed
jnxHardDiskMissing
jnxJsAvPatternUpdateTrap
jnxJsChassisClusterSwitchover
jnxJsFwAuthCapacityExceeded
jnxJsFwAuthFailure
jnxJsFwAuthServiceDown
jnxJsFwAuthServiceUp
jnxJsNatAddrPoolThresholdStatus
jnxJsScreenAttack
jnxJsScreenCfgChange
jnxLdpLspDown
jnxLdpLspUp
jnxLdpSesDown
jnxLdpSesUp
jnxMIMstCistPortLoopProtectStateChangeTrap
jnxMIMstCistPortRootProtectStateChangeTrap
jnxMIMstErrTrap
jnxMIMstGenTrap
jnxMIMstInvalidBpduRxdTrap
jnxMIMstMstiPortLoopProtectStateChangeTrap
jnxMIMstMstiPortRootProtectStateChangeTrap
jnxMIMstNewRootTrap
jnxMIMstProtocolMigrationTrap
jnxMIMstRegionConfigChangeTrap
jnxMIMstTopologyChgTrap
jnxMacChangedNotification
jnxMplsLdpInitSesThresholdExceeded
jnxMplsLdpPathVectorLimitMismatch
jnxMplsLdpSessionDown
jnxMplsLdpSessionUp
jnxOspfV3IfConfigError
jnxOspfV3IfRxBadPacket

jnxOspfV3IfStateChange
jnxOspfV3LsdbApproachingOverflow
jnxOspfV3LsdbOverflow
jnxOspfV3NbrRestartHelperStatusChange
jnxOspfV3NbrStateChange
jnxOspfV3NssaTranslatorStatusChange
jnxOspfV3RestartStatusChange
jnxOspfV3VirtIfConfigError
jnxOspfV3VirtIfRxBadPacket
jnxOspfV3VirtIfStateChange
jnxOspfV3VirtNbrRestartHelperStatusChange
jnxOspfV3VirtNbrStateChange
jnxOtnAlarmCleared
jnxOtnAlarmSet
jnxOverTemperature
jnxPmonOverloadCleared
jnxPmonOverloadSet
jnxPingEgressJitterThresholdExceeded
jnxPingEgressStdDevThresholdExceeded
jnxPingEgressThresholdExceeded
jnxPingIngressJitterThresholdExceeded
jnxPingIngressStdDevThresholdExceeded
jnxPingIngressThresholdExceeded
jnxPingRttJitterThresholdExceeded
jnxPingRttStdDevThresholdExceeded
jnxPingRttThresholdExceeded
jnxPortBpduErrorStatusChangeTrap
jnxPortLoopProtectStateChangeTrap
jnxPortRootProtectStateChangeTrap
jnxPowerSupplyFailure
jnxPowerSupplyOK
jnxRedundancySwitchover
jnxRmonAlarmGetFailure
jnxRmonGetOk
jnxSecAccessIfMacLimitExceeded
jnxSecAccessDdsRateLimitCrossed
jnxSonetAlarmCleared
jnxSonetAlarmSet
jnxSpSvcSetCpuExceeded
jnxSpSvcSetCpuOk
jnxSpSvcSetZoneEntered
jnxSpSvcSetZoneExited
jnxStormEventNotification
jnxSyslogTrap
jnxTemperatureOK
jnxVccpPortDown
jnxVccpPortUp
jnxVpnIfDown
jnxVpnIfUp
jnxVpnPwDown
jnxVpnPwUp
jnx12aldGlobalMacLimit
jnx12aldInterfaceMacLimit
jnx12aldRoutingInstMacLimit
linkDown
linkUp
lldpRemTablesChange
mfrMibTrapBundleLinkMismatch
mplsLspChange
mplsLspDown
mplsLspInfoChange

```

mplsLspInfoDown
mplsLspInfoPathDown
mplsLspInfoPathUp
mplsLspInfoUp
mplsLspPathDown
mplsLspPathUp
mplsLspUp
mplsNumVrfRouteMaxThreshExceeded
mplsNumVrfRouteMidThreshExceeded
mplsNumVrfSecI1lg1Lb1ThrshExcd
mplsTunnelDown
mplsTunnelReoptimized
mplsTunnelRerouted
mplsTunnelUp
mplsVrfIfDown
mplsVrfIfUp
mplsXCDown
mplsXCUp
msdpBackwardTransition
msdpEstablished
newRoot
ospfIfAuthFailure
ospfIfConfigError
ospfIfRxBadPacket
ospfIfStateChange
ospfLsdbApproachingOverflow
ospfLsdbOverflow
ospfMaxAgeLsa
ospfNbrStateChange
ospfOriginateLsa
ospfTxRetransmit
ospfVirtIfAuthFailure
ospfVirtIfConfigError
ospfVirtIfRxBadPacket
ospfVirtIfStateChange
ospfVirtIfTxRetransmit
ospfVirtNbrStateChange
pethMainPowerUsageOffNotification
pethMainPowerUsageOnNotification
pethPsePortOnOffNotification
pingProbeFailed
pingTestCompleted
pingTestFailed
ptopoConfigChange
risingAlarm
rpMauJabberTrap
sd1cLSStatusChange
sd1cPortStatusChange
topologyChange
traceRoutePathChange
traceRouteTestCompleted
traceRouteTestFailed
vrrpTrapAuthFailure
vrrpTrapNewMaster
warmStart

```

request snmp spoof-trap (Question Mark ?)

```

user@host> request snmp spoof-trap ?
Possible completions:
<trap>           The name of the trap to spoof

```

ads1AtucInitFailureTrap
ads1AtucPerfESsThreshTrap
ads1AtucPerfLofsThreshTrap
ads1AtucPerfLoIsThreshTrap
ads1AtucPerfLossThreshTrap
ads1AtucPerfLprsThreshTrap
ads1AtucRateChangeTrap
ads1AturPerfESsThreshTrap
ads1AturPerfLofsThreshTrap
ads1AturPerfLossThreshTrap
ads1AturPerfLprsThreshTrap
ads1AturRateChangeTrap
apsEventChannelMismatch
apsEventFEPLF
apsEventModeMismatch
apsEventPSBF
apsEventSwitchover
authenticationFailure
bfdSessDown
bfdSessUp
bgpBackwardTransition
bgpEstablished
coldStart
dlsWTrapCircuitDown
dlsWTrapCircuitUp
---(more 10%)---

request snmp utility-mib clear instance

Syntax	request snmp utility-mib clear instance <i>name</i> object-type <i>type</i>
Release Information	Command introduced in Junos OS Release 12.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear the data stored in the specified container object in the SNMP Utility MIB.
Options	<p><i>name</i>—Name of the SNMP instance that is used to identify the data stored in the container object.</p> <p><i>object-type type</i>—Type of container object in which the data is stored. The following container object types are supported:</p> <ul style="list-style-type: none">• counter—Stores a 32-bit counter value.• counter64—Stores a 64-bit counter value.• integer—Stores a 32-bit signed integer value.• unsigned-integer—Stores a 32-bit unsigned integer value.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• Utility MIB on page 62• <i>Understanding the Implementation of SNMP on the QFabric System</i>• request snmp utility-mib set instance on page 350

request snmp utility-mib set instance

Syntax	<code>request snmp utility-mib set instance <i>name</i></code> <code>object-type <i>type</i></code> <code>object-value <i>value</i></code>
Release Information	Command introduced in Junos OS Release 12.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Store data in the specified container object in the SNMP Utility MIB. The data may be retrieved by SNMP operations.
Options	<p><i>name</i>—Name of the SNMP instance that is used to identify the data stored in the container object.</p> <p><i>object-type type</i>—Type of container object in which to store data. The following container object types are supported:</p> <ul style="list-style-type: none">• counter—Stores a 32-bit counter value.• counter64—Stores a 64-bit counter value.• integer—Stores a 32-bit signed integer value.• unsigned-integer—Stores a 32-bit unsigned integer value.• string—Stores an octet string value. <p><i>object-value value</i>—Data that is stored in the container object.</p>
Required Privilege Level	request
Related Documentation	<ul style="list-style-type: none">• Utility MIB on page 62• Understanding the Implementation of SNMP on the QFabric System• request snmp utility-mib clear instance on page 349

show snmp health-monitor

Syntax	show snmp health-monitor <alarms (brief detail) logs>
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about Simple Network Management Protocol (SNMP) health monitor alarms and logs.
Options	<p>none—Display information about all health monitor alarms and logs.</p> <p>alarms (brief detail)—(Optional) Display information about health monitor alarms. Optionally, specify brief or detailed information about the alarms.</p> <p>logs—(Optional) Display information about health monitor logs.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Understanding Health Monitoring on page 69 • Configuring Health Monitoring on page 111
List of Sample Output	show snmp health-monitor on page 353 show snmp health-monitor alarms detail on page 353
Output Fields	Table 40 on page 351 describes the output fields for the show snmp health-monitor command. Output fields are listed in the approximate order in which they appear.

Table 40: show snmp health-monitor Output Fields

Field Name	Field Description	Level of Output
Alarm Index	Alarm identifier.	All levels
Variable description	Description of the health monitor object instance being monitored.	All levels
Variable name	Name of the health monitor object instance being monitored.	All levels
Value	Current value of the monitored variable in the most recent sample interval.	All levels

Table 40: show snmp health-monitor Output Fields (*continued*)

Field Name	Field Description	Level of Output
State	<p>State of the alarm or event entry:</p> <ul style="list-style-type: none"> Alarms: <ul style="list-style-type: none"> active—Entry is fully configured and activated. falling threshold crossed—Value of the variable has crossed the lower threshold limit. rising threshold crossed—Value of the variable has crossed the upper threshold limit. under creation—Entry is being configured and is not yet activated. startup—Alarm is waiting for the first sample of the monitored variable. object not available—Monitored variable of that type is not available to the health monitor agent. instance not available—Monitored variable's instance is not available to the health monitor agent. object type invalid—Monitored variable is not a numeric value. object processing errored—An error occurred when the monitored variable was processed. unknown—State is not one of the above. 	All levels
Variable OID	Object ID to which the variable name is resolved. The format is x.x.x.x.	detail
Sample type	Method of sampling the monitored variable and calculating the value to compare against the upper and lower thresholds. It can have the value <i>absolute value</i> or <i>delta value</i> .	detail
Startup alarm	<p>Alarm that might be sent when this entry is first activated, depending on the following criteria:</p> <ul style="list-style-type: none"> Alarm is sent when one of the following situations exists: <ul style="list-style-type: none"> Value of the alarm is above or equal to the rising threshold and the startup type is either rising alarm or rising or falling alarm. <i>falling alarm</i> Value of the alarm is below or equal to the falling threshold and the startup type is either <i>falling alarm</i> or <i>rising or falling alarm</i>. Alarm is <i>not</i> sent when one of the following situations exists: <ul style="list-style-type: none"> Value of the alarm is above or equal to the rising threshold and the startup type is <i>falling alarm</i>. Value of the alarm is below or equal to the falling threshold and the startup type is <i>rising alarm</i>. Value of the alarm is between the thresholds. 	detail
Owner	Name of the entry configured by the user. If the entry was created through the CLI, the owner has monitor prepended to it.	detail
Creator	Mechanism by which the entry was configured (Health Monitor).	detail
Sample interval	Time period between samples (in seconds).	detail
Rising threshold	Upper limit threshold value as a percentage of the maximum possible value.	detail

Table 40: show snmp health-monitor Output Fields (*continued*)

Field Name	Field Description	Level of Output
Falling threshold	Lower limit threshold value as a percentage of the maximum possible value.	detail
Rising event index	Index number of the event triggered when the rising threshold is crossed.	detail
Falling event index	Index number of the event triggered when the falling threshold is crossed. Details include the value of the falling event instance and the state of the falling event instance.	detail

Sample Output

show snmp health-monitor

```

user@switch> show snmp health-monitor

Alarm
Index  Variable description                                Value State
-----
32768 Health Monitor: root file system utilization
      jnxHrStoragePercentUsed.1                          59 active

32769 Health Monitor: /config file system utilization
      jnxHrStoragePercentUsed.2                          0 active

32770 Health Monitor: RE 0 CPU utilization
      jnxOperatingCPU.9.1.0.0                            9 falling threshold

32772 Health Monitor: RE 0 memory utilization
      jnxOperatingBuffer.9.1.0.0                         23 active

32774 Health Monitor: Max Kernel Memory Used (%)
      jnxBoxKernelMemoryUsedPercent.0                    3 active
Event Index: 32768
Description: Health Monitor: RE 0 CPU utilization crossed falling threshold
70 (value: 5), (variable: jnxOperatingCPU.9.1.0.0)
Time: 2011-01-09 19:18:35 PST

```

show snmp health-monitor alarms detail

```

user@switch> show snmp health-monitor alarms detail

Alarm Index 32768:
Variable name      jnxHrStoragePercentUsed.1
Variable OID       1.3.6.1.4.1.2636.3.31.1.1.1.1.1
Sample type        absolute value
Startup alarm      rising alarm
Owner              Health Monitor: root file system
                  utilization
Creator            Health Monitor
State              active
Sample interval    300 seconds
Rising threshold   80

```

Falling threshold 70
Rising event index 32768
Falling event index 32768
Instance Value: 59
Instance State: active

Alarm Index 32769:

Variable name jnxHrStoragePercentUsed.2
Variable OID 1.3.6.1.4.1.2636.3.31.1.1.1.2
Sample type absolute value
Startup alarm rising alarm
Owner Health Monitor: /config file system utilization
Creator Health Monitor
State active
Sample interval 300 seconds
Rising threshold 80
Falling threshold 70
Rising event index 32768
Falling event index 32768
Instance Value: 0
Instance State: active

Alarm Index 32770:

Variable name jnxOperatingCPU.9.1.0.0
Variable OID 1.3.6.1.4.1.2636.3.1.13.1.8.9.1.0.0
Sample type absolute value
Startup alarm rising alarm
Owner Health Monitor: RE 0 CPU utilization
Creator Health Monitor
State active
Sample interval 300 seconds
Rising threshold 80
Falling threshold 70
Rising event index 32768
Falling event index 32768
Instance Value: 9
Instance State: falling threshold

Alarm Index 32772:

Variable name jnxOperatingBuffer.9.1.0.0
Variable OID 1.3.6.1.4.1.2636.3.1.13.1.11.9.1.0.0
Sample type absolute value
Startup alarm rising alarm
Owner Health Monitor: RE 0 memory utilization
Creator Health Monitor
State active
Sample interval 300 seconds
Rising threshold 80
Falling threshold 70
Rising event index 32768
Falling event index 32768
Instance Value: 23
Instance State: active

Alarm Index 32774:

Variable name jnxBoxKernelMemoryUsedPercent.0
Variable OID 1.3.6.1.4.1.2636.3.1.16.0
Sample type absolute value

Startup alarm	rising alarm
Owner	Health Monitor: Max Kernel Memory Used (%)
Creator	Health Monitor
State	active
Sample interval	300 seconds
Rising threshold	80
Falling threshold	70
Rising event index	32768
Falling event index	32768
Instance Value:	3
Instance State:	active

show snmp inform-statistics

Syntax	show snmp inform-statistics
Release Information	<p>Command introduced in Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about Simple Network Management Protocol (SNMP) inform requests.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show snmp inform-statistics on page 356
Output Fields	Table 41 on page 356 describes the output fields for the show snmp inform-statistics command. Output fields are listed in the approximate order in which they appear.

Table 41: show snmp inform-statistics Output Fields

Field Name	Field Description
Target Name	Name of the device configured to receive and respond to SNMP informs.
Address	IP address of the target device.
Sent	Number of informs sent to the target device and acknowledged by the target device.
Pending	Number of informs held in memory pending a response from the target device.
Discarded	Number of informs discarded after the specified number of retransmissions to the target device were attempted.
Timeouts	Number of informs that did not receive an acknowledgement from the target device within the timeout specified.
Probe Failures	Connection failures that occurred (for example, when the target server returned invalid content or you incorrectly configured the target address).

Sample Output

show snmp inform-statistics

```

user@host> show snmp inform-statistics
Inform Request Statistics:
Target Name: TA1_v3_md5_none Address: 172.17.20.184
Sent: 176, Pending: 0
Discarded: 0, Timeouts: 0, Probe Failures: 0

```


Target Name: TA2_v3_sha_none Address: 192.168.110.59
Sent: 0, Pending: 4
Discarded: 84, Timeouts: 0, Probe Failures: 258
Target Name: TA5_v2_none Address: 172.17.20.184
Sent: 0, Pending: 0
Discarded: 2, Timeouts: 10, Probe Failures: 0

show snmp mib

Syntax	<code>show snmp mib (get get-next walk) (ascii decimal) <i>object-id</i></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>ascii and decimal options introduced in Junos OS Release 9.6.</p> <p>ascii and decimal options introduced in Junos OS Release 9.6 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display local Simple Network Management Protocol (SNMP) Management Information Base (MIB) object values.
Options	<p>get—Retrieve and display one or more SNMP object values.</p> <p>get-next—Retrieve and display the next SNMP object values.</p> <p>walk—Retrieve and display the SNMP object values that are associated with the requested object identifier (OID). When you use this option, the Junos OS displays the objects below the subtree that you specify.</p> <p>ascii—Display the SNMP object's string indices as an ASCII-key representation.</p> <p>decimal—Display the SNMP object values in the decimal (default) format. The decimal option is the default option for this command. Therefore, issuing the show snmp mib (get get-next walk) decimal object-id and the show snmp mib (get get-next walk) object-id commands display the same output.</p> <p>object-id—The object can be represented by a sequence of dotted integers (such as 1.3.6.1.2.1.2) or by its subtree name (such as interfaces). When entering multiple objects, enclose the objects in quotation marks.</p>
Required Privilege Level	snmp—To view this statement in the configuration.
List of Sample Output	<p>show snmp mib get on page 359</p> <p>show snmp mib get (Multiple Objects) on page 359</p> <p>show snmp mib get (Layer 2 Policer) on page 359</p> <p>show snmp mib get-next on page 359</p> <p>show snmp mib get-next (Specify an OID) on page 359</p> <p>show snmp mib walk on page 359</p> <p>show snmp mib walk (QFX Series) on page 359</p> <p>show snmp mib walk decimal on page 360</p> <p>show snmp mib walk (ASCII) on page 360</p> <p>show snmp mib walk (Multiple Indices) on page 360</p> <p>show snmp mib walk decimal (Multiple Indices) on page 360</p>
Output Fields	Table 42 on page 359 describes the output fields for the show snmp mib command. Output fields are listed in the approximate order in which they appear.

Table 42: show snmp mib Output Fields

Field Name	Field Description
<i>name</i>	Object name and numeric instance value.
<i>object value</i>	Object value. The Junos OS translates OIDs into the corresponding object names.

Sample Output

show snmp mib get

```
user@host> show snmp mib get sysObjectID.0
sysObjectID.0 = jnxProductNameM20
```

show snmp mib get (Multiple Objects)

```
user@host> show snmp mib get ?sysObjectID.0 sysUpTime.0?
sysObjectID.0 = jnxProductNameM20
sysUpTime.0 = 1640992
```

show snmp mib get (Layer 2 Policer)

```
user@host> show snmp mib get ifInOctets.25970
ifInOctets.25970 = 7545720
```

show snmp mib get-next

```
user@host> show snmp mib get-next jnxMibs
jnxBoxClass.0 = jnxProductLineM20.0
```

show snmp mib get-next (Specify an OID)

```
user@host> show snmp mib get-next 1.3.6.1
sysDescr.0 = Juniper Networks, Inc. m20 internet router, kernel
Junos OS Release: 2004-1 Build date: build date UTC Copyright (c) 1996-2004 Juniper
Networks, Inc.
```

show snmp mib walk

```
user@host> show snmp mib walk system
sysDescr.0 = Juniper Networks, Inc. m20 internet router, kernel
Junos OS Release #0: 2004-1 Build date: build date UTC Copyright (c) 1996-2004
Juniper Networks, Inc.
sysObjectID.0 = jnxProductNameM20
sysUpTime.0 = 1640992
sysContact.0 = Your contact
sysName.0 = my router
sysLocation.0 = building 1
sysServices.0 = 4
```

show snmp mib walk (QFX Series)

```
user@switch> show snmp mib walk system
sysDescr.0 = Juniper Networks, Inc. qfx3500s internet router, kernel JUNOS
11.1-20100926.0 #0: 2010-09-26 06:17:38 UTC Build date: 2010-09-26 06:00:10
sysObjectID.0 = jnxProductQFX3500
sysUpTime.0 = 138980301
sysContact.0 = System Contact
```

```
sysName.0      = LabQFX3500
sysLocation.0 = Lab
sysServices.0 = 4
```

show snmp mib walk decimal

```
user@host show snmp mib walk decimal jnxUtilData
jnxUtilCounter32Value.102.114.101.100 = 100
```

show snmp mib walk (ASCII)

```
show snmp mib walk ascii jnxUtilData
jnxUtilCounter32Value."fred" = 100
```

show snmp mib walk (Multiple Indices)

```
show snmp mib walk ascii jnxFWCounterByteCount
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_BE-fe-1/3/0.0-i".2 = 0
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_CC-fe-1/3/0.0-i".2 = 0
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_RT-fe-1/3/0.0-i".2 = 0
.....
```

show snmp mib walk decimal (Multiple Indices)

```
show snmp mib walk decimal jnxFWCounterByteCount
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_BE-fe-1/3/0.0-i".2 = 0
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_CC-fe-1/3/0.0-i".2 = 0
jnxFWCounterByteCount."fe-1/3/0.0-i"."CLASS_RT-fe-1/3/0.0-i".2 = 0
.....
```

show snmp rmon

Syntax	show snmp rmon <alarms (brief detail)> <events (brief detail)> <logs>
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about Simple Network Management Protocol (SNMP) Remote Monitoring (RMON) alarms, events, and logs.
Options	<p>none—Display information about all RMON alarms and events.</p> <p>brief detail—(Optional) Display brief or detailed information about RMON alarms or events.</p> <p>alarms—(Optional) Display information about RMON alarms.</p> <p>events—(Optional) Display information about RMON events.</p> <p>logs—(Optional) Display information about RMON monitoring logs.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Monitoring RMON MIB Tables on page 118 • Configuring RMON Alarms and Events on page 109 • Understanding RMON on page 65 • clear snmp statistics on page 341 • clear snmp history on page 340 • show snmp rmon history on page 365
List of Sample Output	show snmp rmon on page 363 show snmp rmon alarms detail on page 364 show snmp rmon events detail on page 364 show snmp rmon logs on page 364
Output Fields	Table 43 on page 361 describes the output fields for the show snmp rmon command. Output fields are listed in the approximate order in which they appear.

Table 43: show snmp rmon Output Fields

Field Name	Field Description	Level of Output
Alarm Index	Alarm identifier.	All levels

Table 43: show snmp rmon Output Fields (*continued*)

Field Name	Field Description	Level of Output
State	<p>State of the alarm or event entry:</p> <p>Alarms:</p> <ul style="list-style-type: none"> • active—Entry is fully configured and activated. • falling threshold crossed—Value of the variable has crossed the lower threshold limit. • rising threshold crossed—Value of the variable has crossed the upper threshold limit. • under creation—Entry is being configured and is not yet activated. • startup—Alarm is waiting for the first sample of the monitored variable. • object not available—Monitored variable of that type is not available to the SNMP agent. • instance not available—Monitored variable's instance is not available to the SNMP agent. • object type invalid—Monitored variable is not a numeric value. • object processing errored—An error occurred when the monitored variable was processed. • unknown—State is not one of the above. <p>Events:</p> <ul style="list-style-type: none"> • active—Entry has been fully configured and activated. • under creation—Entry is being configured and is not yet activated. • unknown—State is not one of the above. 	All levels
Variable name	Name of the SNMP object instance being monitored.	All levels
Event Index	Event identifier.	All levels
Type	<p>Type of notification made when an event is triggered. It can be one of the following:</p> <ul style="list-style-type: none"> • log—A system log message is generated and an entry is made to the log table. • snmptrap—An SNMP trap is sent to the configured destination. • log and trap—A system log message is generated, an entry is made to the log table, and an SNMP trap is sent to the configured destination. • none—Neither log nor trap will be sent. 	detail
Last Event	Date and time of the last event. It has the format <i>yyyy-mm-dd hh:mm:ss timezone</i> .	brief
Community	Trap group used for sending the SNMP trap.	detail
Variable OID	Object ID to which the variable name is resolved. The format is x.x.x.x.	detail
Sample type	Method of sampling the monitored variable and calculating the value to compare against the upper and lower thresholds. It can have the value of absolute value or delta value .	detail

Table 43: show snmp rmon Output Fields (*continued*)

Field Name	Field Description	Level of Output
Startup alarm	Alarm that might be sent when this entry is first activated, depending on the following criteria: <ul style="list-style-type: none"> Alarm is sent when one of the following situations exists: <ul style="list-style-type: none"> Value of the alarm is above or equal to the rising threshold and the startup type is either rising alarm or rising or falling alarm. Value of the alarm is below or equal to the falling threshold and the startup type is either falling alarm or rising or falling alarm. Alarm is <i>not</i> sent when one of the following situations exists: <ul style="list-style-type: none"> Value of the alarm is above or equal to the rising threshold and the startup type is falling alarm. Value of the alarm is below or equal to the falling threshold and the startup type is rising alarm. Value of the alarm is between the thresholds. 	detail
Owner	Name of the entry configured by the user. If the entry was created through the CLI, the owner has monitor prepended to it.	detail
Creator	Mechanism by which the entry was configured (CLI or SNMP).	detail
Sample interval	Time period between samples (in seconds).	detail
Rising threshold	Upper limit threshold value configured by the user.	detail
Falling threshold	Lower limit threshold value configured by the user.	detail
Rising event index	Event triggered when the rising threshold is crossed.	detail
Falling event index	Event triggered when the falling threshold is crossed.	detail
Current value	Current value of the monitored variable in the most recent sample interval.	detail

Sample Output

show snmp rmon

```

user@host> show snmp rmon
Alarm
Index  Variable description                               Value State

      5  monitor
         jnxOperatingCPU.9.1.0.0                      5 falling threshold

Event
Index  Type                               Last Event
      1  log and trap                     2009-07-10 11:34:17 PDT
Event Index: 1
Description: Event 1 triggered by Alarm 5, rising threshold (90) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 100)
Time: 2009-07-10 11:34:07 PDT

```

Description: Event 1 triggered by Alarm 5, falling threshold (75) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 5)
Time: 2009-07-10 11:34:17 PDT

show snmp rmon alarms detail

```
user@host> show snmp rmon alarms detail
Alarm Index 5:
  Variable name           jnxOperatingCPU.9.1.0.0
  Variable OID            1.3.6.1.4.1.2636.3.1.13.1.8.9.1.0.0
  Sample type             absolute value
  Startup alarm           rising or falling alarm
  Owner                   monitor

  Creator                 CLI
  State                   active
  Sample interval         5 seconds
  Rising threshold        90
  Falling threshold       75
  Rising event index      1
  Falling event index     1
  Instance Value: 4
  Instance State: falling threshold
```

show snmp rmon events detail

```
user@host> show snmp rmon events detail
Event Index 1:
  Description             rmon event
  Type                    log and trap
  Community               rmon-trap-group
  Last event              2009-07-10 11:34:17 PDT
  Creator                 CLI
  State                   active
```

show snmp rmon logs

```
user@host> show snmp rmon logs
Event Index: 1
  Description: Event 1 triggered by Alarm 5, rising threshold (90) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 100)
  Time: 2009-07-10 11:34:07 PDT
  Description: Event 1 triggered by Alarm 5, falling threshold (75) crossed,
(variable: jnxOperatingCPU.9.1.0.0, value: 5)
  Time: 2009-07-10 11:34:17 PDT
```


show snmp rmon history

Syntax	<pre>show snmp rmon history <history-index> sample-index <sample-index></pre>
Release Information	<p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the contents of the RMON history group.
Options	<p>none—Display all the entries in the RMON history group.</p> <p>history-index—(Optional) Display the contents of the specified entry in the RMON history group.</p> <p>sample-index sample-index—(Optional) Display the statistics collected for the specified sample within the specified entry in the RMON history group.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • RMON MIB Event, Alarm, Log, and History Control Tables on page 66 • Monitoring RMON MIB Tables on page 118 • Configuring RMON Alarms and Events on page 109 • Understanding RMON on page 65 • clear snmp statistics on page 341 • clear snmp history on page 340 • show snmp rmon on page 361

show snmp statistics

Syntax	<code>show snmp statistics</code> <code><subagents></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for OCX Series switches. Option subagents introduced in Junos OS Release 14.2.
Description	Display statistics about Simple Network Management Protocol (SNMP) packets sent and received by the router or switch.
Options	subagents —(Optional) Display the statistics of the protocol data unit (PDU), the number of SNMP requests and responses per subagent, and the SNMP statistics received from each subagent per logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear snmp statistics on page 341
List of Sample Output	show snmp statistics on page 371 show snmp statistics subagents on page 371
Output Fields	Table 44 on page 367 describes the output fields for the show snmp statistics command. Output fields are listed in the approximate order in which they appear.

Table 44: show snmp statistics Output Fields

Field Name	Field Description
Input	<p>Information about received packets:</p> <ul style="list-style-type: none"> • Packets(snmplnPkts)—Total number of messages delivered to the SNMP entity from the transport service. • Bad versions—(snmplnBadVersions) Total number of messages delivered to the SNMP entity that were for an unsupported SNMP version. • Bad community names—(snmplnBadCommunityNames) Total number of messages delivered to the SNMP entity that used an SNMP community name not known to the entity. • Bad community uses—(snmplnBadCommunityUses) Total number of messages delivered to the SNMP entity that represented an SNMP operation that was not allowed by the SNMP community named in the message. • ASN parse errors—(snmplnASNParseErrs) Total number of ASN.1 or BER errors encountered by the SNMP entity when decoding received SNMP messages. • Too big—(snmplnTooBigs) Total number of SNMP PDUs delivered to the SNMP entity with an error status field of tooBig. • No such names—(snmplnNoSuchNames) Total number of SNMP PDUs delivered to the SNMP entity with an error status field of noSuchName. • Bad values—(snmplnBadValues) Total number of SNMP PDUs delivered to the SNMP entity with an error status field of badValue. • Read only—(snmplnReadOnlys) Total number of valid SNMP PDUs delivered to the SNMP entity with an error status field of readOnly. Only incorrect implementations of SNMP generate this error.

Table 44: show snmp statistics Output Fields (*continued*)

Field Name	Field Description
Input (continued)	<ul style="list-style-type: none"> • General errors—(snmpInGenErrs) Total number of SNMP PDUs delivered to the SNMP entity with an error status field of genErr. • Total requests varbinds—(snmpInTotalReqVars) Total number of MIB objects retrieved successfully by the SNMP entity as a result of receiving valid SNMP GetRequest and GetNext PDUs. • Total set varbinds—(snmpInSetVars) Total number of MIB objects modified successfully by the SNMP entity as a result of receiving valid SNMP SetRequest PDUs. • Get requests—(snmpInGetRequests) Total number of SNMP GetRequest PDUs that have been accepted and processed by the SNMP entity. • Get nexts—(snmpInGetNexts) Total number of SNMP GetNext PDUs that have been accepted and processed by the SNMP entity. • Set requests—(snmpInSetRequests) Total number of SNMP SetRequest PDUs that have been accepted and processed by the SNMP entity. • Get responses—(snmpInGetResponses) Total number of SNMP GetResponse PDUs that have been accepted and processed by the SNMP entity. • Traps—(snmpInTraps) Total number of SNMP traps generated by the SNMP entity. • Silent drops—(snmpSilentDrops) Total number of GetRequest, GetNextRequest, GetBulkRequest, SetRequests, and InformRequest PDUs delivered to the SNMP entity that were silently dropped because the size of a reply containing an alternate response PDU with an empty variable-bindings field was greater than either a local constraint or the maximum message size associated with the originator of the requests. • Proxy drops—(snmpProxyDrops) Total number of GetRequest, GetNextRequest, GetBulkRequest, SetRequests, and InformRequest PDUs delivered to the SNMP entity that were silently dropped because the transmission of the message to a proxy target failed in such a way (other than a timeout) that no response PDU could be returned. • Commit pending drops—Number of SNMP packets for Set requests dropped because of a previous pending SNMP Set request on the committed configuration. • Throttle drops—Number of SNMP packets for any requests dropped reaching the throttle limit.

Table 44: show snmp statistics Output Fields (*continued*)

Field Name	Field Description
V3 Input	<p>Information about SNMP version 3 packets:</p> <ul style="list-style-type: none"> • Unknown security models—(snmpUnknownSecurityModels) Total number of packets received by the SNMP engine that were dropped because they referenced a security model that was not known to or supported by the SNMP engine. • Invalid messages—(snmpInvalidMsgs) Number of packets received by the SNMP engine that were dropped because there were invalid or inconsistent components in the SNMP message. • Unknown pdu handlers—(snmpUnknownPDUHandlers) Number of packets received by the SNMP engine that were dropped because the PDU contained in the packet could not be passed to an application responsible for handling the PDU type. • Unavailable contexts—(snmpUnavailableContexts) Number of requests received for a context that is known to the SNMP engine, but is currently unavailable. • Unknown contexts—(snmpUnknownContexts) Total number of requests received for a context that is unknown to the SNMP engine. • Unsupported security levels—(usmStatsUnsupportedSecLevels) Total number of packets received by the SNMP engine that were dropped because they requested a security level unknown to the SNMP engine (or otherwise unavailable). • Not in time windows—(usmStatsNotInTimeWindows) Total number of packets received by the SNMP engine that were dropped because they appeared outside the authoritative SNMP engine's window. • Unknown user names—(usmStatsUnknownUserNames) Total number of packets received by the SNMP engine that were dropped because they referenced a user that was not known to the SNMP engine. • Unknown engine ids—(usmStatsUnknownEngineIDs) Total number of packets received by the SNMP engine that were dropped because they referenced an SNMP engine ID that was not known to the SNMP engine. • Wrong digests—(usmStatsWrongDigests) Total number of packets received by the SNMP engine that were dropped because they did not contain the expected digest value. • Decryption errors—(usmStatsDecryptionErrors) Total number of packets received by the SNMP engine that were dropped because they could not be decrypted.

Table 44: show snmp statistics Output Fields (*continued*)

Field Name	Field Description
Output	<p>Information about transmitted packets:</p> <ul style="list-style-type: none"> • Packets—(snmpOutPkts) Total number of messages passed from the SNMP entity to the transport service. • Too big—(snmpOutTooBigs) Total number of SNMP PDUs generated by the SNMP entity with an error status field of tooBig. • No such names—(snmpOutNoSuchNames) Total number of SNMP PDUs delivered to the SNMP entity with an error status field of noSuchName. • Bad values—(snmpOutBadValues) Total number of SNMP PDUs generated by the SNMP entity with an error status field of badValue. • General errors—(snmpOutGenErrs) Total number of SNMP PDUs generated by the SNMP entity with an error status field of genErr. • Get requests—(snmpOutGetRequests) Total number of SNMP GetRequest PDUs generated by the SNMP entity. • Get nexts—(snmpOutGetNexts) Total number of SNMP GetNext PDUs generated by the SNMP entity. • Set requests—(snmpOutSetRequests) Total number of SNMP SetRequest PDUs generated by the SNMP entity. • Get responses—(snmpOutGetResponses) Total number of SNMP GetResponse PDUs generated by the SNMP entity. • Traps—(snmpOutTraps) Total number of SNMP traps generated by the SNMP entity.

Table 45 on page 370 describes the output fields for the **show snmp statistics subagents** command. Output fields are listed in the approximate order in which they appear.

Table 45: show snmp statistics subagents Output Fields

Field Name	Field Description
Subagent	Location of the SNMP subagent.
Request PDUs	Number of PDUs requested by the SNMP manager.
Response PDUs	Number of response PDUs sent by the SNMP subagent.
Request Variables	Number of variable bindings on the PDUs requested by the SNMP manager.
Response Variables	Number of variable bindings on the PDUs sent by the SNMP subagent.
Average Response Time	Average time taken by the SNMP subagent to send statistics response.
Maximum Response Time	Maximum time taken by the SNMP subagent to send the statistics response.

Sample Output

show snmp statistics

```
user@host> show snmp statistics
SNMP statistics:
  Input:
    Packets: 246213, Bad versions: 12, Bad community names: 12,
    Bad community uses: 0, ASN parse errors: 96,
    Too big: 0, No such names: 0, Bad values: 0,
    Read only: 0, General errors: 0,
    Total request varbinds: 227084, Total set varbinds: 67,
    Get requests: 44942, Get nexts: 190371, Set requests: 10712,
    Get responses: 0, Traps: 0,
    Silent drops: 0, Proxy drops: 0, Commit pending drops: 0,
    Throttle drops: 0,
  V3 Input:
    Unknown security models: 0, Invalid messages: 0
    Unknown pdu handlers: 0, Unavailable contexts: 0
    Unknown contexts: 0, Unsupported security levels: 1
    Not in time windows: 0, Unknown user names: 0
    Unknown engine ids: 44, Wrong digests: 23, Decryption errors: 0
  Output:
    Packets: 246093, Too big: 0, No such names: 31561,
    Bad values: 0, General errors: 2,
    Get requests: 0, Get nexts: 0, Set requests: 0,
    Get responses: 246025, Traps: 0
```

show snmp statistics subagents

```
user@host> show snmp statistics subagents

Subagent: /var/run/cosd-20
  Request PDUs: 0, Response PDUs: 0,
  Request Variables: 0, Response Variables: 0,
  Average Response Time(ms): 0.00,
  Maximum Response Time(ms): 0.00

Subagent: /var/run/pfed-30
  Request PDUs: 0, Response PDUs: 0,
  Request Variables: 0, Response Variables: 0,
  Average Response Time(ms): 0.00,
  Maximum Response Time(ms): 0.00

Subagent: /var/run/rmopd-15
  Request PDUs: 0, Response PDUs: 0,
  Request Variables: 0, Response Variables: 0,
  Average Response Time(ms): 0.00,
  Maximum Response Time(ms): 0.00

Subagent: /var/run/chassisd-30
  Request PDUs: 33116, Response PDUs: 33116,
  Request Variables: 33116, Response Variables: 33116,
  Average Response Time(ms): 1.83,
  Maximum Response Time(ms): 203.48

Subagent: /var/run/pkid-13
  Request PDUs: 0, Response PDUs: 0,
  Request Variables: 0, Response Variables: 0,
  Average Response Time(ms): 0.00,
  Maximum Response Time(ms): 0.00
```

Subagent: /var/run/apsd-13
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/dfcd-32
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/mib2d-33
Request PDUs: 74211, Response PDUs: 74211,
Request Variables: 74211, Response Variables: 74211,
Average Response Time(ms): 2.30,
Maximum Response Time(ms): 51.04

Subagent: /var/run/license-check-16
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/craftd-14
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/bfdd-19
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/smihelperd-24
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/cfmd-18
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/rpd_snmp
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

Subagent: /var/run/l2tpd-18
Request PDUs: 0, Response PDUs: 0,
Request Variables: 0, Response Variables: 0,
Average Response Time(ms): 0.00,
Maximum Response Time(ms): 0.00

show snmp v3

Syntax	<code>show snmp v3</code> <code><access <brief detail> community general groups notify <filter> target <address parameters> users></code>
Release Information	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the Simple Network Management Protocol version 3 (SNMPv3) operating configuration.
Options	<p>none—Display all of the SNMPv3 operating configuration.</p> <p>access—(Optional) Display SNMPv3 access information.</p> <p>brief detail—(Optional) Display brief or detailed information about SNMPv3 access information.</p> <p>community—(Optional) Display SNMPv3 community information.</p> <p>general—(Optional) Display SNMPv3 general information.</p> <p>groups—(Optional) Display SNMPv3 security-to-group information.</p> <p>notify <filter>—(Optional) Display SNMPv3 notify information and, optionally, notify filter information.</p> <p>target <address parameters>—(Optional) Display SNMPv3 target information and, optionally, either target address or target parameter information.</p> <p>users—(Optional) Display SNMPv3 user information.</p>
Additional Information	To edit the default display of the show snmp v3 command, specify options in the show statement at the [edit snmp v3] hierarchy level.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• SNMPv3 Overview on page 62• Minimum SNMPv3 Configuration on a Device Running Junos OS on page 63• Configuring Access Privileges for a Group on page 113
List of Sample Output	show snmp v3 on page 375
Output Fields	Table 46 on page 375 describes the output fields for the show snmp v3 command. Output fields are listed in the approximate order in which they appear.

Table 46: show snmp v3 Output Fields

Field Name	Field Description
Local engine	<p>Information about the local SNMP engine configuration:</p> <ul style="list-style-type: none"> • Local engine ID—Unique Identifier of the local SNMPv3 engine. • Engine boots—Number of times the local SNMPv3 engine has rebooted or reinitialized since this engine ID was configured. • Engine time—Number of seconds since the local SNMPv3 engine was last rebooted or reinitialized. • Max msg size—Maximum message size the sender can accommodate.
Engine ID (local engine)	<p>Information about the local SNMP engine ID and the associated users:</p> <ul style="list-style-type: none"> • User—SNMPv3 username. • Auth/Priv—Authentication and encryption algorithm that is configured for the user. • Storage—Indicates whether a username is saved to the configuration file (nonvolatile) or not saved (volatile). Applies only to users with active status. • Status—Status of the user as listed in the SNMPv3 user table. Only rows with an active status in the table are used by the SNMPv3 engine.
Engine ID (remote engine)	<p>Information about a remote SNMP engine, associated users, user groups, and user access policies:</p> <ul style="list-style-type: none"> • User—SNMPv3 username. • Auth/Priv—Authentication and encryption algorithm that is configured for the user. • Storage—Indicates whether a username is saved to the configuration file (nonvolatile) or not (volatile). Applies only to users with active status. • Status—Status of a new user that has been activated. Only users with an active status can use SNMPv3. • Group name—Name of a group of users for which the configured access privileges apply. • Security model—Security model (such as usm, v1, v2c, or any) that is configured for the group. The security model is used with the security name to ensure messaging security. • Security name—Security name that is associated with a user, and which is used with the security model to ensure messaging security. • Storage type—Indicates whether a username is saved to the configuration file (nonvolatile) or not saved (volatile). Applies only to users with active status. • Status—Status of a user in a group. Only users with an active status can use SNMPv3.
Access control	<p>Information about access control:</p> <ul style="list-style-type: none"> • Group name—Name of a group of users for which the configured access privileges apply. • Context prefix—SNMPv3 context for which the configured access privileges apply. • Security model/level—Security model and security level combination that is configured for user access privileges. • Read view—Identifies the MIB view used for SNMPv3 read operations. • Write view—Identifies the MIB view used for SNMPv3 write operations. • Notify view—Identifies the MIB view used for outbound SNMP notifications.

Sample Output

show snmp v3

```
user@host> show snmp v3
```

Local engine ID: 80 00 0a 4c e04 31 32 33 34
Engine boots: 38
Engine time: 64583 seconds
Max msg size: 2048 bytes

Engine ID: local

User	Auth/Priv	Storage	Status
user1	md5/des	nonvolatile	active
user2	sha/none	nonvolatile	active
user3	none/none	nonvolatile	active

Engine ID: 81 00 0a 4c 04 64 64 64 64

User	Auth/Priv	Storage	Status
UNEW	md5/none	nonvolatile	active

Group name	Security model	Security name	Storage type	Status
g1	usm	user1	nonvolatile	active
g2	usm	user2	nonvolatile	active
g3	usm	user3	nonvolatile	active

Access control:

Group	Context prefix	Security model/level	Read view	Write view	Notify view
g1		usm/privacy	v1	v1	
g2		usm/authent	v1	v1	
g3		usm/none	v1	v1	

CHAPTER 16

System Logging

- request app-engine file-copy (crash | log) from-jhost to-vjunos
- request app-engine cleanup
- show app-engine crash
- show app-engine logs
- show log

request app-engine file-copy (crash | log) from-jhost to-vjunos

Syntax	<code>request app-engine file-copy (crash log) from-jhost <i>host-os-filename</i> to-vjunos <i>vjunos-filename</i></code>
Release Information	Command introduced in Junos OS Release 13.1X51-D10 for the QFX Series.
Description	<p>In Junos OS environments with a host OS, copies core files (crash option) or system log files (log option) from the host OS to a Junos OS filename.</p> <ul style="list-style-type: none">• crash option—Core files are copied from the directory where the host OS normally stores core files. For example, when the host OS is Linux, the source directory is <code>/var/crash</code>. The show app-engine crash command displays the list of core files available to copy from the host OS source directory.• log option—Log files are copied from the directory where the host OS normally stores system log files. For example, when the host OS is Linux, the source directory is <code>/var/log</code>. The show app-engine logs command displays the list of system log files available to copy from the host OS source directory. <p>Either the crash or log option is required. When the destination Junos OS path for the to-vjunos argument is a directory, the destination filename is the source filename by default. To rename the file at the destination, specify a full path that includes a destination filename in the path with the to-vjunos argument.</p>
Options	<ul style="list-style-type: none">• from-jhost <i>host-os-filename</i>—Source filename to copy from the host OS.• to-vjunos <i>vjunos-filename</i>—Junos OS destination path (with or without a filename) to which the file is copied. If this path is a directory, the source filename is used as the destination filename by default.
Additional Information	This command does not apply to accessing files on guest virtual machines (VMs) on QFX Series devices that support guest VMs.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show app-engine crash on page 382• show app-engine logs on page 384• request app-engine cleanup on page 380
List of Sample Output	request app-engine file-copy crash on page 379
Output Fields	This command produces no output. To see the results of the copy operation, you can run Junos OS commands for viewing files, such as file list with the destination directory, show system core-dumps , or show log .

Sample Output

request app-engine file-copy crash

```
user@host> request app-engine file-copy crash from-jhost
localhost.dcfpe.6449.1454328456.core.tgz to-junos /var/tmp
user@host> show system core-dumps
re0:
-----
-rw-r--r--  1 user  test    2538949 Feb 2  19:01
/var/tmp/localhost.dcpfe.6449.1454328456.core.tgz
total files: 1
```

request app-engine cleanup

Syntax	request app-engine cleanup <compute-cluster <i>compute-cluster-name</i> > <compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i> >
Release Information	Command introduced in Junos OS Release 13.1X51-D10 for the QFX Series.
Description	Cleans up temporary files on the Junos V App Engine or the host OS of QFX Series switches. This command deletes all files from the directories where temporary files are normally stored, such as /var/tmp.
Options	<ul style="list-style-type: none"> compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i>—Name of the compute cluster and name of the compute node. On QFX Series switches, the default names of the compute cluster and compute node are default-cluster and default-node, which applies to the host OS.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show app-engine crash on page 382 show app-engine logs on page 384 request app-engine file-copy on page 378
List of Sample Output	request app-engine cleanup (QFX 5100 Switches) on page 380
Output Fields	For a description of the output fields, see Table 47 on page 380 . Output fields are listed in the approximate order in which they appear.

Table 47: request app-engine cleanup Output Fields

Field Name	Field Description
Compute Cluster	Name of compute cluster.
Compute Node	Name of compute node.
Cleanup	Lists the directories that were cleaned up.

Sample Output

request app-engine cleanup (QFX 5100 Switches)

```

user@host> request app-engine cleanup
user@host> request app-engine cleanup
Compute cluster: default-cluster

Compute node: default-node

Cleanup (/var/tmp)

```


=====

show app-engine crash

Syntax	<pre>show app-engine crash <compute-cluster <i>compute-cluster-name</i>> <compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i>></pre>
Release Information	Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.
Description	Displays information regarding crashes on the Junos V App Engine or host OS. The command displays the list of files present in the <code>/var/crash/</code> directory, as well as some core files located in the <code>/var/tmp/</code> directory.
Options	<ul style="list-style-type: none"> compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i>—Name of the compute cluster and compute node. On QFX switches with a host OS, the default compute cluster and compute node names are default-cluster and default-node, and the command applies to the host OS by default.
Additional Information	<p>In the operational mode of the CLI when you type <code>?</code> for a name, for example a compute-node name, you would expect to get a list of available compute nodes plus the option to type in a name not listed. This is the auto-complete feature in the CLI. However, in JunosV App Engine, if you specify compute cluster and compute node in the operational command, the auto-complete works only if the compute cluster is put before the compute node.</p> <p>For commands with an optional compute-cluster <i>compute-cluster-name</i> option, if that option is omitted, the command will be executed on all compute nodes of all compute clusters. For commands with an optional compute-node <i>compute-node-name</i> option, if that option is omitted, the command will be executed on all compute nodes of the specified compute cluster.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> request app-engine file-copy on page 378
List of Sample Output	show app-engine crash (QFX5100 Switches) on page 383
Output Fields	For a description of the output fields, see Table 48 on page 382 . Output fields are listed in the approximate order in which they appear.

Table 48: show app-engine crash Output Fields

Field Name	Field Description
Compute Cluster	Name of compute cluster.
Compute Node	Name of compute node.
Crash Info	List of core files.

Sample Output

show app-engine crash (QFX5100 Switches)

```
user@host> show app-engine crash

Compute cluster: default-cluster

Compute node: default-node

Crash Info
=====
total 0
```

show app-engine logs

Syntax	<pre>show app-engine logs <compute-cluster <i>compute-cluster-name</i>> <compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i>></pre>
Release Information	Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.
Description	Displays log files regarding the state of the specified Guest VM or host OS, located in the <code>/var/log/</code> directory.
Options	<ul style="list-style-type: none"> compute-cluster <i>compute-cluster-name</i> compute-node <i>compute-node-name</i>—Name of the compute cluster and name of the compute node. On QFX switches with a host OS, the default compute cluster and compute node names are default-cluster and default-node, and the command applies to the host OS by default.
Additional Information	<p>In the operational mode of the CLI when you type <code>?</code> for a name, for example a compute-node name, you would expect to get a list of available compute nodes plus the option to type in a name not listed. This is the auto-complete feature in the CLI. However, in JunosV App Engine, if you specify compute cluster and compute node in the operational command, the auto-complete works only if the compute cluster is put before the compute node.</p> <p>For commands with an optional compute-cluster <i>compute-cluster-name</i> option, if that option is omitted, the command will be executed on all compute nodes of all compute clusters. For commands with an optional compute-node <i>compute-node-name</i> option, if that option is omitted, the command will be executed on all compute nodes of the specified compute cluster.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> request app-engine file-copy on page 378
List of Sample Output	show app-engine logs (QFX5100 Switches) on page 385
Output Fields	For a description of the output fields, see Table 49 on page 384 . Output fields are listed in the approximate order in which they appear.

Table 49: show app-engine logs Output Fields

Field Name	Field Description
Compute Cluster	Name of compute cluster.
Compute Node	Name of compute node.
Logs Info	List of log files.

Sample Output

show app-engine logs (QFX5100 Switches)

```

user@host> show app-engine logs
Compute cluster: default-cluster

Compute node: default-node

Logs Info
=====
total 1012
drwxr-xr-x 2 root root 4096 Feb 2 13:53 audit
-rw-r--r-- 1 root root 0 Feb 2 13:59 named.log
-rw-r--r-- 1 root root 0 Feb 2 15:30 btmp
drwxr-xr-x 2 root root 4096 Feb 2 17:11 ntpstats
-rw----- 1 root root 0 Feb 2 17:27 tallylog
drwxr-xr-x 2 root root 4096 Feb 7 10:10 stap-server
-rw----- 1 root root 0 Feb 7 10:16 spooler
-rw----- 1 root root 0 Feb 7 10:16 maillog
-rw----- 1 root root 0 Feb 7 10:16 boot.log
drwxr-xr-x 5 root root 4096 Feb 7 10:16 libvirt
drwxr-x-- 2 root root 4096 Feb 7 10:16 watchdog
-rw-r--r-- 1 root root 41693 Feb 10 04:27 dmesg.old
drwxr-xr-x 2 root root 4096 Feb 10 04:30 sa
-rw-r--r-- 1 root root 41693 Feb 10 09:35 dmesg
-rw-rw-r-- 1 root root 1193 Feb 10 09:47 vjunos_install_log
-rw-rw-r-- 1 root utmp 141312 Feb 10 10:08 wtmp
-rw----- 1 root root 25514 Feb 10 10:08 secure
-rw-r--r-- 1 root root 292 Feb 10 10:08 lastlog
-rw----- 1 root root 338593 Feb 10 10:17
cron
-rw-r--r-- 1 root root 383229 Feb 10 10:17 messages

```

show log

List of Syntax	Syntax on page 386 Syntax (QFX Series and OCX Series) on page 386 Syntax (TX Matrix Router) on page 386
Syntax	<pre>show log <filename user <username>></pre>
Syntax (QFX Series and OCX Series)	<pre>show log filename <device-type (device-id device-alias)></pre>
Syntax (TX Matrix Router)	<pre>show log <all-lcc lcc number scc> <filename user <username>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option <i>device-type (device-id device-alias)</i> is introduced in Junos OS Release 13.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	List log files, display log file contents, or display information about users who have logged in to the router or switch.



NOTE: On MX Series routers, modifying a configuration to replace a service interface with another service interface is treated as a catastrophic event. When you modify a configuration, the entire configuration associated with the service interface—including NAT pools, rules, and service sets—is deleted and then re-created for the newly specified service interface. If there are active sessions associated with the service interface that is being replaced, these sessions are deleted and the NAT pools are then released, which leads to the generation of the NAT_POOL_RELEASE system log messages. However, because NAT pools are already deleted as a result of the catastrophic configuration change and no longer exist, the NAT_POOL_RELEASE system log messages are not generated for the changed configuration.

Options none—List all log files.

<all-lcc | lcc *number* | scc>—(Routing matrix only) (Optional) Display logging information about all T640 routers (or line-card chassis) or a specific T640 router (replace *number* with a value from 0 through 3) connected to a TX Matrix router. Or, display logging information about the TX Matrix router (or switch-card chassis).

device-type—(QFabric system only) (Optional) Display log messages for only one of the following device types:

- **director-device**—Display logs for Director devices.
- **infrastructure-device**—Display logs for the logical components of the QFabric system infrastructure, including the diagnostic Routing Engine, fabric control Routing Engine, fabric manager Routing Engine, and the default network Node group and its backup (NW-NG-0 and NW-NG-0-backup).
- **interconnect-device**—Display logs for Interconnect devices.
- **node-device**—Display logs for Node devices.



NOTE: If you specify the **device-type** optional parameter, you must also specify either the **device-id** or **device-alias** optional parameter.

(device-id | device-alias)—If a device type is specified, display logs for a device of that type. Specify either the device ID or the device alias (if configured).

filename—(Optional) Display the log messages in the specified log file. For the routing matrix, the filename must include the chassis information.

user <username>—(Optional) Display logging information about users who have recently logged in to the router or switch. If you include **username**, display logging information about the specified user.

Required Privilege Level trace

Related Documentation • [syslog \(System\) on page 306](#)

List of Sample Output [show log on page 387](#)
[show log filename on page 388](#)
[show log filename \(QFabric System\) on page 388](#)
[show log user on page 389](#)

Sample Output

show log

```
user@host> show log
total 57518
-rw-r--r-- 1 root bin      211663 Oct  1 19:44 dcd
-rw-r--r-- 1 root bin      999947 Oct  1 19:41 dcd.0
-rw-r--r-- 1 root bin      999994 Oct  1 17:48 dcd.1
-rw-r--r-- 1 root bin      238815 Oct  1 19:44 rpd
-rw-r--r-- 1 root bin     1049098 Oct  1 18:00 rpd.0
-rw-r--r-- 1 root bin     1061095 Oct  1 12:13 rpd.1
-rw-r--r-- 1 root bin     1052026 Oct  1 06:08 rpd.2
-rw-r--r-- 1 root bin     1056309 Sep 30 18:21 rpd.3
-rw-r--r-- 1 root bin     1056371 Sep 30 14:36 rpd.4
-rw-r--r-- 1 root bin     1056301 Sep 30 10:50 rpd.5
-rw-r--r-- 1 root bin     1056350 Sep 30 07:04 rpd.6
```

```
-rw-r--r-- 1 root bin      1048876 Sep 30 03:21 rpd.7
-rw-rw-r-- 1 root bin      19656 Oct  1 19:37 wtmp
```

show log filename

```
user@host> show log rpd
Oct  1 18:00:18 trace_on: Tracing to ?/var/log/rpd? started
Oct  1 18:00:18 EVENT <MTU> ds-5/2/0.0 index 24 <Broadcast PointToPoint Multicast
Oct  1 18:00:18
Oct  1 18:00:19 KRT recv len 56 V9 seq 148 op add Type route/if af 2 addr
13.13.13.21 nhop type local nhop 13.13.13.21
Oct  1 18:00:19 KRT recv len 56 V9 seq 149 op add Type route/if af 2 addr
13.13.13.22 nhop type unicast nhop 13.13.13.22
Oct  1 18:00:19 KRT recv len 48 V9 seq 150 op add Type ifaddr index 24 devindex
43
Oct  1 18:00:19 KRT recv len 144 V9 seq 151 op chnge Type ifdev devindex 44
Oct  1 18:00:19 KRT recv len 144 V9 seq 152 op chnge Type ifdev devindex 45
Oct  1 18:00:19 KRT recv len 144 V9 seq 153 op chnge Type ifdev devindex 46
Oct  1 18:00:19 KRT recv len 1272 V9 seq 154 op chnge Type ifdev devindex 47
...
```

show log filename (QFabric System)

```
user@qfabric> show log messages
Mar 28 18:00:06 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:06 ED1486
chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 2159)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1486
chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 2, jnxFruL3Index 0,
jnxFruName PIC: @ 0/1/*, jnxFruType 11, jnxFruSlot 0, jnxFruOfflineReason 2,
jnxFruLastPowerOff 0, jnxFruLastPowerOn 2191)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1492
chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 242726)
Mar 28 18:00:07 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:07 ED1492
chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 2, jnxFruL3Index 0,
jnxFruName PIC: @ 0/1/*, jnxFruType 11, jnxFruSlot 0, jnxFruOfflineReason 2,
jnxFruLastPowerOff 0, jnxFruLastPowerOn 242757)
Mar 28 18:00:16 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:16 ED1486
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:00:27 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:27 ED1486
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:00:50 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:50
_DCF_default__NW-INE-0_RE0_ file: UI_COMMIT: User 'root' requested 'commit'
operation (comment: none)
Mar 28 18:00:50 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:50
_DCF_default__NW-INE-0_RE0_ file: UI_COMMIT: User 'root' requested 'commit'
operation (comment: none)
Mar 28 18:00:55 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:00:55 ED1492
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:01:10 qfabric file: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:01:10 ED1492
file: UI_COMMIT: User 'root' requested 'commit' operation (comment: none)
Mar 28 18:02:37 qfabric chassisd: QFABRIC_INTERNAL_SYSLOG: Mar 28 18:02:37 ED1491
chassisd: CHASSISD_SNMP_TRAP10: SNMP trap generated: FRU power on
(jnxFruContentsIndex 8, jnxFruL1Index 1, jnxFruL2Index 1, jnxFruL3Index 0,
```



```
jnxFruName PIC: 48x 10G-SFP+ @ 0/0/*, jnxFruType 11, jnxFruSlot 0,  
jnxFruOfflineReason 2, jnxFruLastPowerOff 0, jnxFruLastPowerOn 33809)
```

show log user

```
user@host> show log user  
darius  mg2546          Thu Oct  1 19:37  still logged in  
darius  mg2529          Thu Oct  1 19:08 - 19:36  (00:28)  
darius  mg2518          Thu Oct  1 18:53 - 18:58  (00:04)  
root    mg1575          Wed Sep 30 18:39 - 18:41  (00:02)  
root    tty2    jun.site.per Wed Sep 30 18:39 - 18:41  (00:02)  
alex    tty1    192.168.1.2  Wed Sep 30 01:03 - 01:22  (00:19)
```

