



---

# Junos<sup>®</sup> OS for EX Series Ethernet Switches

## Converged Networks (LAN and SAN) Feature Guide for EX Series Switches

Release

15.1



---

Modified: 2015-06-12

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos<sup>®</sup> OS for EX Series Ethernet Switches Converged Networks (LAN and SAN) Feature Guide for EX Series Switches*  
Release 15.1  
Copyright © 2015, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	ix
	Documentation and Release Notes . . . . .	ix
	Supported Platforms . . . . .	ix
	Using the Examples in This Manual . . . . .	ix
	Merging a Full Example . . . . .	x
	Merging a Snippet . . . . .	x
	Documentation Conventions . . . . .	xi
	Documentation Feedback . . . . .	xiii
	Requesting Technical Support . . . . .	xiii
	Self-Help Online Tools and Resources . . . . .	xiii
	Opening a Case with JTAC . . . . .	xiv
<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>Converged Networks Overview . . . . .</b>	<b>3</b>
	Understanding FIP Snooping . . . . .	3
	FC Network Security . . . . .	4
	FIP Snooping Functions . . . . .	4
	FIP Snooping Firewall Filters . . . . .	4
	FIP Snooping Implementation . . . . .	5
	Server ENode-Facing Interfaces . . . . .	5
	FCF-Facing Interfaces . . . . .	5
	FCoE Mapped Address Prefix . . . . .	5
	T11 FIP Snooping Specification . . . . .	6
	Understanding Using an FCoE Transit Switch . . . . .	6
	Understanding Priority-Based Flow Control . . . . .	7
	Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2 Networks . . . . .	7
	Calculations for Buffer Requirements When Using PFC PAUSE . . . . .	8
	How PFC and Congestion Notification Profiles Work With or Without DCBX . . . . .	8
	Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches . . . . .	10
	Basic DCBX Functioning . . . . .	10
	DCBX and PFC . . . . .	11
	DCBX and FCoE . . . . .	11
	DCBX and iSCSI . . . . .	11
	How DCBX Is Implemented on the Switches . . . . .	12
	Features That Are Not Fully Supported by DCBX on EX Series Switches . . . .	12

	Understanding DCB Features and Requirements on EX Series Switches . . . . .	14
	EX Series Switch DCB Features Overview . . . . .	14
	Physical Interfaces . . . . .	14
	DCBX . . . . .	15
	Lossless Transport . . . . .	15
	PFC . . . . .	15
	Buffer Management . . . . .	15
	Understanding DCBX Application Protocol TLV Exchange on EX Series	
	Switches . . . . .	16
	Basic Steps for Setting Up Application Protocol TLV Exchange . . . . .	16
	Applications . . . . .	17
	Application Maps . . . . .	17
	Classifying and Prioritizing Application Traffic . . . . .	18
	Requirements for Interfaces in Non-FCoE Applications to Exchange	
	Application Protocol Information . . . . .	18
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>Configuration Examples . . . . .</b>	<b>21</b>
	Example: Configuring an FCoE Transit Switch . . . . .	21
	Example: Configuring DCBX to Support an iSCSI Application . . . . .	33
<b>Chapter 3</b>	<b>Configuration Tasks . . . . .</b>	<b>39</b>
	Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE	
	Transit Switch . . . . .	39
	Configuring Priority-Based Flow Control for an EX Series Switch (CLI	
	Procedure) . . . . .	42
	Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI	
	Procedure) . . . . .	45
	Disabling DCBX Application Protocol Exchange on EX Series Switches (CLI	
	Procedure) . . . . .	45
	Defining an Application for DCBX Application Protocol TLV Exchange . . . . .	46
	Configuring an Application Map for DCBX Application Protocol TLV	
	Exchange . . . . .	47
	Applying an Application Map to an Interface for DCBX Application Protocol TLV	
	Exchange . . . . .	48
	Disabling the ETS Recommendation TLV . . . . .	49
<b>Chapter 4</b>	<b>Configuration Statements . . . . .</b>	<b>51</b>
	[edit class-of-service] Configuration Statement Hierarchy on EX Series	
	Switches . . . . .	52
	Supported Statements in the [edit class-of-service] Hierarchy Level . . . . .	52
	Unsupported Statements in the [edit class-of-service] Hierarchy Level . . . . .	54
	[edit ethernet-switching-options] Configuration Statement Hierarchy on EX	
	Series Switches . . . . .	54
	Supported Statements in the [edit ethernet-switching-options] Hierarchy	
	Level . . . . .	55
	Unsupported Statements in the [edit ethernet-switching-options] Hierarchy	
	Level . . . . .	57

[edit protocols dcbx] Configuration Statement Hierarchy on EX Series	
Switches	57
Supported Statements in the [edit protocols dcbx] Hierarchy Level	58
Unsupported Statements in the [edit protocols dcbx] Hierarchy Level	58
application (Applications)	59
application (Application Maps)	60
applications (Applications)	61
application-map	62
application-maps	63
code-point (Congestion Notification)	64
code-points (Application Maps)	65
congestion-notification-profile (Priority-Based Flow Control)	66
dcbx	67
destination-port (Applications)	68
disable (DCBX)	69
ether-type	70
ethernet-switching-options	71
examine-fip	75
fc-map	76
fcoe	77
fcoe-trusted	78
ieee-802.1 (Congestion Notification)	79
input (Congestion Notification)	79
interface (Access Port Security)	80
interface (DCBX)	82
interfaces	83
policy-options	84
priority-flow-control	85
protocol (Applications)	86
secure-access-port	87
vlan (Access Port Security)	89

## Part 3

### Chapter 5

## Administration

<b>Operational Commands</b>	<b>93</b>
clear fip snooping enode	94
clear fip snooping statistics	95
clear fip snooping vlan	96
show dcbx neighbors	97
show fip snooping	119
show fip snooping enode	124
show fip snooping fcf	128
show fip snooping statistics	131
show fip snooping vlan	134



# List of Tables

	<b>About the Documentation . . . . .</b>	<b>ix</b>
	Table 1: Notice Icons . . . . .	xi
	Table 2: Text and Syntax Conventions . . . . .	xi
<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>Converged Networks Overview . . . . .</b>	<b>3</b>
	Table 3: Input for PFC Congestion Notification Profile and Mapping to Traffic Class and Egress Queue . . . . .	9
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>Configuration Examples . . . . .</b>	<b>21</b>
	Table 4: Components of the FCoE Security Topology . . . . .	23
	Table 5: Components of the DCBX iSCSI Topology . . . . .	34
<b>Chapter 4</b>	<b>Configuration Statements . . . . .</b>	<b>51</b>
	Table 6: Unsupported [edit protocols dcbx] Configuration Statements on EX Series Switches . . . . .	58
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 5</b>	<b>Operational Commands . . . . .</b>	<b>93</b>
	Table 7: show dcbx neighbors Output Fields . . . . .	97
	Table 8: show fip snooping Output Fields . . . . .	119
	Table 9: show fip snooping enode Output Fields . . . . .	124
	Table 10: show fip snooping fcf Output Fields . . . . .	128
	Table 11: show fip snooping statistics Output Fields . . . . .	131
	Table 12: show fip snooping vlan Output Fields . . . . .	134





# About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks<sup>®</sup> technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- EX Series

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<code>user@host&gt; show chassis alarms</code> <code>No alarms currently active</code>
<i>Italic text like this</i>	<ul style="list-style-type: none"><li>Introduces or emphasizes important new terms.</li><li>Identifies guide names.</li><li>Identifies RFC and Internet draft titles.</li></ul>	<ul style="list-style-type: none"><li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li><li><i>Junos OS CLI User Guide</i></li><li>RFC 1997, <i>BGP Communities Attribute</i></li></ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"><li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li><li>The console port is labeled <b>CONSOLE</b>.</li></ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub &lt;default-metric metric&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <b>(string1   string2   string3)</b>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [</b> <i>community-ids</i> <b>]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"><li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li><li>To cancel the configuration, click <b>Cancel</b>.</li></ul>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:  
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:  
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Overview

- [Converged Networks Overview on page 3](#)





## CHAPTER 1

# Converged Networks Overview

- [Understanding FIP Snooping on page 3](#)
- [Understanding Using an FCoE Transit Switch on page 6](#)
- [Understanding Priority-Based Flow Control on page 7](#)
- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)
- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)
- [Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16](#)

## Understanding FIP Snooping

Fibre Channel over Ethernet (FCoE) Initialization Protocol (FIP) snooping is a security mechanism that is designed to prevent unauthorized access and data transmission to a Fibre Channel (FC) network. It works by filtering traffic to permit only servers that have logged in to the FC network to access the network. You enable FIP snooping on FCoE VLANs when the switch is being used as an FCoE transit switch connecting FC initiators (servers) on the Ethernet network to FCoE forwarders (FCFs) at the FC storage area network (SAN) edge.

Through the FIP process, servers that have a converged network adapter (CNA) present an FCoE Node (ENode) that can log in to the FC network. The login process establishes a dedicated virtual link between the ENode and the FCF to emulate a point-to-point connection that passes transparently through the FCoE transit switch.

The FCoE transit switch applies FIP snooping firewall filters at the edge access ports associated with the FCoE VLANs on which you enable FIP snooping. FIP snooping provides security for virtual links by automatically creating firewall filters based on information gathered (snooped) about FC devices during FIP transactions.

This topic describes:

- [FC Network Security on page 4](#)
- [FIP Snooping Functions on page 4](#)
- [FIP Snooping Firewall Filters on page 4](#)

- [FIP Snooping Implementation on page 5](#)
- [T11 FIP Snooping Specification on page 6](#)

## FC Network Security

In traditional pure FC networks, the FCF is a trusted entity and server ENodes connect directly to the FCF. After an ENode gains access to the network through the fabric login (FLOGI) process, the FCF enforces zoning configurations, ensures that the ENode uses valid addresses, monitors the connection, and performs other security functions to prevent unauthorized access.

FIP snooping firewall filters emulate these security functions by preventing unauthorized access to the FCF through the transit switch and by ensuring the security of the virtual link between each ENode and the FCF. FIP snooping also prevents man-in-the-middle attacks.

## FIP Snooping Functions

When you enable FIP snooping, the FCoE transit switch monitors FIP logins, solicitations, and advertisements that pass through it and gathers information about the ENode address and the address of the FCF. The transit switch uses the information to construct firewall filters that permit access only to logged-in ENodes. All other traffic on the VLAN is denied.

For example, when an ENode on an FCoE VLAN performs a successful login, the FCoE transit switch snoops the FIP information, constructs a firewall filter that permits access for the ENode, and adds the filter on all transit switch access ports associated with the FCoE VLAN.

The firewall filters allow FCoE frames to pass through the transit switch only between the server ENode FCoE port and the FCF FCoE port to which the server ENode has logged in. This ensures that ENodes can only connect to the FCFs they have successfully logged in to and that only valid FCoE traffic is transmitted. FIP snooping maintains the filters by tracking FCoE sessions.

## FIP Snooping Firewall Filters

The FIP snooping firewall filters deny any FCoE traffic on the VLAN except for traffic originating from ENodes that have already logged in to the FCF.

FIP snooping performs these actions and checks to ensure that FCoE traffic is valid:

- Denies ENodes that use the FCF media access control (MAC) address as the source address.
- Denies all traffic from the ENode other than traffic addressed to the FCF that the ENode has logged into.
- Restricts the ENode to sending only FCoE protocol traffic on the virtual link.
- Allows the ENode to transmit only FIP and FCoE frames to the FCF address.
- Ensures that the FCoE source address an ENode uses after fabric login and fabric discovery (FDISC) is the address the FCF assigned to that ENode.

- Ensures that the FCoE source address the FCF assigns or accepts is only used for FCoE traffic.
- Ensures that FCoE frames are only addressed to the accepting FCF.

## FIP Snooping Implementation

You enable FIP snooping on a per-VLAN basis. The FCoE transit switch snoops FIP frames at the access ports associated with the FIP snooping-enabled VLANs, then installs the resulting firewall filters on the access ports to ensure that all snooping occurs on the FCoE transit switch network edge.

FCoE VLANs can include both access ports and trunk ports. Access ports face the hosts (FCoE servers and other FCoE initiators), and trunk ports face the FCF. When FIP snooping is enabled, the FCoE transit switch inspects both FIP frames and FCoE frames.

The FIP snooping implementation includes these considerations:

- [Server ENode-Facing Interfaces on page 5](#)
- [FCF-Facing Interfaces on page 5](#)
- [FCoE Mapped Address Prefix on page 5](#)

---

### Server ENode-Facing Interfaces

We recommend that you enable FIP snooping on all FCoE access ports to ensure secure connections to FCFs. After you enable FIP snooping on an FCoE VLAN, the transit switch denies FCoE traffic from any server on that VLAN until the server performs a valid fabric login with an FCF.

---

### FCF-Facing Interfaces

You must configure the interface that you are using to connect to an FCF as FCoE trusted interface, and it must be a 10 Gigabit Ethernet interface.

An FCoE trusted interface receives FCoE traffic only from an FCF. The following conditions apply to FCFs and FCF-facing interfaces:

- By default, FCFs are trusted entities.
- The FCoE transit switch always processes FCF frames because they come from a trusted source.

---

### FCoE Mapped Address Prefix

When you enable FIP snooping on a VLAN, optionally you can specify the FCoE Mapped Address Prefix (FC-MAP) value for that VLAN if the network uses the fabric-provided MAC address (FPMA) addressing scheme. The FC-MAP value is a 24-bit value that identifies the FCF. The FCF combines the FC-MAP value with a unique 24-bit Fibre Channel ID (FCID) value for the server during the fabric login process, creating a unique 48-bit identifier. The FCF assigns the 48-bit value to the server ENode as its MAC address and unique identifier for the session. Each server session the ENode establishes with the FCF

receives a unique FCID, so a server can host multiple virtual links to an FCF, each with a unique 48-bit address identifier.

The FIP snooping filter compares the configured FC-MAP value with the FC-MAP value in the header of frames coming from the server. If the values do not match, the FCoE transit switch denies access.

## T11 FIP Snooping Specification

For more details about FIP snooping, see the Technical Committee T11 organization document *Increasing FCoE Robustness using FIP Snooping* at <http://www.t11.org/ftp/t11/pub/fc/bb-5/08-264v3.pdf>.

- Related Documentation**
- [Understanding Using an FCoE Transit Switch on page 6](#)
  - [Example: Configuring an FCoE Transit Switch on page 21](#)
  - [Configuring VN2VF\\_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39](#)

---

## Understanding Using an FCoE Transit Switch

You can use an EX4500 switch as a Fibre Channel over Ethernet (FCoE) transit switch. An FCoE transit switch is a Layer 2 data center bridging (DCB) switch that can transport FCoE frames and implement FCoE Initialization Protocol (FIP) snooping. The switch can transport both FCoE and Ethernet LAN traffic over the same network infrastructure while preserving the class of service (CoS) that Fibre Channel (FC) traffic requires.

An FCoE transit switch does not encapsulate or decapsulate FC frames in Ethernet. It is an access switch that transports FC frames that have already been encapsulated in Ethernet between FCoE initiators such as servers and an FCoE forwarder (FCF), which is in an FC storage area network (SAN). The transit switch acts as a passthrough switch and is transparent to the FCF, which detects each connection to an FCoE server as a direct point-to-point link.

When the switch acts as a transit switch, the VLANs you configure for FCoE traffic can use any of the switch ingress and egress ports, because the traffic in both directions is Ethernet traffic. FCoE traffic must use a VLAN dedicated only to FCoE traffic that does not carry any other traffic.

When the switch acts as a transit switch, you must enable priority-based flow control (PFC, IEEE standard 802.1Qbb) as a link-level flow control mechanism. See [“Understanding Priority-Based Flow Control” on page 7](#) for additional information. FIP snooping adds security by filtering access so that only traffic from servers that have successfully logged in to the FC network passes through the transit switch and reaches the FC network.

The transit switch transparently connects FCoE-capable servers in an Ethernet LAN to an FCF, which has both FCoE and FC interfaces and processes both the FCoE and FC protocol stacks. The transit switch acts as a transparent access layer between FCoE servers and the FCF.

Encapsulated FCoE server traffic flows through the transit switch to the FCoE ports on the FCF. The FCF removes the Ethernet encapsulation from the FCoE frames to restore the native FC frames. Native FC traffic travels out FCF FC ports to storage devices in the FC SAN.

Native FC traffic from storage devices flows to the FCF FC ports, and the FCF encapsulates that traffic in Ethernet as FCoE traffic. The FCoE traffic flows through the transit switch to the appropriate server, and the server decapsulates the traffic.

**Related Documentation**

- [Understanding FIP Snooping on page 3](#)

## Understanding Priority-Based Flow Control

Priority-based flow control (PFC), IEEE standard 802.1Qbb, is a link-level flow control mechanism. The flow control mechanism is similar to that used by IEEE 802.3x Ethernet PAUSE, but it operates on individual priorities. Instead of pausing all traffic on a link, PFC allows you to selectively pause traffic according to its class.

This topic describes:

- [Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2 Networks on page 7](#)
- [Calculations for Buffer Requirements When Using PFC PAUSE on page 8](#)
- [How PFC and Congestion Notification Profiles Work With or Without DCBX on page 8](#)

## Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2 Networks

Standard Ethernet does not guarantee that a packet injected into the network will arrive at its intended destination. Reliability is provided by upper-layer protocols. Generally, a network path consists of multiple hops between the source and destination. A problem arises when transmitters send packets faster than receivers can accept them. When receivers run out of available buffer space to hold incoming flows, they silently drop additional incoming packets. This problem is generally resolved by upper-layer protocols that detect the drops and request retransmission.

Applications that require reliability in Layer 2 must have flow control that includes feedback from a receiver to a sender regarding buffer availability. Using IEEE 802.3x Ethernet PAUSE control frames, a receiver can generate a MAC control frame and send a PAUSE request to a sender when a specified threshold of receiver buffer has been filled to prevent buffer overflow. Upon receiving a PAUSE request, the sender stops transmission of any new packets until the receiver notifies the sender that it has sufficient buffer space to accept them again. The disadvantage of using Ethernet PAUSE is that it operates on the entire link, which might be carrying multiple traffic flows. Some traffic flows do not need flow control in Layer 2, because they are carrying applications that rely on upper-layer protocols for reliability. PFC enables you to configure Layer 2 flow control selectively for the traffic that requires it, such as Fibre Channel over Ethernet (FCoE) traffic, without impacting other traffic on the link. You can also enable PFC for other traffic types, such as iSCSI.

## Calculations for Buffer Requirements When Using PFC PAUSE

The receive buffer must be large enough to accommodate all data that is received while the system is responding to a PFC PAUSE frame.

When you calculate buffer requirements, consider the following factors:

- Processing and queuing delay of the PFC PAUSE—In general, the time to detect the lack of sufficient buffer space and to transmit the PFC PAUSE is negligible. However, delays can occur if the switch detects a reduction in buffer space just as the transmitter is beginning to transmit a maximum length frame.
- Propagation delay across the media—The delay amount depends on the length and speed of the physical link.
- Response time to the PFC PAUSE frame
- Propagation delay across the media on the return path



**NOTE:** We recommend that you configure at least 20 percent of the buffer size for the queue that is using PFC and that you do not specify the exact option.

Because it is mandatory to explicitly configure a certain percentage of buffer size for PFC, you must also explicitly configure some buffer size for any other forwarding classes that you are planning to use (including the default forwarding classes and the user-defined forwarding classes). The percentage that you allocate depends on the usage of the respective classes.

---

## How PFC and Congestion Notification Profiles Work With or Without DCBX

PFC can be applied to an interface regardless of whether the Data Center Bridging Capability Exchange protocol (DCBX) is enabled (DCBX is enabled by default for 10-Gigabit Ethernet interfaces on EX4500 CEE-enabled switches).

However, automatic control and advertisement of PFC requires DCBX:

- When DCBX is enabled—DCBX detects the data center bridging (DCB) neighbor's PFC configuration, uses autonegotiation to advertise local and peer PFC configuration, and then enables or disables PFC depending on whether the configurations are compatible or not. When PFC is enabled, it uses the congestion notification profile, which you have configured and applied to the interface.
- When DCBX is not enabled—Class of service (CoS) triggers PFC when the incoming frame has a User Priority (UP) field that matches the three-bit pattern specified for the congestion notification profile.

To manually control the use of PFC on the interface regardless of the configuration of the peer data center devices, you can explicitly change the configuration of DCBX on the interface to disable PFC autonegotiation. See [“Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches \(CLI Procedure\)” on page 45](#). When PFC

autonegotiation is disabled, PFC is triggered by the congestion notification profile for PFC regardless of the configuration of the DCB peer.



**NOTE:** PFC functions effectively only when the peer devices connected to the local interface are also using PFC and are configured compatibly with the local interface. PFC must be symmetrical—if PFC is not configured to use the same traffic class (code point) on both the local and the peer interface, it does not have any impact on the traffic.

Table 3 on page 9 shows the one-to-one mapping between the UP field of an IEEE 802.1Q tagged frame, the traffic class, and the egress queue. In addition to setting a PFC congestion notification profile on an ingress port, you must set a forwarding class to match the priority specified in the PFC congestion notification profile and to forward the frame to the appropriate queue.

Juniper Networks EX Series Ethernet Switches support up to six traffic classes and allow you to associate those classes with six different congestion notification profiles. (The switches support up to 16 forwarding classes.)

**Table 3: Input for PFC Congestion Notification Profile and Mapping to Traffic Class and Egress Queue**

UP Field of IEEE-802.1Q Tagged Frame	Traffic Class	Egress Queue
000	TC 0	queue 0
001	TC 1	queue 1
010	TC 2	queue 2
011	TC 3	queue 3
100	TC4	queue 4
101	TC 5	queue 5

**Related Documentation**

- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)
- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 42](#)
- [schedulers](#)
- [congestion-notification-profile on page 66](#)

## Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches

---

Data Center Bridging Capability Exchange protocol (DCBX) is a discovery and exchange protocol for communicating configuration and capabilities among neighbors to ensure consistent configuration across the data center bridging network. It is an extension of Link Layer Discovery Protocol (LLDP). Data center bridging devices use DCBX to exchange configuration information with directly connected peers (devices such as switches and servers in a data center bridging network).

On Juniper Networks EX Series Ethernet Switches, you can use DCBX to:

- Discover the data center bridging capabilities of peers
- Detect data center bridging feature misconfiguration or mismatches between peers
- Automatically enable or disable priority-based flow control (PFC) on an interface depending on whether the PFC configuration of the local interface is the same as the PFC configuration of the DCB peer

This topic describes:

- [Basic DCBX Functioning on page 10](#)
- [DCBX and PFC on page 11](#)
- [DCBX and FCoE on page 11](#)
- [DCBX and iSCSI on page 11](#)
- [How DCBX Is Implemented on the Switches on page 12](#)
- [Features That Are Not Fully Supported by DCBX on EX Series Switches on page 12](#)

### Basic DCBX Functioning

DCBX features support PFC, the Fibre Channel over Ethernet (FCoE) application, and other Layer 2 or Layer 4 applications (such as iSCSI). DCBX is enabled or disabled on a per-interface basis. The default autonegotiation behavior is: DCBX is enabled if the peer device connected to the interface also supports DCBX.

If the peer device connected to the interface does not support DCBX, DCBX remains enabled on the switch, but the switch detects that DCBX is not enabled on the peer and reports a misconfiguration for that interface when you issue the [show dcbx neighbors](#) command.

During negotiation of capabilities, the switch pushes the PFC configuration to an attached peer if the peer is configured as *willing* to learn the PFC configuration from other peers. The switch does not support autoprovisioning and does not change its own configuration during autonegotiation to match the peer configuration—that is, the switch is not *willing* to learn the PFC configuration from peers.



## DCBX and PFC

After you enable PFC on a switch interface, DCBX uses autonegotiation to control the operational state of PFC functionality.

DCB devices must use the same traffic class (code point) on both the local and peer device. If the peer device connected to the interface supports PFC and is provisioned for the same traffic class as the switch interface, DCBX sets the PFC operational state to enabled. If the peer device connected to the interface does not support PFC or is not provisioned for the same traffic class, DCBX sets the operational state to disabled.

If the peer advertises that it is *willing* to learn its PFC configuration from the switch, DCBX pushes the switch's PFC configuration to the peer and does not check the peer's administrative state.

You can manually override DCBX control of the PFC operational state on a per-interface basis by disabling autonegotiation. If you disable autonegotiation on an interface on which you have configured PFC, then PFC remains enabled on that interface regardless of the peer configuration. To disable PFC on an interface, delete any PFC configuration on the interface.

## DCBX and FCoE

DCBX is mandatory for running FCoE applications, because FCoE traffic requires PFC to ensure lossless transport and PFC is a component of DCBX.

The FCoE application is configured by default on DCBX interfaces. Because of the FCoE requirement for lossless transport, we recommend that you configure the interfaces that carry FCoE traffic for PFC. See [“Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\)”](#) on page 42.

DCBX advertisement of the FCoE application functions as follows:

- If you configure the **fcoe** forwarding class and PFC congestion notification profile and assign these components to the interfaces that carry FCoE traffic, DCBX advertises their FCoE capability and assigned 802.1p code points to the DCB peer, and DCBX reports the FCoE capability and assigned 802.1p code points of the DCB peer to the switch.

## DCBX and iSCSI

DCBX is not essential for iSCSI applications. These applications provide a method for linking data storage facilities over IP networks. Unlike Fibre Channel (FC) communications, which require special-purpose cabling, iSCSI can be run over long distances by using existing network infrastructure.

You might want to use iSCSI over DCB to reduce latency in a network that is oversubscribed. You might also want to use it to provide predictable and certain application responsiveness, eliminating Ethernet's dependence on TCP/IP for the retransmission of dropped Ethernet frames.

DCBX advertises switch interfaces that are configured to support the iSCSI application, their PFC capability, and their assigned 802.1p code points.

## How DCBX Is Implemented on the Switches

On the switches, the implementation of DCBX is:

- Supported on EX4500 switches only (See *EX4500 Switch Models* for a list of CEE-capable models.)
- Supported on aggregated Ethernet interfaces composed of 10-Gigabit Ethernet interfaces
- Enabled by default on all 10-Gigabit Ethernet interfaces

On the switches, DCBX supports the application type-length-value (TLV) —thus, DCBX interfaces on the switch can exchange information with their DCB peers about application capability, PFC capability, and 802.1p code-point settings. This implementation includes the following:

- The FCoE application is enabled by default on DCBX interfaces on the switch. Therefore, you do not configure an application map for the default FCoE application.

The switches do not have a default FCoE forwarding class—therefore, you must explicitly configure a forwarding class with the name **fcoe** and associate that class with the interfaces carrying FCoE traffic. If PFC is enabled, the 802.1p code points are assigned, and the interfaces are associated with a forwarding class, the switch negotiates FCoE application capability on the DCBX interface.

- Do not explicitly configure an FCoE application map, because that generates a commit error.
- You can configure additional Layer 2 or Layer 4 applications to be supported by the DCBX application TLV feature. To do this, explicitly configure an application map and associate the application map with one of the DCBX interfaces. DCBX then advertises the application capabilities of the associated interface and checks the capabilities of the connected peer device.
- If the peer device connected to the local interface does not support PFC or the peer's PFC configuration is not the same as the local interface's PFC configuration, DCBX automatically disables PFC for the local interface.



**NOTE:** You can manually override DCBX control of the PFC operational state on a per-interface basis. See [“Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches \(CLI Procedure\)”](#) on page 45.

---

## Features That Are Not Fully Supported by DCBX on EX Series Switches

The implementation of DCBX on EX Series switches does not fully support the following features:

- Enhanced transmission selection (ETS) (IEEE 802.1Qaz)—ETS is a bandwidth management mechanism to support dynamic allocation of bandwidth for DCBX traffic classes.
  - EX Series switches do not support using ETS to dynamically allocate bandwidth to specified traffic classes. Instead, the switches handle all DCBX traffic as a single default traffic class, group 7.
  - However, the switches do support the ETS Recommendation TLV. The ETS Recommendation TLV communicates the ETS settings that the switch wants the connected DCBX peer interface to use.
  - If the peer interface is *willing*, it changes its configuration to match the configuration in the ETS Recommendation TLV sent by the switch (group 7).
  - The switch also advertises that it is not *willing* to change its ETS settings.
  - The advertisement of ETS TLV is enabled by default for DCBX interfaces. If you want, you can disable this advertisement. See [“Disabling the ETS Recommendation TLV” on page 49](#).
- A default FCoE forwarding class—The switch does not have a default FCoE forwarding class with default mapping to a priority queue for FCoE traffic.



**NOTE:** Because the switches do not support a default FCoE forwarding class, you must explicitly configure a forwarding class and name it `fcoe`.

#### Related Documentation

- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)
- [Understanding Using an FCoE Transit Switch on page 6](#)
- [Example: Configuring an FCoE Transit Switch on page 21](#)

## Understanding DCB Features and Requirements on EX Series Switches

---

Data center bridging (DCB) is a set of enhancements to the IEEE 802.1 bridge specifications. DCB modifies and extends Ethernet behavior to support I/O convergence in the data center. I/O convergence includes but is not limited to the transport of Ethernet LAN traffic and Fibre Channel (FC) storage area network (SAN) traffic on the same physical Ethernet network infrastructure.

A converged architecture saves cost by reducing the number of networks and switches required to support both types of traffic, reducing the number of interfaces required, reducing cable complexity, and reducing administration activities.

You can use DCB features on Juniper Networks EX4500 CEE-enabled switches to transport converged Ethernet and FC traffic while providing the class-of-service (CoS) characteristics and other characteristics FC requires for transmitting storage traffic.

This topic describes:

- [EX Series Switch DCB Features Overview on page 14](#)
- [Physical Interfaces on page 14](#)
- [DCBX on page 15](#)
- [Lossless Transport on page 15](#)

### EX Series Switch DCB Features Overview

To accommodate FC traffic, DCB specifications provide:

- High-bandwidth interface
- A discovery and exchange protocol for communicating configuration and capabilities among neighbors to ensure consistent configuration across the network, called Data Center Bridging Capability Exchange protocol (DCBX), which is an extension of Link Layer Discovery Protocol (LLDP, described in IEEE 802.1AB).
- A flow control mechanism called priority-based flow control (PFC, described in IEEE 802.1Qbb) to help provide lossless transport.



**NOTE:** The switches support the DCBX standards and PFC, but do not support enhanced transmission selection (ETS) and quantized congestion notification (QCN).

---

### Physical Interfaces

The switches provide the high-bandwidth interfaces (10-Gigabit Ethernet interfaces) required to support DCB and converged traffic. Your switch can have both 1-gigabit and 10-gigabit interfaces, depending on the configuration. DCBX works only on 10-gigabit, full-duplex interfaces. However, LLDP and DCBX are enabled by default on all the interfaces.

## DCBX

DCB devices use DCBX to exchange configuration information with directly connected peers (switches and data center devices such as servers). DCBX is an extension of LLDP. See [“Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches” on page 10](#) for details.

## Lossless Transport

FC traffic requires lossless transport (defined as no frames dropped because of congestion). Standard Ethernet does not support lossless transport, but the DCB extensions to Ethernet along with proper buffer management enable an Ethernet network to provide the level of CoS necessary to transport FC frames encapsulated in Ethernet over an Ethernet network.

This section describes these factors in creating lossless transport over Ethernet:

- [PFC on page 15](#)
- [Buffer Management on page 15](#)

---

### PFC

PFC is a link-level flow control mechanism similar to Ethernet PAUSE (described in IEEE 802.3x). Ethernet PAUSE stops all traffic on a link for a specified period of time. PFC allows you to assign special priority to a specific traffic class for a specified period of time without stopping the traffic assigned to other priorities on the link. You assign this priority by using a congestion notification profile.

The switches support up to six traffic classes and allow you to associate those classes with six different congestion notification profiles.

PFC enables you to provide lossless transport for traffic assigned to use the PFC congestion notification profile and to use standard Ethernet transport for the rest of the link traffic.

---

### Buffer Management

Buffer management is critical to the proper functioning of PFC, because if buffers are allowed to overflow, frames are dropped and transport is not lossless.

For each lossless flow priority, the switch requires sufficient buffer space to:

- Store frames sent during the time it takes to send the PFC PAUSE across the cable between devices
- Store frames that are already on the wire when the sender receives the PFC PAUSE

The amount of buffer space needed to prevent frame loss due to congestion depends on the cable length, cable speed, and processing speed.

The switch automatically sets the threshold for sending a PFC PAUSE frame to accommodate delay from cables as long as 984 feet (300 meters) and to accommodate large frames that might be on the wire when the switch sends the PAUSE. This ensures

that the switch sends PAUSE frames early enough to allow the sender to stop transmitting before the receive buffers on the switch overflow.

**Related  
Documentation**

- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)
- [Example: Configuring an FCoE Transit Switch on page 21](#)

---

## Understanding DCBX Application Protocol TLV Exchange on EX Series Switches

Data Center Bridging Capability Exchange protocol (DCBX) discovers the data center bridging (DCB) capabilities of connected peers. DCBX also advertises the capabilities of applications on interfaces by exchanging application protocol information through application type, length, and value (TLV) elements. DCBX is an extension of Link Layer Discovery Protocol (LLDP). LLDP must remain enabled on every interface on which you want to use DCBX.



**NOTE:** LLDP and DCBX are enabled by default on all 10-Gigabit Ethernet interfaces of EX4500 CEE-enabled switches.

This topic describes:

- [Basic Steps for Setting Up Application Protocol TLV Exchange on page 16](#)
- [Applications on page 17](#)
- [Application Maps on page 17](#)
- [Classifying and Prioritizing Application Traffic on page 18](#)
- [Requirements for Interfaces in Non-FCoE Applications to Exchange Application Protocol Information on page 18](#)

### Basic Steps for Setting Up Application Protocol TLV Exchange

Setting up application protocol exchange for FCoE applications consists of:

- Configuring the **fcoe** forwarding class for IEEE 802.1p code point **011**
- Configuring PFC tfor IEEE 802.1p code point **011**

We recommend that you use code point **011** for the **fcoe** forwarding class, because this is the conventional IEEE 802.1p code point for FCoE traffic. We recommend that you configure PFC to use the same code point. See [“Example: Configuring an FCoE Transit Switch” on page 21](#).

Setting up application protocol exchange for non-FCoE applications consists of:

- Defining applications
- Mapping the applications to IEEE 802.1p code points

- Configuring classifiers to prioritize incoming traffic map and map the incoming traffic to the application by the traffic code points
- Applying the application maps and classifiers to interfaces

Except for FCoE applications, you must explicitly define and map all applications that you want an interface to advertise.



**NOTE:** Do not explicitly configure an FCoE application map, because doing that generates a commit error.

## Applications

Before an interface can exchange application protocol information, you must define the applications that you want to advertise, except for the FCoE application, which is defined by default. You can define:

- Layer 2 applications by EtherType
- Layer 4 applications (such as iSCSI applications) by a combination of protocol (TCP or UDP) and destination port

The EtherType is a two-octet field in the Ethernet frame that denotes the protocol encapsulated in the frame. For a list of common EtherTypes, see

<http://standards.ieee.org/develop/regauth/ethertype/eth.txt> on the IEEE standards

organization website. For a list of port numbers and protocols, see the *Service Name and Transport Protocol Port Number Registry* at

<http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml> on the Internet Assigned Numbers Authority (IANA) website.

The switch automatically defines the FCoE application as EtherType 0x8906.

## Application Maps

An *application map* maps defined applications to one or more IEEE 802.1p code points. Each application map contains one or more applications. DCBX includes the configured application code points in the protocol TLVs exchanged with the connected peer.

To exchange protocol TLVs for an application, you must include the application in an application map (with the exception of the FCoE application).

Mapping an application to code points does two things:

- Maps incoming traffic with the same code points to that application.
- Allows you to configure classifiers that map incoming application traffic, by code point, to a forwarding class and a loss priority to apply class of service (CoS) to application traffic and prioritize application traffic.

You apply an application map to an interface to enable DCBX application protocol exchange on that interface for each application specified in the application map.

Applications that you want an interface to advertise must be configured in the application

map that you apply to the interface (except the FCoE application). Do not explicitly configure an FCoE application map, because doing that generates a commit error.

## Classifying and Prioritizing Application Traffic

When traffic arrives at an interface, the interface classifies the incoming traffic based on its code points. Classifiers map code points to loss priorities and forwarding classes. The loss priority prioritizes the traffic. The forwarding class determines the traffic output queue and CoS service level.

When you map an application to an IEEE 802.1p code point in an application map and apply the application map to an interface, incoming traffic on the interface that matches the application code points is mapped to the appropriate application. The application receives the loss priority and the CoS associated with the forwarding class for those code points, and its traffic is placed in the output queue associated with the forwarding class.

You can use the default classifier or you can configure a classifier to map the application code points defined in the application map to forwarding classes and loss priorities.

Traffic for the FCoE application is classified and prioritized by your configuration of the `fcoe` forwarding class.

## Requirements for Interfaces in Non-FCoE Applications to Exchange Application Protocol Information

For non-FCoE applications, interfaces on which you want to exchange application protocol TLVs must include the following two items:

- The application map that contains the application
- A classifier

See “Defining an Application for DCBX Application Protocol TLV Exchange” on page 46 and “Configuring an Application Map for DCBX Application Protocol TLV Exchange” on page 47.

### Related Documentation

- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)
- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)
- [Understanding Priority-Based Flow Control on page 7](#)
- [Disabling DCBX Application Protocol Exchange on EX Series Switches \(CLI Procedure\) on page 45](#)



## PART 2

# Configuration

- [Configuration Examples on page 21](#)
- [Configuration Tasks on page 39](#)
- [Configuration Statements on page 51](#)



## CHAPTER 2

# Configuration Examples

- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)

### Example: Configuring an FCoE Transit Switch

---

You can use an EX4500 CEE-enabled switch as a Fibre Channel over Ethernet (FCoE) transit switch, enabling it to transport both FCoE and Ethernet LAN traffic. Using the same switch to support both your storage network and traditional IP-based data communications reduces the costs of powering, cooling, provisioning, maintaining, and managing your network.

This example includes:

- FIP snooping for security
- Priority-based flow control (PFC) for lossless transport
- The FCoE forwarding class for the DCBX application protocol type, length, value (TLV) exchange
- A trusted port connecting to the FCoE forwarder (FCF)
- Enlarged maximum transmission unit (MTU) size for handling FCoE traffic

This example shows how to configure an FCoE transit switch:

- [Requirements on page 21](#)
- [Overview and Topology on page 22](#)
- [Configuration on page 24](#)
- [Verification on page 30](#)

### Requirements

This example uses the following hardware and software components:

- One EX4500 switch (CEE-capable model)
- Junos OS Release 12.1 or later for EX Series switches

- One FCoE Node (ENode)
- One FCoE forwarder (FCF)

Before you begin, be sure you have:

- Configured the VLAN **fcoe-vlan** on the switch. See *Configuring VLANs for EX Series Switches (CLI Procedure)*.

## Overview and Topology

FCoE transmissions are vulnerable to address spoofing and man-in-the-middle attacks, because they are not actually sent through point-to-point links. This example describes how to configure the switch so that it provides security similar to that provided by traditional Fibre Channel (FC) networks. The switch is transparent to the ENode and the FCF, so the ENode and FCF communicate just as they would for a point-to-point link.

FIP snooping is disabled by default. You enable FIP snooping on a per-VLAN basis for VLANs that carry FCoE traffic. Ensure that a VLAN that carries FCoE traffic carries only FCoE traffic, because enabling FIP snooping denies access for all other Ethernet traffic.

This example shows how to configure FIP snooping on a VLAN of the EX4500 switch that is connected with one ENode, that is, a server equipped with converged network adapters (CNAs). The setup for this example includes the VLAN **fcoe-vlan** on the switch.

This example also shows how to configure PFC on the interfaces that are being used for FCoE traffic and how to configure an FCoE trusted port to handle traffic between the switch and the FCF gateway to the storage area network (SAN).

You must configure PFC properties for the interfaces that are carrying FCoE traffic, because flow control must be implemented on the link level for this type of traffic.



**NOTE:** Data Center Bridging Capability Exchange protocol (DCBX) is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 switches. DCBX automatically controls whether PFC is enabled or disabled on the interface. However, you must configure the PFC properties selecting the traffic class and queue. See [“Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\)” on page 42](#).

You configure trunk interfaces that connect to the FCF as trusted interfaces. The switch must use the same FCoE MAC Address Prefix (FC-MAP) value that is being used by the FCF. Therefore, if the FCF is using a nondefault FC-MAP value, you must configure the FC-MAP value on the switch to match that value.

You must also enlarge the MTU size for all interfaces (both access and trunk) that are handling FCoE traffic to accommodate the maximum FC frame and Ethernet header sizes.

This example also includes configuring the **fcoe** forwarding class to be used for the FCoE traffic, so that it can take advantage of DCBX support for the Application Protocol TLV

Exchange. See [“Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches” on page 10](#) for additional information.



**NOTE:** Configuring and applying PFC and a forwarding class `fcoe` on the DCBX interfaces automatically enables the DCBX FCoE application protocol exchange on those interfaces. Do not explicitly configure an FCoE application map, because doing that generates a commit error. See [“Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches” on page 10](#) for additional information.



**NOTE:** PFC is supported only on 10-Gigabit Ethernet interfaces.



**NOTE:** We recommend that you also:

- Configure the PFC congestion notification profile for the same 802.1p code points that you are using for the `fcoe` forwarding class. We recommend code point 011, because this is the conventional IEEE 802.1p code point for FCoE traffic.
- Configure at least 20 percent of the buffer for the queue that is using PFC.
- Do not specify the exact option when configuring the buffer for the queue that is using PFC.
- Configure the loss-priority statement to `low` for a traffic class that is using PFC.
- Configure an appropriate percent of the buffer for any other forwarding classes (default forwarding classes and the user-defined forwarding classes) that you are using

The components of the topology for this example are shown in [Table 4 on page 23](#).

**Table 4: Components of the FCoE Security Topology**

Properties	Settings
Switch hardware	One EX4500 CEE-enabled switch
VLAN name and ID	<code>fcoe-vlan</code> , tag 20
Forwarding class for FCoE traffic	<code>fcoe</code> , code point 011
Interfaces in <code>fcoe-vlan</code>	<code>xe-0/0/1</code> <code>xe-0/0/2</code> <code>xe-0/0/3</code> <code>xe-0/0/30</code>
FCoE trusted port to the FCF	<code>xe-0/0/30</code>

Table 4: Components of the FCoE Security Topology (*continued*)

Properties	Settings
PFC interfaces	xe-0/0/1 xe-0/0/2 xe-0/0/3 xe-0/0/30
CoS forwarding-class interface	xe-0/0/30
CoS scheduler-map interface	xe-0/0/30
Interfaces configured with MTU of 2500	xe-0/0/1  xe-0/0/2  xe-0/0/3  xe-0/0/30

In this example, the switch has already been configured as follows:

- All access ports are untrusted, which is the default setting.
- DCBX is enabled by default on all 10-Gigabit Ethernet interfaces.
- The port connecting the switch to the FCF is configured as a trunk port.

## Configuration

To configure an FCoE transit switch, perform these tasks:

### CLI Quick Configuration

To quickly configure an FCoE transit switch, copy the following commands and paste them into the switch terminal window:

```
[edit]
set ethernet-switching-options secure-access-port vlan fcoe-vlan examine-fip fc-map 0x0EFC03
set ethernet-switching-options secure-access-port interface xe-0/0/30 fcoe-trusted
set interfaces xe-0/0/1 ether-options no-flow-control
set interfaces xe-0/0/2 ether-options no-flow-control
set interfaces xe-0/0/3 ether-options no-flow-control
set interfaces xe-0/0/30 ether-options no-flow-control
set class-of-service congestion-notification-profile cn-profile input ieee-802.1 code-point 011 pfc
set class-of-service interfaces xe-0/0/1 congestion-notification-profile cn-profile
set class-of-service interfaces xe-0/0/2 congestion-notification-profile cn-profile
set class-of-service interfaces xe-0/0/3 congestion-notification-profile cn-profile
set class-of-service interfaces xe-0/0/30 congestion-notification-profile cn-profile
set class-of-service classifiers ieee-802.1 pfc-class import default
set class-of-service classifiers ieee-802.1 pfc-class forwarding-class fcoe loss-priority low
code-points 011
set class-of-service interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 pfc-class
set class-of-service interfaces xe-0/0/2 unit 0 classifiers ieee-802.1 pfc-class
set class-of-service interfaces xe-0/0/3 unit 0 classifiers ieee-802.1 pfc-class
set class-of-service interfaces xe-0/0/30 unit 0 classifiers ieee-802.1 pfc-class
set class-of-service forwarding-classes class fcoe queue-num 3
set class-of-service schedulers pfc-sched buffer-size percent 25
set class-of-service schedulers default-sched buffer-size percent 17
```

```

set class-of-service scheduler-maps pfc-map forwarding-class fcoe scheduler pfc-sched
set class-of-service scheduler-maps pfc-map forwarding-class assured-forwarding scheduler
default-sched
set class-of-service scheduler-maps pfc-map forwarding-class best-effort scheduler default-sched
set class-of-service scheduler-maps pfc-map forwarding-class network-control scheduler
default-sched
set class-of-service scheduler-maps pfc-map forwarding-class expedited-forwarding scheduler
default-sched
set class-of-service interfaces xe-0/0/30 scheduler-map pfc-map
set interfaces xe-0/0/1 mtu 2500
set interfaces xe-0/0/2 mtu 2500
set interfaces xe-0/0/3 mtu 2500
set interfaces xe-0/0/30 mtu 2500

```

### Step-by-Step Procedure

To configure an FCoE transit switch:

1. Enable FIP snooping on the VLAN and modify the FC-MAP value to match the FC-MAP value being used by the FCF:  
  
[edit ethernet-switching-options secure-access-port]  
user@switch# set vlan fcoe-vlan **examine-fip** fc-map 0x0EFC03
2. Set the FCF-facing interface (xe-0/0/30) as FCoE-trusted:  
  
[edit ethernet-switching-options secure-access-port]  
user@switch# set interface xe-0/0/30 **fcoe-trusted**
3. Configure a congestion notification profile, specifying the name of the profile and applying it to the traffic class that is indicated by the User Priority bits in the 802.1Q tagged frame of an incoming packet:



**NOTE:** The ENode and the switch must use the same traffic class for the FCoE traffic. DCBX advertises the traffic class being used by the switch and detects the traffic class being used by the ENode. If there is a mismatch, the switch disables the PFC capability of the switch interface.

```

[edit class-of-service]
user@switch# set congestion-notification-profile cn-profile input ieee-802.1 code-point
011 pfc

```



**NOTE:** The configuration of PFC includes two different ieee-802.1 configuration statements:

- **ieee-802.1 (Congestion Notification)**—Use to configure the congestion notification profile.
- **ieee-802.1**—Use to configure the CoS classifier.

4. Disable standard flow control on the interfaces that you want to use for the FCoE VLAN.



**NOTE:** PFC and standard flow control cannot be enabled on the same interface, and you must use PFC for FCoE traffic.

```
[edit interfaces]
```

```
user@switch# set xe-0/0/1 ether-options no-flow-control
user@switch# set xe-0/0/2 ether-options no-flow-control
user@switch# set xe-0/0/3 ether-options no-flow-control
user@switch# set xe-0/0/30 ether-options no-flow-control
```

5. Bind the congestion notification profile to all interfaces of the FCoE VLAN:

```
[edit class-of-service]
```

```
user@switch# set interface xe-0/0/1 congestion-notification-profile cn-profile
user@switch# set interface xe-0/0/2 congestion-notification-profile cn-profile
user@switch# set interface xe-0/0/3 congestion-notification-profile cn-profile
user@switch# set interface xe-0/0/30 congestion-notification-profile cn-profile
```

6. Create a CoS classifier for the fcoe forwarding class:

```
[edit class-of-service]
```

```
user@switch# set forwarding-classes fcoe queue-num 3
```

7. Configure this forwarding class (**fcoe**) to use a low loss priority value and to use the same code point that is used for PFC:



**NOTE:** We recommend that you use code point 011, because this is the conventional IEEE 802.1p code point for FCoE traffic.

```
[edit class-of-service]
```

```
user@switch# set classifiers ieee-802.1 pfc-class forwarding-class fcoe loss-priority low
code-points 011
```

8. Bind the **pfc-class** classifier to all interfaces of the FCoE VLAN:

```
[edit class-of-service]
```

```
user@switch# set interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 pfc-class
user@switch# set interfaces xe-0/0/2 unit 0 classifiers ieee-802.1 pfc-class
user@switch# set interfaces xe-0/0/3 unit 0 classifiers ieee-802.1 pfc-class
user@switch# set interfaces xe-0/0/30 unit 0 classifiers ieee-802.1 pfc-class
```

9. Assign forwarding-class **fcoe** to an egress queue:

```
[edit class-of-service]
```

```
user@switch# set forwarding-classes fcoe queue-num 3
```

10. Set a scheduler for this queue, allocating at least 20 percent of the buffer to **pfc-sched**:

```
[edit class-of-service]
```

```
user@switch# set schedulers pfc-sched buffer-size percent 25
```

11. Set a scheduler for the default queue, allocating 17 percent of the buffer to that queue:

```
[edit class-of-service]
```

```
user@switch# set schedulers default-sched buffer-size percent 17
```

12. Configure a scheduler map (**pfc-map**) that associates the scheduler (**pfc-sched**) with the **fcoe** forwarding class and associates the default forwarding classes (assured-forwarding, best-effort and network-control) with the default schedule:



- ```
[edit class-of-service]
user@switch# set scheduler-maps pfc-map forwarding-class fcoe scheduler pfc-sched
user@switch# set scheduler-maps pfc-map forwarding-class assured-forwarding
schedulerdefault-sched
user@switch# set scheduler-maps pfc-map forwarding-class best-effort scheduler
default-sched
user@switch# set scheduler-maps pfc-map forwarding-class network-control scheduler
default-sched
user@switch# set scheduler-maps pfc-map forwarding-class expedited-forwarding
scheduler default-sched
```
13. Assign the scheduler map (**pfc-map**) to the FCF-facing interface (xe-0/0/30):
- ```
[edit class-of-service]
user@switch# set interfaces xe-0/0/30 scheduler-map pfc-map
```
14. Enlarge the MTU size to 2500 bytes for all the interfaces (both access and trunk) that are handling FCoE traffic:
- ```
[edit interfaces]
user@switch# set xe-0/0/1 mtu 2500
user@switch# set xe-0/0/2 mtu 2500
user@switch# set xe-0/0/3 mtu 2500
user@switch# set xe-0/0/30 mtu 2500
```

**Results** Display the results of the configuration:

```
[edit]
user@switch#show

interfaces {
  xe-0/0/1 {
    mtu 2500;
    ether-options {
      no-flow-control;
    }
    unit 0 {
      family ethernet-switching {
        vlan {
          members fcoe-vlan;
        }
      }
    }
  }
  xe-0/0/2 {
    mtu 2500;
    ether-options {
      no-flow-control;
    }
    unit 0 {
      family ethernet-switching {
        vlan {
          members fcoe-vlan;
        }
      }
    }
  }
  xe-0/0/3 {
    mtu 2500;
    ether-options {
```

```
        no-flow-control;
    }
    unit 0 {
        family ethernet-switching {
            vlan {
                members fcoe-vlan;
            }
        }
    }
}
xe-0/0/30 {
    mtu 2500;
    ether-options {
        no-flow-control;
    }
    unit 0 {
        family ethernet-switching {
            port-mode trunk;
            vlan {
                members fcoe-vlan;
            }
        }
    }
}
}
class-of-service {
    classifiers {
        ieee-802.1 pfc-class {
            import default;
            forwarding-class fcoe {
                loss-priority low code-points 011;
            }
        }
        forwarding-classes {
            class fcoe queue-num 3;
        }
        congestion-notification-profile {
            cn-profile {
                input {
                    ieee-802.1 {
                        code-point 011 {
                            pfc;
                        }
                    }
                }
            }
        }
    }
}
interfaces {
    xe-0/0/1 {
        congestion-notification-profile cn-profile;
        unit 0 {
            classifiers {
                ieee-802.1 pfc-class;
            }
        }
    }
    xe-0/0/2 {
```

```

congestion-notification-profile cn-profile;
unit 0 {
    classifiers {
        ieee-802.1 pfc-class;
    }
}
xe-0/0/3 {
    congestion-notification-profile cn-profile;
    unit 0 {
        classifiers {
            ieee-802.1 pfc-class;
        }
    }
}
xe-0/0/30 {
    congestion-notification-profile cn-profile;
    scheduler-map pfc-map;
    unit 0 {
        classifiers {
            ieee-802.1 pfc-class;
        }
    }
}
scheduler-maps {
    pfc-map {
        forwarding-class fcoe scheduler pfc-sched;
        forwarding-class assured-forwarding scheduler default-sched;
        forwarding-class best-effort scheduler default-sched;
        forwarding-class network-control scheduler default-sched;
        forwarding-class expedited-forwarding scheduler default-sched;
    }
}
schedulers {
    pfc-sched {
        buffer-size percent 25;
    }
    default-sched {
        buffer-size percent 17;
    }
}
}
ethernet-switching-options {
    secure-access-port {
        interface xe-0/0/30.0 {
            fcoe-trusted;
        }
        vlan fcoe-vlan {
            examine-fip {
                fc-map 0x0EFC03;
            }
        }
    }
}
}

```

## Verification

Confirm that the configuration of the FCoE transit switch is working properly:

- [Verifying That FIP Snooping Is Working Correctly on the Switch on page 30](#)
- [Verifying That PFC is Enabled, That the FCoE Application Is Advertised, and That the Switch Interface and DCB Peer Are Using the Same 802.1p Code Points on page 30](#)

### Verifying That FIP Snooping Is Working Correctly on the Switch

**Purpose** Verify that FIP snooping is being implemented on the appropriate VLAN.

**Action** Send some requests from ENodes to the switch.

Display the FIP snooping information :

```
user@switch> show fip snooping vlan detail fcoe-vlan
```

```
VLAN: fcoe-vlan,    FC-MAP: 0e:fc:03
FCF Information
FCF-MAC           : 30:10:94:01:00:00
Active Sessions   : 2
Configured FKA-ADV : 195
Running FKA-ADV    : 73
  Enode Information
  Enode-MAC: 10:10:94:01:00:01,      Interface: xe-0/0/1
  Configured FKA-ADV : 195
  Running FKA-ADV    : 103
    Session Information
    VN-Port MAC: 0E:FC:03:01:0A:01,  FKA-ADV : 178
    VN-Port MAC: 0E:FC:03:01:0B:01,  FKA-ADV : 194
FCF Information
FCF-MAC           : 40:10:94:01:00:00
Active Sessions   : 2
Configured FKA-ADV : 258
Running FKA-ADV    : 212
  Enode Information
  Enode-MAC: 20:10:94:01:00:02,      Interface: xe-0/0/0
  Configured FKA-ADV : 258
  Running FKA-ADV    : 242
    Session Information
    VN-Port MAC: 0E:FC:03:02:0C:02,  FKA-ADV : 254
    VN-Port MAC: 0E:FC:03:02:0D:02,  FKA-ADV : 269
```

**Meaning** The output for this VLAN (**fcoe-vlan**) includes the FC MAP value that you configured. It shows the MAC addresses of the FCF and the ENode that are transmitting FCoE traffic through the switch.

### Verifying That PFC is Enabled, That the FCoE Application Is Advertised, and That the Switch Interface and DCB Peer Are Using the Same 802.1p Code Points

**Purpose** Verify that PFC is enabled on the local switch interface and on the peer interface, and that the local interface and the peer interface are using the same code point.

**Action** Send some requests from ENodes to the switch.

Display the DCBX information advertised by the configured CoS forwarding class interface (xe-0/0/30) and detected by the switch:

```
user@switch> show dcbx neighbors interface xe-0/0/30
```

```
Interface : xe-0/0/30.0
```

```
Protocol-State: in-sync
```

```
Local-Advertisement:
```

```
Operational version: 0
```

```
sequence-number: 1, acknowledge-id: 1
```

```
Peer-Advertisement:
```

```
Operational version: 0
```

```
sequence-number: 1, acknowledge-id: 1
```

```
Feature: PFC, Protocol-State: in-sync
```

```
Operational State: Enabled
```

```
Local-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

```
Maximum Traffic Classes capable to support PFC: 6
```

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 011        | Enabled    |
| 110        | Disabled   |
| 111        | Disabled   |

```
Peer-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

```
Maximum Traffic Classes capable to support PFC: 6
```

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 011        | Enabled    |
| 110        | Disabled   |
| 111        | Disabled   |

```
Feature: Application, Protocol-State: in-sync
```

```
Local-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |

**Peer-Advertisement:**

Enable: Yes, Willing: No, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |

**Meaning** PFC is a requirement for transmitting FCoE traffic and PFC works only when the local and peer devices are both enabled for PFC and are both using the same traffic class (code point) for transmitting the PFC traffic.

In the output for **Feature: PFC**, check the status of **Local-Advertisement** to verify that PFC is enabled. If DCBX detects a misconfiguration with the DCB peer, it disables the PFC capability. In this example, the PFC **Operational State** is **enabled**, because PFC is configured symmetrically on the switch and the DCB peer. Both devices are using code point **011** for forwarding the traffic.

If the results show that PFC is disabled, you can use the information provided by this command to reconfigure the congestion notification profile to match the code point being used for PFC by the peer device. See [“Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\)” on page 42](#).

**App1-Name** shows the default FCoE application. The FCoE application always indicates **Ethernet-Type 0x8906**. The **Priority-Map** for the FCoE application shows the 8-bit format of the code-point setting that was specified for the PFC congestion notification profile. In this case, the three bit code point is 3, **011**. So the **Priority-Map** for the default FCoE application is **00001000**.

The **fcoe** forwarding-class and PFC were configured; and the configuration of the application on the switch and on the DCB are synchronized. Therefore, the **Status** of the FCoE application is **Enabled**.

If the configuration of the FCoE application on the switch did not match the FCoE application of the DCB peer, the status of the application would appear as **Disabled**.

- Related Documentation**
- [Configuring VN2VF\\_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39](#)
  - [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 42](#)

- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)

## Example: Configuring DCBX to Support an iSCSI Application

Data Center Bridging Capability Exchange protocol (DCBX) support for the application protocol type, length, and value (TLV) enables you to implement DCBX for various Layer 2 and Layer 4 applications. Internet small computer system interface (iSCSI) is a Layer 4 storage application that can benefit from DCBX. Implementing iSCSI over data center bridging (DCB) reduces latency in networks that are oversubscribed and provides a predictable and certain application responsiveness, eliminating Ethernet's dependence on TCP/IP for the retransmission of dropped Ethernet frames. Although DCBX is not a requirement for such applications, it adds the reliability required for enterprise data storage.



**NOTE:** You can configure and apply priority flow control (PFC) for any DCBX interfaces, but it is not a requirement for applications other than Fiber Channel over Ethernet (FCoE).

This example shows how to configure DCBX to support an iSCSI application:

- [Requirements on page 33](#)
- [Overview and Topology on page 33](#)
- [Configuration on page 34](#)
- [Verification on page 35](#)

### Requirements

This example uses the following hardware and software components:

- One EX4500 switch (CEE-capable model)
- Junos OS Release 12.1 or later for EX Series switches

### Overview and Topology

You can use the same switch to support your LAN traffic and your storage area network (SAN) traffic—including both FCoE and iSCSI traffic. The DCBX application protocol TLV allows you to associate a specific DCBX interface with a specific application map.

DCBX discovers the DCB capabilities of peers by exchanging feature configuration information, detects feature misconfiguration and mismatches, and can configure DCB on peers. DCBX is an extension of Link Layer Discovery Protocol (LLDP). LLDP must remain enabled on every interface for which you want to use DCBX.

The switch supports DCBX information exchange for other applications, such as iSCSI, as specified in your configuration by EtherType or by the destination port and protocol.

To take advantage of this feature for non-FCoE applications, you must configure the application and application map and associate the application map with the interface that is carrying the application's traffic. This configuration includes specifying the 802.1 code points to be used for this application.

When you configure an iSCSI application, you must always designate **destination-port 3260**.



**NOTE:** DCBX is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 switches (CEE-capable models).

This example shows how to configure an iSCSI application on a DCBX interface of the EX4500 switch that is connected to an iSCSI storage device.

The components of the topology for this example are shown in [Table 5 on page 34](#).

**Table 5: Components of the DCBX iSCSI Topology**

| Properties                      | Settings                              |
|---------------------------------|---------------------------------------|
| Switch hardware                 | One EX4500 switch (CEE capable model) |
| Application                     | iSCSI                                 |
| Application map code points     | 101                                   |
| Interface for iSCSI application | xe-0/0/37                             |
| Destination port                | 3260                                  |

In this example, the switch has already been configured as follows:

- DCBX is enabled by default on all 10-Gigabit Ethernet interfaces.

## Configuration

To configure DCBX to support an iSCSI application, perform these tasks:

### CLI Quick Configuration

To quickly configure a DCBX interface for an iSCSI application, copy the following commands and paste them into the switch terminal window:

```
[edit]
set applications application iscsi protocol tcp destination-port 3260
set policy-options application-maps iscsi-map application iscsi code-points 101
set protocols dcbx interface xe-0/0/37 application-map iscsi-map
```

### Step-by-Step Procedure

Configure a DCBX interface for an iSCSI application:

1. Create the application:

```
[edit]
user@switch# set applications application iscsi protocol tcp destination-port 3260
```

2. Create the application map:



- ```
[edit policy-options]
user@switch# set application-maps iscsi-map application iscsi code-points 101
```
3. Apply the application map to the DCBX interface that you want to use for iSCSI:
- ```
[edit protocols]
user@switch# set dcbx interface xe-0/0/37 application-map iscsi-map
```

**Results** Check the results of the configuration:

```
user@switch> show configuration
protocols {
  dcbx {
    interface all;
    interface xe-0/0/37.0 {
      application-map iscsi-map;
    }
  }
  lldp {
    interface all;
  }
}
policy-options {
  application-maps {
    iscsi-map {
      application iscsi code-points 101;
    }
  }
}
applications {
  application iscsi {
    protocol tcp;
    destination-port 3260;
  }
}
```

## Verification

To confirm that the configuration is working properly:

- [Verifying That the iSCSI Application Is Advertised and That the Switch Interface and DCB Peer Are Using the Same 802.1p Code Points on page 35](#)

### [Verifying That the iSCSI Application Is Advertised and That the Switch Interface and DCB Peer Are Using the Same 802.1p Code Points](#)

**Purpose** Verify that both the switch and the DCB peer are using a DCBX iSCSI application configured for the same 802.1p code points.

**Action** Send some requests from the switch to the DCB peer.

Display the DCBX information advertised by DCBX interface (**xe-0/0/37**) and detected by the switch:

```
user@switch> show dcbx neighbors interface
```

```
Interface : xe-0/0/37.0
```

```
Protocol-State: in-sync  
Active-application-map: iscsi-map
```

```
Local-Advertisement:  
  Operational version: 0  
  sequence-number: 1, acknowledge-id: 1
```

```
Peer-Advertisement:  
  Operational version: 0  
  sequence-number: 1, acknowledge-id: 1
```

```
Feature: PFC, Protocol-State: in-sync
```

```
Operational State: Disabled
```

```
Local-Advertisement:  
  Enable: Yes, Willing: No, Error: No  
  Maximum Traffic Classes capable to support PFC: 6
```

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

```
Peer-Advertisement:  
  Enable: Yes, Willing: No, Error: No  
  Maximum Traffic Classes capable to support PFC: 6
```

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

```
Feature: Application, Protocol-State: in-sync
```

```
Local-Advertisement:
```

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| iscsi     |               | 3260          | 00100000     | Enabled |

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| iscsi     |               | 3260          | 00100000     | Enabled |

**Meaning** Check the status for **Local-Advertisement** in the section **Feature: Application**.

If there is misconfiguration between the switch and the DCB peer, the status displays **Error: Yes**.

In this example, there is no error. The output for **Feature: Application, Protocol-State**, displays a list of DCBX applications under **Appl-Name**.

This field displays information for the user-configured application **iscsi**. When you configure an iSCSI application, you must always designate the destination port as **3260**. The output displays this as the **Socket-Number**.

The **Priority-Map** for the iSCSI application reflects the 802.1p code points that were specified in this example for the **iSCSI-map**. The example specified **101** for the iSCSI application map code points. The **Priority-Map** is an 8-bit code point format of the 802.1p code points; thus, **00100000**.

The **Status** of the iSCSI application is **Enabled**, because the switch and the DCB are using the same code points for the iSCSI application.

#### Related Documentation

- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Defining an Application for DCBX Application Protocol TLV Exchange on page 46](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 48](#)
- [Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16](#)



## CHAPTER 3

# Configuration Tasks

- [Configuring VN2VF\\_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39](#)
- [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 42](#)
- [Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches \(CLI Procedure\) on page 45](#)
- [Disabling DCBX Application Protocol Exchange on EX Series Switches \(CLI Procedure\) on page 45](#)
- [Defining an Application for DCBX Application Protocol TLV Exchange on page 46](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 48](#)
- [Disabling the ETS Recommendation TLV on page 49](#)

## Configuring VN2VF\_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch

---

VN\_Port to VF\_Port (VN2VF\_Port) Fibre Channel over Ethernet (FCoE) Initialization Protocol (FIP) snooping uses information gathered during FIP discovery and login to create firewall filters that provide security against unauthorized access to the FC switch or FCoE forwarder (FCF) through the switch when the switch is acting as an FCoE transit switch. The firewall filters allow only FCoE devices that successfully log in to the FC fabric to access the FCF through the transit switch. VN2VF\_Port FIP snooping provides security for the point-to-point virtual links that connect host FCoE Nodes (ENodes) and FCFs in the FCoE VLAN by denying access to any device that does not successfully log in to the FCF.

VN2VF\_Port FIP snooping is disabled by default. You enable VN2VF\_Port FIP snooping on a per-VLAN basis for VLANs that carry FCoE traffic. Ensure that a VLAN that carries FCoE traffic carries only FCoE traffic, because enabling VN2VF\_Port FIP snooping denies access for all other Ethernet traffic.



**NOTE:** All of the transit switch ports are untrusted by default. If an ENode on an FCoE device logs in to an FCF before you enable VN2VF\_Port FIP snooping on the VLAN and you then enable VN2VF\_Port FIP snooping, the transit switch denies traffic from the ENode because the transit switch has not snooped (learned) the ENode state. The following process automatically logs the ENode back in to the FCF to reestablish the connection:

1. VN2VF\_Port FIP snooping is enabled on an FCoE VLAN on the switch.
2. The switch denies existing connections between servers and the FCF on the FCoE VLAN by filtering the FCoE traffic and FIP traffic, so no keepalive messages from the ENodes reach the FCF.
3. The FCF port timer for each ENode and for each VN\_Port on each ENode expires.
4. The FCF sends each ENode whose port timer has expired a Clear Virtual Links (CVL) message.
5. The CVL message causes the ENode to log in again.

Because the FCF is a trusted source, you configure interfaces that connect to the FCF as FCoE trusted interfaces. FCoE trusted interfaces do not filter traffic (FIP snooping filtering should occur only at the FCoE access edge), but VN2VF\_Port FIP snooping continues to run on trusted interfaces so that the switch learns the FCF state.



**NOTE:** Do not configure ENode-facing interfaces both with FIP snooping enabled and as trusted interfaces. FCoE VLANs with interfaces that are directly connected to FCoE hosts should be configured with FIP snooping enabled and the interfaces should *not* be trusted interfaces. Ethernet interfaces that are connected to an FCF should be configured as trusted interfaces and should not have FIP snooping enabled. Interfaces that are connected to a transit switch that is performing FIP snooping can be configured as trusted interfaces if the FCoE VLAN is not enabled for FIP snooping.

Optionally, you can specify an FC-MAP value for each FCoE VLAN. On a given FCoE VLAN, the switch learns only FCFs that have a matching FC-MAP value. The default FC-MAP value is 0EFC00h for all FC devices. (Enter hexadecimal values for FC-MAP preceded by the hexadecimal indicator "0x"—for example, 0x0EFC00.) If you change the FC-MAP value of an FCF, change the FC-MAP value for the FCoE VLAN it belongs to on the switch and on the servers you want to communicate with the FCF. An FCoE VLAN can have one and only one FC-MAP value.



**NOTE:** The default enhanced FIP snooping scaling supports 2,500 sessions. On QFabric systems, starting with Junos OS Release 13.2X52, you can disable enhanced FIP snooping scaling on a per-VLAN basis if you want to do so, but only 376 sessions are supported if you disable enhanced FIP snooping scaling.

There are differences in the way you configure FIP snooping and FCoE trusted interfaces on a switch that depend on whether the switch uses the original CLI or the Enhanced Layer 2 Software (ELS) CLI. This topic includes two configuration procedures, one for switches that run the original CLI, and one for switches that run the ELS CLI.

### Original CLI Configuration

To enable VN2VF\_Port FIP snooping:

- To enable VN2VF\_Port FIP snooping on a single VLAN and specify the optional FC-MAP value:

```
[edit ethernet-switching-options secure-access-port]
user@switch# set vlan vlan-name examine-fip fc-map fc-map-value
```

For example, to enable VN2VF\_Port FIP snooping on a VLAN named **san1\_vlan** and change the FC-MAP value to **0x0EFC03**:

```
[edit ethernet-switching-options secure-access-port]
user@switch# set vlan san1_vlan examine-fip fc-map 0x0EFC03
```



**NOTE:** Changing the FC-MAP value causes all logins to drop and forces ENodes to log in again.

- To enable VN2VF\_Port FIP snooping on all VLANs and use the default FC-MAP value:

```
[edit ethernet-switching-options secure-access-port]
user@switch# set vlan all examine-fip
```

- To configure an interface as an FCoE trusted interface:

```
[edit ethernet-switching-options secure-access-port]
user@switch# set interface interface-name fcoe-trusted
```

For example, to configure interface **xe-0/0/30** as an FCoE trusted interface:

```
[edit ethernet-switching-options secure-access-port]
user@switch# set interface xe-0/0/30 fcoe-trusted
```

### ELS CLI Configuration

To enable VN2VF\_Port FIP snooping:

- To enable VN2VF\_Port FIP snooping on a VLAN and specify the optional FC-MAP value:

```
[edit]
user@switch# set vlans vlan-name forwarding-options fip-security fc-map fc-map-value
examine-vn2vf
```

For example, to enable VN2VF\_Port FIP snooping on a VLAN named **san1\_vlan** and change the FC-MAP value to **0x0EFC03**:

```
[edit]
user@switch# set vlans san1_vlan forwarding-options fip-security fc-map 0x0EFC03
examine-vn2vf
```



**NOTE:** Changing the FC-MAP value causes all logins to drop and forces ENodes to log in again.

- To configure an interface as an FCoE trusted interface:

```
[edit]
user@switch# set vlans vlan-name forwarding-options fip-security interface interface-name
fcoe-trusted
```

For example, to configure interface **xe-0/0/30** on VLAN named **san1\_vlan** as an FCoE trusted interface:

```
[edit]
user@switch# set vlans san1_vlan forwarding-options fip-security interface xe-0/0/30
fcoe-trusted
```

#### Related Documentation

- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Configuring an FCoE VLAN Interface on an FCoE-FC Gateway](#)
- [Configuring VLANs for FCoE Traffic on an FCoE Transit Switch](#)
- [Configuring an FCoE LAG](#)
- [Disabling Enhanced FIP Snooping Scaling](#)
- [Understanding FIP Snooping on page 3](#)
- [Understanding VN\\_Port to VF\\_Port FIP Snooping on an FCoE Transit Switch](#)
- [Understanding FCoE LAGs](#)

## Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure)

You can configure priority-based flow control (PFC) on EX4500 switches to apply link-level flow control on a specific traffic class so that different types of traffic can efficiently use the same network interface card (NIC). You must configure PFC for all interfaces carrying Fibre Channel over Ethernet (FCoE) traffic. You can also configure PFC on interfaces carrying other traffic types, such as Internet small computer system interface (iSCSI) traffic. Using PFC is optional for traffic types other than FCoE.



#### NOTE:

- PFC is supported only on 10-Gigabit Ethernet interfaces.
- If you are using PFC for a non-FCoE DCBX application, use the same 802.1p code points for the PFC congestion notification profile and for the application map that is carrying that application traffic.



Data Center Bridging Capability Exchange protocol (DCBX) is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 switches. DCBX enables or disables PFC on the local interface depending on whether the PFC configuration on that interface is the same as the PFC configuration of the connected interface on the data center bridging (DCB) peer.



**NOTE:** When you configure PFC, we recommend that you:

- Configure at least 20 percent of the buffer for the queue that is using PFC.
- Configure an appropriate percent of the buffer for any other forwarding classes (default forwarding classes and the user-defined forwarding classes) that you are using.
- Do not specify the exact option when configuring the buffer for the queue that is using PFC.
- Configure the loss-priority statement to low for a traffic class that is using PFC.
- Verify that the PFC configurations of the local interfaces are the same as the PFC configurations of the connected interfaces on the DCB peer. See [show dcbx neighbors](#).

EX Series switches support up to six congestion notification profiles for PFC.

To configure PFC:

1. Configure a congestion notification profile, specifying the name of the profile and specifying the three-bit pattern of the User Priority bits in an incoming frame that will trigger the priority-based flow control on that traffic class:

```
[edit class-of-service]
user@switch# set congestion-notification-profile profile-name input ieee-802.1 code-point
up-bits pfc
```

2. Disable standard Ethernet flow control on the interfaces that will be used for the traffic class that you have selected for PFC:

```
[edit interfaces]
user@switch# set interface-name ether-options no-flow-control
```



**NOTE:** You cannot apply PFC to interfaces that are using standard Ethernet flow control. You must first disable flow control on those interfaces.

3. Bind the congestion notification profile to the interfaces that will be used for the traffic class that you have selected for PFC:

```
[edit class-of-service]
user@switch# set interfaces interface-name congestion-notification-profile profile-name
```

4. Create a CoS classifier for a traffic class that will use PFC:

```
[edit class-of-service]
user@switch# set classifiers ieee-802.1 classifier-name import default
```

5. Configure this traffic class (**classifier-name**) to use a user-defined or default forwarding class with a low loss priority value and specify the 802.1p code points::

```
[edit class-of-service]
user@switch# set classifiers ieee-802.1 classifier-name forwarding-class class-name
loss-priority low code-points 3 bit-patterns
```

6. Bind the **classifier-name** classifier to all interfaces that require PFC:

```
[edit class-of-service]
user@switch# set interfaces interface-name unit logical-unit-number classifiers ieee-802.1
classifier-name
```

7. Assign the specified forwarding-class to an egress queue:

```
[edit class-of-service]
user@switch# set forwarding-classes class-name queue-number
```

8. Set a scheduler for this queue, allocating at least 20 percent of the buffer to be used for FCoE traffic:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name buffer-size percent
```

9. Set a scheduler to allocate buffer space for forwarding classes carrying other traffic:



**NOTE:** You must explicitly allocate some buffer space for the other forwarding classes. The default allocation of buffer space for forwarding classes is overridden when you manually configure the requisite amount of buffer space for the FCoE traffic.

```
[edit class-of-service]
user@switch# set scheduler-name buffer-size percent
```

10. Configure a scheduler map that associates the specified scheduler with the specified forwarding class:

```
[edit class-of-service]
user@switch# set scheduler-maps map-name forwarding-class class-name scheduler
scheduler-name
```

For example:

```
[edit class-of-service]
user@switch# set scheduler-maps pfc-map forwarding-class af2 scheduler pfc-sched
user@switch# set scheduler-maps pfc-map forwarding-class best-effort scheduler
default-sched user@switch# set scheduler-maps pfc-map forwarding-class network-control
scheduler default-sched
user@switch# set scheduler-maps pfc-map forwarding-class expedited-forwarding scheduler
default-sched
```

11. Assign the scheduler map to the egress interface:

```
[edit class-of-service]
user@switch# set interfaces interface-name scheduler-map pfc-map
```

#### Related Documentation

- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Understanding Priority-Based Flow Control on page 7](#)

## Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure)

As part of its autonegotiation capabilities, the Data Center Bridging Capability Exchange protocol (DCBX) automatically does the following:

- Advertises the priority flow control (PFC) configuration of the local interfaces to directly connected peers (switches and data center devices such as servers)
- Detects the PFC capabilities of the connected peers
- Enables the local interface's PFC capabilities if DCBX detects that the peer interface's PFC configuration is the same as the PFC configuration of the local interface.
- Disables the local interface's PFC capabilities if DCBX detects that the peer interface's PFC configuration is not the same as the PFC configuration of the local interface.

DCBX is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 switches. You can manually override DCBX control of the PFC operational state on a per-interface basis. You might want to disable autonegotiation if the DCB peer does not support PFC.

To disable the DCBX control of the PFC operational state:

- On an individual interface:

```
[edit protocols]
user@switch# set dcbx interface interface-name priority-flow-control no-auto-negotiation
```

- On all 10-Gigabit Ethernet interfaces:

```
[edit protocols]
user@switch# set dcbx interface all priority-flow-control no-auto-negotiation
```

### Related Documentation

- [show dcbx neighbors on page 97](#)
- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)

## Disabling DCBX Application Protocol Exchange on EX Series Switches (CLI Procedure)

You can disable the Data Center Bridging Capability Exchange protocol (DCBX) Application Protocol exchange on a specific interface or on all interfaces.

To disable the DCBX application protocol exchange for any DCBX application, do the following:



**NOTE:** The format of the configuration statement specifies the fcoe application, however, this applies to *any* DCBX application (both FCoE applications and non-FCoE applications) on that interface.

- For a specific interface:

```
[edit protocols]
user@switch# set dcbx interface interface-name applications fcoe no-auto-negotiation
```

- For all interfaces:

```
[edit protocols]
```

```
user@switch# set dcbx interface all applications fcoe no-auto-negotiation
```



**NOTE:** If you disable the DCBX application protocol exchange, the `show dcbx neighbors` command displays Feature: Application, Protocol-State: not-applicable.

#### Related Documentation

- [show dcbx neighbors on page 97](#)
- [Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches \(CLI Procedure\) on page 45](#)
- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)

## Defining an Application for DCBX Application Protocol TLV Exchange

Define each application for which you want DCBX to exchange application protocol information. You can define Layer 2 and Layer 4 applications. After you define applications, you map them to IEEE 802.1p code points, and then apply the application map to the interfaces on which you want DCBX to exchange application protocol information with connected peers. (See *Related Documentation* for how to configure application maps and apply them to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

Define Layer 2 applications by mapping an application name to an EtherType. Define Layer 4 applications by mapping an application name to a protocol (TCP or UDP) and a destination port.

- To define a Layer 2 application, specify the name of the application and its EtherType:

```
[edit applications]
```

```
user@switch# set application application-name ether-type ether-type
```

For example, to configure an application named **PTP** (for Precision Time Protocol) that uses the EtherType **0x88F7**:

```
user@switch# set applications application ptp ether-type 0x88F7
```

- To define a Layer 4 application, specify the name of the application, its protocol (TCP or UDP), and its destination port:

```
[edit]
user@switch# set applications application application-name protocol (tcp | udp)
destination-port port-value
```

For example, to configure an application named **iscsi** (for Internet Small Computer System Interface) that uses the protocol **TCP** and the destination port **3260**:

```
user@switch# set applications application iscsi protocol tcp destination-port 3260
```

#### Related Documentation

- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 48](#)
- [Configuring DCBX Autonegotiation](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange](#)
- [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)
- [Understanding DCBX Application Protocol TLV Exchange](#)
- [show dcbx neighbors on page 97](#)

## Configuring an Application Map for DCBX Application Protocol TLV Exchange

After you define applications for which you want to exchange DCBX application protocol information, map the applications to IEEE 802.1p code points. The IEEE 802.1p code points identify incoming traffic and allow you to map that traffic to the desired application. You then apply the application map to the interfaces on which you want DCBX to exchange application protocol information with connected peers. (See *Related Documentation* for how to define applications and apply the application map to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

Configure an application map by creating an application map name and mapping an application to one or more IEEE 802.1p code points.

- To define an application map, specify the name of the application map, the name of the application, and the IEEE 802.1p code points of the incoming traffic that you want to associate with the application in the application map:

```
[edit policy-options]
user@switch# set application-maps application-map-name application application-name
code-points [ aliases ] [ bit-patterns ]
```

For example, to configure an application map named **ptp-app-map** that includes an application named **PTP** (for Precision Time Protocol) and map the application to IEEE 802.1p code points **001** and **101**:

```
user@switch# set policy-options application-maps ptp-app-map application ptp code points
[ 001 101 ]
```

#### Related Documentation

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 46](#)
- [Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 48](#)
- [Configuring DCBX Autonegotiation](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange](#)
- [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)
- [show dcbx neighbors on page 97](#)

## Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange

After you define applications and map them to IEEE 802.1p code points in an application map, apply the application map to the interfaces on which you want DCBX to exchange the application protocol information with connected peers. (See *Related Documentation* for how to define applications and configure application maps to interfaces, and for an example of the entire procedure that also includes classifier configuration.)



**NOTE:** In Junos OS Release 12.1, the FCoE application was configured by default, so you did not need to configure it in an application map. In Junos OS Release 12.2, if you want DCBX to advertise the FCoE application on an interface and you apply an application map to that interface, you must explicitly configure FCoE in the application map. You also must enable priority-based flow control (PFC) on the FCoE code point on all interfaces that you want to advertise FCoE. If you apply an application map to an interface, the interface sends DCBX TLVs only for the applications configured in the application map.

- To apply an application map to a DCBX interface, specify the DCBX interface and the application map name:

```
[edit protocols]
user@switch# set dcbx interface interface-name application-map application-map-name
```

For example, to apply an application map named **ptp-app-map** on interface **xe-0/0/11**:

```
user@switch# set protocols dcbx interface xe-0/0/11 application-map ptp-app-map
```

#### Related Documentation

- [Defining an Application for DCBX Application Protocol TLV Exchange on page 46](#)
- [Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47](#)
- [Configuring DCBX Autonegotiation](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange](#)
- [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)
- [show dcbx neighbors on page 97](#)

## Disabling the ETS Recommendation TLV

The enhanced transmission selection (ETS) Recommendation TLV communicates the ETS settings that the switch wants the connected peer interface to use. If the peer interface is “willing,” the peer interface changes its configuration to match the configuration in the ETS Recommendation TLV. By default, the switch interfaces send the ETS Recommendation TLV to the peer. The settings communicated are the egress ETS settings defined by configuring hierarchical scheduling on the interface.

We recommend that you use the same ETS settings on the connected peer that you use on the switch interface and that you leave the ETS Recommendation TLV enabled. However, on interfaces that use IEEE DCBX as the DCBX mode, if you want an asymmetric configuration between the switch interface and the connected peer, you can disable the ETS Recommendation TLV.



**NOTE:** Disabling the ETS Recommendation TLV on interfaces that use DCBX version 1.01 as the DCBX mode has no effect and does not change DCBX behavior.

If you disable the ETS Recommendation TLV, the switch still sends the ETS Configuration TLV to the connected peer. The result is that the connected peer is informed about the switch DCBX ETS configuration, but even if the peer is “willing,” the peer does not change its configuration to match the switch configuration. This is asymmetric configuration—the two interfaces can have different parameter values for the ETS attribute.

To disable the ETS Recommendation TLV:

- [edit protocols dcbx interface *interface-name*]  
user@switch# **set enhanced-transmission-selection no-recommendation-tlv**

#### Related Documentation

- [Configuring the DCBX Mode](#)
- [Configuring DCBX Autonegotiation](#)
- [Understanding DCBX](#)

- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)



## CHAPTER 4

# Configuration Statements

- [\[edit class-of-service\] Configuration Statement Hierarchy on EX Series Switches on page 52](#)
- [\[edit ethernet-switching-options\] Configuration Statement Hierarchy on EX Series Switches on page 54](#)
- [\[edit protocols dcbx\] Configuration Statement Hierarchy on EX Series Switches on page 57](#)
- [application \(Applications\) on page 59](#)
- [application \(Application Maps\) on page 60](#)
- [applications \(Applications\) on page 61](#)
- [application-map on page 62](#)
- [application-maps on page 63](#)
- [code-point \(Congestion Notification\) on page 64](#)
- [code-points \(Application Maps\) on page 65](#)
- [congestion-notification-profile \(Priority-Based Flow Control\) on page 66](#)
- [dcbx on page 67](#)
- [destination-port \(Applications\) on page 68](#)
- [disable \(DCBX\) on page 69](#)
- [ether-type on page 70](#)
- [ethernet-switching-options on page 71](#)
- [examine-fip on page 75](#)
- [fc-map on page 76](#)
- [fcoe on page 77](#)
- [fcoe-trusted on page 78](#)
- [ieee-802.1 \(Congestion Notification\) on page 79](#)
- [input \(Congestion Notification\) on page 79](#)
- [interface \(Access Port Security\) on page 80](#)
- [interface \(DCBX\) on page 82](#)
- [interfaces on page 83](#)
- [policy-options on page 84](#)

- [priority-flow-control](#) on page 85
- [protocol \(Applications\)](#) on page 86
- [secure-access-port](#) on page 87
- [vlan \(Access Port Security\)](#) on page 89

## [\[edit class-of-service\] Configuration Statement Hierarchy on EX Series Switches](#)

---

This topic lists supported and unsupported configuration statements in the **[edit class-of-service]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit class-of-service\] Hierarchy Level on page 52](#)
- [Unsupported Statements in the \[edit class-of-service\] Hierarchy Level on page 54](#)

### Supported Statements in the [edit class-of-service] Hierarchy Level

The following hierarchy shows the **[edit class-of-service]** configuration statements supported on EX Series switches:

```
class-of-service {
  classifiers {
    (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) classifier-name {
      forwarding-class class-name {
        loss-priority (high | low | medium-high | medium-low) {
          code-points [ aliases ] [ 6 bit-patterns ];
        }
      }
      import (classifier-name | default);
    }
  }
  code-point-aliases {
    (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) {
      alias-name bits;
    }
  }
  drop-profiles {
    profile-name {
      interpolate {
        drop-probability [values];
        fill-level [values];
      }
    }
  }
}
```

```

forwarding-classes {
  class class-name
    queue queue-number;
}
interfaces interface-name {
  scheduler-map map-name;
  shaping-rate rate;
  unit (logical-unit-number | * ) {
    classifiers {
      (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (classifier-name | default);
    }
    forwarding-class class-name ;
  }
}
rewrite-rules {
  (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (rewrite-rule-name | default);
}
}
rewrite-rules {
  (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence ) rewrite-name {
    import (default | rewrite-name);
    forwarding-class class-name {
      loss-priority (high | low | medium-high | medium-low) code-point (alias | bits);
    }
  }
}
}
scheduler-maps {
  map-name {
    forwarding-class class-name {
      scheduler scheduler-name;
    }
  }
}
}
schedulers {
  scheduler-name {
    buffer-size (exact | percent percentage | remainder);
    drop-profile-map {
      loss-priority (any | high | medium-high | medium-low);
      protocol any;
      {
        drop-profile profile-name
      }
    }
    excess-rate {
      percent percentage;
    }
    priority (low | strict-high);
    shaping-rate (rate | percent percentage);
    transmit-rate (EX Series Switches) (rate | percent percentage | remainder) ;
  }
}
}
shared-buffer {
  percent;
}
}
traceoptions {
  file (file-name | files files | match match | no-world-readable | size size | world-readable);
}

```

```
    flag ( all | async | chassis-scheduler | cos-adjustment | dynamic | hardware-database
          | init | parse | performance-monitor | process | restart | route-socket | show | snmp |
          util );
    no-remote-trace;
  }
  tri-color;
}
```

## Unsupported Statements in the [edit class-of-service] Hierarchy Level

All statements in the **[edit class-of-service]** hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented.

### Related Documentation

- *Example: Configuring CoS on EX Series Switches*
- *Defining CoS Code-Point Aliases (CLI Procedure) or Defining CoS Code-Point Aliases (J-Web Procedure)*
- *Defining CoS Classifiers (CLI Procedure) or Defining CoS Classifiers (J-Web Procedure)*
- *Defining CoS Forwarding Classes (CLI Procedure) or Defining CoS Forwarding Classes (J-Web Procedure)*
- *Configuring CoS Tail Drop Profiles (CLI Procedure)*
- *Defining CoS Schedulers and Scheduler Maps (CLI Procedure) or Defining CoS Schedulers (J-Web Procedure)*
- *Defining CoS Rewrite Rules (CLI Procedure) or Defining CoS Rewrite Rules (J-Web Procedure)*

## [edit ethernet-switching-options] Configuration Statement Hierarchy on EX Series Switches

---

This topic lists supported and unsupported configuration statements in the **[edit ethernet-switching-options]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit ethernet-switching-options\] Hierarchy Level on page 55](#)
- [Unsupported Statements in the \[edit ethernet-switching-options\] Hierarchy Level on page 57](#)

## Supported Statements in the [edit ethernet-switching-options] Hierarchy Level

The following hierarchy shows the [edit ethernet-switching-options] configuration statements supported on EX Series switches:

```

ethernet-switching-options {
  analyzer (Port Mirroring) {
    name {
      input {
        egress {
          interface (all | interface-name);
        }
        ingress {
          interface (all | interface-name);
          vlan (vlan-id | vlan-name);
        }
      }
    }
    loss-priority priority;
    output {
      interface interface-name;
      vlan (vlan-id | vlan-name);
    }
    ratio number;
  }
}
authentication-whitelist {
  interface;
  vlan-assignment;
}
bpdu-block {
  disable-timeout timeout;
  interface (all | [interface-name]) {
    (disable | drop | shutdown);
  }
}
dot1q-tunneling {
  ether-type (0x8100 | 0x88a8 | 0x9100);
}
interfaces interface-name {
  no-mac-learning;
}
mac-lookup-length number-of-entries;
}
mac-notification {
  notification-interval seconds;
}
mac-table-aging-time seconds;
port-error-disable {
  disable-timeout timeout;
}
redundant-trunk-group {
  group name {
    description;
    interface interface-name {
      primary;
    }
  }
}

```

```

    }
    preempt-cutover-timer seconds;
  }
}
secure-access-port {
  dhcp-snooping-file {
    location local_pathname | remote_URL;
    timeout seconds;
    write-interval seconds;
  }
  interface (all | interface-name) {
    allowed-mac {
      mac-address-list;
    }
    (dhcp-trusted | no-dhcp-trusted );
    fcoe-trusted;
    mac-limit limit action action;
    no-allowed-mac-log;
    static-ip ip-address {
      mac mac-address;
      vlan vlan-name;
    }
  }
}
uac-policy;
}
vlan (all | vlan-name) {
  (arp-inspection | no-arp-inspection );
  dhcp-option82 {
    disable;
    circuit-id {
      prefix hostname;
      use-interface-description;
      use-vlan-id;
    }
    remote-id {
      prefix (hostname | mac | none);
      use-interface-description;
      use-string string;
    }
    vendor-id [string];
  }
  (examine-dhcp | no-examine-dhcp);
  examine-fip {
    fc-map fc-map-value;
  }
  (ip-source-guard | no-ip-source-guard);
  mac-move-limit limit action action;
}
}
static {
  vlan vlan-id {
    mac mac-address next-hop interface-name;
  }
}
storm-control {
  action-shutdown;
}

```

```

interface (all | interface-name) {
    bandwidth bandwidth;
    multicast;
    no-broadcast;
    no-multicast;
    no-registered-multicast;
    no-unknown-unicast;
    no-unregistered-multicast;
}
}
traceoptions {
    file filename <files number> <no-stamp> <replace> <size size> <world-readable |
    no-world-readable>;
    flag flag <disable>;
}
unknown-unicast-forwarding {
    vlan (all | vlan-name) {
        interface interface-name;
    }
}
}
voip {
    interface (all | [interface-name | access-ports]) {
        forwarding-class (assured-forwarding | best-effort | expedited-forwarding |
        network-control);
        vlan vlan-name;
    }
}
}
}

```

## Unsupported Statements in the [edit ethernet-switching-options] Hierarchy Level

All statements in the [edit ethernet-switching-options] hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented.

### Related Documentation

- *Example: Setting Up Q-in-Q Tunneling on EX Series Switches*
- *Example: Configuring Redundant Trunk Links for Faster Recovery*
- *Configuring MAC Table Aging (CLI Procedure)*
- *Configuring MAC Notification (CLI Procedure)*
- *Configuring Q-in-Q Tunneling (CLI Procedure)*
- *Configuring Redundant Trunk Links for Faster Recovery (CLI Procedure)*
- *Configuring Nonstop Bridging on EX Series Switches (CLI Procedure)*

## [edit protocols dcbx] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the [edit protocols dcbx] hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.

- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see *EX Series Switch Software Features Overview*.

This topic lists:

- [Supported Statements in the \[edit protocols dcbx\] Hierarchy Level on page 58](#)
- [Unsupported Statements in the \[edit protocols dcbx\] Hierarchy Level on page 58](#)

## Supported Statements in the [edit protocols dcbx] Hierarchy Level

The following hierarchy shows the **[edit protocols dcbx]** configuration statements supported on EX Series switches:

```
protocols {
  dcbx {
    disable;
    interface (all | interface-name) {
      application-map application-map-name;
      applications {
        fcoe {
          no-auto-negotiation;
        }
      }
      disable ;
      priority-flow-control {
        no-auto-negotiation;
      }
    }
  }
}
```

## Unsupported Statements in the [edit protocols dcbx] Hierarchy Level

All statements in the **[edit protocols dcbx]** hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented with the following exceptions:

**Table 6: Unsupported [edit protocols dcbx] Configuration Statements on EX Series Switches**

| Statement                       | Hierarchy                       |
|---------------------------------|---------------------------------|
| enhanced-transmission-selection | [edit protocols dcbx interface] |

**NOTE:** Variables, such as *interface-name*, are not shown in the statements or hierarchies.

- Related Documentation**
- [Example: Configuring an FCoE Transit Switch on page 21](#)
  - [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)



- [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 42](#)
- [Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches \(CLI Procedure\) on page 45](#)
- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10](#)
- [\[edit protocols\] Configuration Statement Hierarchy on EX Series Switches](#)

## application (Applications)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> application <i>application-name</i> {     <i>destination-port</i> <i>port-value</i>;     protocol (tcp   udp);     ether-type <i>type</i>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit applications]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Configure properties to define an application.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>application-name</i>—Name of the application.</p> <p>The statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 46</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li> </ul> |

## application (Application Maps)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>application <i>application-name</i> {<br/>    <i>code-points</i> [ <i>aliases</i> ] [ <i>bit-patterns</i> ];<br/>}</code>                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit policy-options <b>application-maps</b> <i>application-map-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Add an application to an application map and define the application's code points.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <i>application-name</i> —Name of the application.<br><br>The remaining statement is explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47</a></li><li>• <i>Example: Configuring DCBX Application Protocol TLV Exchange</i></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li><li>• <i>Understanding DCBX Application Protocol TLV Exchange</i></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li></ul> |

## applications (Applications)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> applications {   application application-name {     destination-port port-value;     protocol (tcp   udp);     ether-type type;   } } </pre>                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.1 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Define applications that DCBX advertises.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 46</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li> </ul> |

## application-map

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>application-map <i>application-map-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit protocols <b>dcbx</b> <b>interface</b> <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Specify an application map to apply to an interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <i>application-map-name</i> —Name of the application map.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 97</a></li><li>• <a href="#">Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange on page 48</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li></ul> |

## application-maps

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> application-maps <i>application-map-name</i> {   application <i>application-name</i> {     code-points [ <i>aliases</i> ] [ <i>bit-patterns</i> ];   } } </pre>                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit policy-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Define an application map by specifying the applications that belong to the application map.                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><i>application-map-name</i>—Name of the application map.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li> </ul> |

## code-point (Congestion Notification)

---

|                                 |                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-point <i>up-bits</i> pfc;</code>                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit class-of-service <a href="#">congestion-notification-profile (Priority-Based Flow Control)</a> <i>profile-name</i> <code>input ieee-802.1</code> ],<br>[edit class-of-service interfaces <i>interface-name</i> congestion-notification-profile <i>profile-name</i> <code>input ieee-802.1</code> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                                                                                    |
| <b>Description</b>              | Configure the IEEE 802.1p (User Priority) code point bits as input for creating the priority-based flow control (PFC) congestion notification profile, which you will associate with a particular traffic class.                                                                                         |
| <b>Options</b>                  | <ul style="list-style-type: none"><li>• <b>pfc</b>—PFC flow control method</li><li>• <b>up-bits</b>—Three-bit pattern of the User Priority field in an IEEE 802.1Q tag</li></ul>                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li><li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li></ul>                                                            |

## code-points (Application Maps)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-points [ <i>aliases</i> ] [ <i>bit-patterns</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit policy-options <b>application-maps</b> <i>application-map-name</i> <b>application</b> <i>application-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Define one or more code-point aliases or bit sets for an application.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <i>aliases</i> —Name of the alias or aliases.<br><br><i>bit-patterns</i> —Value of the code-point bits, in decimal form.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring an Application Map for DCBX Application Protocol TLV Exchange on page 47</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li> </ul> |

## congestion-notification-profile (Priority-Based Flow Control)

|                            |                                                                                                                                                                               |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>congestion-notification-profile <i>profile-name</i> {<br/>    input {<br/>        ieee-802.1 {<br/>            code-point <i>up-bits</i> pfc;<br/>        }    }</code> |
| <b>Hierarchy Level</b>     | [edit class-of-service],<br>[edit class-of-service <b>interfaces</b> <i>interface-name</i> ]                                                                                  |
| <b>Release Information</b> | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                         |
| <b>Description</b>         | (EX4500 and EX4550 switches only) Configure a congestion notification profile for priority-based flow control (PFC).                                                          |



**NOTE:** You must configure PFC for FCoE traffic. The interface where PFC is enabled must be a 10-Gigabit Ethernet interface.

The remaining statements are explained separately.


|                                 |                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li> </ul> |



## dcbx

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> dcbx {   disable;   interface (interface-name   all) {     disable;     application-map application-map-name;     applications {       no-auto-negotiation;     }     enhanced-transmission-selection {       no-auto-negotiation;       no-recommendation-tlv;       recommendation-tlv {         no-auto-negotiation;       }     }     dcbx-version (auto-negotiate   ieee-dcbx   dcbx-version-1.01);     priority-flow-control {       no-auto-negotiation;     }   } } </pre> |
| <b>Hierarchy Level</b>          | [edit protocols]                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 11.3 for EX Series switches.</p> <p><b>mode</b> and <b>recommendation-tlv</b> statements introduced in Junos OS Release 12.2 for the QFX Series.</p>                                                                                                                                                                                                                |
| <b>Description</b>              | Configure DCBX properties.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 97</a></li> <li>• <i>Understanding DCB Features and Requirements</i></li> <li>• <i>Configuring DCBX Autonegotiation</i></li> <li>• <a href="#">Understanding DCB Features and Requirements on EX Series Switches on page 14</a></li> <li>• <a href="#">Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure) on page 45</a></li> </ul>                                    |

## destination-port (Applications)

|                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                         | <code>destination-port <i>port-value</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                | [edit applications <b>application</b> <i>application-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>                                                                                                                                                                                                            | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>                                                                                                                                                                                                                    | Transmission Control Protocol (TCP) or User Datagram Protocol (UDP) destination port number, which combines with <b>protocol</b> to identify an application type. The Internet Assigned Numbers Authority (IANA) assigns port numbers. See the IANA <i>Service Name and Transport Protocol Port Number Registry</i> at <a href="http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml">http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml</a> for a list of assigned port numbers. |
| <div>  <b>NOTE:</b> To create an application for iSCSI, use the protocol <code>tcp</code> with the destination port number <code>3260</code>. </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                                                                                                                                                                                                                        | <i>port-value</i> —Identifier for the port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b>                                                                                                                                                                                                       | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>                                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 46</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li> </ul>                     |


## disable (DCBX)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">dcbx</a> ]<br><br>[edit protocols <a href="#">dcbx interface interface-name</a> ]                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1 for the QFX Series.<br>Statement introduced in Junos OS Release 11.3 for EX Series switches.                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Disable Data Center Bridging Capability Exchange protocol (DCBX) on one or more 10-Gigabit Ethernet interfaces.                                                                                                                                                                                                                                                                             |
| <b>Default</b>                  | DCBX is enabled by default on all 10-Gigabit or higher Ethernet interfaces.<br><br>DCBX is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 CEE-enabled switches.                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Configuring DCBX Autonegotiation</i></li> <li>• <a href="#">Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure) on page 45</a></li> <li>• <i>Understanding DCB Features and Requirements</i></li> <li>• <a href="#">Understanding DCB Features and Requirements on EX Series Switches on page 14</a></li> </ul> |

## ether-type

---

|                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                    | <code>ether-type <i>ether-type</i>;</code>                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>                                                                                                                                           | [edit applications <b>application</b> <i>application-name</i> ]                                                                                                                                                                                                                                                                |
| <b>Release Information</b>                                                                                                                                       | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                     |
| <b>Description</b>                                                                                                                                               | Two-octet field in an Ethernet frame that defines the protocol encapsulated in the frame payload. See <a href="http://standards.ieee.org/develop/regauth/ethertype/eth.txt">http://standards.ieee.org/develop/regauth/ethertype/eth.txt</a> for a list of Institute of Electrical and Electronics Engineers (IEEE) EtherTypes. |
| <div> <b>NOTE:</b> To create a FIP application, use the EtherType 0x8914.</div> |                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                                                                                                                                                   | <b>type</b> —Identifier for the EtherType.                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b>                                                                                                                                  | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                        |
| <b>Related Documentation</b>                                                                                                                                     | <ul style="list-style-type: none"><li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 46</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li></ul>           |

## ethernet-switching-options

```

Syntax ethernet-switching-options {
    analyzer (Port Mirroring) {
        name {
            loss-priority priority;
            ratio number;
            input {
                ingress {
                    interface (all | interface-name);
                    vlan (vlan-id | vlan-name);
                }
                egress {
                    interface (all | interface-name);
                }
            }
        }
        output {
            interface interface-name;
            vlan (vlan-id | vlan-name) {
                no-tag;
            }
        }
    }
    bpdu-block {
        disable-timeout timeout;
        interface (all | [interface-name]) {
            (disable | drop | shutdown);
        }
    }
    dot1q-tunneling {
        ether-type (0x8100 | 0x88a8 | 0x9100);
    }
    interfaces interface-name {
        no-mac-learning;
    }
    mac-lookup-length number-of-entries;
}
    mac-notification {
        notification-interval seconds;
    }
    mac-table-aging-time seconds;
    nonstop-bridging;
    port-error-disable {
        disable-timeout timeout;
    }
    redundant-trunk-group {
        group name {
            interface interface-name <primary>;
            interface interface-name;
        }
    }
    secure-access-port {
        dhcp-snooping-file {

```

```

    location local_pathname | remote_URL;
    timeout seconds;
    write-interval seconds;
}
dhcpv6-snooping-file {
    location local_pathname | remote_URL;
    timeout seconds;
    write-interval seconds;
}
interface (all | interface-name) {
    allowed-mac {
        mac-address-list;
    }
    (dhcp-trusted | no-dhcp-trusted);
    fcoe-trusted;
    mac-limit limit action (drop | log | none | shutdown);
    no-allowed-mac-log;
    persistent-learning;
    static-ip ip-address {
        vlan vlan-name;
        mac mac-address;
    }
    static-ipv6 ip-address {
        vlan vlan-name;
        mac mac-address;
    }
}
vlan (all | vlan-name) {
    (arp-inspection | no-arp-inspection) [
        forwarding-class class-name;
    ]
    dhcp-option82 {
        circuit-id {
            prefix hostname;
            use-interface-description;
            use-vlan-id;
        }
        remote-id {
            prefix hostname | mac | none;
            use-interface-description;
            use-string string;
        }
        vendor-id [string];
    }
    (examine-dhcp | no-examine-dhcp) {
        forwarding-class class-name;
    }
    (examine-dhcpv6 | no-examine-dhcpv6) {
        forwarding-class class-name;
    }
    examine-fip {
        fc-map fc-map-value;
    }
    (ip-source-guard | no-ip-source-guard);
    (ipv6-source-guard | no-ipv6-source-guard);
    mac-move-limit limit action (drop | log | none | shutdown);

```

```

    }
    (neighbor-discovery-inspection | no-neighbor-discovery-inspection);
no-option-37;
static {
    vlan name {
        mac mac-address {
            next-hop interface-name;
        }
    }
}
storm-control {
    action-shutdown;
    interface (all | interface-name) {
        bandwidth bandwidth;
        level level;
        multicast;
        no-broadcast;
        no-multicast;
        no-registered-multicast;
        no-unknown-unicast;
        no-unregistered-multicast;
    }
}
traceoptions {
    file filename <files number> <no-stamp> <replace> <size size> <world-readable |
        no-world-readable>;
    flag flag <disable>;
}
unknown-unicast-forwarding {
    vlan (all | vlan-name) {
        interface interface-name;
    }
}
voip {
    interface (all | [interface-name | access-ports]) {
        vlan vlan-name;
        forwarding-class (assured-forwarding | best-effort | expedited-forwarding |
            network-control);
    }
}
}

```

**Hierarchy Level** [edit]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Configure Ethernet switching options.

The remaining statements are explained separately.


**Required Privilege Level** system—To view this statement in the configuration.  
 system-control—To add this statement to the configuration.

**Related  
Documentation**

- *Understanding Port Mirroring on EX Series Switches*
- *Understanding Port Security*
- *Understanding BPDU Protection for STP, RSTP, and MSTP on EX Series Switches*
- *Understanding Redundant Trunk Links*
- *Understanding Storm Control on EX Series Switches*
- *Understanding 802.1X and VoIP on EX Series Switches*
- *Understanding Q-in-Q Tunneling on EX Series Switches*
- *Understanding Unknown Unicast Forwarding*
- *Understanding MAC Notification on EX Series Switches*
- [Understanding FIP Snooping on page 3](#)
- *Understanding Nonstop Bridging on EX Series Switches*



## examine-fip

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>examine-fip {   examine-vn2vn {     beacon-period <i>milliseconds</i>;   }   <b>fc-map</b> <i>fc-map-value</i>;   no-fip-snooping-scaling; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit ethernet-switching-options secure-access-port vlan (all   <i>vlan-name</i> )]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 10.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement <b>examine-vn2vn</b> introduced in Junos OS Release 12.2 for the QFX Series.</p> <p>Statement <b>no-fip-snooping-scaling</b> introduced in Junos OS Release 13.2X52-D10 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p> <b>NOTE:</b> This statement supports the original CLI. If your switch runs the Enhanced Layer 2 Software (ELS) CLI, see <i>examine-vn2vf</i> for VN_Port to VF_Port (VN2VF_Port) FIP snooping, and see <i>examine-vn2vn</i> for VN_Port to VN_Port (VN2VN_Port) FIP snooping. For ELS details, see <i>Getting Started with Enhanced Layer 2 Software</i>.</p> <p>Enable FIP snooping on a specified VLAN. Ensure that the VLAN is a dedicated FCoE VLAN that transports only FCoE traffic.</p> <p>(QFX Series only) Enable VN2VN_Port FIP snooping on the specified VLAN. The VLAN must be a dedicated FCoE VLAN that transports only VN2VN_Port traffic. One FCoE VLAN cannot support both VN2VF_Port FIP snooping and VN2VN_Port FIP snooping. Configure separate, dedicated FCoE VLANs for VN2VN_Port FIP snooping and VN2VN_Port FIP snooping.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">vlan on page 89</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## fc-map

**Syntax** `fc-map fc-map-value;`

**Hierarchy Level** Original CLI

[edit ethernet-switching options secure-access-port vlan (all | *vlan-name*) **examine-fip**]

ELS CLI for Platforms that Support FCoE

[edit vlans *vlan-name* forwarding-options fip-security]



**NOTE:** The `fc-map` configuration statement is in a different hierarchy on the original CLI than on the Enhanced Layer 2 Software (ELS) CLI.

QFX Series that Support FCoE-FC Gateway Configuration

[edit fc-fabrics *fc-fabric-name* protocols fip]

**Release Information** Statement introduced in Junos OS Release 10.4 for EX Series switches.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced for the ELS CLI in Junos OS Release 13.2 for the QFX Series.

**Description** Set the FCoE mapped address prefix (FC-MAP) value for the FCoE VLAN to match the FC switch (or FCoE forwarder) FC-MAP value for the FC fabric. The FC-MAP value is a unique MAC address prefix an FC switch uses to identify FCoE traffic for a given FC fabric (traffic on a particular FCoE VLAN).

You can configure the FC-MAP value or use the default value. The default FC-MAP value is different for VN\_Port to VF\_Port (VN2VF\_Port) FIP snooping (0x0EFC00) than for VN\_Port to VN\_Port (VN2VN\_Port) FIP snooping.

The FC switch provides the FC-MAP value to FCoE nodes (ENodes) in the FIP discovery advertisement message. If the EX Series switch or the QFX Series FCoE VLAN FC-MAP value does not match the FC switch FC-MAP value, neither device discovers the FC switch on that VLAN, and the ENodes on that VLAN cannot access the FC switch. The FC switch accepts only FCoE traffic that uses the correct FC-MAP value as part of the VN\_Port MAC address.

When the QFX Series acts as an FCoE-FC gateway, the FC-MAP value for the gateway and the FCoE devices must match the FC switch FC-MAP value in order to communicate with the FC switch.



**NOTE:** Changing the FC-MAP value causes all logins to drop and forces the ENodes to log in again.

**Options** `fc-map-value`—FC-MAP value, hexadecimal value preceded by "0x".

**Range:** 0x0EFC00 through 0x0EFCFF

**Default:** 0x0EFC00 for VN2VF\_Port FIP snooping 0x0EFD00 for VN2VN\_Port FIP snooping

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [examine-fip on page 75](#)
- [show fip snooping on page 119](#)
- [Example: Configuring an FCoE Transit Switch on page 21](#)
- [Configuring VN2VF\\_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39](#)

## fcoe

**Syntax** fcoe {  
no-auto-negotiation;  
}

**Hierarchy Level** [edit protocols [dcbx](#) [interface](#) *interface-name* applications]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 12.1 for the EX Series switches.

**Description** Disable advertising the FCoE state of the interface to the peer. To disable FCoE on the interface, do not configure the FCoE forwarding class on the interface.


**Options** **no-auto-negotiate**—Disable automatic negotiation of FCoE capability.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [show dcbx neighbors on page 97](#)
- [Understanding DCB Features and Requirements](#)
- [Understanding DCB Features and Requirements on EX Series Switches on page 14](#)

## fcoe-trusted

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | fcoe-trusted;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | Original CLI<br><br>[edit ethernet-switching-options secure-access-port interface <i>interface-name</i> ]<br><br>ELS CLI for Platforms that Support FCoE<br><br>[edit vlans <i>vlan-name</i> forwarding-options fip-security interface <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                 | <div>  <p><b>NOTE:</b> The <b>fcoe-trusted</b> configuration statement is in a different hierarchy on the original CLI than on the Enhanced Layer 2 Software (ELS) CLI.</p> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                 | <p>QFX Series that Support FCoE-FC Gateway Configuration</p> <p>[edit fc-fabrics <i>fc-fabric-name</i> protocols fip]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 10.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced for the FC fabric in Junos OS Release 11.3 for the QFX Series.</p> <p>Statement introduced for the ELS CLI in Junos OS Release 13.2 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>Configure the specified 10-Gigabit Ethernet interface to trust Fibre Channel over Ethernet (FCoE) traffic. If an interface is connected to another switch such as an FCoE forwarder (FCF) or a transit switch, you can configure the interface as trusted so that the interface forwards FCoE traffic from the switch to the FCoE devices without installing FIP snooping filters.</p> <p>(QFX Series FCoE-FC gateway) Configure the specified local Fibre Channel fabric to trust FCoE traffic on all ports in the fabric. Changing the fabric ports from untrusted to trusted removes any existing FIP snooping filters from the ports. Changing the fabric ports from trusted to untrusted by removing the <b>fcoe-trusted</b> configuration from the fabric forces all of the FCoE sessions on those ports to log out so that when the ENodes and VN_Ports log in again, the switch can build the appropriate FIP snooping filters.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show fip snooping on page 119</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## ieee-802.1 (Congestion Notification)

|                                 |                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ieee-802.1 {   code-point up-bits pfc ; }</pre>                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit class-of-service congestion-notification-profile <i>profile-name</i> ],<br>[edit class-of-service interfaces <i>interface-name</i> congestion-notification-profile <i>profile-name</i> ]                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Set an association between the traffic class and the congestion notification profile.<br><br>The remaining statement is explained separately.                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">[edit class-of-service] Configuration Statement Hierarchy on EX Series Switches on page 52</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li> </ul> |

## input (Congestion Notification)

|                                 |                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>input {   ieee-802.1 {     code-point up-bits pfc ;   } }</pre>                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit class-of-service <a href="#">congestion-notification-profile (Priority-Based Flow Control) profile-name</a> ],<br>[edit class-of-service interfaces <i>interface-name</i> congestion-notification-profile <i>profile-name</i> ]            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                            |
| <b>Description</b>              | Identify the three-bit pattern of the User Priority field that triggers the priority-based congestion notification profile for a specified traffic class.<br><br>The remaining statements are explained separately.                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li> </ul> |

## interface (Access Port Security)

**Syntax** interface (all | *interface-name*) {  
     allowed-mac {  
         *mac-address-list*;  
     }  
     (dhcp-trusted | no-dhcp-trusted);  
     fcoe-trusted;  
     mac-limit *limit* action (drop | log | none | shutdown);  
     no-allowed-mac-log;  
     persistent-learning;  
     static-ip *ip-address* {  
         vlan *vlan-name*;  
         mac *mac-address*;  
     }  
     static-ipv6 *ip-address* {  
         vlan *vlan-name*;  
         mac *mac-address*;  
     }  
     }  
     vlan *vlan-name* {  
         mac-limit *limit* action (drop | log | none | shutdown);  
     }  
 }

**Hierarchy Level** [edit [ethernet-switching-options secure-access-port](#)]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches.  
 Support for the **ipv6-source-guard** statement introduced in Junos OS Release 14.1X53-D10 for EX Series switches.

**Description** Apply port security features to all interfaces or to the specified interface.

**Options** **all**—Apply port security features to all interfaces.

***interface-name***—Apply port security features to the specified interface.

The remaining statements are explained separately.

**Required Privilege Level** system—To view this statement in the configuration.  
 system-control—To add this statement to the configuration.

**Related Documentation**

- *Example: Configuring Basic Port Security Features*
- *Example: Configuring Allowed MAC Addresses to Protect the Switch from DHCP Snooping Database Alteration Attacks*
- *Example: Configuring MAC Limiting, Including Dynamic and Allowed MAC Addresses, to Protect the Switch from Ethernet Switching Table Overflow Attacks*
- *Example: Configuring MAC Limiting to Protect the Switch from DHCP Starvation Attacks*
- *Example: Configuring a DHCP Server Interface as Untrusted to Protect the Switch from Rogue DHCP Server Attacks*

- *Configuring MAC Limiting (CLI Procedure)*
- *Enabling a Trusted DHCP Server (CLI Procedure)*
- *Configuring Static IP Addresses for DHCP Bindings on Access Ports (CLI Procedure)*

## interface (DCBX)

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre>interface (<i>interface-name</i>   all) {<br/>  disable;<br/>  application-map <i>application-map-name</i>;<br/>  applications {<br/>    no-auto-negotiation;<br/>  }<br/>  enhanced-transmission-selection {<br/>    no-auto-negotiation;<br/>    no-recommendation-tlv;<br/>    recommendation-tlv {<br/>      no-auto-negotiation;<br/>    }<br/>  }<br/>  dcbx-version (auto-negotiate   ieee-dcbx   dcbx-version-1.01);<br/>  priority-flow-control {<br/>    no-auto-negotiation;<br/>  }<br/>}</pre>                      |
| Hierarchy Level          | [edit protocols <a href="#">dcbx</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Release Information      | <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 11.3 for the EX Series switches.</p> <p><b>Mode</b> and <b>recommendation-tlv</b> statements introduced in Junos OS Release 12.2 for the QFX Series.</p>                                                                                                                                                                                                                                                         |
| Description              | Configure DCBX properties on an interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Options                  | <p><b><i>interface-name</i></b>—Name of the interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Required Privilege Level | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">show dcbx neighbors on page 97</a></li><li>• <i>Configuring DCBX Autonegotiation</i></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li><li>• <i>Understanding DCB Features and Requirements</i></li><li>• <a href="#">Understanding DCB Features and Requirements on EX Series Switches on page 14</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li></ul> |



## interfaces

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> interfaces {   interface-name {     congestion-notification-profile profile-name {       input {         ieee-802.1 {           code-point up-bits pfc;         }       }     }     scheduler-map map-name;     unit logical-unit-number {       forwarding-class class-name;       classifiers {         (dscp   ieee-802.1   inet-precedence) (classifier-name   default);       }     }   } } </pre>                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit class-of-service]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Configure interface-specific class-of-service (CoS) properties for incoming packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><i>interface-name</i>—Name of the interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring CoS on EX Series Switches</i></li> <li>• <i>Defining CoS Classifiers (CLI Procedure) or Defining CoS Classifiers (J-Web Procedure)</i></li> <li>• <i>Defining CoS Forwarding Classes (CLI Procedure) or Defining CoS Forwarding Classes (J-Web Procedure)</i></li> <li>• <i>Defining CoS Schedulers and Scheduler Maps (CLI Procedure) or Defining CoS Schedulers (J-Web Procedure)</i></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li> </ul> |

## policy-options

```
Syntax  policy-options
        application-maps application-map-name {
            application application-name {
                code-points [ aliases ] [ bit-patterns ];
            }
        }
        policy-statement policy-name {
            term term-name {
                from {
                    family family-name;
                    match-conditions;
                    policy subroutine-policy-name;
                    prefix-list prefix-list-name;
                    prefix-list-filter prefix-list-name match-type <actions>;
                    route-filter destination-prefix match-type <actions>;
                    source-address-filter source-prefix match-type <actions>;
                }
                to {
                    match-conditions;
                    policy subroutine-policy-name;
                }
                then actions;
            }
        }
    }
```

**Hierarchy Level** [edit]

**Release Information** Statement introduced in Junos OS Release 12.1 for the QFX Series.  
Statement introduced in Junos OS Release 12.1 for the EX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure options such as application maps for DCBX application protocol exchange and policy statements.

**Required Privilege Level** storage—To view this statement in the configuration.  
storage-control—To add this statement to the configuration.

**Related Documentation**


- [Defining an Application for DCBX Application Protocol TLV Exchange on page 46](#)
- [Example: Configuring DCBX Application Protocol TLV Exchange](#)
- [Example: Configuring DCBX to Support an iSCSI Application on page 33](#)
- [Understanding DCBX Application Protocol TLV Exchange](#)
- [Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16](#)

## priority-flow-control

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | priority-flow-control {<br>no-auto-negotiation;<br>}                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">dcbx</a> <a href="#">interface</a> (all   <i>interface-name</i> )]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1 for the QFX Series.<br>Statement introduced in Junos OS Release 11.3 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Disable autonegotiation of priority-based flow control (PFC) on one or more Ethernet interfaces. Autonegotiation enables PFC on an interface only if the switch and the peer device connected to the switch both support PFC and have the same PFC configuration. Disabling autonegotiation on an interface forces the interface to use the PFC state (enabled or disabled) that is configured on the switch by the configuration and assignment of the congestion notification profile.                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>no-auto-negotiation</b> —Disable automatic negotiation of PFC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show dcbx neighbors on page 97</a></li> <li>• <i>Configuring CoS PFC (Congestion Notification Profiles)</i></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 42</a></li> <li>• <i>Configuring DCBX Autonegotiation</i></li> <li>• <i>Example: Configuring CoS PFC for FCoE Traffic</i></li> <li>• <a href="#">Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10</a></li> <li>• <a href="#">Understanding Priority-Based Flow Control on page 7</a></li> <li>• <i>Understanding DCB Features and Requirements</i></li> </ul> |

## protocol (Applications)

---

|                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                          | <code>protocol (tcp   udp);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>                                                                                                                                                                                                 | [edit applications <a href="#">application</a> <i>application-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>                                                                                                                                                                                             | Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>                                                                                                                                                                                                     | Networking protocol type, which combines with <b>destination-port</b> to identify an application type.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <div> <b>NOTE:</b> To create an application for iSCSI, use the protocol <code>tcp</code> with the destination port number 3260.</div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                                                                                                                                                                                                         | <code>tcp</code> —Transmission Control Protocol<br><br><code>udp</code> —User Datagram Protocol                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b>                                                                                                                                                                                        | <code>interface</code> —To view this statement in the configuration.<br><code>interface-control</code> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>                                                                                                                                                                                           | <ul style="list-style-type: none"><li>• <a href="#">Defining an Application for DCBX Application Protocol TLV Exchange on page 46</a></li><li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li><li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange</a></li><li>• <a href="#">Understanding DCBX Application Protocol TLV Exchange on EX Series Switches on page 16</a></li></ul> |

## secure-access-port

```
Syntax  secure-access-port {
        dhcp-snooping-file {
            location local_pathname | remote_URL;
            timeout seconds;
            write-interval seconds;
        }
        dhcpv6-snooping-file {
            location local_pathname | remote_URL;
            timeout seconds;
            write-interval seconds;
        }
        interface (all | interface-name) {
            allowed-mac {
                mac-address-list;
            }
            (dhcp-trusted | no-dhcp-trusted);
            fcoe-trusted;
            mac-limit limit action (drop | log | none | shutdown);
            no-allowed-mac-log;
            persistent-learning;
            static-ipip-address {
                vlan vlan-name;
                mac mac-address;
            }
            static-ipv6ip-address {
                vlan vlan-name;
                mac mac-address;
            }
        }
        vlan (all | vlan-name) {
            (arp-inspection | no-arp-inspection) [
                forwarding-class class-name;
            ]
            dhcp-option82 {
                circuit-id {
                    prefix hostname;
                    use-interface-description;
                    use-vlan-id;
                }
                remote-id {
                    prefix hostname | mac | none;
                    use-interface-description;
                    use-string string;
                }
                vendor-id <string>;
            }
            (examine-dhcp | no-examine-dhcp) {
                forwarding-class class-name;
            }
            (examine-dhcpv6 | no-examine-dhcpv6) {
                forwarding-class class-name;
            }
        }
    }
```

```
    examine-fip {  
        fc-map fc-map-value;  
    }  
    (ip-source-guard | no-ip-source-guard);  
    (ipv6-source-guard | no-ipv6-source-guard);  
    mac-move-limit limit action (drop | log | none | shutdown);  
    }  
    (neighbor-discovery-inspection | no-neighbor-discovery-inspection);  
    no-option37;  
    }  
}
```

**Hierarchy Level** [edit [ethernet-switching-options](#)]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches.  
Support for IPv6 introduced in Junos OS Release 14.1X53-D10 for EX Series switches.

**Description** Configure port security features, including MAC limiting, dynamic ARP inspection, whether interfaces can receive DHCP responses, DHCP snooping, IP source guard, DHCP option 82, MAC move limiting, and FIP snooping.

The remaining statements are explained separately.

**Required Privilege Level** system—To view this statement in the configuration.  
system-control—To add this statement to the configuration.

**Related Documentation**

- *Example: Configuring Basic Port Security Features*
- *Example: Configuring DHCP Snooping, DAI, and MAC Limiting on a Switch with Access to a DHCP Server Through a Second Switch*
- *Example: Configuring IP Source Guard on a Data VLAN That Shares an Interface with a Voice VLAN*
- *Example: Setting Up DHCP Option 82 with a Switch with No Relay Agent Between Clients and a DHCP Server*
- [Example: Configuring an FCoE Transit Switch on page 21](#)

## vlan (Access Port Security)

**Syntax** `vlan` (all | *vlan-name*) {  
     (arp-inspection | no-arp-inspection) {  
         forwarding-class *class-name*;  
     }  
     dhcp-option82 {  
         circuit-id {  
             prefix hostname;  
             use-interface-description;  
             use-vlan-id;  
         }  
         remote-id {  
             prefix hostname | mac | none;  
             use-interface-description;  
             use-string *string*;  
         }  
         vendor-id <*string*>;  
     }  
     (examine-dhcp | no-examine-dhcp) {  
         forwarding-class *class-name*;  
     }  
     (examine-dhcpv6 | no-examine-dhcpv6) {  
         forwarding-class *class-name*;  
     }  
     **examine-fip** {  
         **fc-map** *fc-map-value*;  
     }  
     (ip-source-guard | no-ip-source-guard);  
     (ipv6-source-guard | no-ipv6-source-guard);  
     mac-move-limit *limit* action (drop | log | none | shutdown);  
     }  
     (neighbor-discovery-inspection | no-neighbor-discovery-inspection);  
     no-option37;  
 }

**Hierarchy Level** [edit [ethernet-switching-options secure-access-port](#)]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches. Support for the **examine-dhcpv6**, **no-option37**, **neighbor-discovery-inspection**, and **ipv6-source-guard** statements introduced in Junos OS Release 14.1x53-D10 for EX Series switches.

**Description** Apply any of the following security options to a VLAN:

- DHCP snooping
- DHCPv6 snooping with DHCP option 37
- DHCP option 82
- Dynamic ARP inspection (DAI)
- IPv6 neighbor discovery inspection

- FIP snooping
- IP source guard
- IPv6 source guard
- MAC move limiting

The remaining statements are explained separately.



**TIP:** To display a list of all configured VLANs on the system, including VLANs that are configured but not committed, type ? after vlan or vlans in your configuration mode command line. Note that only one VLAN is displayed for a VLAN range.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <p><b>all</b>—Apply the feature to all VLANs.</p> <p><b><i>vlan-name</i></b>—Apply the feature to the specified VLAN.</p>                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Basic Port Security Features</i></li> <li>• <i>Example: Configuring IP Source Guard with Other EX Series Switch Features to Mitigate Address-Spoofing Attacks on Untrusted Access Interfaces</i></li> <li>• <i>Example: Setting Up DHCP Option 82 with a Switch with No Relay Agent Between Clients and a DHCP Server</i></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> </ul> |



## PART 3

# Administration

- [Operational Commands on page 93](#)



## CHAPTER 5

# Operational Commands

- clear fip snooping enode
- clear fip snooping statistics
- clear fip snooping vlan
- show dcbx neighbors
- show fip snooping
- show fip snooping enode
- show fip snooping fcf
- show fip snooping statistics
- show fip snooping vlan

## clear fip snooping enode

---

|                                 |                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear fip snooping enode <i>enode-mac</i></code><br><code>&lt;vlan <i>vlan-name</i>&gt;</code>                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                             |
| <b>Description</b>              | Clear FIP snooping information for the specified FCoE Node (ENode) or (optionally) only on a specified VLAN. This operation deletes the ENode state from the switch database and from the FIP snooping firewall filters, which causes the ENode to lose its connection to the FCoE forwarder (FCF) and to log in to the FCF again. |
| <b>Options</b>                  | <i>enode-mac</i> —MAC address of the ENode.<br><br><i>vlan vlan-name</i> —(Optional) Name of the VLAN.                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show fip snooping enode on page 124</a></li></ul>                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">clear fip snooping enode enode-mac on page 94</a>                                                                                                                                                                                                                                                                      |

### Sample Output

clear fip snooping enode enode-mac

```
user@switch> clear fip snooping enode 00:10:94:00:00:02
```

## clear fip snooping statistics

---

|                                 |                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear fip snooping statistics</code><br><code>&lt;vlan <i>vlan-name</i>&gt;</code>                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series. |
| <b>Description</b>              | Clear FIP snooping statistics globally or on a specified VLAN.                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show fip snooping statistics on page 131</a></li></ul>                             |
| <b>List of Sample Output</b>    | <a href="#">clear fip snooping statistics on page 95</a>                                                                               |

### Sample Output

#### clear fip snooping statistics

```
user@switch> clear fip snooping statistics
```

## clear fip snooping vlan

---

|                                 |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear fip snooping vlan <i>vlan-name</i></code>                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                         |
| <b>Description</b>              | Clear FIP snooping information for the specified VLAN. This operation deletes all ENode and FCF information for the VLAN from the switch database and causes the ENodes to lose their connections to the FCFs. After clearing a VLAN, the switch relearns all of the FCFs and ENodes on the VLAN, and the ENodes must log in to the FCF again. |
| <b>Options</b>                  | <i>vlan-name</i> —Name of the VLAN.                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show fip snooping vlan on page 134</a></li></ul>                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <a href="#">clear fip snooping vlan vlan-name on page 96</a>                                                                                                                                                                                                                                                                                   |

### Sample Output

#### clear fip snooping vlan vlan-name

```
user@switch> clear fip snooping vlan fcoevlan1
```

## show dcbx neighbors

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show dcbx neighbors</b><br><b>&lt;interface interface-name&gt;</b><br><b>&lt;terse&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.1 for the QFX Series.<br>Command introduced in Junos OS Release 11.3 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Display information about Data Center Bridging Capability Exchange protocol (DCBX) neighbor interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <b>none</b> —Display information about all DCBX neighbor interfaces.<br><br><b>interface-name</b> —(Optional) Display information for the specified interface.<br><br><b>terse</b> —Display the specified level of output.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring DCBX Autonegotiation</a></li> <li>• <a href="#">Example: Configuring DCBX Application Protocol TLV Exchange</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Example: Configuring DCBX to Support an iSCSI Application on page 33</a></li> <li>• <a href="#">Understanding DCB Features and Requirements</a></li> <li>• <a href="#">Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches on page 10</a></li> <li>• <a href="#">dcbx on page 67</a></li> </ul>                     |
| <b>List of Sample Output</b>    | <a href="#">show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode) on page 110</a><br><a href="#">show dcbx neighbors interface (QFX Series, IEEE DCBX Mode) on page 112</a><br><a href="#">show dcbx neighbors terse (QFX Series) on page 114</a><br><a href="#">show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly) on page 114</a><br><a href="#">show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application) on page 115</a><br><a href="#">show dcbx neighbors (EX4500 Switch: Includes ETS) on page 116</a> |
| <b>Output Fields</b>            | <a href="#">Table 7 on page 97</a> lists the output fields for the <b>show dcbx neighbors</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 7: show dcbx neighbors Output Fields

| Field Name | Field Description      |
|------------|------------------------|
| Interface  | Name of the interface. |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parent Interface       | Name of the link aggregation group (LAG) interface to which the DCBX interface belongs.                                                                                                                                                                                                                                                                                                                                                                                                                |
| Active-application-map | Name of the application map applied to the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Protocol-Mode          | <p>(QFX Series) DCBX protocol mode the interface uses:</p> <ul style="list-style-type: none"> <li>IEEE DCBX Version—The interface uses IEEE DCBX mode.</li> <li>DCBX Version 1.01—The interface uses DCBX version 1.01.</li> </ul> <p><b>NOTE:</b> On interfaces that use the IEEE DCBX mode, the <b>show dcbx neighbors interface <i>interface-name</i></b> operational command does not include application, PFC, or ETS operational state in the output.</p>                                        |
| Protocol-State         | <p>(DCBX Version 1.01 only) DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"> <li><b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li> <li><b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li> </ul> |
| Local-Advertisement    | <p>(DCBX Version 1.01 only)</p> <p>Status of advertisements that the local interface sends to the peer.</p>                                                                                                                                                                                                                                                                                                                                                                                            |
| Operational version    | Version of the DCBX standard used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| sequence-number        | <p>Number of state change messages sent to the peer.</p> <p>If the interface <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p> <p>If the interface <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p>                                                                                   |
| acknowledge-id         | <p>Number of acknowledge messages received from the peer.</p> <p>If the <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p> <p>If the <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p>                                                                                                  |



Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Peer-Advertisement</b>  | (DCBX Version 1.01 only)<br><br>Status of advertisements that the peer sends to the local interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Operational version</b> | Version of the DCBX standard used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>sequence-number</b>     | <p>Number of state change messages the peer sent to the local interface.</p> <p>If this number matches the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the local interface has acknowledged all of the peer's state change messages and is synchronized.</p> <p>If this number does not match the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet received an acknowledgment for a state change message from the local interface.</p>            |
| <b>acknowledge-id</b>      | <p>Number of acknowledge messages the peer has received from the local interface.</p> <p>If this number matches the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has acknowledged all of the local interface's state change messages and is in synchronization.</p> <p>If this number does not match the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet sent an acknowledgment for a state change message from the local interface.</p> |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: PFC</b>               | Priority-based flow control (PFC) feature DCBX state information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Protocol-State</b>             | (DCBX Version 1.01 only)<br><br>DCBX protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—PFC autonegotiation is disabled.</li> </ul> |
| <b>Operational State</b>          | (DCBX Version 1.01 only)<br><br>Operational state of the feature: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Local-Advertisement</b>        | Status of advertisements that the local interface sends to the peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Enable</b>                     | (DCBX Version 1.01 only)<br><br>State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                          |
| <b>Willing</b>                    | Willingness of the local interface to learn the PFC configuration from the peer using DCBX: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the PFC configuration from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the PFC configuration from the peer.</li> </ul>                                                                                                                                                                                                                                        |
| <b>Mac auth Bypass Capability</b> | (IEEE DCBX only)<br><br>(QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. This is not supported, so the only value seen in the local advertisement field is <b>no</b> .                                                                                                                                                                                                                                                                                                                               |
| <b>Error</b>                      | (DCBX Version 1.01 only)<br><br>Configuration compatibility error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                                                                                                                                                                                                                                                       |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operational State</b>                              | <p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>                                                                                                                                        |
| <b>Maximum Traffic Classes capable to support PFC</b> | <p>Largest number of traffic classes the local interface supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>6</b> (QFX Series)</li> </ul>                                                                                                                                                    |
| <b>Code Point</b>                                     | <p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>                                                                                                                                                                                                                                                    |
| <b>Admin Mode</b>                                     | <p>PFC administrative state for each code point on the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>                                                                                                     |
| <b>Operational Mode</b>                               | <p>(QFX Series) PFC operational mode for each code point:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b>—PFC is enabled on the code point.</li> <li>• <b>Disable</b>—PFC is disabled on the code point.</li> </ul>                                                                                                                       |
| <b>Peer-Advertisement</b>                             | <p>Status of advertisements that the peer sends to the local interface.</p>                                                                                                                                                                                                                                                                          |
| <b>Enable</b>                                         | <p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                   |
| <b>Willing</b>                                        | <p>Willingness of the peer to learn the PFC configuration from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the PFC configuration from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the PFC configuration from the local interface.</li> </ul> |
| <b>Error</b>                                          | <p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operational State</b>                              | <p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>                                                                                                                                                                                                                                                                                            |
| <b>Mac auth Bypass Capability</b>                     | <p>(IEEE DCBX only)</p> <p>(QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. Although the QFX Series does not support this feature, the connected peer might support it. This field reports the peer state:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The connected peer supports MAC authentication bypass.</li> <li>• <b>No</b>—The connected peer does not support MAC authentication bypass.</li> </ul> |
| <b>Maximum Traffic Classes capable to support PFC</b> | <p>Largest number of traffic classes the peer supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>8</b> (QFX Series)</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| <b>Code Point</b>                                     | <p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Admin Mode</b>                                     | <p>PFC administrative state for each code point on the peer:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>                                                                                                                                                                                                                                                                    |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: Application</b> | State information for the DCBX application.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Protocol-State</b>       | <p>(DCBX Version 1.01 only)</p> <p>DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—The local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled). If the interface is associated with an FCoE forwarding class, the interface advertises FCoE capability even if the connected peer does not advertise FCoE capability.</li> </ul> |
| <b>Local-Advertisement</b>  | <p>Status of advertisements that the local interface sends to the peer.</p> <p>If the local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled), the local advertisement portion of the output is not shown.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Enable</b>               | <p>(DCBX Version 1.01 only)</p> <p>State that the local interface advertises to the peer:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Willing</b>              | <p>(DCBX Version 1.01 only)</p> <p>Willingness of the local interface to learn the FCoE interface state from the peer using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the FCoE interface state from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the FCoE interface state from the peer.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Error</b>                | <p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. The local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. The local and peer configuration are not compatible.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Appl-Name</b>            | Name of the application:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Ethernet-Type</b>                  | <p>(DCBX Version 1.01 only)</p> <p>Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>                                                                                                                                                                                                                                                            |
| <b>Socket-Number</b>                  | <p>Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>                                                                                                                                                                                                                                                                                                                                                     |
| <b>Priority-Field or Priority-Map</b> | <p>Priority assigned to the application.</p> <p>For EX Series switches, the priority of the FCoE application is determined by the PFC congestion notification profile that has been configured and associated with the FCoE interface. For other applications, the priority is based on the application map.</p>                                                                                                                                                                                                                                                            |
| <b>Status</b>                         | <p>(DCBX Version 1.01 only)</p> <p>Local status when autonegotiation is enabled:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul> <p><b>NOTE:</b> If there is a configuration mismatch in one application between the switch and the peer, all the other applications including FCoE are disabled.</p> |
| <b>Peer-Advertisement</b>             | <p>Status of advertisements that the peer sends to the local interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Enable</b>                         | <p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                          |
| <b>Willing</b>                        | <p>(DCBX Version 1.01 only)</p> <p>Willingness of the peer to learn the FCoE interface state from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the FCoE interface state from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the FCoE interface state from the local interface.</li> </ul>                                                                                                                                                                               |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Error</b>                          | (DCBX Version 1.01 only)<br><br>Configuration compatibility error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>                                                                           |
| <b>Appl-Name</b>                      | Name of the application: <ul style="list-style-type: none"> <li>• <b>FCoE</b>—Fibre Channel over Ethernet</li> </ul>                                                                                                                                                                                                                                                     |
| <b>Ethernet-Type</b>                  | Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket-Number (for Layer 4 applications) of the application is displayed in the output.                                                                                                |
| <b>Socket-Number</b>                  | Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.                                                                                                                                                         |
| <b>Priority-Field or Priority-Map</b> | Priority assigned to the application.                                                                                                                                                                                                                                                                                                                                    |
| <b>Status</b>                         | (DCBX Version 1.01 only)<br><br>Peer interface status: <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul> |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                                                                                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Feature: ETS</b><br><br><b>NOTE:</b> The Juniper Networks QFX10000 Series does not support ETS in this release. | Enhanced Transmission Selection (ETS) DCBX state information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Protocol-State</b>                                                                                              | (DCBX Version 1.01 only)<br><br>ETS protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> </ul>                                                          |
| <b>Operational State</b>                                                                                           | (DCBX Version 1.01 only)<br><br>Operational state of the feature, <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Local-Advertisement</b>                                                                                         | Status of advertisements that the local interface sends to the peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Enable</b>                                                                                                      | (DCBX Version 1.01 only)<br><br>State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                  |
| <b>TLV Type</b>                                                                                                    | (IEEE DCBX only)<br><br>Type of ETS TLV: <ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is “willing,” configures the peer interface to match the local ETS configuration.</li> <li>• <b>Recommendation-or-Configuration</b>—Advertises both TLVs.</li> </ul> |
| <b>Willing</b>                                                                                                     | Willingness of the local interface to learn the ETS state from the peer using DCBX (EX Series switches always advertise <b>No</b> for this field): <ul style="list-style-type: none"> <li>• <b>Yes</b>—Local interface is willing to learn the ETS state from the peer.</li> <li>• <b>No</b>—Local interface is not willing to learn the ETS state from the peer.</li> </ul>                                                                                                                                                                                                 |
| <b>Credit Based Shaper</b>                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | (IEEE DCBX only)<br><br>Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .                                                                                                                  |
| <b>Error</b>                                          | (DCBX Version 1.01 only)<br><br>Configuration error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error. This should always be the switch ETS error state.</li> <li>• <b>Yes</b>—Error detected.</li> </ul>                                                                                     |
| <b>Maximum Traffic Classes capable to support PFC</b> | (DCBX Version 1.01 only)<br><br>Largest number of traffic classes the local interface supports for PFC.                                                                                                                                                                                                         |
| <b>Maximum Traffic Classes supported</b>              | (IEEE DCBX only)<br><br>Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)                                                                                          |
| <b>Code Point</b>                                     | PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.                                                                                                                                                                                                                      |
| <b>Priority-Group</b>                                 | Class-of-service (CoS) priority group (forwarding class set) identification number.                                                                                                                                                                                                                             |
| <b>Percentage B/W</b>                                 | Configured minimum percentage of link bandwidth allocated to the priority group. Only explicitly configured values appear in this output column. If the link bandwidth is the default percentage, it is not shown. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.) |
| <b>Transmission Selection Algorithm</b>               | (IEEE DCBX only)<br><br>The transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .                                                                             |
| <b>Peer-Advertisement</b>                             | Status of advertisements that the peer sends to the local interface.                                                                                                                                                                                                                                            |
| <b>Enable</b>                                         |                                                                                                                                                                                                                                                                                                                 |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | (DCBX Version 1.01 only)<br><br>State that the peer advertises to the local interface:<br><br><ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                               |
| <b>TLV Type</b>                                       | (IEEE DCBX only)<br><br>Type of ETS TLV:<br><br><ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is “willing,” configures the peer interface to match the local ETS configuration.</li> <li>• <b>Configuration/Recommendation</b>—Advertises both TLVs.</li> </ul> |
| <b>Willing</b>                                        | Willingness of the peer to learn the ETS state from the local interface using DCBX:<br><br><ul style="list-style-type: none"> <li>• <b>Yes</b>—Peer is willing to learn the ETS state from the local interface.</li> <li>• <b>No</b>—Peer is not willing to learn the ETS state from the local interface.</li> </ul>                                                                                                                                                                                                                                                             |
| <b>Credit Based Shaper</b>                            | (IEEE DCBX only)<br><br>Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Error</b>                                          | (DCBX Version 1.01 only)<br><br>Configuration error status of the peer:<br><br><ul style="list-style-type: none"> <li>• <b>No</b>—No error in peer ETS TLV.</li> <li>• <b>Yes</b>—Error in peer ETS TLV.</li> </ul>                                                                                                                                                                                                                                                                                                                                                              |
| <b>Maximum Traffic Classes capable to support PFC</b> | (DCBX Version 1.01 only)<br><br>Largest number of traffic classes the local interface supports for PFC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Maximum Traffic Classes supported</b>              | (IEEE DCBX only)<br><br>Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)                                                                                                                                                                                                                                                                                                                                                           |
| <b>Code Point</b>                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name                                                                                                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                               | PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.                                                                                                                                                                                                                                                                                                                         |
| <b>Priority-Group</b>                                                                                         | CoS priority group (forwarding class set) identification number.                                                                                                                                                                                                                                                                                                                                                   |
| <b>Percentage B/W</b>                                                                                         | Configured minimum percentage of link bandwidth allocated to the priority group. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.)                                                                                                                                                                                                                                      |
| <b>Transmission Selection Algorithm</b>                                                                       | (IEEE DCBX only)<br><br>Transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .                                                                                                                                                                                    |
| <b>PFC</b>                                                                                                    | (QFX Series, <b>terse</b> option only) DCBX TLV advertisement state for PFC: <ul style="list-style-type: none"> <li>• Disabled—PFC configuration matches the configuration on the connected peer and PFC is disabled</li> <li>• Enabled—PFC configuration matches the configuration on the connected peer and PFC is enabled</li> <li>• Not Advt—Interface does not advertise PFC to the connected peer</li> </ul> |
| <b>ETS</b><br><br><b>NOTE:</b> The Juniper Networks QFX10000 Series does not support ETS in this release.     | ( <b>terse</b> option only) Local DCBX TLV advertisement state for ETS: <ul style="list-style-type: none"> <li>• Advt—Interface advertises ETS TLVs</li> <li>• Disabled—ETS is disabled on the interface (interface does not advertise ETS)</li> </ul>                                                                                                                                                             |
| <b>ETS Rec</b><br><br><b>NOTE:</b> The Juniper Networks QFX10000 Series does not support ETS in this release. | ( <b>terse</b> option only) DCBX TLV peer advertisement state for ETS (state received from the connected DCBX peer): <ul style="list-style-type: none"> <li>• Advt—Peer interface advertises ETS TLVs</li> <li>• Not Advt—Peer interface does not advertise ETS</li> </ul> <p><b>NOTE:</b> When the DCBX mode is DCBX version 1.01, no peer information is displayed.</p>                                          |

Table 7: show dcbx neighbors Output Fields (*continued*)

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Version    | <p>(<b>terse</b> option only) The DCBX version used on the interface and whether the DCBX version was autonegotiated or explicitly configured:</p> <ul style="list-style-type: none"> <li>• <b>IEEE</b>—The interface uses IEEE DCBX.</li> <li>• <b>1.01</b>—The interface uses DCBX version 1.01.</li> </ul> <p>When the DCBX version used is the result of autonegotiation, the term (<b>Auto</b>) appears next to the version. For example, <b>IEEE (Auto)</b> indicates that the interface autonegotiated with the connected peer to use IEEE DCBX. Autonegotiation is enabled by default.</p> |

## Sample Output

### show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode)

```

user@switch> show dcbx neighbors interface xe-0/0/0
Interface : xe-0/0/0.0 - Parent Interface: ae0.0
Active-application-map: app-map-1
Protocol-State: in-sync
Protocol-Mode: DCBX Version 1.01

Local-Advertisement:
  Operational version: 1
  sequence-number: 130, acknowledge-id: 102

Peer-Advertisement:
  Operational version: 1
  sequence-number: 102, acknowledge-id: 130

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

Code Point      Admin Mode      Operational Mode
000             Disabled       Disable
001             Disabled       Disable
010             Disabled       Disable
011             Enabled        Enable
100             Enabled        Enable
101             Disabled       Disable
110             Disabled       Disable
111             Disabled       Disable

Peer-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

Code Point      Admin Mode
000             Disabled

```

|     |          |
|-----|----------|
| 001 | Disabled |
| 010 | Disabled |
| 011 | Enabled  |
| 100 | Enabled  |
| 101 | Disabled |
| 110 | Disabled |
| 111 | Disabled |

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001110     | Enabled |
| iSCSI     |               | 3260          | 10000000     | Enabled |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        | N/A           | 00001110     | Enabled |

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |

|                |                |
|----------------|----------------|
| 111            | 7              |
| Priority-Group | Percentage B/W |
| 0              | 40%            |
| 1              | 5%             |

### show dcbx neighbors interface (QFX Series, IEEE DCBX Mode)

```
user@switch> show dcbx neighbors interface xe-0/0/0
```

```
Interface : xe-0/0/0.0 - Parent Interface: ae0.0
```

```
Active-application-map: app-map-1
```

```
Protocol-Mode: IEEE-DCBX Version
```

Feature: PFC

Local-Advertisement:

Willing: No

Mac auth Bypass Capability: No

Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Peer-Advertisement:

Willing: No

Mac auth Bypass Capability: No

Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application

Local-Advertisement:

| Appl-Name | Ethernet-Type | Socket-Number | Priority-field |
|-----------|---------------|---------------|----------------|
| FCoE      | 0x8906        |               | 00001110       |
| iSCSI     |               | 3260          | 10000000       |

Peer-Advertisement:

| Appl-Name | Ethernet-Type | Socket-Number | Priority-field |
|-----------|---------------|---------------|----------------|
|-----------|---------------|---------------|----------------|

|      |        |     |          |
|------|--------|-----|----------|
| FCoE | 0x8906 | N/A | 00001110 |
|------|--------|-----|----------|

Feature: ETS

Local-Advertisement:

TLV Type: Configuration/Recommendation

Willing: No

Credit Based Shaper: No

Maximum Traffic Classes supported: 3

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

| Priority-Group | Transmission Selection Algorithm |
|----------------|----------------------------------|
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

Peer-Advertisement:

TLV Type: Configuration

Willing: No

Credit Based Shaper: No

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |
| 101        | 1              |
| 110        | 1              |
| 111        | 7              |

| Priority-Group | Percentage B/W |
|----------------|----------------|
| 0              | 40%            |
| 1              | 5%             |

| Priority-Group | Transmission Selection Algorithm |
|----------------|----------------------------------|
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

Peer-Advertisement:

TLV Type: Recommendation

| Code Point | Priority-Group |
|------------|----------------|
| 000        | 0              |
| 001        | 7              |
| 010        | 7              |
| 011        | 7              |
| 100        | 0              |

|                |                                  |
|----------------|----------------------------------|
| 101            | 1                                |
| 110            | 1                                |
| 111            | 7                                |
| Priority-Group | Percentage B/W                   |
| 0              | 40%                              |
| 1              | 5%                               |
| Priority-Group | Transmission Selection Algorithm |
| 0              | Enhanced Transmission Selection  |
| 1              | Enhanced Transmission Selection  |

**show dcbx neighbors terse (QFX Series)**

```

user@switch> show dcbx neighbors terse
Interface Parent PFC ETS ETS Version
Interface Rec
xe-0/0/8.0 - Enabled Advt Advt IEEE (Auto)
xe-0/0/9.0 - Disabled Disabled 1.01
xe-0/0/11.0 ae0.0 Enabled Advt Advt IEEE (Auto)
xe-0/0/12.0 ae0.0 Enabled Advt Advt IEEE (Auto)
xe-0/0/32.0 - Enabled Advt Not Advt IEEE
xe-0/0/36.0 - Not Advt Advt Advt IEEE

```

**show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly)**

```

user@switch> show dcbx neighbors interface xe-0/0/14

Interface : xe-0/0/14.0 - Parent Interface: ae0.0
Protocol-State: in-sync

Local-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Peer-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 6

Code Point      Admin Mode
000             Disabled
001             Disabled
010             Disabled
011             Enabled
100             Disabled
101             Disabled
110             Disabled
111             Disabled

```



## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No <<< Error bit will not be set as there is no miss configuration between local and peer.

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

| Status  | Appl-Name | Ethernet-Type | Socket-Number | Priority-Map |
|---------|-----------|---------------|---------------|--------------|
| Enabled | FCoE      | 0x8906        |               | 00001000     |

### show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application)

user@switch&gt; show dcbx neighbors interface xe-0/0/14

Interface : xe-0/0/14.0 - Parent Interface: ae0.0

Protocol-State: in-sync

Active-application-map: iscsi-map

## Local-Advertisement:

Operational version: 0

sequence-number: 9, acknowledge-id: 12

## Peer-Advertisement:

Operational version: 0

sequence-number: 12, acknowledge-id: 9

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Disabled   |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Enabled    |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |
| iscsi     |               | 3260          | 00100000     | Enabled |

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

| Appl-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00001000     | Enabled |
| iscsi     |               | 3260          | 00100000     | Enabled |

**show dcbx neighbors (EX4500 Switch: Includes ETS)**

user@switch&gt; show dcbx neighbors interface xe-0/0/3

Interface : xe-0/0/3.0  
 Protocol-State: in-sync  
 Active-application-map: map\_iscsi

## Local-Advertisement:

Operational version: 0

sequence-number: 1, acknowledge-id: 5

Peer-Advertisement:

Operational version: 0

sequence-number: 5, acknowledge-id: 1

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

| Code Point | Admin Mode |
|------------|------------|
| 000        | Enabled    |
| 001        | Enabled    |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Disabled   |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

Maximum Traffic Classes capable to support PFC: 8

| Code Point | Admin Mode |
|------------|------------|
| 000        | Enabled    |
| 001        | Disabled   |
| 010        | Disabled   |
| 011        | Disabled   |
| 100        | Enabled    |
| 101        | Disabled   |
| 110        | Disabled   |
| 111        | Disabled   |

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 00000001     | Enabled |
| iscsi     |               | 3260          | 00000010     | Enabled |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

| App1-Name | Ethernet-Type | Socket-Number | Priority-Map | Status  |
|-----------|---------------|---------------|--------------|---------|
| FCoE      | 0x8906        |               | 0001000      | Enabled |
| iscsi     |               | 3260          | 00010000     | Enabled |

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No  
Maximum Traffic Classes supported : 3

| Code Point     | Priority-Group |
|----------------|----------------|
| 000            | 7              |
| 001            | 7              |
| 010            | 7              |
| 011            | 7              |
| 100            | 7              |
| 101            | 7              |
| 110            | 7              |
| 111            | 7              |
| Priority-Group | Percentage B/W |
| 7              | 100%           |

Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No  
Maximum Traffic Classes supported : 8

| Code Point     | Priority-Group |
|----------------|----------------|
| 000            | 0              |
| 001            | 1              |
| 010            | 0              |
| 011            | 0              |
| 100            | 2              |
| 101            | 0              |
| 110            | 0              |
| 111            | 0              |
| Priority-Group | Percentage B/W |
| 0              | 30%            |
| 1              | 40%            |
| 2              | 30%            |

## show fip snooping

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show fip snooping</b><br><b>&lt;brief   detail&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | Display FIP snooping information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <b>none</b> —Display FIP snooping information.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">Configuring an FCoE LAG</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Example: Configuring an FCoE LAG on a Redundant Server Node Group</a></li> <li>• <a href="#">show fip snooping enode on page 124</a></li> <li>• <a href="#">show fip snooping fcf on page 128</a></li> <li>• <a href="#">show fip snooping interface</a></li> <li>• <a href="#">show fip snooping statistics on page 131</a></li> <li>• <a href="#">show fip snooping vlan on page 134</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show fip snooping on page 121</a><br><a href="#">show fip snooping brief (QFX Series) on page 121</a><br><a href="#">show fip snooping detail (QFX Series Switches) on page 122</a><br><a href="#">show fip snooping detail (QFabric System FCoE with LAG Configured) on page 122</a><br><a href="#">show fip snooping detail (EX Series Switches) on page 123</a>                                                                                                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 8 on page 119</a> lists the output fields for the <b>show fip snooping</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

**Table 8: show fip snooping Output Fields**

| Field Name | Field Description | Level of Output |
|------------|-------------------|-----------------|
| VLAN       | Name of the VLAN. | All             |

Table 8: show fip snooping Output Fields (*continued*)

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Level of Output |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Mode</b>                             | (QFX Series only)<br>Snooping mode enabled on the FCoE VLAN: <ul style="list-style-type: none"> <li>VN2VF Snooping—The FCoE VLAN is configured for FIP snooping between an ENode VN_Port and a switch VF_Port.</li> <li>VN2VN Snooping—The FCoE VLAN is configured for VN_Port to VN_Port FIP snooping between ENode VN_Ports.</li> </ul>                                                                                                                                                                                                                             | All             |
| <b>FC-MAP</b>                           | FCoE mapped address prefix of the FCoE forwarder for the VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | All             |
| <b>FCF or FCF-MAC</b>                   | MAC address of the FCF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All             |
| <b>Session Count or Active Sessions</b> | Current number of virtual link sessions with VN_Ports.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | All             |
| <b>VN_Port Count</b>                    | (QFX Series only)<br>Number of VN_Ports active on an ENode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>brief</b>    |
| <b>Configured FKA-ADV</b>               | FIP keepalive interval in seconds configured on the FCF multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258.<br><br>For the QFX Series only, the output of this field is always 0 (zero) if the VLAN is an FCoE-FC gateway VLAN. If the VLAN is a FIP snooping VLAN (a transit switch VLAN), then the output is accurate. This is because for an FCoE-FC gateway VLAN, FIP snooping is performed internally and the keepalive advertisements are not tracked by the switch's Ethernet module. | <b>detail</b>   |
| <b>Running FKA-ADV</b>                  | Runtime interval in seconds of the last FIP keepalive advertisement the FCF received. This value changes every time the FCF receives an FKA_ADV.<br><br>For the QFX Series only, the output of this field is always 0 (zero) if the VLAN is an FCoE-FC gateway VLAN. If the VLAN is a FIP snooping VLAN (a transit switch VLAN), then the output is accurate. This is because for an FCoE-FC gateway VLAN, FIP snooping is performed internally and the keepalive advertisements are not tracked by the switch's Ethernet module.                                     | <b>detail</b>   |
| <b>Beacon Period</b>                    | (QFX Series only)<br>Beacon period interval in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b>   |

Table 8: show fip snooping Output Fields (*continued*)

| Field Name                       | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>VN2VN Mode</b>                | (QFX Series only)<br>Mode of VN2VN_Port snooping: <ul style="list-style-type: none"> <li>Multi-Point—Multiple ENodes are connected to the network and form multiple virtual links. Each virtual link is created between one pair of VN_Ports. This is analogous to the loop mode in traditional FC networks.</li> <li>Point-to-Point—Two ENodes are connected to the network and form a single VN_Port to VN_Port virtual link. This is analogous to the point-to-point FC link between an FC initiator and an FC target.</li> </ul> | <b>detail</b>   |
| <b>ENode-MAC</b>                 | MAC address of the connected FCoE node (ENode).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | All             |
| <b>Interface</b>                 | Interface connected to the ENode.<br><br>(QFabric System only)<br>When an FCoE LAG has been configured, LAG interface connected to the ENode and LAG member interface connected to ENode.                                                                                                                                                                                                                                                                                                                                            | <b>detail</b>   |
| <b>VN-Port MAC</b>               | MAC address of a VN_Port on the ENode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All             |
| <b>FKA-ADV</b>                   | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF on behalf of the VN_Port (VN_Port FKA_ADV). This value changes every time the ENode sends a VN_Port FKA_ADV to the FCF.                                                                                                                                                                                                                                                                                                                | <b>detail</b>   |
| <b>Active VN_Ports</b>           | (QFX Series only)<br>Number of VN_Ports active on an ENode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b>   |
| <b>Vlink far-end VN-Port-MAC</b> | (QFX Series only)<br>Media access control (MAC) address of the VN_Port at the other end of the virtual link.                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>   |

## Sample Output

### show fip snooping

```

user@switch> show fip snooping
VLAN : fcoevlan1      FC-MAP : 0e:fc:00
FCF : 00:10:94:00:00:01  Session Count : 2
ENode-MAC : 00:10:94:00:00:02
VN-Port-MAC : 0E:FC:00:01:00:05
VN-Port-MAC : 0E:FC:00:01:00:01

```

### show fip snooping brief (QFX Series)

```

user@switch> show fip snooping brief
VLAN: vlan100,      Mode: VN2VF Snooping
FC-MAP: 0e:fc:00
FCF: 30:10:94:01:00:00  Session Count: 2
ENode-MAC: 10:10:94:01:00:01

```

```

VN-Port-MAC: 0e:fc:00:01:0d:01
VN-Port-MAC: 0e:fc:00:01:0e:01
VLAN: vlan101, Mode: VN2VN Snooping
FC-MAP: 0e:fc:00
Enode-MAC: 10:10:94:01:00:02 VN_Port count: 1
VN-Port-MAC: 0e:fc:00:01:0a:01 Session Count: 2
Enode-MAC: 10:10:94:01:00:03 VN_Port count: 0

```

#### show fip snooping detail (QFX Series Switches)

```

user@switch> show fip snooping detail
root@sw-pa02v> show fip snooping detail
VLAN: vlan100, Mode: VN2VF Snooping
FC-MAP: 0e:fc:00
FCF Information
FCF-MAC : 30:10:94:01:00:00
Active Sessions : 2
Configured FKA-ADV : 258
Running FKA-ADV : 188
Enode Information
Enode-MAC: 10:10:94:01:00:01, Interface: xe-0/0/10
Configured FKA-ADV : 258
Running FKA-ADV : 230
Session Information
VN-Port MAC: 0e:fc:00:01:0d:01, FKA-ADV : 230
VN-Port MAC: 0e:fc:00:01:0e:01, FKA-ADV : 245

VLAN: vlan101, Mode: VN2VN Snooping
FC-MAP: 0e:fd:00
Beacon_Period: 90000
VN2VN Mode: Multi-Point
Enode Information
Enode-MAC: 10:10:94:01:00:02, Interface: xe-0/0/10
Active VN_Ports : 1
VN_Port Information
VN-Port MAC: 0e:fd:00:01:0a:01
Active Sessions : 2
Session Information
Vlink far-end VN-Port-MAC: 0e:fd:00:01:0b:01
Vlink far-end VN-Port-MAC: 0e:fd:00:01:0c:01
Enode-MAC: 10:10:94:01:00:02, Interface: xe-0/0/11
Active VN_Ports : 0

```

#### show fip snooping detail (QFabric System FCoE with LAG Configured)

```

admin@qfabric> show fip snooping detail
VLAN: vlan_100, Mode: VN2VF Snooping
FC-MAP: 0e:fc:00
FCF Information
FCF-MAC : 84:18:88:d1:f5:cc
Active Sessions : 2
Configured FKA-ADV : 8000
Running FKA-ADV : 23962
Enode Information
Enode-MAC: 00:c0:dd:14:ae:6d, Interface: P4546-C:ae0 P4546-C:xe-0/0/39

Configured FKA-ADV : 8000
Running FKA-ADV : 16622
Session Information
VN-Port MAC: 0e:fc:00:6c:06:a5, FKA-ADV : 246303
Enode Information

```



```

Enode-MAC: 00:c0:dd:14:ae:6f,      Interface: P4546-C:ae0 P4546-C:xe-0/0/38

Configured FKA-ADV : 8000
Running FKA-ADV    : 16512
Session Information
VN-Port MAC: 0e:fc:00:6c:06:a4,    FKA-ADV : 238150

```

### show fip snooping detail (EX Series Switches)

```

user@switch> show fip snooping detail
VLAN : fcoevlan1    FC-MAP : 0e:fc:00
FCF Information
FCF-MAC           : 00:10:94:00:00:01
Active Sessions   : 2
Configured FKA-ADV : 258
Running FKA-ADV    : 244
Enode Information
Enode-MAC : 00:10:94:00:00:02      Interface : xe-0/0/1
Configured FKA-ADV : 258
Running FKA-ADV    : 248
Session Information
VN-Port MAC : 0E:FC:00:01:00:05    FKA-ADV : 264
VN-Port MAC : 0E:FC:00:01:00:01    FKA-ADV : 260

```

## show fip snooping enode

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show fip snooping enode <i>enode-mac</i></b><br><b>&lt;brief   detail&gt;</b><br><b>&lt;vlan <i>vlan-name</i>&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Display FIP snooping FCoE node (ENode) information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b><i>enode-mac</i></b> —Display information for the ENode specified by the MAC address.<br><br><b>vlan <i>vlan-name</i></b> —(Optional) Display FIP snooping information for the ENode on only the specified VLAN.                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">show fip snooping on page 119</a></li> <li>• <a href="#">show fip snooping fcf on page 128</a></li> <li>• <a href="#">show fip snooping interface</a></li> <li>• <a href="#">show fip snooping statistics on page 131</a></li> <li>• <a href="#">show fip snooping vlan on page 134</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show fip snooping enode on page 126</a><br><a href="#">show fip snooping enode brief (QFX Series) on page 126</a><br><a href="#">show fip snooping enode detail (QFX Series) on page 126</a><br><a href="#">show fip snooping enode detail on page 126</a>                                                                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>            | <a href="#">Table 9 on page 124</a> lists the output fields for the <b>show fip snooping enode</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                       |

**Table 9: show fip snooping enode Output Fields**

| Field Name          | Field Description                 | Level of Output |
|---------------------|-----------------------------------|-----------------|
| ENode and ENode MAC | MAC address of the ENode.         | All             |
| VLAN                | Name of the VLAN.                 | All             |
| Interface           | Interface connected to the ENode. | All             |

Table 9: show fip snooping enode Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Level of Output |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Mode</b>                   | (QFX Series only)<br>Snooping mode enabled on the FCoE VLAN: <ul style="list-style-type: none"> <li>• VN2VF Snooping—The FCoE VLAN is configured for FIP snooping between an ENode VN_Port and a switch VF_Port.</li> <li>• VN2VN Snooping—The FCoE VLAN is configured for VN_Port to VN_Port FIP snooping between ENode VN_Ports.</li> </ul>                                                                                                                                                                                                                                                                       | All             |
| <b>VN_Port Count</b>          | (QFX Series only)<br>Number of VN_Ports active on an ENode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>brief</b>    |
| <b>Session Count</b>          | Current number of virtual link sessions with VN_Ports.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | All             |
| <b>Configured FKA-ADV</b>     | FIP keepalive interval in seconds configured on the FCoE forwarder (FCF) multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258. This value remains constant.<br><br>For the QFX Series only, the output of this field is always 0 (zero) if the VLAN is an FCoE-FC gateway VLAN. If the VLAN is a FIP snooping VLAN (a transit switch VLAN), then the output is accurate. This is because for an FCoE-FC gateway VLAN, FIP snooping is performed internally and the keepalive advertisements are not tracked by the switch's Ethernet module. | <b>detail</b>   |
| <b>Running FKA-ADV</b>        | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF. This value changes every time the ENode sends an FKA_ADV to the FCF.<br><br>For the QFX Series only, the output of this field is always 0 (zero) if the VLAN is an FCoE-FC gateway VLAN. If the VLAN is a FIP snooping VLAN (a transit switch VLAN), then the output is accurate. This is because for an FCoE-FC gateway VLAN, FIP snooping is performed internally and the keepalive advertisements are not tracked by the switch's Ethernet module.                                                                | <b>detail</b>   |
| <b>VN-Port or VN-Port-MAC</b> | MAC address of a VN_Port on the ENode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | All             |
| <b>FKA-ADV</b>                | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF on behalf of the VN_Port (VN_Port FKA_ADV). This value changes every time the ENode sends a VN_Port FKA_ADV to the FCF.                                                                                                                                                                                                                                                                                                                                                                                               | <b>detail</b>   |
| <b>FCF or FCF-MAC</b>         | MAC address of the FCF to which the VN_Port is connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All             |
| <b>Beacon Period</b>          | (QFX Series only)<br>Beacon period interval in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>   |

Table 9: show fip snooping enode Output Fields (*continued*)

| Field Name                       | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>VN2VN Mode</b>                | (QFX Series only)<br>Mode of VN2VN_Port snooping: <ul style="list-style-type: none"> <li>Multi-Point—Multiple ENodes are connected to the network and form multiple virtual links. Each virtual link is created between one pair of VN_Ports. This is analogous to the loop mode in traditional FC networks.</li> <li>Point-to-Point—Two ENodes are connected to the network and form a single VN_Port to VN_Port virtual link. This is analogous to the point-to-point FC link between an FC initiator and an FC target.</li> </ul> | <b>detail</b>   |
| <b>Vlink far-end VN-Port-MAC</b> | (QFX Series only)<br>Media access control (MAC) address of the VN_Port at the other end of the virtual link.                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>   |

## Sample Output

### show fip snooping enode

```

user@switch> show fip snooping enode 00:10:94:00:00:02
Enode : 00:10:94:00:00:02   VLAN : vlan1   Interface : xe-0/0/1
      VN-Port-MAC           FCF-MAC
      0E:FC:00:00:00:05     00:10:94:00:00:01
      0E:FC:00:00:00:01     00:10:94:00:00:01

```

### show fip snooping enode brief (QFX Series)

```

user@switch> show fip snooping enode 10:10:94:01:00:02 brief
Enode: 10:10:94:01:00:02 ,   VLAN: vlan101,   Interface: xe-0/0/10
Mode: VN2VF Snooping       VN_Port Count: 1
      VN_Port Information
      VN_Port Mac: 0e:fc:00:01:0a:01   Session Count: 2

```

### show fip snooping enode detail (QFX Series)

```

user@switch> show fip snooping enode 10:10:94:01:00:02 detail
Enode MAC: 10:10:94:01:00:02,   VLAN: vlan101,   Interface: xe-0/0/10
Mode: VN2VF Snooping       VN_Port Count: 1
Beacon_Period: 90000       VN2VN Mode: Multi-Point
      VN_Port Information
      VN_Port Mac: 0e:fc:00:01:0a:01   Session Count: 2
      Vlink far-end VN-Port-MAC: 0e:fc:00:01:0b:01
      Vlink far-end VN-Port-MAC: 0e:fc:00:01:0c:01

```

### show fip snooping enode detail

```

user@switch> show fip snooping enode 00:10:94:00:00:02 detail
Enode MAC : 00:10:94:00:00:02   VLAN : vlan1   Interface : xe-0/0/1
Configured FKA-ADV : 258       Running FKA-ADV : 213
      Session Information
      VN-Port : 0E:FC:00:00:00:05   FKA-ADV : 229   FCF : 00:10:94:00:00:01
      VN-Port : 0E:FC:00:00:00:01   FKA-ADV : 225   FCF : 00:10:94:00:00:01

```



## show fip snooping fcf

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show fip snooping fcf <i>fcf-mac</i></b><br><b>&lt;brief   detail&gt;</b><br><b>&lt;vlan <i>vlan-name</i>&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Display FIP snooping FCoE forwarder (FCF) information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b><i>fcf-mac</i></b> —Display information for the FCF specified by the MAC address.<br><br><b><i>vlan-name</i></b> —(Optional) Display FIP snooping information for the FCF on only the specified VLAN.                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">show fip snooping on page 119</a></li> <li>• <a href="#">show fip snooping enode on page 124</a></li> <li>• <a href="#">show fip snooping interface</a></li> <li>• <a href="#">show fip snooping statistics on page 131</a></li> <li>• <a href="#">show fip snooping vlan on page 134</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show fip snooping fcf on page 129</a><br><a href="#">show fip snooping fcf detail on page 129</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>            | <a href="#">Table 10 on page 128</a> lists the output fields for the <b>show fip snooping fcf</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                          |

**Table 10: show fip snooping fcf Output Fields**

| Field Name     | Field Description                                      | Level of Output |
|----------------|--------------------------------------------------------|-----------------|
| FCF or FCF-MAC | MAC address of the FCoE forwarder.                     | All             |
| VLAN           | Name of the VLAN.                                      | All             |
| Session Count  | Current number of virtual link sessions with VN_Ports. | None            |

Table 10: show fip snooping fcf Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                     | Level of Output |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Configured FKA-ADV   | FIP keepalive interval in seconds configured on the FCF multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258.                                  | detail          |
| Running FKA-ADV      | Runtime interval in seconds of the last FIP keepalive advertisement the FCF received. This value changes every time the FCF receives an FKA_ADV.                                                                      | detail          |
| ENode-MAC            | MAC address of the connected ENode.                                                                                                                                                                                   | All             |
| • Interface          | Interface connected to the ENode.                                                                                                                                                                                     | detail          |
| • Configured FKA-ADV | FIP keepalive interval in seconds configured on the FCF multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258. This value remains constant.     | detail          |
| • Running FKA-ADV    | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF. This value changes every time the ENode sends an FKA_ADV to the FCF.                                                   | detail          |
| • VN-Port MAC        | MAC address of a VN_Port on the ENode.                                                                                                                                                                                | All             |
| • FKA-ADV            | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF on behalf of the VN_Port (VN_Port FKA_ADV). This value changes every time the ENode sends a VN_Port FKA_ADV to the FCF. | detail          |

## Sample Output

### show fip snooping fcf

```
user@switch> show fip snooping fcf 00:10:94:00:00:01
FCF : 00:10:94:00:00:01  VLAN : v1an1  Session Count : 2
  ENode-MAC : 00:10:94:00:00:02
    VN-Port-MAC : 0E:FC:00:00:00:05
    VN-Port-MAC : 0E:FC:00:00:00:01
```

### show fip snooping fcf detail

```
user@switch> show fip snooping fcf 00:10:94:00:00:01 detail
FCF-MAC : 00:10:94:00:00:01  VLAN : v1an1
Configured FKA-ADV : 258      Running FKA-ADV : 222
  ENode Information
    ENode-MAC : 00:10:94:00:00:02 Interface: xe-0/0/1
    Configured FKA-ADV : 258
    Running FKA-ADV : 226
    Session Information
      VN-Port MAC : 0E:FC:00:00:00:05  FKA-ADV : 242
      VN-Port MAC : 0E:FC:00:00:00:01  FKA-ADV : 238
```





## show fip snooping statistics

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show fip snooping statistics</b><br><b>&lt;vlan <i>vlan-name</i>&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Display FIP snooping statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>vlan <i>vlan-name</i></b> —(Optional) Display FIP snooping statistics for the specified VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">show fip snooping on page 119</a></li> <li>• <a href="#">show fip snooping enode on page 124</a></li> <li>• <a href="#">show fip snooping fcf on page 128</a></li> <li>• <a href="#">show fip snooping interface</a></li> <li>• <a href="#">show fip snooping vlan on page 134</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show fip snooping statistics (FIP Snooping) on page 133</a><br><a href="#">show fip snooping statistics (VN2VN_Port Snooping) on page 133</a>                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>            | Table 11 on page 131 lists the output fields for the <b>show fip snooping statistics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                            |

**Table 11: show fip snooping statistics Output Fields**

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>VLAN</b>          | Name of the VLAN for which a set of statistics is displayed.                                                                                                                                                                                                                                                                                  |
| <b>Mode</b>          | (QFX Series only)<br>Snooping mode enabled on the FCoE VLAN: <ul style="list-style-type: none"> <li>• VN2VF Snooping—The FCoE VLAN is configured for FIP snooping between an ENode VN_Port and a switch VF_Port.</li> <li>• VN2VN Snooping—The FCoE VLAN is configured for VN_Port to VN_Port FIP snooping between ENode VN_Ports.</li> </ul> |
| <b>Number of MDS</b> | Number of multicast discovery solicitation messages sent on the VLAN.                                                                                                                                                                                                                                                                         |

Table 11: show fip snooping statistics Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                 |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Number of UDS                  | Number of unicast discovery solicitation messages sent on the VLAN.                                                                               |
| Number of FLOGI                | Number of fabric logins on the VLAN.                                                                                                              |
| Number of FDISC                | Number of fabric discovery logins on the VLAN.                                                                                                    |
| Number of LOGO                 | Number of fabric logouts on the VLAN.                                                                                                             |
| Number of ENode-keep-alive     | Number of ENode keepalive messages sent on the VLAN.                                                                                              |
| Number of VN_Port-keep-alive   | Number of VN_Port keepalive messages sent on the VLAN.                                                                                            |
| Number of MDA                  | Number of multicast discovery advertisement messages sent on the VLAN.                                                                            |
| Number of UDA                  | Number of unicast discovery advertisement messages sent on the VLAN.                                                                              |
| Number of FLOGI_ACC            | Number of fabric logins accepted on the VLAN.                                                                                                     |
| Number of FLOGI_RJT            | Number of fabric logins rejected on the VLAN.                                                                                                     |
| Number of FDISC_ACC            | Number of fabric discoveries accepted on the VLAN.                                                                                                |
| Number of FDISC_RJT            | Number of fabric discoveries rejected on the VLAN.                                                                                                |
| Number of LOGO_ACC             | Number of fabric logouts accepted on the VLAN.                                                                                                    |
| Number of LOGO_RJT             | Number of fabric logouts rejected on the VLAN.                                                                                                    |
| Number of CVL                  | Number of clear virtual links (CVL) actions on the VLAN.                                                                                          |
| Number of VN_Port Probes Req   | (QFX Series only)<br>Number of multicast N_Port_ID probes sent to the ALL-VN2VN-ENode-MACs multicast address on the VLAN.                         |
| Number of VN_Port Claim Notif  | (QFX Series only)<br>Number of multicast N_Port_ID claim notifications sent on the VLAN.                                                          |
| Number of VN_Port Beacons      | (QFX Series only)<br>Number of multicast beacons sent on the VLAN.                                                                                |
| Number of VN_Port Probes Reply | (QFX Series only)<br>Number of replies to N_Port_ID probes sent on the VLAN. Replies are unicast to the ENode MAC address of the probe requester. |

Table 11: show fip snooping statistics Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                             |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number of VN_Port Claim Reply | (QFX Series only)<br>Number of replies to N_Port_ID claim notifications sent on the VLAN. Replies are unicast to the ENode MAC address of the claim notifier. |

## Sample Output

### show fip snooping statistics (FIP Snooping)

```

user@switch> show fip snooping statistics
VLAN: fcoevlan1      Mode: VN2VF Snooping

Number of MDS:                2
Number of UDS:                2
Number of FLOGI:              2
Number of FDISC:              2
Number of LOGO:               0
Number of Enode-keep-alive: 200
Number of VNPort-keep-alive: 200

Number of MDA:                25
Number of UDA:                2
Number of FLOGI_ACC:          2
Number of FLOGI_RJT:          0
Number of FDISC_ACC:          2
Number of FDISC_RJT:          0
Number of LOGO_ACC:           0
Number of LOGO_RJT:           0
Number of CVL:                0

```

### show fip snooping statistics (VN2VN\_Port Snooping)

```

user@switch> show fip snooping statistics
VLAN: vlan101      Mode: VN2VN Snooping

Number of VN_Port Probes Req:    3
Number of VN_Port Claim Notif:   3
Number of VN_Port Beacons:       0

Number of VN_Port Probes Reply:  3
Number of VN_Port Claim Reply:   3
Number of FLOGI:                 0
Number of FLOGI_ACC:             0
Number of FLOGI_RJT:             0
Number of FDISC:                 0
Number of FDISC_ACC:             0
Number of FDISC_RJT:             0
Number of LOGO:                 0
Number of LOGO_ACC:             0
Number of LOGO_RJT:             0

```

## show fip snooping vlan

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show fip snooping vlan <i>vlan-name</i></b><br><b>&lt;brief   detail&gt;</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced in Junos OS Release 10.4 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Display FIP snooping VLAN information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b><i>vlan-name</i></b> —Display information for the specified VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring VN2VF_Port FIP Snooping and FCoE Trusted Interfaces on an FCoE Transit Switch on page 39</a></li> <li>• <a href="#">Example: Configuring an FCoE Transit Switch on page 21</a></li> <li>• <a href="#">show fip snooping on page 119</a></li> <li>• <a href="#">show fip snooping enode on page 124</a></li> <li>• <a href="#">show fip snooping fcf on page 128</a></li> <li>• <a href="#">show fip snooping interface</a></li> <li>• <a href="#">show fip snooping statistics on page 131</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show fip snooping vlan on page 136</a><br><a href="#">show fip snooping vlan (QFX Series, VN2VF_Port FIP Snooping) on page 136</a><br><a href="#">show fip snooping vlan (QFX Series, VN2VN_Port FIP Snooping) on page 136</a><br><a href="#">show fip snooping vlan detail (QFX Series, VN2VN_Port FIP Snooping) on page 137</a><br><a href="#">show fip snooping vlan detail on page 137</a>                                                                                                                                                                 |
| <b>Output Fields</b>            | <a href="#">Table 12 on page 134</a> lists the output fields for the <b>show fip snooping vlan</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                        |

**Table 12: show fip snooping vlan Output Fields**

| Field Name | Field Description | Level of Output |
|------------|-------------------|-----------------|
| VLAN       | Name of the VLAN. | All             |

Table 12: show fip snooping vlan Output Fields (*continued*)

| Field Name                              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Mode</b>                             | (QFX Series only)<br>Snooping mode enabled on the FCoE VLAN: <ul style="list-style-type: none"> <li>VN2VF Snooping—The FCoE VLAN is configured for FIP snooping between an ENode VN_Port and a switch VF_Port.</li> <li>VN2VN Snooping—The FCoE VLAN is configured for VN_Port to VN_Port FIP snooping between ENode VN_Ports.</li> </ul>                                                                                                                                                                                            | All             |
| <b>VN_Port count</b>                    | (QFX Series only)<br>Number of VN_Ports active on an ENode when the mode is VN2VN_Port FIP snooping.                                                                                                                                                                                                                                                                                                                                                                                                                                 |                 |
| <b>FC-MAP</b>                           | FCoE mapped address prefix of the FCoE forwarder for the VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | All             |
| <b>Beacon_Period</b>                    | (QFX Series only)<br>Beacon period interval in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>   |
| <b>VN2VN Mode</b>                       | (QFX Series only)<br>Mode of VN2VN_Port snooping: <ul style="list-style-type: none"> <li>Multi-Point—Multiple ENodes are connected to the network and form multiple virtual links. Each virtual link is created between one pair of VN_Ports. This is analogous to the loop mode in traditional FC networks.</li> <li>Point-to-Point—Two ENodes are connected to the network and form a single VN_Port to VN_Port virtual link. This is analogous to the point-to-point FC link between an FC initiator and an FC target.</li> </ul> | <b>detail</b>   |
| <b>FCF or FCF-MAC</b>                   | MAC address of the FCF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | All             |
| <b>Session Count or Active Sessions</b> | Current number of virtual link sessions with VN_Ports.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All             |
| <b>Configured FKA-ADV</b>               | FIP keepalive interval in seconds configured on the FCF multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258.                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b>   |
| <b>Running FKA-ADV</b>                  | Runtime interval in seconds of the last FIP keepalive advertisement the FCF received. This value changes every time the FCF receives an FKA_ADV.                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail</b>   |

Table 12: show fip snooping vlan Output Fields (*continued*)

| Field Name                         | Field Description                                                                                                                                                                                                     | Level of Output |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>ENode-MAC</b>                   | MAC address of the connected ENode.                                                                                                                                                                                   | All             |
| • <b>Interface</b>                 | Interface connected to the ENode.                                                                                                                                                                                     | <b>detail</b>   |
| • <b>Configured FKA-ADV</b>        | FIP keepalive interval in seconds configured on the FCF multiplied by three. For example, if the FKA_ADV period configured on the FCF is 86 seconds, the value of this field is 258. This value remains constant.     | <b>detail</b>   |
| • <b>Running FKA-ADV</b>           | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF. This value changes every time the ENode sends an FKA_ADV to the FCF.                                                   | <b>detail</b>   |
| • <b>VN-Port MAC</b>               | MAC address of a VN_Port on the ENode.                                                                                                                                                                                | All             |
| • <b>FKA-ADV</b>                   | Runtime interval in seconds of the last FIP keepalive advertisement the ENode sent to the FCF on behalf of the VN_Port (VN_Port FKA_ADV). This value changes every time the ENode sends a VN_Port FKA_ADV to the FCF. | <b>detail</b>   |
| • <b>Active VN_Ports</b>           | (QFX Series only)<br>Number of VN_Ports active on an ENode.                                                                                                                                                           | <b>detail</b>   |
| • <b>Vlink far-end VN-Port-MAC</b> | (QFX Series only)<br>Media access control (MAC) address of the VN_Port at the other end of the virtual link.                                                                                                          | <b>detail</b>   |

## Sample Output

### show fip snooping vlan

```

user@switch> show fip snooping vlan fcoevlan1
VLAN : fcoevlan1    FC-MAP : 0e:fc:00
FCF : 00:10:94:00:00:01  Session Count : 2
ENode-MAC : 00:10:94:00:00:02
VN-Port-MAC : 0E:FC:00:00:00:05
VN-Port-MAC : 0E:FC:00:00:00:01

```

### show fip snooping vlan (QFX Series, VN2VF\_Port FIP Snooping)

```

user@switch> show fip snooping vlan fcoevlan1
VLAN : fcoevlan1    Mode: VN2VF Snooping
FC-MAP : 0e:fc:00
FCF : 00:10:94:00:00:01  Session Count : 2
ENode-MAC : 00:10:94:00:00:02
VN-Port-MAC : 0E:FC:00:00:00:05
VN-Port-MAC : 0E:FC:00:00:00:01

```

### show fip snooping vlan (QFX Series, VN2VN\_Port FIP Snooping)

```

user@switch> show fip snooping vlan vlan101

```

```
VLAN: vlan101, Mode: VN2VN Snooping
FC-MAP: 0e:fd:00
  Enode-MAC: 10:10:94:01:00:02 VN_Port count: 1
    VN-Port-MAC: 0e:fd:00:00:0a:01 Session Count: 2
  Enode-MAC: 10:10:94:01:00:03 VN_Port count: 0
```

#### show fip snooping vlan detail (QFX Series, VN2VN\_Port FIP Snooping)

```
user@switch> show fip snooping vlan vlan101 detail
VLAN: vlan101, Mode: VN2VN Snooping
FC-MAP: 0e:fd:00
Beacon_Period: 90000
VN2VN Mode: Multi-Point
  Enode Information
    Enode-MAC: 10:10:94:01:00:02, Interface: xe-0/0/10
      Active VN_Ports : 1
    VN_Port Information
      VN-Port MAC: 0e:fd:00:00:0a:01
        Active Sessions : 2
      Session Information
        Vlink far-end VN-Port-MAC: 0e:fd:00:00:0b:01
        Vlink far-end VN-Port-MAC: 0e:fd:00:00:0c:01
      Enode-MAC: 10:10:94:01:00:02, Interface: xe-0/0/11
        Active VN_Ports : 0
```

#### show fip snooping vlan detail

```
user@switch> show fip snooping vlan fcoevlan1 detail
VLAN : fcoevlan1 FC-MAP : 0e:fc:00
FCF Information
FCF-MAC : 00:10:94:00:00:01
Active Sessions : 2
Configured FKA-ADV : 258
Running FKA-ADV : 235
  Enode Information
    Enode-MAC : 00:10:94:00:00:02 Interface : xe-0/0/1
    Configured FKA-ADV : 258
    Running FKA-ADV : 239
    Session Information
      VN-Port MAC : 0E:FC:00:00:00:05 FKA-ADV : 255
      VN-Port MAC : 0E:FC:00:00:00:01 FKA-ADV : 251
```

