



Junos[®] OS

Spanning-Tree Protocols Feature Guide for Routing Devices

Release
15.1



Modified: 2015-05-27

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS Spanning-Tree Protocols Feature Guide for Routing Devices

15.1

Copyright © 2015, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xi
	Documentation and Release Notes	xi
	Supported Platforms	xi
	Using the Examples in This Manual	xi
	Merging a Full Example	xii
	Merging a Snippet	xii
	Documentation Conventions	xiii
	Documentation Feedback	xv
	Requesting Technical Support	xv
	Self-Help Online Tools and Resources	xv
	Opening a Case with JTAC	xvi
Part 1	Overview	
Chapter 1	Spanning-Tree Protocols	3
	Spanning Tree Protocol Overview	3
	Understanding Bridge Loops	3
	How STP Helps Eliminate Loops	5
	Spanning-Tree Protocols Supported	7
	BPDUs Overview	9
Part 2	Configuration	
Chapter 2	Configuration Guidelines for Spanning-Tree Protocols	13
	Spanning-Tree Protocols in Logical Systems	13
	RSTP or VSTP Forced to Run as IEEE 802.1D STP	14
	Reverting to RSTP or VSTP from Forced IEEE 802.1D STP	14
	Provider Bridge Participation in RSTP or MSTP Instances	15
	System Identifier for Bridges in STP or RSTP Instances	16
	Bridge Priority for Election of Root Bridge and Designated Bridge	16
	Maximum Age for Awaiting Arrival of Hello BPDUs	17
	Hello Time for Root Bridge to Transmit Hello BPDUs	17
	Forward Delay Before Ports Transition to Forwarding State	17
	Spanning-Tree Instance Interface	17
	Spanning-Tree Instance Interface Priority	18
	Spanning-Tree Instance Interface Cost	19
	Spanning-Tree Instance Interface Point-to-Point Link Mode	19
	Spanning-Tree Instance Interface Configured as an Edge Port	20
	Spanning-Tree Protocol Trace Options	20

Chapter 3	Configuration Tasks for Spanning-Tree Protocols	23
	Configuring Rapid Spanning-Tree Protocol	23
	Configuring Multiple Spanning-Tree Protocol	26
	Configuring MST Instances on a Physical Interface	29
	Disabling MSTP	30
	Configuring VLAN Spanning-Tree Protocol	31
	Tracing Spanning-Tree Operations	35
Chapter 4	Spanning-Tree Protocol Examples	39
	Example: Blocking BPDUs on Aggregated Ethernet for 600 Seconds	39
	Example: Tracing Spanning-Tree Protocol Operations	39
	Example: Configuring VSTP on a Trunk Port with Tagged Traffic	40
	VSTP on a Trunk Port with Tagged Traffic Overview	40
	Example: Configuring VSTP on a Trunk Port with Tagged Traffic	40
	Example: Configuring BPDU Protection on Edge Interfaces to Prevent STP Miscalculations	51
Chapter 5	Configuration Statements for Spanning-Tree Protocols	57
	[edit protocols mstp] Hierarchy Level	58
	[edit protocols rstp] Hierarchy Level	59
	[edit protocols vstp] Hierarchy Level	60
	protocols (STP Type)	61
	access-trunk	62
	bpdu-destination-mac-address (Spanning Tree)	62
	bridge-priority	63
	configuration-name	64
	cost	65
	disable	66
	edge	67
	extended-system-id	68
	force-version (IEEE 802.1D STP)	69
	forward-delay	70
	hello-time	71
	interface (Spanning Tree)	72
	max-age	73
	max-hops	74
	mode (Protocols STP)	75
	msti	76
	mstp	77
	priority (Protocols STP)	79
	revision-level	80
	rstp	81
	traceoptions (Spanning Tree)	82
	vlan (MSTP)	85
	vlan (VSTP)	86
	vstp	87
	[edit protocols layer2-control] Hierarchy Level	88
	interface (Layer 2 Protocol Tunneling)	89
	layer2-control	90

	mac-rewrite	91
	protocol	92
Part 3	Administration	
Chapter 6	Managing Spanning-Tree Protocol Mode	95
	Reverting to RSTP or VSTP from Forced IEEE 802.1D STP	95
Chapter 7	Managing Spanning-Tree Instance Interface Status	97
	Checking the Status of Spanning-Tree Instance Interfaces	97
	Clearing the Blocked Status of a Spanning-Tree Instance Interface	98
	Checking for a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface	98
	Clearing a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface	99
Chapter 8	Operational Mode Commands for Basic Spanning-Tree Configuration . .	101
	clear spanning-tree protocol-migration	102
	clear spanning-tree stp-buffer	103
	show spanning-tree bridge	104
	show spanning-tree interface	109
	show spanning-tree mstp configuration	115
	show spanning-tree stp-buffer see-all	117
Chapter 9	Operational Mode Commands for Spanning-Tree Statistics	121
	clear spanning-tree statistics	122
	clear spanning-tree statistics bridge	123
	show spanning-tree statistics	124
	show spanning-tree statistics bridge	126
	show spanning-tree statistics interface	127
	show spanning-tree statistics message-queues	128
Part 4	Index	
	Index	131

List of Figures

Part 1	Overview	
Chapter 1	Spanning-Tree Protocols	3
	Figure 1: Formation of Bridge Loops	4
	Figure 2: Simple Network with Redundant Links	6
	Figure 3: Electing Root Ports	6
	Figure 4: Selecting Designated Ports and Blocking Redundant Paths	7
Part 2	Configuration	
Chapter 4	Spanning-Tree Protocol Examples	39
	Figure 5: Topology for VSTP Configured on a Trunk Port with Tagged Traffic	41
	Figure 6: BPDU Protection Topology	53

List of Tables

	About the Documentation	xi
	Table 1: Notice Icons	xiii
	Table 2: Text and Syntax Conventions	xiii
Part 2	Configuration	
Chapter 4	Spanning-Tree Protocol Examples	39
	Table 3: Components of the Topology for Configuring BPDU Protection on MX Series Routers	53
Part 3	Administration	
Chapter 8	Operational Mode Commands for Basic Spanning-Tree Configuration . .	101
	Table 4: show spanning-tree bridge Output Fields	104
	Table 5: show spanning-tree interface Output Fields	109
	Table 6: show spanning-tree mstp configuration Output Fields	115
	Table 7: show spanning-tree stp-buffer see-all Output Fields	117
Chapter 9	Operational Mode Commands for Spanning-Tree Statistics	121
	Table 8: show spanning-tree statistics Output Fields	124
	Table 9: show spanning-tree statistics bridge Output Fields	126
	Table 10: show spanning-tree statistics interface Output Fields	127
	Table 11: show spanning-tree statistics message-queues Output Fields	128

About the Documentation

- Documentation and Release Notes on page xi
- Supported Platforms on page xi
- Using the Examples in This Manual on page xi
- Documentation Conventions on page xiii
- Documentation Feedback on page xv
- Requesting Technical Support on page xv

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xiii defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xiii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<pre>user@host> show chassis alarms</pre> <p>No alarms currently active</p>
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	<p>Configure the machine's domain name:</p> <pre>[edit] root@# set system domain-name domain-name</pre>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the <code>[edit protocols ospf area area-id]</code> hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast <i>(string1 string2 string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	<pre>[edit] routing-options { static { route default { nexthop <i>address</i>; retain; } } }</pre>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Spanning-Tree Protocols on page 3](#)

CHAPTER 1

Spanning-Tree Protocols

- [Spanning Tree Protocol Overview on page 3](#)
- [Spanning-Tree Protocols Supported on page 7](#)
- [BPDU Overview on page 9](#)

Spanning Tree Protocol Overview

The Spanning Tree Protocol (STP) is a network protocol that is used to eliminate bridge loops in Ethernet LANs. STP prevents network loops and associated network outage by blocking redundant links or paths. The redundant paths can be used to keep the network operational if the primary link fails.


The sections describe bridge loops and how STP helps eliminate them.

- [Understanding Bridge Loops on page 3](#)
- [How STP Helps Eliminate Loops on page 5](#)

Understanding Bridge Loops

To understand bridge loops, consider a scenario in which four switches (or bridges) are connected to four different subsections (Subsection i, ii, iii, and iv) where each subsection is a collection of network nodes (see [Figure 1 on page 4](#)). For simplicity, Subsection i and Subsection ii are combined to form Section 1. Similarly, Subsection iii and Subsection iv are combined to form Section 2.

Figure 1: Formation of Bridge Loops

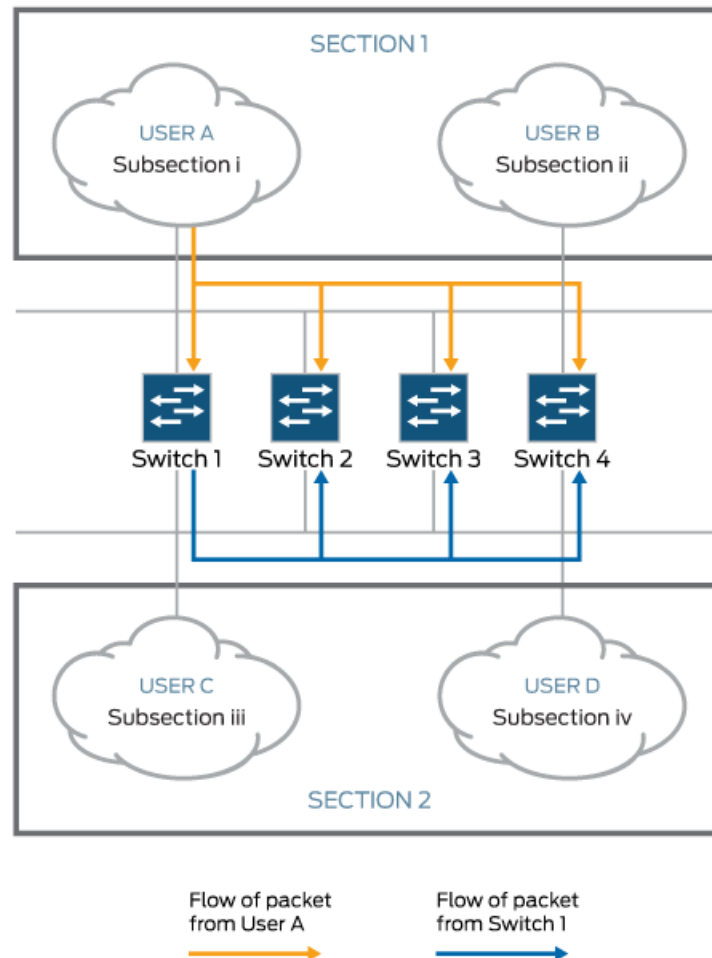

When the switches are powered on, the bridge tables are empty. If User A in Subsection i tries to send a single packet Packet 1 to User D in Subsection iv, all the switches, which are in listening mode, receive the packet. The switches make an entry in their respective bridging tables as shown in the following table:

Bridge 1	Bridge 2	Bridge 3	Bridge 4
ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction
Packet 1 Section 1	Packet 1 Section 1	Packet 1 Section 1	Packet 1 Section 1

At this point, the switches do not know where Subsection iv is and the packet is forwarded to all the ports except the source port (which results in flooding of the packet). In this example, after Subsection i sends the packet, the switches receive the packet on the ports facing Section 1. As a result, they start forwarding the packet through the ports facing Section 2. Which switch gets the first chance to send out the packet depends on

the network configuration. In this example, suppose Switch 1 transmits the packet first. Because it received the packet from Section 1, it floods the packet toward Section 2. Similarly, Switches 2, 3, and 4, which are also in listening mode, receive the same packet from Switch 1 (originally sent from Section 1) on the ports facing Section 2. They readily update their bridging tables with incorrect information as shown in the following table:

Bridge 1	Bridge 2	Bridge 3	Bridge 4
ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction
Packet 1 Section 1	Packet 1 Section 2	Packet 1 Section 2	Packet 1 Section 2

Thus, a loop is created as the same packet is received both from Section 1 and Section 2. As illustrated in [Figure 1 on page 4](#), Switch 1 has information that the packet came from Subsection i in Section 1, whereas all other switches have incorrect information that the same packet came from Section 2.

The entire process is repeated when Switch 2 gets the chance to transmit the original packet. Switch 2 receives the original packet from Section 1 and transmits the same packet to Section 2. Eventually, Switch 1, which still has no idea where Subsection iv is, updates its bridging table as shown in the following table:

Bridge 1	Bridge 2	Bridge 3	Bridge 4
ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction	ID Port Facing Direction
Packet 1 Section 2	Packet 1 Section 2	Packet 1 Section 2	Packet 1 Section 2

In complex networks, this process can quickly lead to huge packet transmission cycles as the same packet is sent repeatedly.

How STP Helps Eliminate Loops


Spanning Tree Protocol helps eliminate loops in a network by turning off additional routes that can create a loop. The blocked routes are enabled automatically if the primary path gets deactivated.

To understand the steps followed by STP in eliminating bridge loops, consider the following example where three switches are connected to form a simple network (see [Figure 2 on page 6](#)). To maintain redundancy, more than one path exists between each device. The switches communicate with each other by using Bridge Protocol Data Units (BPDUs) sent every 2 seconds.



NOTE: BPDUs are frames that consist of bridge ID, the bridge port where it originates, the priority of the bridge port, cost of the path and so on. BPDUs are sent as multicast MAC address 01:80:c2:00:00:00. BPDUs can be of three types—configuration BPDUs, topology change notification (TCN) BPDUs, and topology change acknowledgment (TCA) BPDUs.


Figure 2: Simple Network with Redundant Links

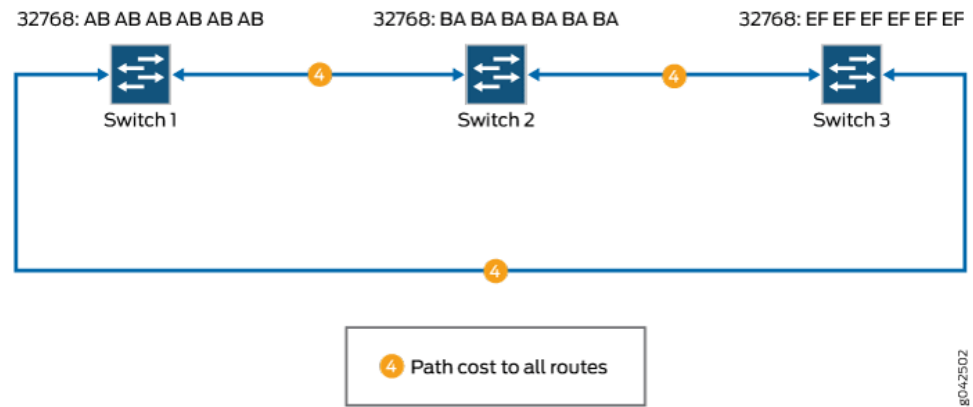

To eliminate network loops, STP performs the following steps in this sample network:


1. *Elects a root bridge (or switch).* To elect a root switch, STP uses the bridge ID. The bridge ID is 8 bytes in length and consists of two parts. The first part is 2 bytes of information known as bridge priority. The default bridge priority is 32,768. In this example, the default value is used for all the switches. The remaining 6 bytes consist of the MAC address of the switch. In this example, Switch 1 is elected as the root switch because it has the lowest MAC address.
2. *Elects the root ports.* Typically, root ports use the least-cost paths from one switch to the other. In this example, assume that all paths have similar costs. Therefore, the root port for Switch 2 is the port that receives packets through the direct path from Switch 1 (cost 4), because the other path is through Switch 3 (cost 4 + 4) as shown in [Figure 3 on page 6](#). Similarly, for Switch 3, the root port is the one that uses the direct path from Switch 1.

Figure 3: Electing Root Ports

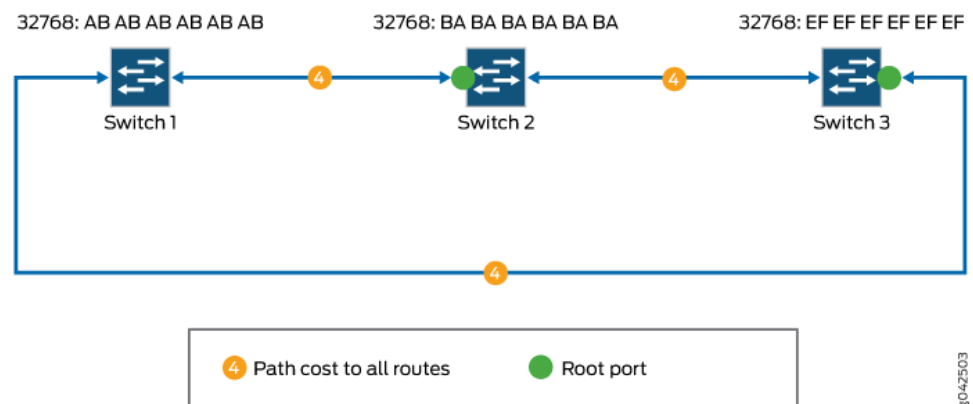

3. *Selects the designated ports.* Designated ports are the only ports that can receive and forward frames on switches other than the root switch. They are generally the ports that use the least-cost paths. In [Figure 4 on page 7](#), the designated ports are marked.

Figure 4: Selecting Designated Ports and Blocking Redundant Paths

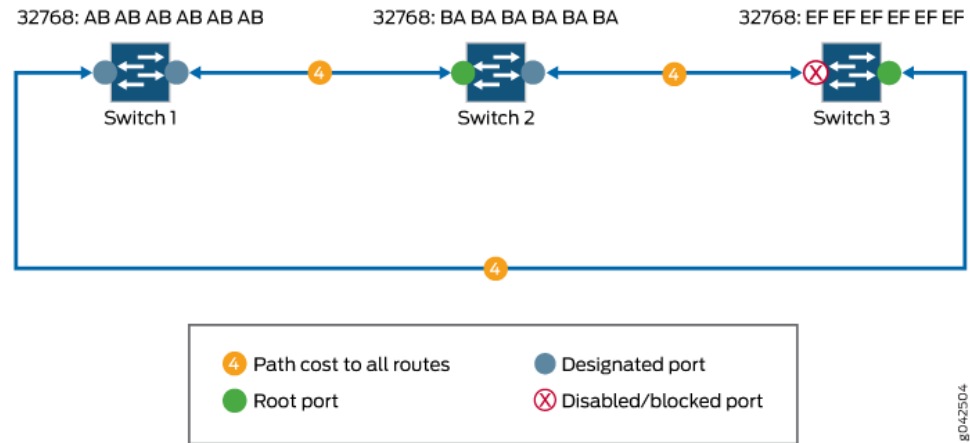

Because there are more than one path involved in the network and the root ports and designated ports are identified, STP can block the path between Switch 2 and Switch 3 temporarily, eliminating any Layer 2 loops.

Related Documentation

- [Spanning-Tree Protocols Supported on page 7](#)

Spanning-Tree Protocols Supported

In a Layer 2 environment, you can configure various spanning-tree protocol versions to create a loop-free topology in Layer 2 networks.

A spanning-tree protocol is a Layer 2 control protocol (L2CP) that calculates the best path through a switched network containing redundant paths. A spanning-tree protocol uses bridge protocol data unit (BPDU) data frames to exchange information with other switches. A spanning-tree protocol uses the information provided by the BPDUs to elect a root bridge, identify root ports for each switch, identify designated ports for each physical LAN segment, and prune specific redundant links to create a loop-free tree topology. The resulting tree topology provides a single active Layer 2 data path between any two end stations.



NOTE: In discussions of spanning-tree protocols, the terms *bridge* and *switch* are often used interchangeably.

The Juniper Networks MX Series 3D Universal Edge Routers and EX Series switches support STP, RSTP, MSTP, and VSTP.

- The original Spanning-Tree Protocol (STP) is defined in the IEEE 802.1D 1998 specification. A newer version called Rapid Spanning-Tree Protocol (RSTP) was originally defined in the IEEE 802.1w draft specification and later incorporated into the IEEE 802.1D-2004 specification. A recent version called Multiple Spanning-Tree Protocol (MSTP) was originally defined in the IEEE 802.1s draft specification and later incorporated into the IEEE 802.1Q-2003 specification. The VLAN Spanning-Tree Protocol (VSTP) is compatible with the Per-VLAN Spanning Tree Plus (PVST+) and Rapid-PVST+ protocols supported on Cisco Systems routers and switches.
- RSTP provides faster reconvergence time than the original STP by identifying certain links as point to point and by using protocol handshake messages rather than fixed timeouts. When a point-to-point link fails, the alternate link can transition to the forwarding state without waiting for any protocol timers to expire.
- MSTP provides the capability to logically divide a Layer 2 network into regions. Every region has a unique identifier and can contain multiple instances of spanning trees. All regions are bound together using a Common Instance Spanning Tree (CIST), which is responsible for creating a loop-free topology *across* regions, whereas the Multiple Spanning-Tree Instance (MSTI) controls topology *within* regions. MSTP uses RSTP as a converging algorithm and is fully interoperable with earlier versions of STP.
- VSTP maintains a separate spanning-tree instance for each VLAN. Different VLANs can use different spanning-tree paths. When different VLANs use different spanning-tree paths, the CPU processing resources being consumed increase as more VLANs are configured. VSTP BPDU packets are tagged with the corresponding VLAN identifier and are transmitted to the multicast destination media access control (MAC) address **01-00-0c-cc-cc-cd** with a protocol type of **0x010b**. VSTP BPDUs are tunneled by pure IEEE 802.1q bridges.



NOTE: All virtual switch routing instances configured on an MX Series router are supported using only one spanning-tree process. The Layer 2 control protocol process is named `l2cpd`.

For more information about the various versions of spanning-tree protocols, see the appropriate IEEE specification.

**Related
Documentation**

- *Loop Protection for Spanning-Tree Instance Interfaces Overview*
- *Root Protection for Spanning-Tree Instance Interfaces Overview*
- *BPDU Protection for Spanning-Tree Instance Interfaces Overview*
- *VPLS Multihomed Layer 2 Ring and MPLS Infrastructure Overview*

BPDU Overview

In a Layer 2 bridge environment, spanning-tree protocols use data frames called Bridge Protocol Data Units (BPDUs) to exchange information among bridges.

Spanning-tree protocols on peer systems exchange BPDUs, which contain information about port roles, bridge IDs, and root path costs. On each MX Series router or EX Series switch, the spanning-tree protocol uses this information to elect a root bridge, identify root ports for each switch, identify designated ports for each physical LAN segment, and prune specific redundant links to create a loop-free tree topology. The resulting tree topology provides a single active Layer 2 data path between any two end stations.



NOTE: In discussions of spanning-tree protocols, the terms *bridge* and *switch* are often used interchangeably.

The transmission of BPDUs is controlled by the Layer 2 Control Protocol process (l2cpd) on MX Series 3D Universal Edge Routers.

The transmission of periodic packets on behalf of the l2cpd process is carried out by periodic packet management (PPM), which, by default, is configured to run on the Packet Forwarding Engine. The pppmd process on the Packet Forwarding Engine ensures that the BPDUs are transmitted even when the l2cpd process control plane is unavailable, and keeps the remote adjacencies alive during a unified in-service software upgrade (unified ISSU). However, if you want the distributed PPM (ppmd) process to run on the Routing Engine instead of the Packet Forwarding Engine, you can disable the pppmd process on the Packet Forwarding Engine. For more information, see the *Junos OS High Availability Library for Routing Devices*.

On MX Series routers or EX Series switches with redundant Routing Engines (two Routing Engines that are installed in the same router), you can configure nonstop bridging. Nonstop bridging enables the router to switch from a primary Routing Engine to a backup Routing Engine without losing Layer 2 Control Protocol (L2CP) information. Nonstop bridging uses the same infrastructure as graceful Routing Engine switchover (GRES) to preserve interface and kernel information. However, nonstop bridging also saves L2CP information by running the l2cpd process on the backup Routing Engine.



NOTE: To use nonstop bridging, you must first enable GRES.

Nonstop bridging is supported for the following Layer 2 control protocols:

- Spanning-Tree Protocol (STP)
- Rapid Spanning-Tree Protocol (RSTP)
- Multiple Spanning-Tree Protocol (MSTP)

For more information about GRES and nonstop bridging, see the *Junos OS High Availability Library for Routing Devices*.

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
 - *Loop Protection for Spanning-Tree Instance Interfaces Overview*
 - *Root Protection for Spanning-Tree Instance Interfaces Overview*
 - *BPDU Protection for Spanning-Tree Instance Interfaces Overview*

PART 2

Configuration

- [Configuration Guidelines for Spanning-Tree Protocols on page 13](#)
- [Configuration Tasks for Spanning-Tree Protocols on page 23](#)
- [Spanning-Tree Protocol Examples on page 39](#)
- [Configuration Statements for Spanning-Tree Protocols on page 57](#)

CHAPTER 2

Configuration Guidelines for Spanning-Tree Protocols

- [Spanning-Tree Protocols in Logical Systems on page 13](#)
- [RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14](#)
- [Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 14](#)
- [Provider Bridge Participation in RSTP or MSTP Instances on page 15](#)
- [System Identifier for Bridges in STP or RSTP Instances on page 16](#)
- [Bridge Priority for Election of Root Bridge and Designated Bridge on page 16](#)
- [Maximum Age for Awaiting Arrival of Hello BPDUs on page 17](#)
- [Hello Time for Root Bridge to Transmit Hello BPDUs on page 17](#)
- [Forward Delay Before Ports Transition to Forwarding State on page 17](#)
- [Spanning-Tree Instance Interface on page 17](#)
- [Spanning-Tree Instance Interface Priority on page 18](#)
- [Spanning-Tree Instance Interface Cost on page 19](#)
- [Spanning-Tree Instance Interface Point-to-Point Link Mode on page 19](#)
- [Spanning-Tree Instance Interface Configured as an Edge Port on page 20](#)
- [Spanning-Tree Protocol Trace Options on page 20](#)

Spanning-Tree Protocols in Logical Systems

On MX Series routers and EX Series switches only, you can configure spanning-tree protocols in logical systems for bridge domains and other virtual-switch routing instances.

When configuring spanning-tree protocols in logical systems for bridge domains and other virtual-switch routing instances, the following guidelines apply:

- You can only configure 16 logical systems.
- Logging is performed for the entire device and not per logical system.
- You cannot restart Layer 2 learning for an individual logical system.

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)

RSTP or VSTP Forced to Run as IEEE 802.1D STP

On MX Series routers and EX Series and QFX Series switches in a Layer 2 environment, you can force the configured Rapid Spanning Tree Protocol (RSTP) or VLAN Spanning Tree Protocol (VSTP) to run as the original IEEE 802.1D Spanning Tree Protocol (STP) version. Configure original IEEE_802.1D STP for compatibility with older bridges that do not support RSTP or VSTP.

Keep the following limitations in mind when RSTP or VSTP are forced to run as the original STP version:

- If you configure an instance interface as an edge port, the configuration statement is ignored.
- If you configure point-to-point link mode for an instance interface, the configuration statement is ignored.

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
 - [Configuring RSTP \(CLI Procedure\)](#)
 - [Configuring VLAN Spanning-Tree Protocol](#)
 - [Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 14](#)
 - [force-version on page 69](#)

Reverting to RSTP or VSTP from Forced IEEE 802.1D STP

On MX Series routers and EX Series and QFX Series switches on which Rapid Spanning Tree Protocol (RSTP) or VLAN Spanning Tree Protocol (VSTP) has been forced to run as the original IEEE 802.1D Spanning Tree Protocol (STP) version, you can revert back to RSTP or VSTP.

To revert from the forced instance of the original IEEE 802.1D STP version to the originally configured RSTP or VSTP version:

1. Remove the **force-version** statement from the following RSTP or VSTP configuration:

```
user@host# delete protocols rstp force-version stp
user@host# delete protocols vstp force-version stp
```

Include this statement at the following hierarchy levels:

- [edit logical-systems *routing-instance-name* protocols *rstp*]
- [edit protocols *rstp*]
- [edit protocols *vstp*]

- [edit routing-instances *routing-instance-name* protocols **rstp**]
 - [edit routing-instances *routing-instance-name* protocols **vstp**]
2. Revert the forced IEEE 802.1D STP to run as the configured RSTP or VSTP:
- ```
user@host# clear spanning-tree protocol-migration <interface interface-name>
<routing-instance routing-instance-name>
```

To revert the STP protocol globally, issue the statement without options (**clear spanning-tree protocol-migration**).

To revert the STP protocol for the specified interface only, specify the **interface *interface-name*** option.

To revert the STP protocol for a particular routing instance only, specify the **routing-instance *routing-instance-name*** option.

#### Related Documentation

- [Spanning-Tree Protocols Supported on page 7](#)
- [RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14](#)
- [Configuring RSTP \(CLI Procedure\)](#)
- [Configuring VLAN Spanning-Tree Protocol](#)

## Provider Bridge Participation in RSTP or MSTP Instances

A provider network can bridge the customer STP BPDU packets between customer sites by default. At the same time, the provider network can prevent forwarding loops by running a spanning-tree protocol in the provider network. On an MX Series router running Rapid Spanning-Tree Protocol (RSTP) or Multiple Spanning-Tree Protocol (MSTP) in a provider network, you can enable provider bridge participation in the RSTP or MSTP instance.

The IEEE 802.1ad specification reserves the group MAC address value of **01:80:c2:00:00:08** to designate the *provider bridge group*. On an MX Series router for which you have enabled provider bridge participation in the RSTP or MSTP instance, the router exchanges BPDU packets with the provider bridge group as follows:

- Transmitted BPDU packets contain the destination MAC address **01:80:c2:00:00:08**.
- Received BPDU packets with the destination MAC address **01:80:c2:00:00:08** are accepted and passed to the Routing Engine.

#### Related Documentation

- [Spanning-Tree Protocols Supported on page 7](#)
- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [bpdu-destination-mac-address on page 62](#)

## System Identifier for Bridges in STP or RSTP Instances

---

The extended system identifier is used to specify different bridge identifiers for different STP or RSTP routing instances.

- Related Documentation**
- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
  - [extended-system-id on page 68](#)

## Bridge Priority for Election of Root Bridge and Designated Bridge

---

Use the bridge priority to control which bridge is elected as the root bridge and also to control which bridge is elected the root bridge when the initial root bridge fails.

The root bridge for each spanning-tree protocol instance is determined by the bridge ID. The bridge ID consists of a configurable bridge priority and the MAC address of the bridge. The bridge with the lowest bridge ID is elected as the root bridge. If the bridge priorities are equal or if the bridge priority is not configured, the bridge with the lowest MAC address is elected the root bridge.

The bridge priority can also be used to determine which bridge becomes the designated bridge for a LAN segment. If two bridges have the same path cost to the root bridge, the bridge with the lowest bridge ID becomes the designated bridge.

The bridge priority can be set only in increments of 4096.

Consider a sample scenario in which a dual-homed customer edge (CE) router is connected to two other provider edge (PE) routers, which function as the VPLS PE routers, with MTSP enabled on all these routers, and with the CE router operating as the root bridge. Integrated Routing and Bridging (IRB) interface is configured for the VPLS routing instances on the routers. In such a network, the MAC addresses that are learned in the VPLS domain continuously move between the LSI or virtual tunnel (VT) interfaces and the VPLS interfaces on both the PE routers. To avoid the continuous movement of the MAC addresses, you must configure root protection by including the **no-root-port** statement at the **[edit routing-instances routing-instance-name protocols mstp interface interface-name]** hierarchy level and configure the bridge priority as zero by including the **bridge priority 0** statement at the **[edit routing-instances routing-instance-name protocols mstp]** hierarchy level on the PE routers. This configuration on the PE routers is required to prevent the CE-side facing interfaces from becoming the root bridge.

- Related Documentation**
- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
  - [Configuring Multiple Spanning-Tree Protocol on page 26](#)
  - [Configuring VLAN Spanning-Tree Protocol on page 31](#)
  - [bridge-priority on page 63](#)



## Maximum Age for Awaiting Arrival of Hello BPDUs

---

The maximum age timer specifies the maximum expected arrival time of hello BPDUs. If the maximum age timer expires, the bridge detects that the link to the root bridge has failed and initiates a topology reconvergence. The maximum age timer should be longer than the configured hello timer.

### Related Documentation

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [max-age on page 73](#)

## Hello Time for Root Bridge to Transmit Hello BPDUs

---

The hello timer specifies the time interval at which the root bridge transmits configuration BPDUs.

### Related Documentation

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [hello-time on page 71](#)

## Forward Delay Before Ports Transition to Forwarding State

---

The forwarding delay timer specifies the length of time a spanning-tree protocol bridge port remains in the listening and learning states before transitioning to the forwarding state. Setting the interval too short could cause unnecessary spanning-tree reconvergence. Before changing this parameter, you should have a thorough understanding of spanning-tree protocols.

### Related Documentation

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [forward-delay on page 70](#)

## Spanning-Tree Instance Interface

---

STP and RSTP are limited to a single instance on any physical interface. Use the **interface** statement to configure which interfaces participate in the STP or RSTP instance.

MSTP supports multiple instances on a single physical interface. Use the **interface** statement to configure which logical interfaces participate in MSTP.

For VSTP, interfaces can be configured at the global level or at the VLAN level. Interfaces configured at the global VSTP level will be enabled for all the configured VLANs. If an interface is configured at both the global and VLAN levels, the configuration at the VLAN level overrides the global configuration.

**Related  
Documentation**

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [cost on page 65](#)
- [edge on page 67](#)
- [interface \(Spanning Tree\) on page 72](#)
- [mode on page 75](#)
- [priority on page 79](#)

---

## Spanning-Tree Instance Interface Priority

---

The root port is the interface on the nonroot bridge with the lowest path cost to the root bridge. When multiple interfaces have the same path cost to the root bridge, the interface with the lowest interface priority is selected as the root port.

If the interface priority is not configured and multiple interfaces have the same path cost to the root bridge, the interface with the lowest interface identifier is selected as the root port.

If the interface priority is configured under the MSTP protocol, this becomes the default value for all interfaces. If the interface priority is configured under the MSTI interface, the value overrides the default for that interface.

If the interface priority is configured at both the VSTP global and VLAN levels, the configuration at the VLAN level overrides the global configuration.

**Related  
Documentation**

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [interface \(Spanning Tree\) on page 72](#)
- [priority on page 79](#)

## Spanning-Tree Instance Interface Cost

The path cost used to calculate the root path cost from any given LAN segment is determined by the total cost of each link in the path. By default, the link cost is determined by the speed of the link. The interface cost can be configured to override the default cost and control which bridge is the designated bridge and which port is the designated port. In MSTP the CIST external path cost is determined by the link speed and the number of hops.

If the interface cost is not configured, the cost is determined by the speed of the interface. For example, a 100-Mbps link has a default path cost of 19, a 1000-Mbps link has a default path cost of 4, and a 10-Gbps link has a default path cost of 2.

If the interface cost is configured under MSTP, this becomes the default value for all interfaces. If the interface cost is configured under the MSTI interface, the value overrides the default for that interface.

If the interface cost is configured at both the VSTP global and VLAN levels, the configuration at the VLAN level overrides the global configuration.

The interface cost should be set the same for all interfaces connected to the same LAN segment.

### Related Documentation

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [cost on page 65](#)
- [interface \(Spanning Tree\) on page 72](#)

## Spanning-Tree Instance Interface Point-to-Point Link Mode

The interface mode allows RSTP, MSTP, and VSTP to converge faster than the original STP on point-to-point links. The protocol does not need to wait for timers on point-to-point links. Configure interfaces that have a point-to-point link to another Layer 2 bridge as **p2p**. This parameter is ignored if the STP is configured to run the original spanning-tree version.

If the interface mode is configured at both the VSTP global and VLAN levels, the configuration at the VLAN level overrides the global configuration.

### Related Documentation

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [mode on page 75](#)
- [interface \(Spanning Tree\) on page 72](#)

## Spanning-Tree Instance Interface Configured as an Edge Port

---

RSTP, MSTP, and VSTP instance interfaces configured as *edge ports* enable the protocol to converge faster than the original IEEE 802.1D STP version. Edge ports transition directly to the forwarding state, and so the protocol does not need to wait for BPDUs to be received on edge ports.

The Junos OS supports automatic detection of edge ports as described in the RSTP standard. Layer 2 bridges do not expect to receive BPDUs for edge ports. If a BPDU is received for an edge port, the port becomes a non-edge port.

Keep the following guidelines in mind when configuring spanning-tree instance interfaces as edge ports:

- Do not configure a spanning-tree instance interface as an edge port if it is connected to any Layer 2 bridge. An instance interface connected to Layer 2 bridges but configured as an edge port can cause physical loops.
- If the spanning-tree protocol is configured to run the original IEEE 802.1D spanning-tree version, the edge-port option (if configured) is ignored.
- If edge ports are configured at both the VSTP global and VLAN levels, the configuration at the VLAN level overrides the global configuration.

### Related Documentation

- [Example: Configuring BPDU Protection on Edge Interfaces to Prevent STP Miscalculations on page 51](#)
- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [edge on page 67](#)
- [interface \(Spanning Tree\) on page 72](#)
- [Configuring RSTP \(CLI Procedure\)](#)
- [Configuring VLAN Spanning-Tree Protocol](#)
- [Configuring MSTP](#)

## Spanning-Tree Protocol Trace Options

---

In order to trace spanning-tree protocol operations, you can set spanning-tree protocol-specific trace options in the spanning-tree protocol configuration.

For general information about tracing and global tracing options, see the statement summary for the global **traceoptions** statement in the *Junos OS Routing Protocols Library for Routing Devices*.

**Related  
Documentation**

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [Example: Tracing Spanning-Tree Protocol Operations on page 39](#)
- [traceoptions \(Spanning Tree\) on page 82](#)



## CHAPTER 3

# Configuration Tasks for Spanning-Tree Protocols

- [Configuring Rapid Spanning-Tree Protocol on page 23](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring MST Instances on a Physical Interface on page 29](#)
- [Disabling MSTP on page 30](#)
- [Configuring VLAN Spanning-Tree Protocol on page 31](#)
- [Tracing Spanning-Tree Operations on page 35](#)

## Configuring Rapid Spanning-Tree Protocol

---

You can configure Rapid Spanning-Tree Protocol (RSTP) under the following hierarchy levels:

- `[edit logical-systems logical-system-name protocols]`
- `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols]`
- `[edit protocols]`
- `[edit routing-instances routing-instance-name protocols]`

The routing instance type can be either **virtual-switch** or **layer2-control**.

To configure the Rapid Spanning-Tree Protocol:

1. Enable RSTP as the version of spanning-tree protocol to be configured:

```
[edit]
user@host@ edit ... protocols (STP Type) rstp
```

2. (Optional) For compatibility with older bridges that do not support RSTP, you can run force RSTP to run as the original IEEE 802.1D Spanning-Tree Protocol (STP) version:

```
[edit ... protocols rstp]
user@host# set force-version stp
```



**NOTE:** If RSTP has been forced to run as the original STP version, you can revert back to RSTP by first removing the `force-version` statement from the configuration and then entering the `clear spanning-tree protocol-migration` configuration mode command.

3. (Optional) Enable provider bridge participation in the RSTP instance:

```
[edit ... protocols rstp]
user@host# set bpd-destination-mac-address provider-bridge-group
```

4. (Optional) Specify the extended system identifier used in identifiers bridges that participate in RSTP:

```
[edit ... protocols rstp]
user@host# set extended-system-id identifier
```

5. Configure the interfaces that participate in the RSTP instance.

- a. Enable configuration of the interface:

```
[edit ... protocols rstp]
user@host# edit interface interface-name
```

- b. Configure the interface priority:

```
[edit ... protocols rstp interface interface-name]
user@host# set priority interface-priority
```

- c. (Optional) By default, the interface link cost is determined by the link speed. You can configure the interface link cost to control which bridge is the designated bridge and which port is the designated port:

```
[edit ... protocols rstp interface interface-name]
user@host# set cost interface-link-cost
```

- d. Configure the interface link mode to identify point-to-point links:

```
[edit ... protocols rstp interface interface-name]
user@host# set mode (p2p | shared)
```

Specify **p2p** if the link is point to point. Specify **shared** if the link is a shared media.

- e. (Optional) Configure the interface as an edge port:

```
[edit ... protocols rstp interface interface-name]
user@host# set edge
```

Edge ports do not expect to receive bridge protocol data unit (BPDU) packets. If a BPDU packet is received for an edge port, the port becomes a nonedge port

You can also enable BPDU root protection for all spanning-tree protocol instances on the interface. BPDU root protect ensures the port is the spanning-tree designated port. If the port receives superior BPDU packets, root protect moves this port to a root-prevented spanning-tree state. For configuration details, see [“Checking the Status of Spanning-Tree Instance Interfaces” on page 97](#).

6. Configure the bridge priority

```
[edit ... protocols rstp]
user@host# set bridge-priority bridge-priority
```

For more information, see [“Bridge Priority for Election of Root Bridge and Designated Bridge” on page 16](#).



## 7. Configure hello BPDU timers.

- a. Configure the maximum expected arrival time of hello BPDUs:

```
[edit ... protocols rstp]
user@host# set max-age seconds
```

- b. Configure the time interval at which the root bridge transmits configuration BPDUs:

```
[edit ... protocols rstp]
user@host# set hello-time seconds
```

8. (Optional) By default, the bridge port remains in the listening and learning states for 15 seconds before transitioning to the forwarding state. You can specify a delay from 4 through 20 seconds instead:

```
[edit ... protocols rstp]
user@host# set forward-delay seconds
```

9. Verify the RSTP configuration:

```
[edit]
... { # Optional logical system and/or routing instance
 protocols (STP Type) {
 rstp {
 force-version stp; # Optional.
 bpdu-destination-mac-address provider-bridge-group; # Optional
 extended-system-id identifier; # Optional.
 interface interface-name {
 priority interface-priority;
 cost interface-link-cost; # Optional.
 mode (p2p | shared);
 edge; # Optional.
 }
 bridge-priority bridge-priority;
 max-age seconds;
 hello-time seconds;
 forward-delay seconds; # Optional.
 }
 }
}
```

**Related Documentation**

- [Spanning-Tree Protocols Supported on page 7](#)
- [RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14](#)
- [Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 14](#)
- [Provider Bridge Participation in RSTP or MSTP Instances on page 15](#)
- [System Identifier for Bridges in STP or RSTP Instances on page 16](#)

## Configuring Multiple Spanning-Tree Protocol

---

You can configure the Multiple Spanning-Tree Protocol (MSTP) under the following hierarchy levels:

- [edit *logical-systems logical-system-name protocols*]
- [edit *logical-systems logical-system-name routing-instances routing-instance-name protocols*]
- [edit *protocols*]
- [edit *routing-instances routing-instance-name protocols*]

The routing instance type can be either virtual-switch or layer2-control.

To configure the Multiple Spanning-Tree Protocol:

1. Enable MSTP as the version of spanning-tree protocol to be configured:

```
[edit]
user@host@ edit ... protocols (STP Type) mstp
```

2. (Optional) Enable provider bridge participation in the MSTP instance:

```
[edit ... protocols mstp]
user@host# set bpdu-destination-mac-address provider-bridge-group
```

### 3. Configure the interfaces that participate in the MSTP instance.

- a. Enable configuration of the interface:

```
[edit ... protocols mstp]
user@host# edit interface interface-name
```

- b. Configure the interface priority:

```
[edit ... protocols mstp interface interface-name]
user@host# set priority interface-priority
```

- c. (Optional) By default, the interface link cost is determined by the link speed. You can configure the interface link cost to control which bridge is the designated bridge and which port is the designated port:

```
[edit ... protocols mstp interface interface-name]
user@host# set cost interface-link-cost
```

- d. Configure the interface link mode to identify point-to-point links:

```
[edit ... protocols mstp interface interface-name]
user@host# set mode (p2p | shared)
```

Specify **p2p** if the link is point to point. Specify **shared** if the link is a shared media.

- e. (Optional) Configure the interface as an edge port:

```
[edit ... protocols mstp interface interface-name]
user@host# set edge
```

Edge ports do not expect to receive bridge protocol data unit (BPDU) packets. If a BPDU packet is received for an edge port, the port becomes a nonedge port

You can also enable BPDU root protection for all spanning-tree protocol instances on the interface. BPDU root protect ensures the port is the spanning-tree designated port. If the port receives superior BPDU packets, root protect moves this port to a root-prevented spanning-tree state. For configuration details, see [“Checking the Status of Spanning-Tree Instance Interfaces” on page 97](#).

### 4. Configure the bridge priority

```
[edit ... protocols mstp]
user@host# set bridge-priority bridge-priority
```

For more information, see [“Bridge Priority for Election of Root Bridge and Designated Bridge” on page 16](#).

### 5. Configure hello BPDU timers.

- a. Configure the maximum expected arrival time of hello BPDUs:

```
[edit ... protocols mstp]
user@host# set max-age seconds
```

- b. Configure the time interval at which the root bridge transmits configuration BPDUs:

```
[edit ... protocols mstp]
user@host# set hello-time seconds
```

6. (Optional) By default, the bridge port remains in the listening and learning states for 15 seconds before transitioning to the forwarding state. You can specify a delay from 4 through 20 seconds instead:

```
[edit ... protocols mstp]
```

```
user@host# set forward-delay seconds
```

7. Configure MSTP-specific options.

a. Configure the MSTP region configuration name:

```
[edit ... protocols mstp]
user@host# set configuration-name configuration-name
```

b. Configure the MSTP revision level:

```
[edit ... protocols mstp]
user@host# set revision-level revision-level
```

c. Configure the maximum number of hops a BPDU can be forwarded in the MSTP region:

```
[edit ... protocols mstp]
user@host# set max-hops hops
```

8. Verify the MSTP configuration:

```
[edit]
... { # Optional logical system and/or routing instance
 protocols (STP Type) {
 mstp {
 bpd-destination-mac-address provider-bridge-group; # Optional
 interface interface-name {
 priority interface-priority;
 cost interface-link-cost; # Optional.
 mode (p2p | shared);
 edge; # Optional.
 }
 bridge-priority bridge-priority;
 max-age seconds;
 hello-time seconds;
 forward-delay seconds; # Optional.
 configuration-name configuration-name; # MST region configuration name.
 revision-level revision-level; # MST revision number.
 max-hops hops; # MST maximum hops.
 }
 }
}
```

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
  - [Configuring MST Instances on a Physical Interface on page 29](#)
  - [Disabling MSTP on page 30](#)

## Configuring MST Instances on a Physical Interface

You can configure a Multiple Spanning-Tree Instance (MSTI) under the following hierarchy levels:

- [edit *logical-systems logical-system-name protocols mstp*]
- [edit *logical-systems logical-system-name routing-instances routing-instance-name protocols mstp*]
- [edit *protocols mstp*]
- [edit *routing-instances routing-instance-name protocols mstp*]

The routing instance type can be either **virtual-switch** or **layer2-control**.

Before you begin, configure Multiple Spanning-Tree Protocol. For configuration details, see “[Configuring MSTP](#)” on page 26.

1. Enable configuration of a MST instance:

```
[edit]
user@host# edit ... protocols mstp msti msti-id
The msti-id value must be from 1 through 64.
```

2. Configure the interfaces that participate in the MST instance.

- a. Enable configuration of the interface:

```
[edit ... protocols mstp msti msti-id]
user@host# edit interface interface-name
```

- b. Configure the interface priority:

```
[edit ... protocols mstp msti msti-id interface interface-name]
user@host# set priority interface-priority
```

- c. (Optional) By default, the interface link cost is determined by the link speed. You can configure the interface link cost to control which bridge is the designated bridge and which port is the designated port:

```
[edit ... protocols mstp msti msti-id interface interface-name]
user@host# set cost interface-link-cost
```

- d. (Optional) Configure the interface as an edge port:

```
[edit ... protocols mstp msti msti-id interface interface-name]
user@host# set edge
```

Edge ports do not expect to receive bridge protocol data unit (BPDU) packets. If a BPDU packet is received for an edge port, the port becomes a nonedge port

3. Configure the bridge priority

```
[edit ... protocols mstp msti msti-id]
user@host# set bridge-priority bridge-priority
```

For more information, see “[Bridge Priority for Election of Root Bridge and Designated Bridge](#)” on page 16.

4. (Optional) An MSTI can map to a range of VLANs just as a logical port can map to a range of VLANs. The MSTP VLAN specifies the VLAN or VLAN range to which this MSTI is mapped. The `vlan-id` is configured under the logical interface. Configure the VLAN or VLAN range of the MSTI instance:

```
[edit]
user@host# set vlan (vlan-id | vlan-id-range)
```

5. Verify the MST interface configuration.

```
[edit]
protocols {
 mstp {
 ...basic-mstp-configuration...
 msti msti-id { # Instance identifier 1 – 64.
 bridge-priority priority;
 vlan vlan-id; # Optional
 interface interface-name {
 cost cost;
 edge;
 priority interface-priority;
 }
 }
 }
}
```

#### Related Documentation

- [Spanning-Tree Protocols Supported on page 7](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Disabling MSTP on page 30](#)

---

## Disabling MSTP

To disable the entire MSTP instance:

- Include the `disable` statement. You can include this statement at the following hierarchy levels:
  - `[edit logical-systems logical-system-name protocols mstp]`
  - `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols mstp]`
  - `[edit protocols mstp]`
  - `[edit routing-instances routing-instance-name protocols mstp]`

#### Related Documentation

- [Spanning-Tree Protocols Supported on page 7](#)
- [Configuring Multiple Spanning-Tree Protocol on page 26](#)
- [Configuring MST Instances on a Physical Interface on page 29](#)

## Configuring VLAN Spanning-Tree Protocol

You can configure the VLAN Spanning-Tree Protocol (VSTP) under the following hierarchy levels:



**NOTE:** This task supports the Enhanced Layer 2 Software (ELS) configuration style.

- [edit *logical-systems logical-system-name protocols*]
- [edit *logical-systems logical-system-name routing-instances routing-instance-name protocols*]
- [edit *protocols*]
- [edit *routing-instances routing-instance-name protocols*]

The routing instance type can be either **virtual-switch** or **layer2-control**.

To configure the VLAN Spanning-Tree Protocol:

1. Enable VSTP as the version of spanning-tree protocol to be configured:

```
[edit]
```

```
user@host@ edit ... protocols (STP Type) vstp
```

2. (Optional) For compatibility with older bridges that do not support VSTP, you can run force VSTP to run as the original IEEE 802.1D Spanning-Tree Protocol (STP) version:

```
[edit ... protocols vstp]
```

```
user@host# set force-version stp
```



**NOTE:** If VSTP has been forced to run as the original STP version, you can revert back to VSTP by first removing the force-version statement from the configuration and then entering the **clear spanning-tree protocol-migration** configuration mode command.

3. Configure the interfaces that participate in the VSTP instance.

- a. Enable configuration of the interface:

```
[edit ... protocols vstp]
user@host# edit interface interface-name
```

- b. Configure the interface priority:

```
[edit ... protocols vstp interface interface-name]
user@host# set priority interface-priority
```

- c. (Optional) By default, the interface link cost is determined by the link speed. You can configure the interface link cost to control which bridge is the designated bridge and which port is the designated port:

```
[edit ... protocols vstp interface interface-name]
user@host# set cost interface-link-cost
```

- d. Configure the interface link mode to identify point-to-point links:

```
[edit ... protocols vstp interface interface-name]
user@host# set mode (p2p | shared)
```

Specify **p2p** if the link is point to point. Specify **shared** if the link is a shared media.

- e. (Optional) Configure the interface as an edge port:

```
[edit ... protocols vstp interface interface-name]
user@host# set edge
```

Edge ports do not expect to receive bridge protocol data unit (BPDU) packets. If a BPDU packet is received for an edge port, the port becomes a nonedge port.

You can also enable BPDU root protection for all spanning-tree protocol instances on the interface. BPDU root protect ensures the port is the spanning-tree designated port. If the port receives superior BPDU packets, root protect moves this port to a root-prevented spanning-tree state. For configuration details, see [“Checking the Status of Spanning-Tree Instance Interfaces” on page 97](#).

4. Enable configuration of a VLAN instance:

```
[edit ... protocols vstp]
user@host# edit vlan vlan-id
```

5. Configure the bridge priority

```
[edit ... protocols vstp vlan vlan-id]
user@host# set bridge-priority bridge-priority
```

For more information, see [“Bridge Priority for Election of Root Bridge and Designated Bridge” on page 16](#).



## 6. Configure hello BPDU timers.

- a. Configure the maximum expected arrival time of hello BPDUs:

```
[edit ... protocols vstp vlan vlan-id]
user@host# set max-age seconds
```

- b. Configure the time interval at which the root bridge transmits configuration BPDUs:

```
[edit ... protocols vstp vlan vlan-id]
user@host# set hello-time seconds
```

7. (Optional) By default, the bridge port remains in the listening and learning states for 15 seconds before transitioning to the forwarding state. You can specify a delay from 4 through 20 seconds instead:

```
[edit ... protocols vstp vlan vlan-id]
user@host# set forward-delay seconds
```

8. Configure the interfaces that participate in the VSTP instance.

- a. Enable configuration of the interface:

```
[edit ... protocols vstp vlan vlan-id]
user@host# edit interface interface-name
```

- b. Configure the interface priority:

```
[edit ... protocols vstp vlan vlan-id interface interface-name]
user@host# set priority interface-priority
```

- c. (Optional) By default, the interface link cost is determined by the link speed. You can configure the interface link cost to control which bridge is the designated bridge and which port is the designated port:

```
[edit ... protocols vstp vlan vlan-id interface interface-name]
user@host# set cost interface-link-cost
```

- d. Configure the interface link mode to identify point-to-point links:

```
[edit ... protocols vstp vlan vlan-id interface interface-name]
user@host# set mode (p2p | shared)
```

Specify **p2p** if the link is point to point. Specify **shared** if the link is a shared media.

- e. (Optional) Configure the interface as an edge port:

```
[edit ... protocols vstp vlan vlan-id interface interface-name]
user@host# set edge
```

Edge ports do not expect to receive bridge protocol data unit (BPDU) packets. If a BPDU packet is received for an edge port, the port becomes a nonedge port.

You can also enable BPDU root protection for all spanning-tree protocol instances on the interface. BPDU root protect ensures the port is the spanning-tree designated port. If the port receives superior BPDU packets, root protect moves this port to a root-prevented spanning-tree state. For configuration details, see [“Checking the Status of Spanning-Tree Instance Interfaces” on page 97](#).

9. Verify the VSTP configuration:

```
[edit]
... { # Optional logical system and/or routing instance
 protocols (STP Type) {
 vstp {
```

```
force-version stp; # Optional.
interface interface-name {
 priority interface-priority;
 cost interface-link-cost; # Optional.
 mode (p2p | shared);
 edge; # Optional.
}
vlan vlan-id {
 bridge-priority bridge-priority;
 max-age seconds;
 hello-time seconds;
 forward-delay seconds; # Optional.
 interface interface-name {
 priority interface-priority;
 cost interface-link-cost; # Optional.
 mode (p2p | shared);
 edge; # Optional.
 }
}
}
```

**Related  
Documentation**

- [Spanning-Tree Protocols Supported on page 7](#)
- [RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14](#)
- [Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 14](#)
- [VPLS Multihomed Layer 2 Ring and MPLS Infrastructure Overview](#)
- [VPLS Multihomed Layer 2 Ring and MPLS Infrastructure Topology](#)

## Tracing Spanning-Tree Operations

You can enable global routing protocol tracing options at the **[edit routing-options] Hierarchy Level**. For general information about tracing and global tracing options, see the statement summary for the global *traceoptions* statement in the *Junos OS Routing Protocols Library for Routing Devices*.

In addition, you can enable STP-specific trace options at the following hierarchy levels:

- **[edit logical-systems logical-system-name protocols (mstp | rstp | vstp)]**
- **[edit logical-systems logical-system-name routing-instances routing-instance-name protocols (mstp | rstp | vstp)]**
- **[edit protocols (mstp | rstp | vstp)]**
- **[edit routing-instances routing-instance-name protocols (mstp | rstp | vstp)]**

The routing instance type can be either **virtual-switch** or **layer2-control**.

To enable tracing of spanning-tree protocol operations:

1. Enable configuration of the spanning-tree protocol whose operations are to be traced:

```
[edit]
user@host# edit ... protocols (mstp | rstp | vstp)
```

2. Enable configuration of spanning-tree protocol-specific trace options:

```
[edit ... protocols (mstp | rstp | vstp)]
user@host# edit traceoptions
```

3. Configure the files that contain trace logging information:

```
[edit ... protocols (mstp | rstp | vstp)]
user@host# set file filename <files number> <size bytes>
<world-readable | no-world-readable>
```

## 4. Configure spanning-tree protocol-specific options.

- a. To enable a spanning-tree protocol-specific option, include the
- flag**
- statement:

```
[edit ... protocols (mstp | rstp | vstp)]
user@host# set flag flag <flag-modifier> <disable>
```

You can specify the following spanning-tree protocol-specific **flag** options:

- **all**—Trace all operations.
- **all-failures**—Trace all failure conditions.
- **bpdu**—Trace BPDU reception and transmission.
- **bridge-detection-state-machine**—Trace the bridge detection state machine.
- **events**—Trace events of the protocol state machine.
- **port-information-state-machine**—Trace the port information state machine.
- **port-migration-state-machine**—Trace the port migration state machine.
- **port-receive-state-machine**—Trace the port receive state machine.
- **port-role-transit-state-machine**—Trace the port role transit state machine.
- **port-role-select-state-machine**—Trace the port role selection state machine.
- **port-transmit-state-machine**—Trace the port transmit state machine.
- **port-state-transit-state-machine**—Trace the port state transit state machine.
- **ppmd**—Trace the state and events for the ppm process.
- **state-machine-variables**—Trace when the state machine variables change.
- **timers**—Trace protocol timers.
- **topology-change-state-machine**—Trace the topology change state machine.



**NOTE:** Use the trace flag **all** with caution. This flag may cause the CPU to become very busy.

- b. To disable an individual spanning-tree protocol-specific option, include the
- disable**
- option with the
- flag**
- statement.

## 5. Verify the spanning-tree protocol-specific trace options.

```
[edit]
...
routing-options {
 traceoptions {
 ..global-trace-options-configuration...
 }
}
protocols {
 (mstp | rstp | vstp) {
```

```
traceoptions { # Spanning-tree protocol-specific.
 file filename <files number> <size bytes> <world-readable | no-world-readable>;
 flag flag <flag-modifier> <disable>;
}
}
}
```

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
  - [Example: Tracing Spanning-Tree Protocol Operations on page 39](#)



## CHAPTER 4

# Spanning-Tree Protocol Examples

- [Example: Blocking BPDUs on Aggregated Ethernet for 600 Seconds on page 39](#)
- [Example: Tracing Spanning-Tree Protocol Operations on page 39](#)
- [Example: Configuring VSTP on a Trunk Port with Tagged Traffic on page 40](#)
- [Example: Configuring BPDU Protection on Edge Interfaces to Prevent STP Miscalculations on page 51](#)

### Example: Blocking BPDUs on Aggregated Ethernet for 600 Seconds

---

The following example, when used with a full bridge configuration with aggregated Ethernet, blocks BPDUs on aggregated interface **ae0** for ten minutes (600 seconds) before enabling the interface again:

```
[edit protocols layer2-control]
bpdud-block {
 interface ae0;
 disable-timeout 600;
}
```

#### Related Documentation

- [Root Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Individual Spanning-Tree Instance Interfaces](#)
- [BPDU Protection on All Edge Ports of the Bridge](#)
- [Checking the Status of Spanning-Tree Instance Interfaces on page 97](#)
- [Clearing the Blocked Status of a Spanning-Tree Instance Interface on page 98](#)

### Example: Tracing Spanning-Tree Protocol Operations

---

Trace only unusual or abnormal operations to **/var/log/stp-log**:

```
[edit]
routing-options {
 traceoptions {
 file routing-log size 10m world-readable;
 flag all;
 }
}
```

```
}
protocols {
 rstp {
 traceoptions {
 file rstp-log size 10m world-readable;
 flag all;
 }
 }
}
```

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
  - [Tracing Spanning-Tree Operations on page 35](#)

---

## Example: Configuring VSTP on a Trunk Port with Tagged Traffic

- [VSTP on a Trunk Port with Tagged Traffic Overview on page 40](#)
- [Example: Configuring VSTP on a Trunk Port with Tagged Traffic on page 40](#)

### VSTP on a Trunk Port with Tagged Traffic Overview

In 802.1ad provider bridge networks (stacked VLANs), single-tagged access ports and double-tagged trunk ports can co-exist in a single spanning tree context. In this mode, the VLAN Spanning Tree Protocol (VSTP) can send and receive untagged Rapid Spanning Tree Protocol (RSTP) bridge protocol data units (BPDUs) on gigabit Ethernet (ge), 10 gigabit Ethernet (xe), and aggregated Ethernet (ae) interfaces. The untagged RSTP BPDUs interoperate with tagged VSTP BPDUs sent over the double-tagged trunk ports.

Double-tagging can be useful for Internet service providers, allowing them to use VLANs internally while mixing traffic from clients that are already VLAN-tagged.

### Example: Configuring VSTP on a Trunk Port with Tagged Traffic

This example shows how to configure the VSTP to send and receive standard untagged Rapid Spanning Tree Protocol (RSTP) bridge protocol data units (BPDUs) on access trunks that interoperate with tagged VSTP BPDUs sent over the double-tagged trunk ports.

- [Requirements on page 40](#)
- [Overview on page 41](#)
- [Configuration on page 41](#)
- [Verification on page 49](#)

---

#### Requirements

This example uses the following hardware and software components:

- Two CE devices (MX Series routers with DPCE or MPC cards)
- Two PE devices (MX Series routers with DPCE or MPC cards)
- Junos OS Release 12.3 or later running on the PE devices



## Overview


This example shows how to configure VSTP on a trunk port with tagged traffic.

## Topology

Figure 5 on page 41 shows a sample topology in which two customer edge (CE) bridges are dual-homed to two provider edge (PE) devices. All of the PE-CE links are single-tagged trunks using C-VLANs 1-100. The core link between Devices PE1 and PE2 is a double-tagged trunk that carries traffic from both CE devices, using S-VLANs 100 and 200 to distinguish the CE traffic.

Two VSTP instances are created on the PE devices, one for each S-VLAN. The CE devices run the standard RSTP. The PE devices run VSTP on the core link while sending standard untagged RSTP BPDUs toward the CE devices.

**Figure 5: Topology for VSTP Configured on a Trunk Port with Tagged Traffic**

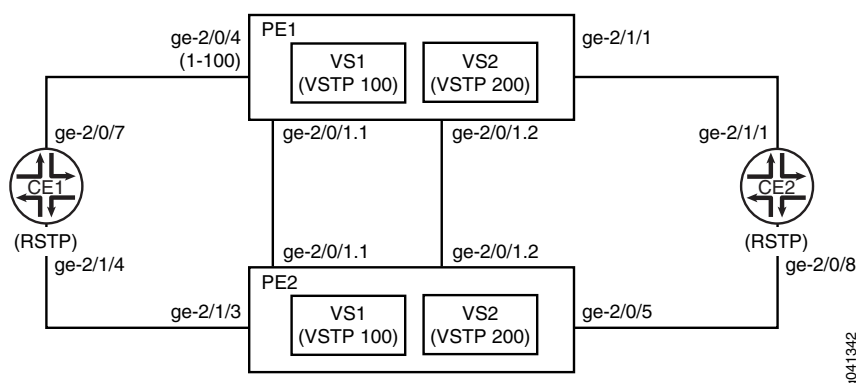

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device PE1

```
set interfaces ge-2/0/1 flexible-vlan-tagging
set interfaces ge-2/0/1 encapsulation flexible-ethernet-services
set interfaces ge-2/0/1 unit 1 vlan-id 100
set interfaces ge-2/0/1 unit 1 family bridge interface-mode trunk
set interfaces ge-2/0/1 unit 1 family bridge inner-vlan-id-list 1-100
set interfaces ge-2/0/1 unit 2 vlan-id 200
set interfaces ge-2/0/1 unit 2 family bridge interface-mode trunk
set interfaces ge-2/0/1 unit 2 family bridge inner-vlan-id-list 1-100
set interfaces ge-2/0/4 encapsulation ethernet-vpls
set interfaces ge-2/0/4 unit 0 description to_CE1
set interfaces ge-2/0/4 unit 0 family bridge interface-mode trunk
set interfaces ge-2/0/4 unit 0 family bridge vlan-id-list 1-100
set interfaces ge-2/1/1 unit 0 description to_CE2
set interfaces ge-2/1/1 unit 0 family bridge interface-mode trunk
set interfaces ge-2/1/1 unit 0 family bridge vlan-id-list 1-100
```

```
set routing-instances vs1 instance-type virtual-switch
set routing-instances vs1 interface ge-2/0/1.1
set routing-instances vs1 interface ge-2/0/4.0
set routing-instances vs1 protocols vstp vlan 100 interface ge-2/0/1
set routing-instances vs1 protocols vstp vlan 100 interface ge-2/0/4 access-trunk
set routing-instances vs1 bridge-domains bd vlan-id-list 1-100
set routing-instances vs2 instance-type virtual-switch
set routing-instances vs2 interface ge-2/0/1.2
set routing-instances vs2 interface ge-2/1/1.0
set routing-instances vs2 protocols vstp vlan 200 interface ge-2/0/1
set routing-instances vs2 protocols vstp vlan 200 interface ge-2/1/1 access-trunk
set routing-instances vs2 bridge-domains bd vlan-id-list 1-100
```

```
Device PE2
set interfaces ge-2/0/1 flexible-vlan-tagging
set interfaces ge-2/0/1 encapsulation flexible-ethernet-services
set interfaces ge-2/0/1 unit 1 vlan-id 100
set interfaces ge-2/0/1 unit 1 family bridge interface-mode trunk
set interfaces ge-2/0/1 unit 1 family bridge inner-vlan-id-list 1-100
set interfaces ge-2/0/1 unit 2 vlan-id 200
set interfaces ge-2/0/1 unit 2 family bridge interface-mode trunk
set interfaces ge-2/0/1 unit 2 family bridge inner-vlan-id-list 1-100
set interfaces ge-2/1/3 description to_CE1
set interfaces ge-2/1/3 unit 0 family bridge interface-mode trunk
set interfaces ge-2/1/3 unit 0 family bridge vlan-id-list 1-100
set interfaces ge-2/0/5 description to_CE2
set interfaces ge-2/0/5 unit 0 family bridge interface-mode trunk
set interfaces ge-2/0/5 unit 0 family bridge vlan-id-list 1-100
set routing-instances vs1 instance-type virtual-switch
set routing-instances vs1 interface ge-2/0/1.1
set routing-instances vs1 interface ge-2/1/3.0
set routing-instances vs1 protocols vstp vlan 100 interface ge-2/0/1
set routing-instances vs1 protocols vstp vlan 100 interface ge-2/1/3 access-trunk
set routing-instances vs1 bridge-domains bd vlan-id-list 1-100
set routing-instances vs2 instance-type virtual-switch
set routing-instances vs2 interface ge-2/0/1.2
set routing-instances vs2 interface ge-2/0/5.0
set routing-instances vs2 protocols vstp vlan 200 interface ge-2/0/1
set routing-instances vs2 protocols vstp vlan 200 interface ge-2/0/5 access-trunk
set routing-instances vs2 bridge-domains bd vlan-id-list 1-100
```

```
Device CE1
set interfaces ge-2/0/7 unit 0 description to_PE1
set interfaces ge-2/0/7 unit 0 family bridge interface-mode trunk
set interfaces ge-2/0/7 unit 0 family bridge vlan-id-list 1-100
set interfaces ge-2/1/4 unit 0 description to_PE2
set interfaces ge-2/1/4 unit 0 family bridge interface-mode trunk
set interfaces ge-2/1/4 unit 0 family bridge vlan-id-list 1-100
set protocols rstp interface ge-2/0/7
set protocols rstp interface ge-2/1/4
set bridge-domains bd vlan-id-list 1-100
```

```
Device CE2
set interfaces ge-2/0/8 unit 0 description to_PE2
set interfaces ge-2/0/8 unit 0 family bridge interface-mode trunk
set interfaces ge-2/0/8 unit 0 family bridge vlan-id-list 1-100
set interfaces ge-2/1/1 unit 0 description to_PE1
set interfaces ge-2/1/1 unit 0 family bridge interface-mode trunk
```

```

set interfaces ge-2/1/1 unit 0 family bridge vlan-id-list 1-100
set protocols rstp interface ge-2/0/8
set protocols rstp interface ge-2/1/1
set bridge-domains bd vlan-id-list 1-100

```

### Configuring PE1, PE2, CE1, and CE2

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the network interfaces.

```

[edit interfaces]
user@PE1# set ge-2/0/1 flexible-vlan-tagging
user@PE1# set ge-2/0/1 encapsulation flexible-ethernet-services
user@PE1# set ge-2/0/1 unit 1 vlan-id 100
user@PE1# set ge-2/0/1 unit 1 family bridge interface-mode trunk
user@PE1# set ge-2/0/1 unit 1 family bridge inner-vlan-id-list 1-100
user@PE1# set ge-2/0/1 unit 2 vlan-id 200
user@PE1# set ge-2/0/1 unit 2 family bridge interface-mode trunk
user@PE1# set ge-2/0/1 unit 2 family bridge inner-vlan-id-list 1-100

```

```

user@PE1# set ge-2/0/4 encapsulation ethernet-vpls
user@PE1# set ge-2/0/4 unit 0 description to_CE1
user@PE1# set ge-2/0/4 unit 0 family bridge interface-mode trunk
user@PE1# set ge-2/0/4 unit 0 family bridge vlan-id-list 1-100

```

```

user@PE1# set ge-2/1/1 unit 0 description to_CE2
user@PE1# set ge-2/1/1 unit 0 family bridge interface-mode trunk
user@PE1# set ge-2/1/1 unit 0 family bridge vlan-id-list 1-100

```

2. Configure the routing instances.

```

[edit routing-instances]
user@PE1# set vs1 instance-type virtual-switch
user@PE1# set vs1 interface ge-2/0/1.1
user@PE1# set vs1 interface ge-2/0/4.0
user@PE1# set vs1 protocols vstp vlan 100 interface ge-2/0/1
user@PE1# set vs1 protocols vstp vlan 100 interface ge-2/0/4 access-trunk
user@PE1# set vs1 bridge-domains bd vlan-id-list 1-100

```

```

user@PE1# set vs2 instance-type virtual-switch
user@PE1# set vs2 interface ge-2/0/1.2
user@PE1# set vs2 interface ge-2/1/1.0
user@PE1# set vs2 protocols vstp vlan 200 interface ge-2/0/1
user@PE1# set vs2 protocols vstp vlan 200 interface ge-2/1/1 access-trunk
user@PE1# set vs2 bridge-domains bd vlan-id-list 1-100

```

**Step-by-Step Procedure** To configure Device PE2:

1. Configure the interfaces.

```

[edit interfaces]

```

```
user@PE2# set ge-2/0/1 flexible-vlan-tagging
user@PE2# set ge-2/0/1 encapsulation flexible-ethernet-services
user@PE2# set ge-2/0/1 unit 1 vlan-id 100
user@PE2# set ge-2/0/1 unit 1 family bridge interface-mode trunk
user@PE2# set ge-2/0/1 unit 1 family bridge inner-vlan-id-list 1-100
user@PE2# set ge-2/0/1 unit 2 vlan-id 200
user@PE2# set ge-2/0/1 unit 2 family bridge interface-mode trunk
user@PE2# set ge-2/0/1 unit 2 family bridge inner-vlan-id-list 1-100
```

```
user@PE2# set ge-2/1/3 description to_CE1
user@PE2# set ge-2/1/3 unit 0 family bridge interface-mode trunk
user@PE2# set ge-2/1/3 unit 0 family bridge vlan-id-list 1-100
```

```
user@PE2# set ge-2/0/5 description to_CE2
user@PE2# set ge-2/0/5 unit 0 family bridge interface-mode trunk
user@PE2# set ge-2/0/5 unit 0 family bridge vlan-id-list 1-100
```

2. Configure the routing instances.

```
[edit routing-instances]
user@PE2# set vs1 instance-type virtual-switch
user@PE2# set vs1 interface ge-2/0/1.1
user@PE2# set vs1 interface ge-2/1/3.0
user@PE2# set vs1 protocols vstp vlan 100 interface ge-2/0/1
user@PE2# set vs1 protocols vstp vlan 100 interface ge-2/1/3 access-trunk
user@PE2# set vs1 bridge-domains bd vlan-id-list 1-100
```

```
user@PE2# set vs2 instance-type virtual-switch
user@PE2# set vs2 interface ge-2/0/1.2
user@PE2# set vs2 interface ge-2/0/5.0
user@PE2# set vs2 protocols vstp vlan 200 interface ge-2/0/1
user@PE2# set vs2 protocols vstp vlan 200 interface ge-2/0/5 access-trunk
user@PE2# set vs2 bridge-domains bd vlan-id-list 1-100
```

**Step-by-Step Procedure** To configure CE1:

1. Configure the interfaces.

```
[edit interfaces]
user@CE1# set ge-2/0/7 unit 0 description to_PE1
user@CE1# set ge-2/0/7 unit 0 family bridge interface-mode trunk
user@CE1# set ge-2/0/7 unit 0 family bridge vlan-id-list 1-100
```

```
user@CE1# set ge-2/1/4 unit 0 description to_PE2
user@CE1# set ge-2/1/4 unit 0 family bridge interface-mode trunk
user@CE1# set ge-2/1/4 unit 0 family bridge vlan-id-list 1-100
```

2. Configure the protocols.

```
[edit protocols]
user@CE1# set rstp interface ge-2/0/7
user@CE1# set rstp interface ge-2/1/4
```

3. Configure the bridge domain.

```
[edit bridge-domains]
```

```
user@CE1# set bd vlan-id-list 1-100
```

### Step-by-Step Procedure

To configure CE2:

1. Configure the interfaces.

```
[edit interfaces]
user@CE2# set ge-2/0/8 unit 0 description to_PE2
user@CE2# set ge-2/0/8 unit 0 family bridge interface-mode trunk
user@CE2# set ge-2/0/8 unit 0 family bridge vlan-id-list 1-100
```

```
user@CE2# set ge-2/1/1 unit 0 description to_PE1
user@CE2# set ge-2/1/1 unit 0 family bridge interface-mode trunk
user@CE2# set ge-2/1/1 unit 0 family bridge vlan-id-list 1-100
```

2. Configure the protocols.

```
[edit protocols]
user@CE2# set rstp interface ge-2/0/8
user@CE2# set rstp interface ge-2/1/1
```

3. Configure the bridge domain.

```
[edit bridge-domains]
user@CE2# set bd vlan-id-list 1-100
```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-instances**, **show protocols**, and **show bridge-domains** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

### Device PE1

```
user@PE1# show interfaces
ge-2/0/1 {
 flexible-vlan-tagging;
 encapsulation flexible-ethernet-services;
 unit 1 {
 vlan-id 100;
 family bridge {
 interface-mode trunk;
 inner-vlan-id-list 1-100;
 }
 }
}
unit 2 {
 vlan-id 200;
 family bridge {
 interface-mode trunk;
 inner-vlan-id-list 1-100;
 }
}
}
ge-2/0/4 {
 encapsulation ethernet-vpls;
 unit 0 {
 description to_CE1;
```

```
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}
ge-2/1/1 {
 unit 0 {
 description to_CE2;
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}

user@PE1# show routing-instances
vs1 {
 instance-type virtual-switch;
 interface ge-2/0/1.1;
 interface ge-2/0/4.0;
 protocols {
 vstp {
 vlan 100 {
 interface ge-2/0/1;
 interface ge-2/0/4 {
 access-trunk;
 }
 }
 }
 }
 bridge-domains {
 bd {
 vlan-id-list 1-100;
 }
 }
}
vs2 {
 instance-type virtual-switch;
 interface ge-2/0/1.2;
 interface ge-2/0/1.0;
 protocols {
 vstp {
 vlan 200 {
 interface ge-2/0/1;
 interface ge-2/1/1 {
 access-trunk;
 }
 }
 }
 }
 bridge-domains {
 bd {
 vlan-id-list 1-100;
 }
 }
}
```

```

 }
Device PE2 user@PE2# show interfaces
ge-2/0/1 {
 flexible-vlan-tagging;
 encapsulation flexible-ethernet-services;
 unit 1 {
 vlan-id 100;
 family bridge {
 interface-mode trunk;
 inner-vlan-id-list 1-100;
 }
 }
 unit 2 {
 vlan-id 200;
 family bridge {
 interface-mode trunk;
 inner-vlan-id-list 1-100;
 }
 }
}
ge-2/0/5 {
 description to_CE2;
 unit 0 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}
ge-2/1/3 {
 description to_CE1;
 unit 0 {
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}

user@PE2# show routing-instances
vs1 {
 instance-type virtual-switch;
 interface ge-2/0/1.1;
 interface ge-2/1/3.0;
 protocols {
 vstp {
 vlan 100 {
 interface ge-2/0/1;
 interface ge-2/1/3 {
 access-trunk;
 }
 }
 }
 }
}
bridge-domains {

```

```
 bd {
 vlan-id-list 1-100;
 }
 }
}
vs2 {
 instance-type virtual-switch;
 interface ge-2/0/1.2;
 interface ge-2/0/5.0;
 protocols {
 vstp {
 vlan 200 {
 interface ge-2/0/1;
 interface ge-2/0/5 {
 access-trunk;
 }
 }
 }
 }
 bridge-domains {
 bd {
 vlan-id-list 1-100;
 }
 }
}
```

```
Device CE1 user@CE1# show interfaces
ge-2/0/7 {
 unit 0 {
 description to_PE1;
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}
ge-2/1/4 {
 unit 0 {
 description to_PE2;
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}

user@CE1# show protocols
rstp {
 interface ge-2/0/7;
 interface ge-2/1/4;
}

user@CE1# show bridge-domains
bd {
 vlan-id-list 1-100;
}
```



```
Device CE2 user@CE2 show interfaces
ge-2/0/8 {
 unit 0 {
 description to_PE2;
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}
ge-2/1/1 {
 unit 0 {
 description to_PE1;
 family bridge {
 interface-mode trunk;
 vlan-id-list 1-100;
 }
 }
}

user@CE2# show protocols
rstp {
 interface ge-2/0/8;
 interface ge-2/1/1;
}

user@CE2# show bridge-domains
bd {
 vlan-id-list 1-100;
}
```

If you are done configuring the device, enter **commit** from configuration mode.

---

## Verification

Confirm that the configuration is working properly.

- [Verifying That the Interfaces Are Operational on page 49](#)
- [Verifying the STP Bridge Parameters of the Routing Instances on page 50](#)
- [Displaying STP Statistics for the Configured Bridge on page 50](#)

### *Verifying That the Interfaces Are Operational*

**Purpose** Verify that the interfaces are operational.

**Action** From operational mode, enter the **show spanning-tree interface routing-instance** command.

```
user@PE1> show spanning-tree interface routing-instance vs1
Spanning tree interface parameters for VLAN 100
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ge-2/0/1  | 128:82  | 128:82                | 32868.0021590f37d0      | 20000        | FWD   | DESG |
| ge-2/0/4  | 128:85  | 128:85                | 32868.0021590f37d0      | 20000        | FWD   | DESG |

**Meaning** The output shows the status of the interfaces configured for VLAN 100.

#### *Verifying the STP Bridge Parameters of the Routing Instances*

**Purpose** Verify the STP bridge parameters configured for the routing instances.

**Action** From operational mode, enter the **show spanning-tree bridge routing-instance** command.

```
user@PE1> show spanning-tree bridge routing-instance vs1
STP bridge parameters
Routing instance name : vs1
Enabled protocol : RSTP
```

```
STP bridge parameters for VLAN 100
Root ID : 32868.00:21:59:0f:37:d0
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Message age : 0
Number of topology changes : 2
Time since last topology change : 687 seconds
Local parameters
 Bridge ID : 32868.00:21:59:0f:37:d0
 Extended system ID : 100
```

**Meaning** The output shows the status of the STP bridge parameters for routing instance vs1.

#### *Displaying STP Statistics for the Configured Bridge*

**Purpose** Display spanning-tree statistics for the configured bridge.

**Action** From operational mode, enter the **show spanning-tree statistics bridge** command.

```

user@PE1> show spanning-tree statistics bridge
STP Context : default
STP Instance : 0
Number of Root Bridge Changes: 0
Number of Root Port Changes: 0

STP Context : x/default
STP Instance : 0
Number of Root Bridge Changes: 0
Number of Root Port Changes: 0

STP Context : vs1
STP Instance : 0
Number of Root Bridge Changes: 2 Last Changed: Thu Sep 20 15:12:18
2012
Number of Root Port Changes: 1 Last Changed: Thu Sep 20 15:01:13
2012
Recent TC Received: ge-2/0/1.1 Received : Thu Sep 20 15:01:17
2012

STP Context : vs2
STP Instance : 0
Number of Root Bridge Changes: 2 Last Changed: Thu Sep 20 15:10:25
2012
Number of Root Port Changes: 2 Last Changed: Thu Sep 20 15:10:25
2012
Recent TC Received: ge-2/1/1.0 Received : Thu Sep 20 15:10:47
2012

STP Context : CE1/default
STP Instance : 0
Number of Root Bridge Changes: 0
Number of Root Port Changes: 0
Recent TC Received: ge-2/1/4.0 Received : Thu Sep 20 15:12:15
2012

```

**Meaning** The command output shows spanning-tree statistics for the configured bridge.

## Example: Configuring BPDU Protection on Edge Interfaces to Prevent STP Miscalculations

MX Series routers provide Layer 2 loop prevention through the Spanning Tree Protocol (STP), Rapid Spanning Tree protocol (RSTP), and Multiple Spanning Tree Protocol (MSTP). All spanning-tree protocols use a special type of frame called a bridge protocol data unit (BPDU) to communicate. Other devices—PC bridging applications, for example also use BPDUs and generate their own BPDUs. These different BPDUs are not compatible. When BPDUs generated by spanning-tree protocols are transmitted to a device that uses another type of BPDU, they can cause problems on the device. Similarly, if routers within a spanning-tree topology receive BPDUs from other devices, network outages can occur because of STP miscalculations.

This example configures BPDU protection on MX Series routers that use RSTP. The upstream configuration is done on the edge interfaces, where outside BPDUs are often received from other devices.

- [Requirements on page 52](#)
- [Overview on page 52](#)
- [Configuration on page 53](#)
- [Verification on page 54](#)

## Requirements

This example uses the following hardware and software components:

- Two MX Series routers in an RSTP topology
- Junos OS Release 13.1 or later

Before you configure the interfaces on Router 2 for BPDU protection, be sure you have:

- RSTP enabled on the routers.

## Overview

The MX Series routers, being in an RSTP topology, support a loop-free network through the exchange of BPDUs. Receipt of outside BPDUs in an STP, RSTP, or MSTP topology, however, can lead to network outages by triggering an STP misconfiguration. To prevent such outages, enable BPDU protection on STP interfaces that could receive outside BPDUs. If an outside BPDU is received on a BPDU-protected interface, the interface shuts down to prevent the outside BPDU from accessing the STP interface.

[Figure 6 on page 53](#) shows the topology for this example. In this example, Router 1 and Router 2 are configured for RSTP and create a loop-free topology. The interfaces on Router 2 are edge access ports which frequently receive outside BPDUs generated by PC applications.

This example configures interface ge-0/0/5.0 and interface ge-0/0/6.0 as edge ports on Router 2, and then configures BPDU protection on those ports. With BPDU protection enabled, these interfaces shut down when they encounter an outside BPDU sent by the PCs connected to Router 2.

Topology

Figure 6: BPDU Protection Topology

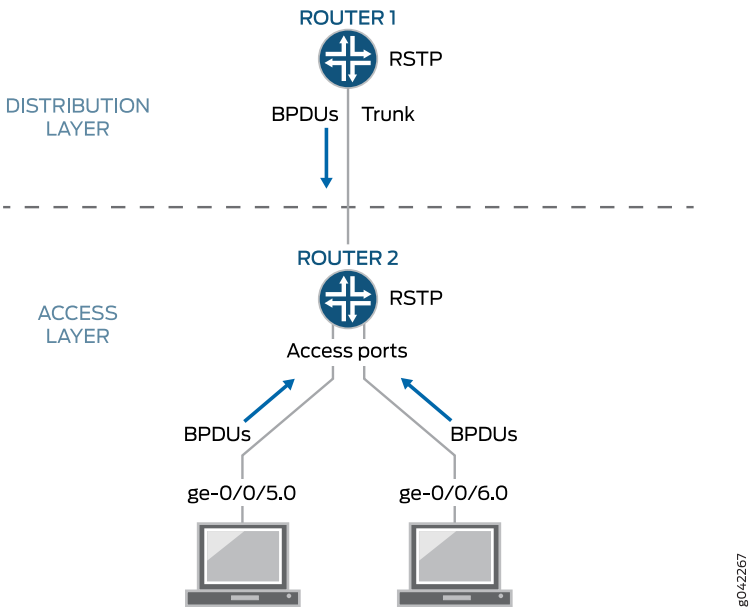


Table 3 on page 53 describes the components that are configured for BPDU protection.

Table 3: Components of the Topology for Configuring BPDU Protection on MX Series Routers

| Property                      | Settings                                                                                                                                    |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Router 1 (Distribution Layer) | Router 1 is connected to Router 2 on a trunk interface.                                                                                     |
| Router 2 (Access Layer)       | Router 2 has these access ports that require BPDU protection: <ul style="list-style-type: none"><li>ge-0/0/5.0</li><li>ge-0/0/6.0</li></ul> |

This configuration example uses RSTP topology. You also can configure BPDU protection for STP or MSTP topologies at the `[edit protocols (mstp|rstp|vstp)]` hierarchy level.

Configuration

|                         |                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CLI Quick Configuration | To quickly configure RSTP on the two Router 2 interfaces and configure BPDU protection on all edge ports on Router 2, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the <code>[edit]</code> hierarchy level: |
| Router 2                | <pre>set protocols rstp interface ge-0/0/5.0 edge set protocols rstp interface ge-0/0/6.0 edge set protocols rstp bpdu-block-on-edge</pre>                                                                                                                                                                                                                              |

## Configuring Router 2

---

**Step-by-Step Procedure** To configure RSTP on the two Router 2 interfaces, and then configure BPDU protection:

1. Configure RSTP on interface ge-0/0/5.0 and interface ge-0/0/6.0, and configure them as edge ports.

```
[edit protocols rstp]
user@Router2# set interface ge-0/0/5.0 edge
user@Router2# set interface ge-0/0/6.0 edge
```

2. Configure BPDU protection on all edge ports on this router.

```
[edit protocols rstp]
user@Router2# set bpdu-block-on-edge
```

## Results

---

From configuration mode, confirm your configuration by entering the **show configuration protocols rstp** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@Router2> show configuration protocols rstp
interface ge-0/0/5.0 {
 edge;
}
interface ge-0/0/6.0 {
 edge;
}
bpdu-block-on-edge;
```

## Verification

Verify that the configuration is working properly.

- [Displaying the Interface State Before BPDU Protection Is Triggered on page 54](#)
- [Verifying That BPDU Protection Is Working Correctly on page 55](#)

## Displaying the Interface State Before BPDU Protection Is Triggered

---

**Purpose** Before BPDUs can be received from PCs connected to interface ge-0/0/5.0 and interface ge-0/0/6.0, confirm the interface state.

**Action** Use the operational mode command **show spanning-tree instance**

```
user@Router2> show spanning-tree interface
```

Spanning tree interface parameters for instance 0

| Interface  | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|------------|---------|-----------------------|-------------------------|--------------|-------|------|
| ge-0/0/0.0 | 128:513 | 128:513               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/1.0 | 128:514 | 128:514               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/2.0 | 128:515 | 128:515               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/3.0 | 128:516 | 128:516               | 32768.0019e2503f00      | 20000        | FWD   | DESG |
| ge-0/0/4.0 | 128:517 | 128:517               | 32768.0019e2503f00      | 20000        | FWD   | DESG |
| ge-0/0/5.0 | 128:518 | 128:518               | 32768.0019e2503f00      | 20000        | FWD   | DESG |
| ge-0/0/6.0 | 128:519 | 128:519               | 32768.0019e2503f00      | 20000        | FWD   | DESG |

[output truncated]

**Meaning** The output from the **show spanning-tree interface** command shows that interface ge-0/0/5.0 and interface ge-0/0/6.0 are ports in a forwarding state.

### Verifying That BPDU Protection Is Working Correctly

**Purpose** In this example, the PCs connected to Router 2 start sending BPDUs to interface ge-0/0/5.0 and interface ge-0/0/6.0. Verify that BPDU protection is working on the interfaces.

**Action** Use the operational mode command **show spanning-tree interface**.

```
user@Router2> show spanning-tree interface
```

Spanning tree interface parameters for instance 0

| Interface    | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|--------------|---------|-----------------------|-------------------------|--------------|-------|------|
| ge-0/0/0.0   | 128:513 | 128:513               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/1.0   | 128:514 | 128:514               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/2.0   | 128:515 | 128:515               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| ge-0/0/3.0   | 128:516 | 128:516               | 32768.0019e2503f00      | 20000        | FWD   | DESG |
| ge-0/0/4.0   | 128:517 | 128:517               | 32768.0019e2503f00      | 20000        | FWD   | DESG |
| ge-0/0/5.0   | 128:518 | 128:518               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| (Bpdu-Incon) |         |                       |                         |              |       |      |
| ge-0/0/6.0   | 128:519 | 128:519               | 32768.0019e2503f00      | 20000        | BLK   | DIS  |
| (Bpdu-Incon) |         |                       |                         |              |       |      |
| ge-0/0/7.0   | 128:520 | 128:1                 | 16384.00aabbcc0348      | 20000        | FWD   | ROOT |
| ge-0/0/8.0   | 128:521 | 128:521               | 32768.0019e2503f00      | 20000        | FWD   | DESG |

[output truncated]

**Meaning** When BPDUs are sent from the PCs to interface ge-0/0/5.0 and interface ge-0/0/6.0 on Router 2, the output from the operational mode command **show spanning-tree interface** shows that the interfaces have transitioned to a BPDU inconsistent state. The BPDU inconsistent state causes the interfaces to shut down.

Disabling the BPDU protection configuration on an interface does not automatically re-enable the interface. However, if the **disable-timeout** statement has been included in the BPDU configuration, the interface does return to service after the timer expires.

Otherwise, you must use the operational mode command **clear error bpdv interface *interface-name*** to unblock and re-enable the interface.

If the PCs connected to Router 2 send BPDUs to the interfaces again, BPDU protection is triggered once more, and the interfaces transition back to the BPDU inconsistent state, causing them to shut down. In such cases, you need to find and repair the misconfiguration on the PCs that are sending BPDUs to Router 2.

**Related  
Documentation**

- [Spanning-Tree Instance Interface Configured as an Edge Port on page 20](#)



## CHAPTER 5

# Configuration Statements for Spanning-Tree Protocols

- [\[edit protocols mstp\] Hierarchy Level on page 58](#)
- [\[edit protocols rstp\] Hierarchy Level on page 59](#)
- [\[edit protocols vstp\] Hierarchy Level on page 60](#)
- [protocols \(STP Type\) on page 61](#)
- [access-trunk on page 62](#)
- [bpdu-destination-mac-address \(Spanning Tree\) on page 62](#)
- [bridge-priority on page 63](#)
- [configuration-name on page 64](#)
- [cost on page 65](#)
- [disable on page 66](#)
- [edge on page 67](#)
- [extended-system-id on page 68](#)
- [force-version \(IEEE 802.1D STP\) on page 69](#)
- [forward-delay on page 70](#)
- [hello-time on page 71](#)
- [interface \(Spanning Tree\) on page 72](#)
- [max-age on page 73](#)
- [max-hops on page 74](#)
- [mode \(Protocols STP\) on page 75](#)
- [msti on page 76](#)
- [mstp on page 77](#)
- [priority \(Protocols STP\) on page 79](#)
- [revision-level on page 80](#)
- [rstp on page 81](#)
- [traceoptions \(Spanning Tree\) on page 82](#)
- [vlan \(MSTP\) on page 85](#)

- [vlan \(VSTP\) on page 86](#)
- [vstp on page 87](#)
- [\[edit protocols layer2-control\] Hierarchy Level on page 88](#)
- [interface \(Layer 2 Protocol Tunneling\) on page 89](#)
- [layer2-control on page 90](#)
- [mac-rewrite on page 91](#)
- [protocol on page 92](#)

---

## [edit protocols mstp] Hierarchy Level

The following statement hierarchy can also be included at the `[edit logical-systems logical-system-name]` hierarchy level.

```
protocols {
 mstp {
 disable;
 backup-bridge-priority priority;
 bpdu-block-on-edge;
 bpdu-destination-mac-address provider-bridge-group;
 bridge-priority priority;
 configuration-name configuration-name;
 forward-delay seconds;
 hello-time seconds;
 interface interface-name {
 bpdu-timeout-action {
 alarm;
 block;
 }
 cost cost;
 edge;
 mode (point-to-point | shared);
 no-root-port;
 priority interface-priority;
 }
 max-age seconds;
 max-hops hops;
 msti identifier {
 backup-bridge-priority priority;
 bridge-priority priority;
 interface interface-name {
 cost cost;
 priority interface-priority;
 }
 vlan [vlan-ids];
 }
 priority-hold-time seconds;
 revision-level revision-level;
 system-id mac-address {
 ip-address ip-address </prefix-length>;
 }
 traceoptions {
```

```

 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 flag flag <disable>;
 }
 vpls-flush-on-topology-change;
 }
}

```

**Related  
Documentation**

- *Notational Conventions Used in Junos OS Configuration Hierarchies*
- *[edit protocols] Hierarchy Level*

## [edit protocols rstp] Hierarchy Level

The following statement hierarchy can also be included at the **[edit logical-systems *logical-system-name*]** hierarchy level.

```

protocols {
 rstp {
 disable;
 backup-bridge-priority priority;
 bpdu-block-on-edge;
 bpdu-destination-mac-address provider-bridge-group;
 bridge-priority priority;
 extended-system-id id;
 force-version stp;
 forward-delay seconds;
 hello-time seconds;
 interface interface-name {
 bpdu-timeout-action {
 alarm;
 block;
 }
 cost cost;
 edge;
 mode (point-to-point | shared);
 no-root-port;
 priority interface-priority;
 }
 max-age seconds;
 priority-hold-time seconds;
 system-id mac-address {
 ip-address ip-address </prefix-length>;
 }
 traceoptions {
 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 flag flag <disable>;
 }
 vpls-flush-on-topology-change;
 }
}

```

- Related Documentation**
- *Notational Conventions Used in Junos OS Configuration Hierarchies*
  - *[edit protocols] Hierarchy Level*

---

## [edit protocols vstp] Hierarchy Level

The following statement hierarchy can also be included at the [edit logical-systems *logical-system-name*] hierarchy level.

```
protocols {
 vstp {
 disable;
 bpdu-block-on-edge;
 force-version stp;
 interface interface-name {
 access-trunk
 bpdu-timeout-action {
 alarm;
 block;
 }
 cost cost;
 edge;
 mode (point-to-point | shared);
 no-root-port;
 priority interface-priority;
 }
 priority-hold-time seconds;
 system-id mac-address {
 ip-address ip-address </prefix-length>;
 }
 vlan vlan-id {
 ... the vlan subhierarchy appears after the main [edit protocols vstp] hierarchy level ...
 }
 vpls-flush-on-topology-change;
 }

 vstp {
 vlan vlan-id {
 backup-bridge-priority priority;
 bridge-priority priority;
 forward-delay seconds;
 hello-time seconds;
 interface interface-name {
 ... same statements as at the [edit protocols vstp interface interface-name] hierarchy level ...
 }
 max-age seconds;
 traceoptions {
 file filename <files number> <size maximum-file-size> <world-readable | no-world-readable>;
 flag flag <disable>;
 }
 }
 }
}
```

}

- Related Documentation**
- *Notational Conventions Used in Junos OS Configuration Hierarchies*
  - *[edit protocols] Hierarchy Level*

## protocols (STP Type)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> protocols {   mstp { ... }   rstp { ... }   vstp { ... } } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit],<br>[edit logical-systems <i>logical-system-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> ]                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Configure the Spanning Tree Protocol type as MSTP, RSTP, or VSTP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b>mstp</b> —Configure the protocol as Multiple Spanning Tree.<br><br><b>rstp</b> —Configure the protocol as Rapid Spanning Tree.<br><br><b>vstp</b> —Configure the protocol as VLAN Spanning Tree.                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Configuring RSTP (CLI Procedure)</i></li> <li>• <i>Configuring MSTP</i></li> <li>• <i>Configuring MST Instances on a Physical Interface</i></li> <li>• <i>Configuring VLAN Spanning-Tree Protocol</i></li> <li>• <a href="#">Configuring Rapid Spanning-Tree Protocol on page 23</a></li> <li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li> <li>• <a href="#">Configuring VLAN Spanning-Tree Protocol on page 31</a></li> <li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li> </ul> |

## access-trunk

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | access-trunk;                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols vstp]<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vstp]<br>[edit protocols vstp vlan <i>vlan-identifier</i> interface <i>interface-name</i> ]<br>[edit routing-instances <i>routing-instance-name</i> instance-type (layer2-control   virtual-switch)] |
| <b>Description</b>              | Enable untagged RTSP BDPUs to be sent and received on the interface.                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring VSTP on a Trunk Port with Tagged Traffic on page 40</a></li></ul>                                                                                                                                                                                                                                         |

## bpdu-destination-mac-address (Spanning Tree)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | bpdu-destination-mac-address provider-bridge-group;                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ( <a href="#">mstp</a>   <a href="#">rstp</a> )],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ( <a href="#">mstp</a>   <a href="#">rstp</a> )],<br>[edit protocols ( <a href="#">mstp</a>   <a href="#">rstp</a> )],<br>[edit routing-instances <i>routing-instance-name</i> protocols ( <a href="#">mstp</a>   <a href="#">rstp</a> )] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.2.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Enable MX Series router to participate in the provider Rapid Spanning-Tree Protocol (RSTP) instance or a provider Multiple Spanning-Tree Protocol (MSTP) instance.                                                                                                                                                                                                                                                                                                  |
| <b>Default</b>                  | If the <b>bpdu-destination-mac-address</b> statement is not configured, the bridge participates in the customer RSTP instance, transmitting and receiving standard RSTP BPDU packets.                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <b>provider-bridge-group</b> —The destination MAC address of the BPDU packets transmitted is the provider bridge group address <b>01:80:c2:00:00:08</b> . Received BPDU packets with this destination MAC address are accepted and passed to the Routing Engine.                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">BPDU Overview on page 9</a></li><li>• <a href="#">Provider Bridge Participation in RSTP or MSTP Instances on page 15</a></li><li>• <a href="#">Configuring Rapid Spanning-Tree Protocol on page 23</a></li><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li></ul>                                                                                                               |

## bridge-priority

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>bridge-priority <i>priority</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols (<i>mstp</i>   <i>rstp</i>)], [edit logical-systems <i>logical-system-name</i> protocols <i>mstp msti msti-id</i>], [edit logical-systems <i>logical-system-name</i> protocols <i>vstp vlan vlan-id</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <i>mstp msti msti-id</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <i>vstp vlan vlan-id</i>], [edit protocols (<i>mstp</i>   <i>rstp</i>)], [edit protocols <i>mstp msti msti-id</i>], [edit protocols <i>vstp vlan vlan-id</i>], [edit routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)], [edit routing-instances <i>routing-instance-name</i> protocols <i>mstp msti msti-id</i>], [edit routing-instances <i>routing-instance-name</i> protocols <i>vstp vlan vlan-id</i>]</pre> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Determine which bridge is elected as the root bridge. If two bridges have the same path cost to the root bridge, the bridge priority determines which bridge becomes the designated bridge for a LAN segment.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b><i>priority</i></b>—The bridge priority can be set only in increments of 4096.</p> <p><b>Range:</b> 0 through 61,440</p> <p><b>Default:</b> 32,768</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Bridge Priority for Election of Root Bridge and Designated Bridge on page 16</a></li> <li>• <a href="#">Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</a></li> <li>• <a href="#">Understanding MSTP for EX Series and QFX Series Switches</a></li> <li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## configuration-name

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>configuration-name <i>configuration-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <a href="#">mstp</a> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ],<br>[edit protocols <a href="#">mstp</a> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ]                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Specify the configuration name , which is the MSTP region name carried in the MSTP BPDUs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">BPDU Overview on page 9</a></li><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li><li>• <a href="#">Configuring MSTP</a></li><li>• <a href="#">show spanning-tree bridge</a></li><li>• <a href="#">show spanning-tree interface</a></li><li>• <a href="#">Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</a></li><li>• <a href="#">Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</a></li><li>• <a href="#">Understanding MSTP for EX Series and QFX Series Switches</a></li></ul> |



## cost

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>cost cost;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <b>mstp</b> <b>msti</b> <i>msti-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>mstp</b> <b>msti</b> <i>msti-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols <b>mstp</b> <b>msti</b> <i>msti-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>mstp</b> <b>msti</b> <i>msti-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Configure link cost to control which bridge is the designated bridge and which port is the designated port. By default, the link cost is determined by the link speed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>cost</b>—(Optional) Link cost associated with the port.</p> <p><b>Range:</b> 1 through 200,000,000</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Spanning-Tree Instance Interface on page 17</a></li> <li>• <a href="#">Spanning-Tree Instance Interface Cost on page 19</a></li> <li>• <code>show spanning-tree bridge</code></li> <li>• <code>show spanning-tree interface</code></li> <li>• <a href="#">Understanding RSTP for EX Series and QFX Series Switches</a></li> <li>• <a href="#">Understanding MSTP for EX Series and QFX Series Switches</a></li> <li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## disable

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <a href="#">mstp</a> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ],<br>[edit protocols <a href="#">mstp</a>  rstp  vstp],<br>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ]                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.1.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Disable the entire MSTP, RSTP, or VSTP instance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li><li>• <a href="#">Disabling MSTP on page 30</a></li><li>• <i>show spanning-tree bridge</i></li><li>• <i>show spanning-tree interface</i></li><li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li><li>• <i>Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</i></li><li>• <i>Understanding RSTP for EX Series and QFX Series Switches</i></li><li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li></ul> |

## edge

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | edge;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <b>mstp msti msti-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <b>vstp vlan vlan-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>mstp msti msti-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>vstp vlan vlan-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols <b>mstp msti msti-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols <b>vstp vlan vlan-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>mstp msti msti-id</b> <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>vstp vlan vlan-id</b> <b>interface</b> <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Configure interfaces as edge ports. Edge ports do not expect to receive BPDUs. If a BPDU is received, the port becomes a nonedge port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Spanning-Tree Instance Interface on page 17</a></li> <li>• <a href="#">Spanning-Tree Instance Interface Configured as an Edge Port on page 20</a></li> <li>• <i>show spanning-tree bridge</i></li> <li>• <i>show spanning-tree interface</i></li> <li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li> <li>• <i>Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</i></li> <li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## extended-system-id

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>extended-system-id <i>identifier</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <a href="#">rstp</a> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">rstp</a> ],<br>[edit protocols <a href="#">rstp</a> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">rstp</a> ]                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.3.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | The extended system ID is used to specify different bridge identifiers for different RSTP or STP routing instances.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <i>identifier</i> —Specify the system identifier to use for the RSTP or STP instance.<br><b>Range:</b> 0 through 4095                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">System Identifier for Bridges in STP or RSTP Instances on page 16</a></li><li>• <a href="#">Configuring Rapid Spanning-Tree Protocol on page 23</a></li><li>• <a href="#">Configuring RSTP (CLI Procedure)</a></li><li>• <a href="#">Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</a></li><li>• <a href="#">Understanding RSTP for EX Series and QFX Series Switches</a></li></ul> |

## force-version (IEEE 802.1D STP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | force-version stp;                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ( <a href="#">rstp</a>   <a href="#">vstp</a> )],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ( <a href="#">rstp</a>   <a href="#">vstp</a> )],<br>[edit protocols ( <a href="#">rstp</a>   <a href="#">vstp</a> )],<br>[edit routing-instances <i>routing-instance-name</i> protocols ( <a href="#">rstp</a>   <a href="#">vstp</a> )]              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Force the spanning-tree protocol version to be the original IEEE 802.1D STP.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Spanning-Tree Protocols Supported on page 7</a></li> <li>• <a href="#">RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14</a></li> <li>• <a href="#">Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 14</a></li> <li>• <a href="#">Understanding RSTP for EX Series and QFX Series Switches</a></li> <li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li> </ul> |

## forward-delay

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>forward-delay seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols</code><br><code>    (<i>mstp</i>   <i>rstp</i>)],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols</code><br><code>    <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</code><br><code>[edit protocols (<i>mstp</i>   <i>rstp</i>)],</code><br><code>[edit protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</code><br><code>[edit routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>]</code> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | For Rapid Spanning Tree Protocol (RSTP), VLAN Spanning Tree Protocol (VSTP), or Multiple Spanning Tree Protocol (MSTP), specify how long a bridge interface remains in the listening and learning states before transitioning to the forwarding state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <b>seconds</b> —(Optional) Number of seconds the bridge port remains in the listening and learning states.<br><b>Range:</b> 4 through 30<br><b>Default:</b> 15 seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | <b>routing</b> —To view this statement in the configuration.<br><b>routing-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Forward Delay Before Ports Transition to Forwarding State on page 17</a></li><li>• <code>show spanning-tree bridge</code></li><li>• <code>show spanning-tree interface</code></li><li>• <a href="#">Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</a></li><li>• <a href="#">Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</a></li><li>• <a href="#">Understanding MSTP for EX Series and QFX Series Switches</a></li><li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li></ul>                                                                                                                                                                                                                                                                                                    |

## hello-time

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hello-time seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Specify the number of seconds between transmissions of configuration BPDUs by the root bridge.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b>seconds</b>—(Optional) Number of seconds between transmissions of configuration BPDUs.</p> <p><b>Range:</b> 1 through 10</p> <p><b>Default:</b> 2 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Hello Time for Root Bridge to Transmit Hello BPDUs on page 17</a></li> <li>• <i>show spanning-tree bridge</i></li> <li>• <i>show spanning-tree interface</i></li> <li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li> <li>• <i>Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</i></li> <li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li> <li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li> </ul>                                                                                                                                                                                                                                      |

## interface (Spanning Tree)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface <i>interface-name</i> {<br/>    bpd-<i>timeout-action</i> {<br/>        alarm;<br/>        block;<br/>    }<br/>    <i>cost</i> <i>cost</i>;<br/>    <i>edge</i>;<br/>    <i>mode</i> (p2p   shared);<br/>    no-root-port;<br/>    <i>priority</i> <i>interface-priority</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols (<i>mstp</i>   <i>rstp</i>   <i>vstp</i>)],<br/>[edit logical-systems <i>logical-system-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],<br/>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br/>  (<i>mstp</i>   <i>rstp</i>   <i>vstp</i>)],<br/>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br/>  <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],<br/>[edit protocols (<i>mstp</i>   <i>rstp</i>   <i>vstp</i>)],<br/>[edit protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],<br/>[edit routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>   <i>vstp</i>)],<br/>[edit routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>]</pre> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Configure the interface to participate in the RSTP, MSTP, or VSTP instance.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><i>interface-name</i>—Name of a Gigabit Ethernet or 10-Gigabit Ethernet interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Spanning-Tree Instance Interface on page 17</a></li><li>• <i>show spanning-tree interface</i></li><li>• <i>Understanding RSTP for EX Series and QFX Series Switches</i></li><li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li><li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |



## max-age

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>max-age seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<i>mstp</i>   <i>rstp</i>)],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <i>vstp</i> <i>vlan</i> <i>vlan-id</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Specify the maximum expected arrival time of hello BPDUs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>seconds</b>—(Optional) Number of seconds expected between hello BPDUs.</p> <p><b>Range:</b> 6 through 40</p> <p><b>Default:</b> 20 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Maximum Age for Awaiting Arrival of Hello BPDUs on page 17</a></li> <li>• <i>show spanning-tree bridge</i></li> <li>• <i>show spanning-tree interface</i></li> <li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li> <li>• <i>Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</i></li> <li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li> <li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li> </ul>                                                                                                                                                                                                                                         |

## max-hops

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>max-hops hops;</code>                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <a href="#">mstp</a> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ],<br>[edit protocols <a href="#">mstp</a> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ]                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                   |
| <b>Description</b>              | Configure the maximum number of hops a BPDU can be forwarded in the MSTP region.                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <b>hops</b> —(Optional) Number of hops the BPDU can be forwarded.<br><b>Range:</b> 1 through 255<br><b>Default:</b> 19 hops                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li><li>• <i>Configuring MSTP</i></li><li>• <i>show spanning-tree bridge</i></li><li>• <i>show spanning-tree interface</i></li><li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li><li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li></ul> |

## mode (Protocols STP)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>mode (p2p   shared);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<b>mstp</b>   <b>rstp</b>   <b>vstp</b>) <b>interface</b> <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>vstp</b> <b>vlan</b> <i>vlan-id</i> <b>interface</b> <i>interface-name</i>]</p> |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>         | Configure link mode to identify point-to-point links.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |



**NOTE:** When the link is configured as full-duplex, the default link mode is p2p. When the link is configured half-duplex, the default link mode is shared.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | <p><b>p2p</b>—The link is point to point.</p> <p><b>shared</b>—The link is shared media.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Spanning-Tree Instance Interface on page 17</a></li> <li>• <a href="#">Spanning-Tree Instance Interface Point-to-Point Link Mode on page 19</a></li> <li>• <code>show spanning-tree bridge</code></li> <li>• <code>show spanning-tree interface</code></li> <li>• <a href="#">Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</a></li> <li>• <a href="#">Example: Configuring Faster Convergence and Improved Network Stability with RSTP on EX Series Switches</a></li> <li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li> </ul> |

## msti

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>msti <i>msti-id</i> {<br/>    bridge-priority <i>priority</i>;<br/>    vlan (<i>vlan-id</i>   <i>vlan-range</i>   <i>open-set-of-values</i>);<br/>    interface (<i>interface-name</i>   all) {<br/>        cost <i>cost</i>;<br/>        edge;<br/>        priority <i>interface-priority</i>;<br/>    }<br/>}</pre>                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <b>mstp</b> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>mstp</b> ],<br>[edit protocols <b>mstp</b> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols <b>mstp</b> ]                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Configure the multiple spanning-tree instance (MSTI) identifier.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>msti-id</b>—MSTI instance identifier.</p> <p><b>Range:</b> 1 through 64</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li><li>• <a href="#">Configuring MST Instances on a Physical Interface on page 29</a></li><li>• <i>show spanning-tree bridge</i></li><li>• <i>show spanning-tree interface</i></li><li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li><li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li></ul> |

## mstp

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax              | <pre> mstp {   bpdn-block-on-edge;   bridge-priority priority;   configuration-name configuration-name;   disable;   forward-delay seconds;   hello-time seconds;   max-age seconds;   max-hops hops;   priority-hold-time seconds;   revision-level revision-level;   interface interface-name {     bpdn-timeout-action {       alarm;       block;     }     cost cost;     edge;     mode (p2p   shared);     no-root-port;     priority interface-priority;   }   msti msti-id {     bridge-priority priority;     interface interface-name {       cost cost;       edge;       priority interface-priority;     }     vlan vlan-id;   }   traceoptions {     file filename &lt;files number&gt; &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;     flag flag &lt;flag-modifier&gt; &lt;disable&gt;;   } } </pre> |
| Hierarchy Level     | <p>[edit logical-systems <i>logical-system-name</i> protocols],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols],</p> <p>[edit protocols],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Release Information | <p>Statement introduced in Junos OS Release 8.4.</p> <p><b>bpdn-block-on-edge</b> statement added in Junos OS Release 9.4.</p> <p><b>bpdn-timeout-action</b> statement added in Junos OS Release 9.4.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Description         | Configure MSTP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Options             | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

|                                 |                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li></ul> |

## priority (Protocols STP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>priority interface-priority;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols (<a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a>) <a href="#">interface interface-name</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <a href="#">mstp msti msti-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols <a href="#">vstp vlan vlan-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (<a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a>) <a href="#">interface interface-name</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp msti msti-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">vstp vlan vlan-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit protocols (<a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a>) <a href="#">interface interface-name</a>],</p> <p>[edit protocols <a href="#">mstp msti msti-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit protocols <a href="#">vstp vlan vlan-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (<a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a>) <a href="#">interface interface-name</a>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp msti msti-id</a> <a href="#">interface interface-name</a>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">vstp vlan vlan-id</a> <a href="#">interface interface-name</a>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Use the interface priority to control which interface is elected as the root port. The interface priority must be set in increments of 16.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b>priority</b>—(Optional) Interface priority.</p> <p><b>Range:</b> 0 through 240</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Spanning-Tree Instance Interface on page 17</a></li> <li>• <a href="#">Spanning-Tree Instance Interface Configured as an Edge Port on page 20</a></li> <li>• <a href="#">Spanning-Tree Instance Interface Priority on page 18</a></li> <li>• <a href="#">[edit protocols mstp] Configuration Statement Hierarchy on EX Series Switches</a></li> <li>• <a href="#">[edit protocols rstp] Configuration Statement Hierarchy on EX Series and QFX Series Switches</a></li> <li>• <a href="#">[edit protocols vstp] Configuration Statement Hierarchy on EX Series and QFX Series Switches</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## revision-level

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>revision-level <i>revision-level</i>;</code>                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <a href="#">mstp</a> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ],<br>[edit protocols <a href="#">mstp</a> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols <a href="#">mstp</a> ]                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                 |
| <b>Description</b>              | Set the revision number of the MSTP configuration.                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <i>revision-level</i> —Configure the revision number of the MSTP region configuration.<br><b>Range:</b> 0 through 65,535                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li><li>• <i>show spanning-tree bridge</i></li><li>• <i>show spanning-tree interface</i></li><li>• <i>Example: Configuring Network Regions for VLANs with MSTP on EX Series Switches</i></li><li>• <i>Understanding MSTP for EX Series and QFX Series Switches</i></li></ul> |



## rstp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> rstp {   bpd-block-on-edge;   bpd-destination-mac-address provider-bridge-group;   bridge-priority priority;   extended-system-id;   force-version stp;   forward-delay seconds;   hello-time seconds;   max-age seconds;   interface interface-name {     bpd-timeout-action {       alarm;       block;     }     cost cost;     edge;     mode (p2p   shared);     no-root-port;     priority interface-priority;   }   priority-hold-time seconds;   traceoptions {     file filename &lt;files number&gt; &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;     flag flag &lt;flag-modifier&gt; &lt;disable&gt;;   } } </pre> |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols],</p> <p>[edit protocols],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols]</p>                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p><b>bpd-block-on-edge</b> statement added in Junos OS Release 9.4.</p> <p><b>bpd-timeout-action</b> statement added in Junos OS Release 9.4.</p> <p>Support for logic systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Configure RSTP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Rapid Spanning-Tree Protocol on page 23</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## traceoptions (Spanning Tree)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag <i>flag</i> &lt;flag-modifier&gt; &lt;disable&gt;;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols ( <a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a> )],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols<br>( <a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a> )],<br>[edit protocols ( <a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a>   vstp vlan <i>vlan-id</i> )],<br>[edit routing-instances <i>routing-instance-name</i> protocols ( <a href="#">mstp</a>   <a href="#">rstp</a>   <a href="#">vstp</a> )]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b> | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>         | Set protocol-level tracing options for spanning-tree protocols..                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Default</b>             | The default STP protocol-level trace options are inherited from the global <b>traceoptions</b> statement.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>             | <p><b>disable</b>—(Optional) Disable the tracing operation. One use of this option is to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>file <i>filename</i></b>—Name of the file to receive the output of the tracing operation. Enclose the name in quotation marks. We recommend that you place STP tracing output in the file <code>/var/log/stp-log</code>.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you must also specify a maximum file size with the <b>size</b> option.</p> <p><b>Range:</b> 2 through 1000 files<br/><b>Default:</b> 1 trace file only</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the STP-specific tracing options:</p> <ul style="list-style-type: none"><li>• <b>all</b>—Trace all operations.</li><li>• <b>all-failures</b>—Trace all failure conditions.</li><li>• <b>bpdv</b>—Trace BPDU reception and transmission.</li><li>• <b>bridge-detection-state-machine</b>—Trace the bridge detection state machine.</li></ul> |

- **events**—Trace events of the protocol state machine.
- **port-information-state-machine**—Trace the port information state machine.
- **port-migration-state-machine**—Trace the port migration state machine.
- **port-receive-state-machine**—Trace the port receive state machine.
- **port-role-transit-state-machine**—Trace the port role transit state machine.
- **port-role-select-state-machine**—Trace the port role selection state machine.
- **port-state-transit-state-machine**—Trace the port state transit state machine.
- **port-transmit-state-machine**—Trace the port transmit state machine.
- **ppmd**—Trace the state and events for the ppm process.
- **state-machine-variables**—Trace when the state machine variables change.
- **timers**—Trace protocol timers.
- **topology-change-state-machine**—Trace the topology change state machine.

The following are the global tracing options:

- **all**—All tracing operations.
- **config-internal**—Trace configuration internals.
- **general**—Trace general events.
- **normal**—All normal events.

**Default:** If you do not specify this option, only unusual or abnormal operations are traced.

- **parse**—Trace configuration parsing.
- **policy**—Trace policy operations and actions.
- **regex-parse**—Trace regular-expression parsing.
- **route**—Trace routing table changes.
- **state**—Trace state transitions.
- **task**—Trace protocol task processing.
- **timer**—Trace protocol task timer processing.

**no-world-readable**—(Optional) Prevent any user from reading the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB) or megabytes (MB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you must also specify a maximum number of trace files with the **files** option.

**Syntax:** **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|

|                              |                                                                                                                                                                                                                                                                                 |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Spanning-Tree Protocol Trace Options on page 20</a></li><li>• <a href="#">Tracing Spanning-Tree Operations on page 35</a></li><li>• <a href="#">Example: Tracing Spanning-Tree Protocol Operations on page 39</a></li></ul> |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## vlan (MSTP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>vlan <i>vlan-id</i>;</code>                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols <b>mstp msti msti-id</b>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols <b>mstp msti msti-id</b>],</p> <p>[edit protocols <b>mstp msti msti-id</b>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols <b>mstp msti msti-id</b>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                 |
| <b>Description</b>              | Configure the VLAN of an MSTI or VSTP instance or configure the VLAN range of an MSTI.                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b><i>vlan-id</i></b>—The VLAN identifier associated with the MSTI.</p> <p><b><i>vlan-id-range</i></b>—Range of VLAN identifiers associated with the MSTI in the form <i>minimum-vlan-id-maximum-vlan-id</i>. VLAN identifier ranges are not supported for VSTP.</p> <p><b>Range:</b> 1 through 4096</p>                                                                                |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Multiple Spanning-Tree Protocol on page 26</a></li> <li>• <a href="#">Understanding VSTP for EX Series Switches and QFX Series Switches</a></li> </ul>                                                                                                                                                                    |

## vlan (VSTP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>vlan <i>vlan-id</i> {<br/>    <b>bridge-priority</b> <i>priority</i>;<br/>    <b>forward-delay</b> <i>seconds</i>;<br/>    <b>hello-time</b> <i>seconds</i>;<br/>    <b>max-age</b> <i>seconds</i>;<br/>    <b>interface</b> <i>interface-name</i> {<br/>        <b>cost</b> <i>cost</i>;<br/>        <b>edge</b>;<br/>        <b>mode</b> (p2p   shared);<br/>        <b>no-root-port</b>;<br/>        <b>priority</b> <i>interface-priority</i>;<br/>    }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <b>vstp</b> ],<br>[edit protocols <b>vstp</b> ]                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for logical systems added in Junos OS Release 9.6.                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Configure VSTP VLAN parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring VLAN Spanning-Tree Protocol on page 31</a></li><li>• <i>Understanding VSTP for EX Series Switches and QFX Series Switches</i></li></ul>                                                                                                                                                                                                                                                                       |

## vstp

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> vstp {   bpd-block-on-edge;   force-version stp;   interface <i>interface-name</i> {     bpd-timeout-action {       alarm;       block;     }     cost <i>cost</i>;     edge;     mode (p2p   shared);     no-root-port;     priority <i>interface-priority</i>;   }   priority-hold-time <i>seconds</i>;   vlan <i>vlan-id</i> {     bridge-priority <i>priority</i>;     forward-delay <i>seconds</i>;     hello-time <i>seconds</i>;     max-age <i>seconds</i>;     interface <i>interface-name</i> {       access-trunk       bpd-timeout-action {         alarm;         block;       }       cost <i>cost</i>;       edge;       mode (p2p   shared);       no-root-port;       priority <i>interface-priority</i>;     }   }   traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;flag-modifier&gt; &lt;disable&gt;;   } } </pre> |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols],<br/> [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols],<br/> [edit protocols],<br/> [edit routing-instances <i>routing-instance-name</i> protocols]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 9.0.<br/> <b>bpd-block-on-edge</b> statement added in Junos OS Release 9.4.<br/> <b>bpd-timeout-action</b> statement added in Junos OS Release 9.4.<br/> Support for logical systems added in Junos OS Release 9.6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>         | Configure VSTP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|                                 |                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Options</b>                  | The statements are explained separately.                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring VLAN Spanning-Tree Protocol on page 31</a></li></ul> |

---

## [edit protocols layer2-control] Hierarchy Level

The following statement hierarchy can also be included at the **[edit logical-systems *logical-system-name*]** hierarchy level.

```
protocols {
 layer2-control {
 bpdu-block {
 disable-timeout seconds;
 interface [interface-names];
 }
 mac-rewrite {
 interface interface-name {
 enable-all-ifl;
 protocol {
 cdp;
 stp;
 vtp;
 pvstp;
 }
 }
 }
 nonstop-bridging;
 traceoptions {
 file filename <files number> <size maximum-file-size> <world-readable |
 no-world-readable>;
 flag flag <disable>;
 }
 }
}
```

|                              |                                                                                                                                                                                                                                  |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">layer2-control on page 90</a></li><li>• <i>Notational Conventions Used in Junos OS Configuration Hierarchies</i></li><li>• <i>[edit protocols] Hierarchy Level</i></li></ul> |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|





## interface (Layer 2 Protocol Tunneling)

---

|                                 |                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface <i>interface-name</i> {   enable-all-ifl   <b>protocol</b> (cdp   stp   vtp   pvstp); }</pre>                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit protocols <b>layer2-control</b> <b>mac-rewrite</b> ]                                                                                                                                                                                                                            |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 9.1.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p><b>enable-all-if</b> statement added in Junos OS Release 13.3.</p> <p>Support for PVSTP protocol introduced in Junos OS Release 13.3.</p> |
| <b>Description</b>              | <p>Configure an interface for Layer 2 protocol tunneling.</p> <p>The remaining statement is explained separately.</p>                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Layer 2 Protocol Tunneling Through a Network Overview</i></li> </ul>                                                                                                                                                                      |

## layer2-control

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <pre> layer2-control {   bpd-block {     disable-timeout <i>seconds</i>;     interface <i>interface-name</i>;   }   mac-rewrite {     interface <i>interface-name</i> {       enable-all-ifl       protocol ( 802.1X   802.3AH   CDP   LACP   LLDP   MVRP   STP   VTP   GVRP   VSTP );     }   }   nonstop-bridging;   traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>maximum-file-size</i>&gt; &lt;world-readable         no-world-readable&gt;;     flag <i>flag</i> &lt;disable&gt;;   } } </pre> |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | [edit protocols]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <p>Statement introduced in Junos OS Release 8.4.</p> <p><b>bpd-block</b> statement added in Junos OS Release 9.4.</p> <p><b>enable-all-if</b> statement added in Junos OS Release 13.3.</p> <p>Support for PVSTP protocol introduced in Junos OS Release 13.3.</p> <p>Statement introduced in Junos OS Release 14.1X53-D10 for EX Series switches.</p>                                                                                                                                                                                |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Configure Layer 2 control protocols to enable features such as Layer 2 protocol tunneling or nonstop bridging.                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <div>  <p><b>NOTE:</b> On EX4300 switches, the <b>mac-rewrite</b> statement does not support the 802.1X authentication protocol.</p> </div> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <div>  <p><b>NOTE:</b> For a detailed description of configuring the <b>nonstop-bridging</b> statement, see the <i>Junos OS High Availability Library for Routing Devices</i>. When this statement is configured on routing platforms with two Routing Engines, a master Routing Engine switches over gracefully to a backup Routing Engine and preserves Layer 2 Control Protocol (L2CP) information.</p> </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                    |

- Related Documentation**
- *Layer 2 Protocol Tunneling Through a Network Overview*
  - *Layer 2 Protocol Tunnel Interface*
  - *Layer 2 Protocol to be Tunneled*
  - *Configuring Layer 2 Protocol Tunneling*
  - *instance-type*

## mac-rewrite

**Syntax**

```
mac-rewrite {
 interface interface-name {
 enable-all-ifl
 protocol (802.1X | 802.3AH | CDP | LACP | LLDP | MVRP | STP | VTP | GVRP | VSTP);
 }
}
```

**Hierarchy Level** [edit protocols [layer2-control](#)]

**Release Information** Statement introduced in Junos OS Release 9.1.  
 Support for PVSTP introduced in Junos OS Release 13.3.  
**enable-all-if** statement added in Junos OS Release 13.3.  
 Support for PVSTP protocol introduced in Junos OS Release 13.3.  
 Statement introduced in Junos OS Release 14.1X53-D10 for EX Series switches.

**Description** Enable rewriting of the MAC address for Layer 2 protocol tunneling.



**NOTE:** On EX4300 switches, the **mac-rewrite** statement does not support the 802.1X authentication protocol.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

- Related Documentation**
- *Layer 2 Protocol Tunneling Through a Network Overview*

## protocol

---

|                                 |                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>protocol (cdp   stp   vtp   pvstp);</code>                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols <a href="#">layer2-control</a> <a href="#">mac-rewrite</a> interface <i>interface-name</i> ]                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.1.<br>Statement introduced in Junos OS Release 13.2 for QFX series.<br>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.<br>Support for PVSTP introduced in Junos OS Release 13.3.                   |
| <b>Description</b>              | Configure the protocol to be tunneled on an interface for Layer 2 protocol tunneling. To tunnel multiple protocols, include multiple <b>protocol</b> statements.                                                                                                           |
| <b>Options</b>                  | <b>cdp</b> —Tunnel the Cisco discovery protocol.<br><br><b>stp</b> —Tunnel all versions of the spanning-tree protocol.<br><br><b>vtp</b> —Tunnel the VLAN trunk protocol.<br><br><b>pvstp</b> —Tunnel the Per-VLAN Spanning Tree Plus (PVST+) protocol                     |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Layer 2 Protocol Tunneling Through a Network Overview</i></li><li>• <i>Layer 2 Protocol Tunnel Interface</i></li><li>• <i>Layer 2 Protocol to be Tunneled</i></li><li>• <i>Configuring Layer 2 Protocol Tunneling</i></li></ul> |

## PART 3

# Administration

- [Managing Spanning-Tree Protocol Mode on page 95](#)
- [Managing Spanning-Tree Instance Interface Status on page 97](#)
- [Operational Mode Commands for Basic Spanning-Tree Configuration on page 101](#)
- [Operational Mode Commands for Spanning-Tree Statistics on page 121](#)



# Managing Spanning-Tree Protocol Mode

- [Reverting to RSTP or VSTP from Forced IEEE 802.1D STP on page 95](#)

## Reverting to RSTP or VSTP from Forced IEEE 802.1D STP

---

On MX Series routers and EX Series and QFX Series switches on which Rapid Spanning Tree Protocol (RSTP) or VLAN Spanning Tree Protocol (VSTP) has been forced to run as the original IEEE 802.1D Spanning Tree Protocol (STP) version, you can revert back to RSTP or VSTP.

To revert from the forced instance of the original IEEE 802.1D STP version to the originally configured RSTP or VSTP version:

1. Remove the **force-version** statement from the following RSTP or VSTP configuration:

```
user@host# delete protocols rstp force-version stp
user@host# delete protocols vstp force-version stp
```

Include this statement at the following hierarchy levels:

- [edit logical-systems *routing-instance-name* protocols **rstp**]
- [edit protocols **rstp**]
- [edit protocols **vstp**]
- [edit routing-instances *routing-instance-name* protocols **rstp**]
- [edit routing-instances *routing-instance-name* protocols **vstp**]

2. Revert the forced IEEE 802.1D STP to run as the configured RSTP or VSTP:

```
user@host# clear spanning-tree protocol-migration <interface interface-name>
<routing-instance routing-instance-name>
```

To revert the STP protocol globally, issue the statement without options (**clear spanning-tree protocol-migration**).

To revert the STP protocol for the specified interface only, specify the **interface interface-name** option.

To revert the STP protocol for a particular routing instance only, specify the **routing-instance routing-instance-name** option.

- Related Documentation**
- [Spanning-Tree Protocols Supported on page 7](#)
  - [RSTP or VSTP Forced to Run as IEEE 802.1D STP on page 14](#)
  - *Configuring RSTP (CLI Procedure)*
  - *Configuring VLAN Spanning-Tree Protocol*



## CHAPTER 7

# Managing Spanning-Tree Instance Interface Status

- [Checking the Status of Spanning-Tree Instance Interfaces on page 97](#)
- [Clearing the Blocked Status of a Spanning-Tree Instance Interface on page 98](#)
- [Checking for a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface on page 98](#)
- [Clearing a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface on page 99](#)

### Checking the Status of Spanning-Tree Instance Interfaces

---

On an MX Series router with a spanning-tree protocol enabled, the detection of a possible bridging loop from spanning-tree protocol operation can raise a bridge protocol data unit (BPDU) error condition on the affected spanning-tree instance interface.

To check whether a spanning-tree instance interface is blocked due to a BPDU error condition:

1. To check the status of spanning-tree instance interface, use the **show interfaces** command.

```
user@host> show interfaces interface-name
```

2. You can determine the status of the interface as follows:
  - If the **BPDU Error** field is **none**, the interface is enabled.
  - If the **BPDU Error** field is **Detected** and the link is **down**, the interface is blocked.

#### Related Documentation

- [Root Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Individual Spanning-Tree Instance Interfaces](#)
- [BPDU Protection on All Edge Ports of the Bridge](#)
- [Clearing the Blocked Status of a Spanning-Tree Instance Interface on page 98](#)

## Clearing the Blocked Status of a Spanning-Tree Instance Interface

---

To clear the blocked status of a spanning-tree instance interface:

- Use the **clear error bpdu** operational mode command.

```
user@host> clear error bpdu interface interface interface-name
```



**NOTE:** When you configure BPDU protection on individual interfaces (as opposed to on all the edge ports of the bridge), you can use the **disable-timeout seconds** option to specify that a blocked interface is automatically cleared after the specified time interval elapses (unless the interval is 0). For configuration details, see *Configuring BPDU Protection on Individual Interfaces*.

### Related Documentation

- [Root Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Spanning-Tree Instance Interfaces Overview](#)
- [BPDU Protection for Individual Spanning-Tree Instance Interfaces](#)
- [BPDU Protection on All Edge Ports of the Bridge](#)
- [Checking the Status of Spanning-Tree Instance Interfaces on page 97](#)

## Checking for a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface

---

To check whether a spanning-tree instance interface is blocked due to a MAC rewrite error condition:

1. Use the **show interfaces** operational mode command:

```
user@host> show interfaces interface-name
```

2. You can determine the status of the interface as follows:

- If the value in the **Physical interface** includes **Enabled, Physical link is Up** and the value of the **BPDU Error** field is **None**, the interface is enabled
- If the value in the **Physical interface** field is **Enabled, Physical link is Down** and the value in the **BPDU Error** field is **Detected**, the interface is blocked.

### Related Documentation

- [Layer 2 Protocol Tunneling Through a Network Overview](#)
- [Configuring Layer 2 Protocol Tunneling](#)
- [Clearing a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface on page 99](#)

## Clearing a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface

To clear the blocked status of a spanning-tree instance interface:

- Use the **clear error bpdu** operational mode command.

```
user@host> clear error bpdu interface interface interface-name
```

### **Related Documentation**

- *Layer 2 Protocol Tunneling Through a Network Overview*
- *Configuring Layer 2 Protocol Tunneling*
- [Checking for a MAC Rewrite Error Condition Blocking a Spanning-Tree Instance Interface on page 98](#)



## CHAPTER 8

# Operational Mode Commands for Basic Spanning-Tree Configuration

- `clear spanning-tree protocol-migration`
- `clear spanning-tree stp-buffer`
- `show spanning-tree bridge`
- `show spanning-tree interface`
- `show spanning-tree mstp configuration`
- `show spanning-tree stp-buffer see-all`

## clear spanning-tree protocol-migration

---

|                                 |                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear spanning-tree protocol-migration</code><br><code>&lt;interface <i>interface-name</i>&gt;</code><br><code>&lt;routing-instance <i>routing-instance-name</i>&gt;</code>                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0.                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Revert from the original IEEE 802.1D Spanning Tree Protocol (STP) back to the Rapid Spanning Tree Protocol after the <b>force-version</b> statement has been removed from the configuration.                                                                                                                                           |
| <b>Options</b>                  | <b>none</b> —Reset the STP protocol for all interfaces and all routing instances.<br><br><b>interface <i>interface-name</i></b> —(Optional) Reset the STP protocol for the specified interface only.<br><br><b>routing-instance <i>routing-instance-name</i></b> —(Optional) Reset the STP protocol for a particular routing instance. |
| <b>Additional Information</b>   | For information about the <b>force-version</b> statement, see the <i>Junos Routing Protocols Configuration Guide</i> .                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                                                                                                                                                  |

## Sample Output

### clear spanning-tree protocol-migration

```
user@host> clear spanning-tree protocol-migration
```

## clear spanning-tree stp-buffer

---

|                                 |                                                                        |
|---------------------------------|------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear spanning-tree stp-buffer                                         |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                           |
| <b>Description</b>              | Clear the stp-buffer.                                                  |
| <b>Required Privilege Level</b> | clear                                                                  |
| <b>List of Sample Output</b>    | <a href="#">clear spanning-tree stp-buffer (MX Series) on page 103</a> |

### Sample Output

#### clear spanning-tree stp-buffer (MX Series)

```
user@host> clear spanning-tree stp-buffer
```

## show spanning-tree bridge

**List of Syntax** [Syntax on page 104](#)  
[Syntax \(QFX Series\) on page 104](#)

**Syntax** show spanning-tree bridge  
 <brief | detail>  
 <msti *msti-id*>  
 <routing-instance *routing-instance-name*>  
 <vlan-id *vlan-id*>

**Syntax (QFX Series)** show spanning-tree bridge  
 <brief | detail>  
 <msti *msti-id*>  
 <vlan-id *vlan-id*>

**Release Information** Command introduced in Junos OS Release 8.4.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.

**Description** Display the configured or calculated Spanning Tree Protocol (STP) parameters.

**Options** **none**—(Optional) Display brief STP bridge information for all multiple spanning-tree instances (MSTIs).

**brief | detail**—(Optional) Display the specified level of output.

**msti *msti-id***—(Optional) Display STP bridge information for the specified MSTI.

**routing-instance *routing-instance-name***—(Optional) Display STP bridge information for the specified routing instance.

**vlan-id *vlan-id***—(Optional) Display STP bridge information for the specified VLAN.

**Required Privilege Level** view

**List of Sample Output** [show spanning-tree bridge routing-instance on page 105](#)  
[show spanning-tree bridge msti on page 106](#)  
[show spanning-tree bridge vlan-id \(MSTP\) on page 107](#)  
[show spanning-tree bridge \(RSTP\) on page 107](#)  
[show spanning-tree bridge vlan-id \(RSTP\) on page 108](#)

**Output Fields** [Table 4 on page 104](#) lists the output fields for the **show spanning-tree bridge** command. Output fields are listed in the approximate order in which they appear.

**Table 4: show spanning-tree bridge Output Fields**

| Field Name            | Field Description                                                  |
|-----------------------|--------------------------------------------------------------------|
| Routing instance name | Name of the routing instance under which the bridge is configured. |
| Enabled protocol      | Spanning Tree Protocol type enabled.                               |



Table 4: show spanning-tree bridge Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Root ID                         | Bridge ID of the elected spanning-tree root bridge. The bridge ID consists of a configurable bridge priority and the MAC address of the bridge. |
| Root cost                       | Calculated cost to reach the root bridge from the bridge where the command is entered.                                                          |
| Root port                       | Interface that is the current elected root port for this bridge.                                                                                |
| CIST regional root              | Bridge ID of the elected MSTP regional root bridge.                                                                                             |
| CIST internal root cost         | Calculated cost to reach the regional root bridge from the bridge where the command is entered.                                                 |
| Hello time                      | Configured number of seconds between transmissions of configuration bridge protocol data units (BPDUs).                                         |
| Maximum age                     | Configured maximum expected arrival time of hello bridge protocol data units (BPDUs).                                                           |
| Forward delay                   | How long an STP bridge port remains in the listening and learning states before transitioning to the forwarding state.                          |
| Hop count                       | Configured maximum number of hops a BPDU can be forwarded in the MSTP region.                                                                   |
| Message age                     | Number of elapsed seconds since the most recent BPDU was received.                                                                              |
| Number of topology changes      | Total number of STP topology changes detected since the routing device last booted.                                                             |
| Time since last topology change | Number of elapsed seconds since the most recent topology change.                                                                                |
| Bridge ID (Local)               | Locally configured bridge ID. The bridge ID consists of a configurable bridge priority and the MAC address of the bridge.                       |
| Extended system ID              | System identifier.                                                                                                                              |
| MSTI regional root              | Bridge ID of the elected MSTP regional root bridge.                                                                                             |

## Sample Output

### show spanning-tree bridge routing-instance

```

user@host> show spanning-tree bridge routing-instance vs1 detail
STP bridge parameters
Routing instance name : vs1
Enabled protocol : MSTP

```

```
STP bridge parameters for CIST
 Root ID : 32768.00:13:c3:9e:c8:80
 Root cost : 0
 Root port : ge-10/2/0
 CIST regional root : 32768.00:13:c3:9e:c8:80
 CIST internal root cost : 22000
 Hello time : 2 seconds
 Maximum age : 20 seconds
 Forward delay : 15 seconds
 Hop count : 18
 Message age : 0
 Number of topology changes : 1
 Time since last topology change : 1191 seconds
 Local parameters
 Bridge ID : 32768.00:90:69:0b:7f:d1
 Extended system ID : 1

STP bridge parameters for MSTI 1
 MSTI regional root : 32769.00:13:c3:9e:c8:80
 Root cost : 22000
 Root port : ge-10/2/0
 Hello time : 2 seconds
 Maximum age : 20 seconds
 Forward delay : 15 seconds
 Hop count : 18
 Number of topology changes : 1
 Time since last topology change : 1191 seconds
 Local parameters
 Bridge ID : 32769.00:90:69:0b:7f:d1
 Extended system ID : 1

STP bridge parameters for MSTI 2
 MSTI regional root : 32770.00:13:c3:9e:c8:80
 Root cost : 22000
 Root port : ge-10/2/0
 Hello time : 2 seconds
 Maximum age : 20 seconds
 Forward delay : 15 seconds
 Hop count : 18
 Number of topology changes : 1
 Time since last topology change : 1191 seconds
 Local parameters
 Bridge ID : 32770.00:90:69:0b:7f:d1
 Extended system ID : 1
```

### show spanning-tree bridge msti

```
user@host> show spanning-tree bridge msti 1 routing-instance vs1 detail
STP bridge parameters
Routing instance name : vs1
Enabled protocol : MSTP

STP bridge parameters for MSTI 1
 MSTI regional root : 32769.00:13:c3:9e:c8:80
 Root cost : 22000
 Root port : xe-10/2/0
 Hello time : 2 seconds
 Maximum age : 20 seconds
 Forward delay : 15 seconds
 Hop count : 18
```

```

Number of topology changes : 1
Time since last topology change : 1191 seconds
Local parameters
 Bridge ID : 32769.00:90:69:0b:7f:d1
 Extended system ID : 1

```

### show spanning-tree bridge vlan-id (MSTP)

```
user@host> show spanning-tree bridge vlan-id 1 101 routing-instance vs1 detail
```

```

STP bridge parameters
Routing instance name : vs1
Enabled protocol : MSTP

STP bridge parameters for CIST
Root ID : 32768.00:13:c3:9e:c8:80
Root cost : 0
Root port : xe-10/2/0
CIST regional root : 32768.00:13:c3:9e:c8:80
CIST internal root cost : 22000
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Hop count : 18
Message age : 0
Number of topology changes : 0
Local parameters
 Bridge ID : 32768.00:90:69:0b:7f:d1
 Extended system ID : 1
 Hello time : 2 seconds
 Maximum age : 20 seconds
 Forward delay : 15 seconds
 Path cost method : 32 bit
 Maximum hop count : 20

```

### show spanning-tree bridge (RSTP)

```
user@host> show spanning-tree bridge
```

```

STP bridge parameters
Routing instance name : GLOBAL
Enabled protocol : RSTP
Root ID : 28672.00:90:69:0b:3f:d0
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Message age : 0
Number of topology changes : 58
Time since last topology change : 14127 seconds
Local parameters
 Bridge ID : 28672.00:90:69:0b:3f:d0
 Extended system ID : 0

STP bridge parameters for bridge VLAN 10
Root ID : 28672.00:90:69:0b:3f:d0
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Message age : 0
Number of topology changes : 58
Time since last topology change : 14127 seconds
Local parameters
 Bridge ID : 28672.00:90:69:0b:3f:d0

```

```
Extended system ID : 0

STP bridge parameters for bridge VLAN 20
Root ID : 28672.00:90:69:0b:3f:d0
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Message age : 0
Number of topology changes : 58
Time since last topology change : 14127 seconds
Local parameters
 Bridge ID : 28672.00:90:69:0b:3f:d0
 Extended system ID : 0
```

#### show spanning-tree bridge vlan-id (RSTP)

```
user@host> show spanning-tree bridge vlan-id 10
STP bridge parameters
Routing instance name : GLOBAL
Enabled protocol : RSTP

STP bridge parameters for VLAN 10
Root ID : 28672.00:90:69:0b:3f:d0
Hello time : 2 seconds
Maximum age : 20 seconds
Forward delay : 15 seconds
Message age : 0
Number of topology changes : 58
Time since last topology change : 14127 seconds
Local parameters
 Bridge ID : 28672.00:90:69:0b:3f:d0
 Extended system ID : 0
```

## show spanning-tree interface

|                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                                 | <a href="#">Syntax on page 109</a><br><a href="#">Syntax (EX Series Switches and the QFX Series) on page 109</a>                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Syntax</b>                                         | <pre>show spanning-tree interface &lt;brief   detail&gt; &lt;msti <i>msti-id</i>&gt; &lt;routing-instance <i>routing-instance-name</i>&gt; &lt;vlan-id <i>vlan-id</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                          |
| <b>Syntax (EX Series Switches and the QFX Series)</b> | <pre>show spanning-tree interface &lt;brief   detail&gt; &lt;msti <i>msti-id</i>&gt; &lt;vlan-id <i>vlan-id</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>                            | <p>Command introduced in Junos OS Release 8.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                                    | Display the configured or calculated interface-level STP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                                        | <p><b>none</b>—Display brief STP interface information.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>msti <i>msti-id</i></b>—(Optional) Display STP interface information for the specified MSTI.</p> <p><b>routing-instance <i>routing-instance-name</i></b>—(Optional) Display STP interface information for the specified routing instance.</p> <p><b>vlan-id <i>vlan-id</i></b>—(Optional) Display STP interface information for the specified VLAN.</p> |
| <b>Required Privilege Level</b>                       | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>                          | <a href="#">show spanning-tree interface on page 110</a><br><a href="#">show spanning-tree interface (QFX Series) on page 111</a><br><a href="#">show spanning-tree interface detail on page 111</a><br><a href="#">show spanning-tree interface msti on page 113</a><br><a href="#">show spanning-tree interface vlan-id on page 113</a><br><a href="#">show spanning-tree interface (VSTP) on page 114</a><br><a href="#">show spanning-tree interface vlan-id (VSTP) on page 114</a>                  |
| <b>Output Fields</b>                                  | <p><a href="#">Table 5 on page 109</a> lists the output fields for the <b>show spanning-tree interface</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                          |

**Table 5: show spanning-tree interface Output Fields**

| Field Name            | Field Description                                                             |
|-----------------------|-------------------------------------------------------------------------------|
| <b>Interface name</b> | Interface configured to participate in the STP, RSTP, VSTP, or MSTP instance. |

Table 5: show spanning-tree interface Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                     |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Port ID</b>              | Logical interface identifier configured to participate in the MSTP or VSTP instance.                                                                                  |
| <b>Designated port ID</b>   | Port ID of the designated port for the LAN segment to which this interface is attached.                                                                               |
| <b>Designated bridge ID</b> | Bridge ID of the designated bridge for the LAN segment to which this interface is attached.                                                                           |
| <b>Port Cost</b>            | Configured cost for the interface.                                                                                                                                    |
| <b>Port State</b>           | STP port state: forwarding ( <b>FWD</b> ), blocking ( <b>BLK</b> ), listening, learning, or disabled.                                                                 |
| <b>Port Role</b>            | MSTP, VSTP, or RSTP port role: designated ( <b>DESG</b> ), backup ( <b>BKUP</b> ), alternate ( <b>ALT</b> ), ( <b>ROOT</b> ), or Root Prevented ( <b>Root-Prev</b> ). |
| <b>Link type</b>            | MSTP, VSTP, or RSTP link type. Shared or point-to-point (pt-pt) and edge or nonedge.                                                                                  |
| <b>Alternate</b>            | Identifies the interface as an MSTP, VSTP, or RSTP alternate root port ( <b>Yes</b> ) or nonalternate root port ( <b>No</b> ).                                        |
| <b>Boundary Port</b>        | Identifies the interface as an MSTP regional boundary port ( <b>Yes</b> ) or nonboundary port ( <b>No</b> ).                                                          |

## Sample Output

### show spanning-tree interface

```
user@host> show spanning-tree interface routing-instance vs1 detail
Spanning tree interface parameters for instance 0
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32768.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32768.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32768.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32768.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32768.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32768.0090690b47d1      | 2000         | FWD   | DESG |

```
Spanning tree interface parameters for instance 1
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32769.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32769.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32769.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32769.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32769.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32769.0090690b47d1      | 2000         | FWD   | DESG |

Spanning tree interface parameters for instance 2

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32770.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32770.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32770.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32770.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32770.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32770.0090690b47d1      | 2000         | FWD   | DESG |

### show spanning-tree interface (QFX Series)

user@1f0> show spanning-tree interface routing-instance vs1 detail

Spanning tree interface parameters for instance 0

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32768.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32768.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32768.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32768.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32768.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32768.0090690b47d1      | 2000         | FWD   | DESG |

Spanning tree interface parameters for instance 1

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32769.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32769.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32769.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32769.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32769.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32769.0090690b47d1      | 2000         | FWD   | DESG |

Spanning tree interface parameters for instance 2

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ae1       | 128:1   | 128:1                 | 32770.0090690b47d1      | 1000         | FWD   | DESG |
| ge-2/1/2  | 128:2   | 128:2                 | 32770.0090690b47d1      | 20000        | FWD   | DESG |
| ge-2/1/5  | 128:3   | 128:3                 | 32770.0090690b47d1      | 29999        | FWD   | DESG |
| ge-2/2/1  | 128:4   | 128:26                | 32770.0013c39ec880      | 20000        | FWD   | ROOT |
| xe-9/2/0  | 128:5   | 128:5                 | 32770.0090690b47d1      | 2000         | FWD   | DESG |
| xe-9/3/0  | 128:6   | 128:6                 | 32770.0090690b47d1      | 2000         | FWD   | DESG |

### show spanning-tree interface detail

user@host> show spanning-tree interface routing-instance vs1 detail

Spanning tree interface parameters for instance 0

```

Interface name : ae1
Port identifier : 128.1
Designated port ID : 128.1
Port cost : 1000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE

```

```
Boundary port : No

Interface name : ge-2/1/2
Port identifier : 128.2
Designated port ID : 128.2
Port cost : 20000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : ge-2/1/5
Port identifier : 128.3
Designated port ID : 128.3
Port cost : 29999
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : ge-2/2/1
Port identifier : 128.4
Designated port ID : 128.26
Port cost : 20000
Port state : Forwarding
Designated bridge ID : 32768.00:13:c3:9e:c8:80
Port role : Root
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : xe-9/2/0
Port identifier : 128.5
Designated port ID : 128.5
Port cost : 2000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : xe-9/3/0
Port identifier : 128.6
Designated port ID : 128.6
Port cost : 2000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No
```

#### Spanning tree interface parameters for instance 1

```
Interface name : ae1
Port identifier : 128.1
Designated port ID : 128.1
Port cost : 1000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
```



```

Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : ge-2/1/2
Port identifier : 128.2
Designated port ID : 128.2
Port cost : 20000
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : ge-2/1/5
Port identifier : 128.3
Designated port ID : 128.3
Port cost : 29999
Port state : Forwarding
Designated bridge ID : 32768.00:90:69:0b:47:d1
Port role : Designated
Link type : Pt-Pt/NONEDGE
Boundary port : No

Interface name : ge-2/2/1
Port identifier : 128.4
Designated port ID : 128.26
Port cost : 20000
Port state : Forwarding
Designated bridge ID : 32768.00:13:c3:9e:c8:80
Port role : Root
Link type : Pt-Pt/NONEDGE
Boundary port : No

...

```

### show spanning-tree interface msti

```

user@host> show spanning-tree interface msti 1 routing-instance vs1 detail
Spanning tree interface parameters for instance 1

```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| xe-7/0/0  | 128:1   | 128:1                 | 32769.0090690b4fd1      | 2000         | FWD   | DESG |
| ge-5/1/0  | 128:2   | 128:2                 | 32769.0090690b4fd1      | 20000        | FWD   | DESG |
| ge-5/1/1  | 128:3   | 128:3                 | 32769.0090690b4fd1      | 20000        | FWD   | DESG |
| ae1       | 128:4   | 128:1                 | 32769.0090690b47d1      | 10000        | BLK   | ALT  |
| ge-5/1/4  | 128:5   | 128:3                 | 32769.0090690b47d1      | 20000        | BLK   | ALT  |
| xe-7/2/0  | 128:6   | 128:6                 | 32769.0090690b47d1      | 2000         | FWD   | ROOT |

### show spanning-tree interface vlan-id

```

user@host> show spanning-tree interface vlan-id 101 routing-instance vs1 detail
Spanning tree interface parameters for instance 0

```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Port<br>Cost | State | Role |
|-----------|---------|-----------------------|-------------------------|--------------|-------|------|
| ge-11/0/5 | 128:1   | 128:1                 | 32768.0090690b7fd1      | 20000        | FWD   | DESG |
| ge-11/0/6 | 128:2   | 128:1                 | 32768.0090690b7fd1      | 20000        | BLK   | BKUP |
| ge-11/1/0 | 128:3   | 128:2                 | 32768.0090690b4fd1      | 20000        | BLK   | ALT  |
| ge-11/1/1 | 128:4   | 128:3                 | 32768.0090690b4fd1      | 20000        | BLK   | ALT  |

|           |       |       |                    |       |     |      |
|-----------|-------|-------|--------------------|-------|-----|------|
| ge-11/1/4 | 128:5 | 128:1 | 32768.0090690b47d1 | 20000 | BLK | ALT  |
| xe-10/0/0 | 128:6 | 128:5 | 32768.0090690b4fd1 | 2000  | BLK | ALT  |
| xe-10/2/0 | 128:7 | 128:4 | 32768.0090690b47d1 | 2000  | FWD | ROOT |

**show spanning-tree interface (VSTP)**

```
user@host> show spanning-tree interface
```

```
Spanning tree interface parameters for instance 0
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Cost  | State | Role |
|-----------|---------|-----------------------|-------------------------|-------|-------|------|
| ge-1/0/1  | 128:1   | 128:1                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |
| ge-1/0/2  | 128:2   | 128:2                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |

```
Spanning tree interface parameters for VLAN 10
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Cost  | State | Role |
|-----------|---------|-----------------------|-------------------------|-------|-------|------|
| ge-1/0/1  | 128:1   | 128:1                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |
| ge-1/0/2  | 128:2   | 128:2                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |

```
Spanning tree interface parameters for VLAN 20
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Cost  | State | Role |
|-----------|---------|-----------------------|-------------------------|-------|-------|------|
| ge-1/0/1  | 128:1   | 128:1                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |
| ge-1/0/2  | 128:2   | 128:2                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |

**show spanning-tree interface vlan-id (VSTP)**

```
user@host> show spanning-tree interface vlan-id 10
```

```
Spanning tree interface parameters for VLAN 10
```

| Interface | Port ID | Designated<br>port ID | Designated<br>bridge ID | Cost  | State | Role |
|-----------|---------|-----------------------|-------------------------|-------|-------|------|
| ge-1/0/1  | 128:1   | 128:1                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |
| ge-1/0/2  | 128:2   | 128:2                 | 28672.0090690b3fe0      | 20000 | FWD   | DESG |

## show spanning-tree mstp configuration

|                                                     |                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                               | <a href="#">Syntax on page 115</a><br><a href="#">Syntax (EX Series Switch and the QFX Series) on page 115</a>                                                                                                                                                                          |
| <b>Syntax</b>                                       | show spanning-tree mstp configuration<br><brief   detail><br><routing-instance <i>routing-instance-name</i> >                                                                                                                                                                           |
| <b>Syntax (EX Series Switch and the QFX Series)</b> | show spanning-tree mstp configuration<br><brief   detail>                                                                                                                                                                                                                               |
| <b>Release Information</b>                          | Command introduced in Junos OS Release 8.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                    |
| <b>Description</b>                                  | Display the MSTP configuration.                                                                                                                                                                                                                                                         |
| <b>Options</b>                                      | <b>none</b> —Display MSTP configuration information.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b>routing-instance <i>routing-instance-name</i></b> —(Optional) Display MSTP configuration information for the specified routing instance. |
| <b>Required Privilege Level</b>                     | view                                                                                                                                                                                                                                                                                    |
| <b>List of Sample Output</b>                        | <a href="#">show spanning-tree mstp configuration detail on page 116</a><br><a href="#">show spanning-tree mstp configuration detail (QFX Series) on page 116</a>                                                                                                                       |
| <b>Output Fields</b>                                | Table 6 on page 115 lists the output fields for the <b>show spanning-tree mstp configuration</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                       |

**Table 6: show spanning-tree mstp configuration Output Fields**

| Field Name                  | Field Description                                                |
|-----------------------------|------------------------------------------------------------------|
| <b>Context id</b>           | Internally generated identifier.                                 |
| <b>Region name</b>          | MSTP region name carried in the MSTP BPDUs.                      |
| <b>Revision</b>             | Revision number of the MSTP configuration.                       |
| <b>Configuration digest</b> | Numerical value derived from the VLAN-to-instance mapping table. |
| <b>MSTI</b>                 | MSTI identifier.                                                 |
| <b>Member VLANs</b>         | VLAN identifiers associated with the MSTI.                       |

## Sample Output

### show spanning-tree mstp configuration detail

```
user@host> show spanning-tree mstp configuration routing-instance vs1 detail
MSTP configuration information
Context identifier : 1
Region name : henry
Revision : 3
Configuration digest : 0x6da4b5c4fd587757eef35675365e1

MSTI Member VLANs
 0 0-99,101-199,201-4094
 1 100
 2 200
```

### show spanning-tree mstp configuration detail (QFX Series)

```
user@1f0> show spanning-tree mstp configuration routing-instance vs1 detail
MSTP configuration information
Context identifier : 1
Region name : henry
Revision : 3
Configuration digest : 0x6da4b5c4fd587757eef35675365e1

MSTI Member VLANs
 0 0-99,101-199,201-4094
 1 100
 2 200
```

## show spanning-tree stp-buffer see-all

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show spanning-tree stp-buffer see-all<br><stp-instance <i>stp-instance-id</i> routing-instance <i>instance-name</i> ><br><vlan <i>vlan-id</i> routing-instance <i>instance-name</i> >                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Display the configured STP (RSTP, MSTP, VSTP) interface parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>none</b>— Display STP (RSTP, MSTP, VSTP) interface role/state changes that are logged into internal memory called the buffer. Entries in the buffer depend on the user configuration.</p> <p><b>stp-instance <i>stp-instance-id</i> routing-instance <i>instance-name</i></b>— (Optional) Display the STP buffer for the specified stp-instance and routing instance.</p> <p><b>vlan <i>vlan-id</i> routing-instance <i>instance-name</i></b>— (Optional) Display the STP buffer for the specified vlan id and routing instance.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show spanning-tree stp-buffer see-all (MX Series) on page 118</a><br><a href="#">show spanning-tree stp-buffer see-all stp-instance <i>stp-instance-id</i> routing-instance <i>instance-name</i> (MX Series) on page 119</a><br><a href="#">show spanning-tree stp buffer see-all vlan <i>vlan-id</i> routing-instance <i>instance-name</i> (MX Series) on page 120</a>                                                                                                                                                        |
| <b>Output Fields</b>            | <a href="#">Table 7 on page 117</a> describes the output fields for the <b>show spanning-tree stp-buffer see-all</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                      |

Table 7: show spanning-tree stp-buffer see-all Output Fields

| Field Name                   | Field Description                                                                                                                                                                                                                                                                           | Level of Output                         |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| Global Events                | Displays events when PPMD RX/TX queues reach 70% of their maximum queue size. The following indicates received queue status: <ul style="list-style-type: none"> <li>GT — Greater than 70 % of their maximum queue size.</li> <li>LT — Less than 70% of their maximum queue size.</li> </ul> | none, <b>stp-instance</b> , <b>vlan</b> |
| Per STP instance Information | Information about every STP instance.                                                                                                                                                                                                                                                       | none, <b>stp-instance</b> , <b>vlan</b> |
| Routing Inst                 | Routing instance to which the STP instance belongs.                                                                                                                                                                                                                                         | none, <b>stp-instance</b> , <b>vlan</b> |
| STP Instance                 | Instance number that uniquely identifies each STP session per routing-instance.                                                                                                                                                                                                             | none, <b>stp-instance</b>               |

Table 7: show spanning-tree stp-buffer see-all Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                                                                                                                                                                                                                                                     | Level of Output                         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| Root Bridge  | Bridge priority and bridge ID of ROOT bridge in the topology.                                                                                                                                                                                                                                                                                                                         | none, <b>vlan</b>                       |
| Root Port    | Information about ROOT port, if any, on the local bridge at the displayed timestamp.                                                                                                                                                                                                                                                                                                  | none, <b>vlan</b>                       |
| TC Received  | Time at which topology change was received and on which port.                                                                                                                                                                                                                                                                                                                         | none, <b>stp-instance</b> , <b>vlan</b> |
| TC Generated | Time at which topology change occurred and on which port.                                                                                                                                                                                                                                                                                                                             | none, <b>stp-instance</b> , <b>vlan</b> |
| Port         | The interface where the event is occurring.                                                                                                                                                                                                                                                                                                                                           | none, <b>stp-instance</b> , <b>vlan</b> |
| State        | STP state of the port. The following are the types of state: <ul style="list-style-type: none"> <li>Forwarding — Port forwards the traffic and is included in active topology and learns MAC addresses.</li> <li>Blocking — Port does not forward traffic and is not included in active topology. Does not learn MAC addresses.</li> </ul>                                            | none, <b>vlan</b>                       |
| Role         | Role of the port. The following are the types of ports: <ul style="list-style-type: none"> <li>Root — Port closest to the Root bridge.</li> <li>Designated — Port sends the best BPDU on the connected segment.</li> <li>Alternate — Port blocked for receiving more useful BPDUs from another bridge.</li> <li>Disabled — Port is disabled. Cannot send or receive BPDUs.</li> </ul> | none, <b>stp-instance</b> , <b>vlan</b> |

## Sample Output

### show spanning-tree stp-buffer see-all (MX Series)

```

user@host> show spanning-tree stp-buffer see-all
1. Global Events:
Time at which different Queue's reached 70% of the Maximum Q-size
Mar 18 13:18:04 RCV_Q GT
Mar 18 13:18:57 RCV_Q LT
Mar 18 13:19:33 XMIT_Q GT

2. Per STP Instance Information :
Routing Inst : default

```

```

STP Instance : 02
Root Bridge : 12288.00:23:9c:f0:17:d0 Mar 18 13:18:04
STP Instance : 03
Root Port : ge-0/1/2 Mar 18 13:18:38
STP Instance : 03
TC Received : ge-0/0/2 Mar 18 15:12:12
STP Instance : 03
TC Generated: ge-0/2/2 Mar 18 15:13:27

```

3. This section will print the time stamp for per Instance – port event changes.

```

STP Instance : 02
Port : ge-1/0/0 Mar 22 13:35:02
State : FWD S
Role : DESG

```

```

STP Instance : 00
Port : ge-0/0/3 Mar 22 14:03:46
State : BLK
Role : ALT R
STP Instance : 00
Port : ge-1/0/0 Mar 28 02:03:49
State : BLK S
Role : ALT

```

#### show spanning-tree stp-buffer see-all stp-instance stp-instance-id routing-instance instance-name (MX Series)

```
user@host> show spanning-tree stp-buffer see-all stp-instance 0 routing-instance mstp_inst
```

##### 1. Global Events:

Time at which different Queue's reached 70% of the Maximum Q-size  
No Entry So far

##### 2. Per STP Instance Information :

Routing Inst : mstp\_inst

```

STP Instance : 0
TC Generated : ge-3/0/5.32767 Tue Dec 17 06:00:50 2013
STP Instance : 0
TC Generated : ge-3/1/1.32767 Tue Dec 17 06:00:50 2013
STP Instance : 0
TC Received : ge-3/0/5.32767 Tue Dec 17 06:00:50 2013
STP Instance : 0
TC Received : ge-3/0/5.32767 Tue Dec 17 06:00:50 2013
STP Instance : 0
TC Received : ge-3/0/5.32767 Tue Dec 17 06:00:51 2013
STP Instance : 0
TC Received : ge-3/0/5.32767 Tue Dec 17 06:00:53 2013

```

3. This section will print the time stamp for per Instance, Port Event changes.

```

STP Instance : 0
Port : ge-3/0/5.32767 Tue Dec 17 06:00:49 2013
State : BLK S
Role : DIS

```

```
STP Instance : 0
```

```

Port : ge-3/0/5.32767 Tue Dec 17 06:00:49 2013
State : BLK
Role : DESG R

```

```

STP Instance : 0
Port : ge-3/1/1.32767 Tue Dec 17 06:00:49 2013
State : BLK S
Role : DIS

```

```

STP Instance : 0
Port : ge-3/1/1.32767 Tue Dec 17 06:00:49 2013
State : BLK
Role : DESG R

```

```

STP Instance : 0
Port : ge-3/0/5.32767 Tue Dec 17 06:00:50 2013
State : FWD S
Role : DESG

```

```

STP Instance : 0
Port : ge-3/1/1.32767 Tue Dec 17 06:00:50 2013
State : FWD S
Role : DESG

```

### show spanning-tree stp buffer see-all vlan vlan-id routing-instance instance-name (MX Series)

```
user@host> show spanning-tree stp-buffer see-all vlan 10 routing-instance vstp_inst
```

#### 1. Global Events:

Time at which different Queue's reached 70% of the Maximum Q-size

```
Mar 18 13:18:04 RCV_Q GT
```

```
Mar 18 13:18:57 RCV_Q LT
```

```
Mar 18 13:19:33 XMIT_Q GT
```

#### 2. Per STP Instance Information :

```
Routing Inst : default
```

```
VLAN ID : 02
```

```
Root Bridge : 12288.00:23:9c:f0:17:d0 Mar 18 13:18:04
```

```
VLAN ID : 03
```

```
Root Port : ge-0/1/2 Mar 18 13:18:38
```

```
VLAN ID : 03
```

```
TC Received : ge-0/0/2 Mar 18 15:12:12
```

```
VLAN ID : 03
```

```
TC Generated: ge-0/2/2 Mar 18 15:13:27
```

#### 3. This section will print the time stamp for per Instance - port event changes.

```
VLAN ID : 02
```

```
Port : ge-1/0/0 Mar 22 13:35:02
```

```
State : FWD S
```

```
Role : DESG
```

```
VLAN ID : 00
```

```
Port : ge-0/0/3 Mar 22 14:03:46
```

```
State : BLK
```

```
Role : ALT R
```

```
VLAN ID : 00
```

```
Port : ge-1/0/0 Mar 28 02:03:49
```

```
State : BLK S
```

```
Role : ALT
```




## CHAPTER 9

# Operational Mode Commands for Spanning-Tree Statistics

- `clear spanning-tree statistics`
- `clear spanning-tree statistics bridge`
- `show spanning-tree statistics`
- `show spanning-tree statistics bridge`
- `show spanning-tree statistics interface`
- `show spanning-tree statistics message-queues`

## clear spanning-tree statistics

---

|                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                                                                                                                                                                   | <a href="#">Syntax on page 122</a><br><a href="#">Syntax (EX Series Switches and the QFX Series) on page 122</a>                                                                                                                                                                                                                          |
| <b>Syntax</b>                                                                                                                                                                           | <code>clear spanning-tree statistics</code><br><code>&lt;interface <i>interface-name</i>&gt;</code><br><code>&lt;logical-system <i>logical-system-name</i>&gt;</code>                                                                                                                                                                     |
| <b>Syntax (EX Series Switches and the QFX Series)</b>                                                                                                                                   | <code>clear spanning-tree statistics</code><br><code>&lt;interface <i>interface-name</i>&gt;</code>                                                                                                                                                                                                                                       |
| <b>Release Information</b>                                                                                                                                                              | Command introduced in Junos OS Release 8.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                      |
| <b>Description</b>                                                                                                                                                                      | Clear Spanning Tree Protocol statistics.                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                                                                                                                                                                          | <code>none</code> —Reset STP counters for all interfaces for all routing instances.<br><br><code>interface <i>interface-name</i></code> —(Optional) Clear STP statistics for the specified interface only.<br><br><code>logical-system <i>logical-system-name</i></code> —(Optional) Clear STP statistics on a particular logical system. |
| <div> <b>NOTE:</b> The <code>logical-system</code> option is not available on QFabric systems.</div> |                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b>                                                                                                                                                         | clear                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>                                                                                                                                                            | <ul style="list-style-type: none"><li><a href="#">show spanning-tree statistics on page 124</a></li></ul>                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>                                                                                                                                                            | <a href="#">clear stp statistics on page 122</a>                                                                                                                                                                                                                                                                                          |

### Sample Output

#### clear stp statistics

```
user@host> clear stp statistics
```

## clear spanning-tree statistics bridge

---

|                                 |                                                                               |
|---------------------------------|-------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear spanning-tree statistics bridge                                         |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                                  |
| <b>Description</b>              | Clear the statistics of the bridge.                                           |
| <b>Required Privilege Level</b> | clear                                                                         |
| <b>List of Sample Output</b>    | <a href="#">clear spanning-tree statistics bridge (MX Series) on page 123</a> |

### Sample Output

#### clear spanning-tree statistics bridge (MX Series)

```
user@host> clear spanning-tree statistics bridge
```

## show spanning-tree statistics

|                                                     |                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                               | <a href="#">Syntax on page 124</a><br><a href="#">Syntax (EX Series Switch and the QFX Series) on page 124</a>                                                                                                                                                                                                                                                              |
| <b>Syntax</b>                                       | show spanning-tree statistics<br><brief   detail><br><interface <i>interface-name</i> ><br><routing-instance <i>routing-instance-name</i> >                                                                                                                                                                                                                                 |
| <b>Syntax (EX Series Switch and the QFX Series)</b> | show spanning-tree statistics<br><brief   detail><br><interface <i>interface-name</i>   vlan <i>vlan-id</i> >                                                                                                                                                                                                                                                               |
| <b>Release Information</b>                          | Command introduced in Junos OS Release 8.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for QFX Series switches.                                                                                                                                                                                   |
| <b>Description</b>                                  | Display STP statistics.                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                                      | <b>none</b> —Display brief STP statistics.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b>interface <i>interface-name</i></b> —(Optional) Display STP statistics for the specified interface.<br><br><b>routing-instance <i>routing-instance-name</i></b> —(Optional) Display STP statistics for the specified routing instance. |
| <b>Required Privilege Level</b>                     | view                                                                                                                                                                                                                                                                                                                                                                        |
| <b>List of Sample Output</b>                        | <a href="#">show spanning-tree statistics routing-instance on page 125</a><br><a href="#">show spanning-tree statistics interface routing-instance detail on page 125</a>                                                                                                                                                                                                   |
| <b>Output Fields</b>                                | Table 8 on page 124 lists the output fields for the <b>show spanning-tree statistics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                   |

**Table 8: show spanning-tree statistics Output Fields**

| Field Name                      | Field Description                                     |
|---------------------------------|-------------------------------------------------------|
| Message type                    | Type of message being counted.                        |
| BPDUs sent                      | Total number of BPDUs sent.                           |
| BPDUs received                  | Total number of BPDUs received.                       |
| BPDUs sent in last interval     | Number of BPDUs sent within a specified interval.     |
| BPDUs received in last interval | Number of BPDUs received within a specified interval. |

Table 8: show spanning-tree statistics Output Fields (*continued*)

| Field Name                    | Field Description                                              |
|-------------------------------|----------------------------------------------------------------|
| <b>Interface</b>              | Interface for which the statistics are being displayed.        |
| <b>Next BPDU transmission</b> | Number of seconds until the next BPDU is scheduled to be sent. |

## Sample Output

### show spanning-tree statistics routing-instance

```

user@host> show spanning-tree statistics routing-instance vs1 detail
Routing instance level STP statistics
Message type : bpdus
BPDUs sent : 1396
BPDUs received : 1027
BPDUs sent in last interval : 5 (duration: 4 sec)
BPDUs received in last interval: 4 (duration: 4 sec)

```

### show spanning-tree statistics interface routing-instance detail

```

user@host> show spanning-tree statistics interface ge-11/1/4 routing-instance vs1 detail
Interface BPDUs sent BPDUs received Next BPDU
 transmission
ge-11/1/4 7 190 0

```

## show spanning-tree statistics bridge

|                                 |                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show spanning-tree statistics bridge                                                                                                                                                                 |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                                                                                                                                                         |
| <b>Description</b>              | Display the STP statistics of the bridge.                                                                                                                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <a href="#">show spanning-tree statistics bridge (MX Series) on page 126</a>                                                                                                                         |
| <b>Output Fields</b>            | <a href="#">Table 9 on page 126</a> describes the output fields for the <b>show spanning-tree statistics bridge</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 9: show spanning-tree statistics bridge Output Fields**

| Field Name                           | Field Description                                                                                                            |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>STP Context</b>                   | Context of STP instances saved for each routing instance. All STP instances in the same routing instances have same context. |
| <b>STP Instance</b>                  | Instance number that uniquely identifies each STP session per routing instance.                                              |
| <b>Number of Root Bridge Changes</b> | Counts the number of Root Bridge change events.                                                                              |
| <b>Number of Root Port Changes</b>   | Counts the number of Root Port change events.                                                                                |
| <b>Recent TC Received</b>            | Details about the last topology change received.                                                                             |

## Sample Output

### show spanning-tree statistics bridge (MX Series)

```

user@host> show spanning-tree statistics bridge
STP Context : default
STP Instance : 0
Number of Root Bridge Changes: 1 Last Changed: Wed Oct 23 07:10:05
2013
Number of Root Port Changes: 2 Last Changed: Wed Oct 23 07:10:05
2013
Recent TC Received: ge-3/1/4.32767 Received : Wed Oct 23 07:10:07
2013

```

## show spanning-tree statistics interface

|                                 |                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show spanning-tree statistics interface                                                                                                                                                                  |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                                                                                                                                                             |
| <b>Description</b>              | Display the STP statistics related to the interface.                                                                                                                                                     |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                     |
| <b>List of Sample Output</b>    | <a href="#">show spanning-tree statistics interface (MX Series) on page 127</a>                                                                                                                          |
| <b>Output Fields</b>            | <a href="#">Table 10 on page 127</a> describes the output fields for the <b>show spanning-tree statistics interface</b> command. Output fields are listed in the approximate order in which they appear. |

Table 10: show spanning-tree statistics interface Output Fields

| Field Name             | Field Description                                                        |
|------------------------|--------------------------------------------------------------------------|
| Interface              | Interface name.                                                          |
| BPDUs sent             | Total number of BPDUs sent from the bridge on the interface.             |
| BPDUs received         | Total number of BPDUs received by the bridge on the interface.           |
| Next BPDU Transmission | Time after which the next BPDU is sent by the bridge on the interface.   |
| TC Tx/Rx               | Total number of Topology Change BPDUs sent or received on the interface. |
| Proposal Tx/Rx         | Total number of Proposal BPDUs sent or received on the interface.        |
| Agreement Tx/Rx        | Total number of Agreement BPDUs sent or received on the interface.       |

## Sample Output

### show spanning-tree statistics interface (MX Series)

```
user@host> show spanning-tree statistics interface
```

| Interface | BPDUs<br>Sent | BPDUs<br>Received | Next BPDU<br>Transmission | TCs<br>Tx/Rx | Proposal<br>Tx/Rx | Agreement<br>Tx/Rx |
|-----------|---------------|-------------------|---------------------------|--------------|-------------------|--------------------|
| xe-0/0/0  | 49            | 3                 | 1                         | 5/2          | 0/2               | 1/0                |
| ge-1/0/0  | 48            | 1                 | 1                         | 5/1          | 0/1               | 1/1                |

## show spanning-tree statistics message-queues

|                                 |                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show spanning-tree statistics message-queues                                                                                                                                                                  |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.1.                                                                                                                                                                  |
| <b>Description</b>              | Display the STP message queues-related statistics.                                                                                                                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                          |
| <b>List of Sample Output</b>    | <a href="#">show spanning-tree statistics message-queues (MX Series) on page 128</a>                                                                                                                          |
| <b>Output Fields</b>            | <a href="#">Table 11 on page 128</a> describes the output fields for the <b>show spanning-tree statistics message-queues</b> command. Output fields are listed in the approximate order in which they appear. |

Table 11: show spanning-tree statistics message-queues Output Fields

| Field Name        | Field Description                                           |
|-------------------|-------------------------------------------------------------|
| Queue             | PPMD name.                                                  |
| Current size      | Number of packets currently present in the queue.           |
| High-watermark    | Maximum number of packets present in the queue at any time. |
| max/avg wait time | Maximum or average time packet waiting to be consumed.      |

### Sample Output

#### show spanning-tree statistics message-queues (MX Series)

```
user@host> show spanning-tree statistics message-queues
```

|         |              |                |                   |
|---------|--------------|----------------|-------------------|
| Queue   | Current size | High-watermark | max/avg wait time |
| PPMD-TX | 15           | 142            | 17636884/17636884 |
| PPMD-RX | 18           | 83             | 18866272/18866272 |



## PART 4

# Index

- [Index on page 131](#)



# Index

## Symbols

|                                              |     |
|----------------------------------------------|-----|
| #, comments in configuration statements..... | xiv |
| ( ), in syntax descriptions.....             | xiv |
| < >, in syntax descriptions.....             | xiv |
| [ ], in configuration statements.....        | xiv |
| { }, in configuration statements.....        | xiv |
| (pipe), in syntax descriptions.....          | xiv |

## A

|                              |    |
|------------------------------|----|
| all-failures (tracing flag)  |    |
| spanning-tree protocols..... | 82 |

## B

|                                                    |     |
|----------------------------------------------------|-----|
| BPDU                                               |     |
| overview.....                                      | 9   |
| bpdu (tracing flag).....                           | 82  |
| BPDU protection                                    |     |
| spanning-tree instance interface                   |     |
| checking the status.....                           | 97  |
| clearing the blocked status.....                   | 98  |
| bpdu-destination-mac-address statement             |     |
| spanning tree.....                                 | 62  |
| braces, in configuration statements.....           | xiv |
| brackets                                           |     |
| angle, in syntax descriptions.....                 | xiv |
| square, in configuration statements.....           | xiv |
| Bridge Protocol Data Unit See BPDU                 |     |
| bridge-detection-state-machine (tracing flag)..... | 82  |
| bridge-priority statement.....                     | 63  |
| bridging loop error condition                      |     |
| spanning-tree instance interface                   |     |
| checking the status.....                           | 97  |
| clearing the blocked status.....                   | 98  |

## C

|                                             |             |
|---------------------------------------------|-------------|
| clear spanning-tree protocol-migration      |             |
| command.....                                | 14, 95, 102 |
| clear spanning-tree statistics command..... | 122         |
| comments, in configuration statements.....  | xiv         |
| configuration-name statement.....           | 64          |

|                                                |      |
|------------------------------------------------|------|
| conventions                                    |      |
| text and syntax.....                           | xiii |
| cost statement.....                            | 65   |
| curly braces, in configuration statements..... | xiv  |
| customer support.....                          | xv   |
| contacting JTAC.....                           | xv   |

## D

|                       |    |
|-----------------------|----|
| disable statement     |    |
| mstp.....             | 66 |
| usage guidelines..... | 30 |
| documentation         |    |
| comments on.....      | xv |

## E

|                                   |    |
|-----------------------------------|----|
| edge port                         |    |
| configuration guidelines.....     | 20 |
| edge statement.....               | 67 |
| events (tracing flag)             |    |
| spanning-tree protocols.....      | 83 |
| extended-system-id statement..... | 68 |

## F

|                              |      |
|------------------------------|------|
| font conventions.....        | xiii |
| force-version statement..... | 69   |
| forward-delay statement..... | 70   |

## H

|                           |    |
|---------------------------|----|
| hello-time statement..... | 71 |
|---------------------------|----|

## I

|                                 |    |
|---------------------------------|----|
| interface statement             |    |
| Layer 2 protocol tunneling..... | 89 |
| spanning tree.....              | 72 |
| STP                             |    |
| usage guidelines.....           | 17 |

## L

|                                             |    |
|---------------------------------------------|----|
| layer2-control statement.....               | 90 |
| Layer 2 protocol tunneling                  |    |
| spanning-tree instance interface            |    |
| checking for a MAC rewrite error            |    |
| condition.....                              | 98 |
| clearing a MAC rewrite error condition..... | 99 |
| logical systems                             |    |
| spanning-tree protocols.....                | 13 |
| loop-free topology.....                     | 7  |

**M**

|                                                 |     |
|-------------------------------------------------|-----|
| MAC address                                     |     |
| clearing rewrite error conditions.....          | 98  |
| clearing the blocked status.....                | 99  |
| mac-rewrite statement.....                      | 91  |
| manuals                                         |     |
| comments on.....                                | xv  |
| max-age statement.....                          | 73  |
| max-hops statement.....                         | 74  |
| mode statement.....                             | 75  |
| msti statement.....                             | 76  |
| MSTP                                            |     |
| BPDU overview.....                              | 9   |
| configuration                                   |     |
| displaying.....                                 | 115 |
| configuring.....                                | 26  |
| nonstop bridging support.....                   | 9   |
| overview.....                                   | 7   |
| VLAN.....                                       | 85  |
| mstp                                            |     |
| disabling.....                                  | 66  |
| MSTP configuration                              |     |
| BPDU destination MAC address.....               | 15  |
| bridge priority.....                            | 16  |
| instance interface                              |     |
| edge port.....                                  | 20  |
| interface participating in the instance.....    | 17  |
| interval for root bridge sending configuration  |     |
| BPDUs.....                                      | 17  |
| link cost for determining designated bridge and |     |
| port.....                                       | 19  |
| link mode to identify point-to-point links..... | 19  |
| maximum interval between arrival of hello       |     |
| BPDUs.....                                      | 17  |
| priority of interface to become root port.....  | 18  |
| time bridge port remains in listening, learning |     |
| state.....                                      | 17  |
| MSTI                                            |     |
| bridge priority.....                            | 16  |
| edge port.....                                  | 20  |
| link cost for determining designated bridge     |     |
| and port.....                                   | 19  |
| priority of interface to become root            |     |
| port.....                                       | 18  |
| mstp statement.....                             | 77  |
| usage guidelines.....                           | 26  |
| multihomed environment                          |     |
| VPLS multihomed Layer 2 ring                    |     |
| configuring VSTP.....                           | 31  |

Multiple Spanning-Tree Protocol See MSTP

**P**

|                                                    |     |
|----------------------------------------------------|-----|
| parentheses, in syntax descriptions.....           | xiv |
| point-to-point links.....                          | 19  |
| port-information-state-machine (tracing flag)..... | 83  |
| port-migration-state-machine (tracing flag).....   | 83  |
| port-receive-state-machine (tracing flag)          |     |
| spanning-tree protocols.....                       | 83  |
| port-role-select-state-machine (tracing flag)      |     |
| spanning-tree protocols.....                       | 83  |
| port-role-transit-state-machine (tracing flag)     |     |
| spanning-tree protocols.....                       | 83  |
| port-state-transit-state-machine (tracing flag)    |     |
| spanning-tree protocols.....                       | 83  |
| port-transmit-state-machine (tracing flag)         |     |
| spanning-tree protocols.....                       | 83  |
| ppmd (tracing flag)                                |     |
| spanning-tree protocols.....                       | 83  |
| priority statement                                 |     |
| spanning tree.....                                 | 79  |
| protocol statement.....                            | 92  |
| protocols statement.....                           | 61  |

**R**

Rapid Spanning-Tree Protocol See RSTP

|                                                 |        |
|-------------------------------------------------|--------|
| revision-level statement.....                   | 80     |
| RSTP                                            |        |
| BPDU overview.....                              | 9      |
| configuring.....                                | 23     |
| forcing to run as IEEE 802.1D STP               |        |
| configuration guidelines.....                   | 14     |
| reverting from IEEE 802.1D STP.....             | 14, 95 |
| nonstop bridging support.....                   | 9      |
| overview.....                                   | 7      |
| RSTP configuration                              |        |
| BPDU destination MAC address.....               | 15     |
| bridge identifier for different routing         |        |
| instances.....                                  | 16     |
| bridge priority.....                            | 16     |
| interface is edge port until BPDU is            |        |
| received.....                                   | 20     |
| interface participating in the instance.....    | 17     |
| interval for root bridge sending configuration  |        |
| BPDUs.....                                      | 17     |
| link cost for determining designated bridge and |        |
| port.....                                       | 19     |
| link mode to identify point-to-point links..... | 19     |

- maximum interval between arrival of hello
      - BPDUs.....17
    - priority of interface to become root port.....18
    - time bridge port remains in listening, learning
      - state.....17
    - VLAN
      - link mode to identify point-to-point
        - links.....19
  - rstp statement.....81
  - usage guidelines.....23
- S**
- show spanning-tree bridge command.....104
  - show spanning-tree interface command.....109
  - show spanning-tree mstp configuration
    - command.....115
  - show spanning-tree statistics command.....124
  - Spanning Tree Protocol
    - overview.....3
  - Spanning-Tree Protocol (IEEE 802.1D) *See* STP
  - spanning-tree protocols
    - BPDUs overview.....9
    - in logical systems
      - configuration guidelines.....13
    - nonstop bridging support.....9
    - overview.....7
    - tracing protocol operations
      - configuration guidelines.....20
      - traceoptions statement.....82
  - state-machine-variables (tracing flag)
    - spanning-tree protocols.....83
  - STP
    - bridge
      - displaying.....104
    - interface
      - displaying.....109
    - protocol
      - clearing.....102
    - statistics
      - clearing.....122
      - displaying.....124
  - support, technical *See* technical support
  - syntax conventions.....xiii
- T**
- technical support
    - contacting JTAC.....xv
  - timers (tracing flag)
    - spanning-tree protocols.....83
  - topology-change-state-machine (tracing flag)
    - spanning-tree protocols.....83
  - traceoptions statement
    - spanning-tree protocols.....82
    - usage guidelines.....20
  - tracing flags
    - all.....82
    - all-failures
      - spanning-tree protocols.....82
    - bpdu.....82
    - bridge-detection-state-machine.....82
    - events
      - spanning-tree protocols.....83
    - port-information-state-machine.....83
    - port-migration-state-machine.....83
    - port-receive-state-machine
      - spanning-tree protocols.....83
    - port-role-select-state-machine
      - spanning-tree protocols.....83
    - port-role-transit-state-machine
      - spanning-tree protocols.....83
    - port-state-transit-state-machine
      - spanning-tree protocols.....83
    - port-transmit-state-machine
      - spanning-tree protocols.....83
  - ppmd
    - spanning-tree protocols.....83
  - state-machine-variables
    - spanning-tree protocols.....83
  - timers
    - spanning-tree protocols.....83
  - topology-change-state-machine
    - spanning-tree protocols.....83
  - tracing operations
    - spanning-tree protocols
      - configuration guidelines.....20
    - STP.....82
- V**
- VLAN Spanning-Tree Protocol *See* VSTP
  - VSTP
    - BPDUs overview.....9
    - configuring.....31
    - forcing to run as IEEE 802.1D STP
      - configuration guidelines.....14
      - reverting from IEEE 802.1D STP.....14, 95
    - overview.....7
    - VLAN.....86

## VSTP configuration

|                                                 |    |
|-------------------------------------------------|----|
| instance interface                              |    |
| edge port.....                                  | 20 |
| link cost for determining designated bridge and |    |
| port.....                                       | 19 |
| link mode to identify point-to-point links..... | 19 |
| priority of interface to become root port.....  | 18 |
| VLAN                                            |    |
| interface participating a VLAN                  |    |
| instance.....                                   | 17 |
| maximum interval between arrival of hello       |    |
| BPDUs.....                                      | 17 |
| time bridge port remains in listening,          |    |
| learning state.....                             | 17 |
| VLAN                                            |    |
| bridge priority.....                            | 16 |
| edge port.....                                  | 20 |
| interval for root bridge sending                |    |
| configuration BPDUs.....                        | 17 |
| link cost for determining designated bridge     |    |
| and port.....                                   | 19 |
| priority of interface to become root            |    |
| port.....                                       | 18 |
| vstp statement.....                             | 87 |
| usage guidelines.....                           | 31 |