

instance-interface-type

Syntax	<code>instance-interface-type { <i>instanceInterfaceType</i> set superset }</code> <code>no instance-interface-type { <i>instanceInterfaceType</i> all }</code>
Release Information	Command introduced in JUNOS Release 7.1.0. lag keyword added in JUNOS Release 8.1.0. set and superset keywords added in JUNOS Release 9.2.0.
Description	Assigns an instance-interface type to a QoS parameter definition. Instance-interface types indicate the interfaces for which QoS clients can assign QoS parameter instances. You can specify up to eight instance-interface types for each parameter definition. The no version removes the specified instance-interface type from the parameter definition.
Options	<ul style="list-style-type: none">■ <i>instanceInterfaceType</i>—One of the following instance-interface types: atm, atm-vc, atm-vp, bridge, ethernet, fr-vc, ip, ip-tunnel, ipv6, lag, l2tp-session, l2tp-tunnel, lsp, pppoe, serial, server-port, svlan, vlan■ set—Specifies an interface set as an instance-interface type■ superset—Specifies an interface superset as an instance-interface type■ all—Removes all instance-interface types
Mode	QoS Parameter Definition
Related Topics	<ul style="list-style-type: none">■ Configuring a Basic Parameter Definition for QoS Administrators■ Creating a QoS Parameter on an Interface Superset or Interface Set

