

## ip pim dr-priority

---

**Syntax** ip pim dr-priority *priority*  
no ip pim dr-priority

**Release Information** Command introduced in JUNOS Release 9.0.0.  
Router Configuration mode added in JUNOS Release 10.0.0.

**Description** Assigns a priority for the interface to be selected as the designated router. An interface with a higher priority value is preferred as a designated router over an interface with a lower priority value. In Interface Configuration mode, the **no** version restores the value that is specified in Router Configuration mode. If the designated router priority is not specified in Router Configuration mode, then the default value of 1 is restored.



**NOTE:** You cannot configure the designated router priority on PIM dense mode interfaces.

---

**Options** ■ *priority*—Value in the range 1–254; default value is 1.

**Mode** Interface Configuration, Router Configuration

