

radius relay server

Syntax radius relay { authentication | accounting } server
no radius relay [{ authentication | accounting } server]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Configures a RADIUS relay authentication or accounting server, and enters RADIUS Relay Configuration mode. The **no** version deletes all RADIUS relay servers or the specific authentication or accounting server.

- Options**
- authentication—Configure the RADIUS relay authentication server
 - accounting—Configure the RADIUS relay accounting server

Mode Global Configuration

