

## server-name

---

**Syntax**    `server-name serverName`

`no server-name`

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Specifies the hostname expected from the L2TP LNS when you set up a tunnel. The **no** version removes the server name.

**Options**    ■    *serverName*—Hostname; can be up to 64 characters in length (no spaces)

**Mode**    Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

