

show frame-relay interface

Syntax show frame-relay interface [*interfaceType interfaceSpecifier*] [members]
[brief] [delta] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays Frame Relay statistics for interfaces.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers :
 - serial
 - pos
 - mlframe-relay
 - tunnel—GRE tunnel
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - members—Displays the status of MLFR links
 - displays the status of all MLFR links if you specify the interface type **mlframe-relay** without a specifier for an MLFR bundle
 - displays the status of MLFR links in an MLFR bundle if you specify that bundle
 - brief—Displays a summary of interface information
 - delta—Displays baselined statistics
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

