

## show interfaces

---

<b>Syntax</b>	show interfaces <i>interfaceType interfaceSpecifier</i> [ <i>delta</i> ] [ <i>brief</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JUNOS Release 7.1.0.
<b>Description</b>	Displays the current state of the interface you specify.
<b>Options</b>	<ul style="list-style-type: none"><li>■ <i>interfaceType</i>—Interface type; see Interface Types and Specifiers</li><li>■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers; for ATM, subinterfaces are not supported by the syntax</li><li>■ <i>delta</i>—Displays baselined statistics</li><li>■ <i>brief</i>—Displays a brief summary of the interface</li><li>■ <i>filter</i>—See Filtering show Commands</li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Monitoring the QoS Configuration of ATM Interfaces</li><li>■ Monitoring the QoS Configuration of Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet Interfaces</li><li>■ Monitoring Interfaces and Policy Lists</li></ul>

