

show ip dhcp-local binding

Syntax show ip dhcp-local binding [*ipAddress* | interface *interfaceType* *interfaceValue*]
[*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays DHCP local server binding information for DHCP local server clients.



NOTE: This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the **show dhcp binding** command.

- Options**
- *ipAddress*—IP address of the subscriber's personal computer
 - *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Related Topics ■ Monitoring DHCP Bindings (Local Server Binding Information)

