

show ip dhcp-local statistics

- Syntax** show ip dhcp-local statistics [interface [*interfaceType interfaceSpecifier*]]
[delta] [*filter*]
- Release Information** Command introduced before JUNOS Release 7.1.0.
- Description** Displays statistics for the DHCP local server.
- Options**
- *interfaceType*—Interface type; see *Interface Types and Specifiers* in *About This Guide*
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see *Interface Types and Specifiers*
 - delta—Displays baselined statistics
 - *filter*—See *Filtering show Commands*
- Mode** Privileged Exec
- Related Topics**
- Monitoring DHCP Local Server Statistics

