

## **show radius remote-circuit-id-delimiter**

---

**Syntax** show radius remote-circuit-id-delimiter

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays the delimiter character that the router uses to set off components in the PPPoE remote circuit ID value sent from a DSLAM and captured on the router. The default delimiter character is #.

**Mode** Privileged Exec

