

## diag-level

---

**Syntax**    diag-level [ normal ] [ bypass ]

**Release Information**    Command introduced in JUNOS Release 9.2.0.

**Description**    Sets the diagnostics level on the active or standby SRP module to reduce boot time during a cold and a warm boot. The default diagnostics level is normal. There is no **no** version.

**Options**    ■    normal—executes full diagnostics on the boot of the line card  
                      bypass—skips diagnostic tests on the boot of the line card

**Mode**    Global Configuration

