

## radius trap auth-server-not-responding

---

**Syntax** radius trap auth-server-not-responding { enable | disable }  
no radius trap auth-server-not-responding

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Enables or disables SNMP traps when a RADIUS authentication server fails to respond to a RADIUS Access-Request message. The **no** version restores the default, disable.

- Options**
- enable—Specifies the feature
  - disable—Disables the feature; this is the default setting

**Mode** Global Configuration

