

## show aaa tunnel-parameters

---

**Syntax** show aaa tunnel-parameters [*filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays default tunnel parameters that are configured for tunnel definitions.

**Options** ■ *filter*—See Filtering show Commands

**Mode** Privileged Exec

