

## show radius calling-station-delimiter

---

**Syntax** show radius calling-station-delimiter [*filter*]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays the delimiter used in RADIUS attribute 30, Calling-Station-Id, for the authenticated ATM PPP users.

**Options** ■ *filter*—See Filtering show Commands

**Mode** Privileged Exec

