

## show configuration

---

**Syntax** show configuration [ interface *interfaceType* *interfaceSpecifier* ] |  
[ category *categoryName* [ *categoryName* ]\* ] [ virtual-router *routerName* ]  
[ [ exclude-category interface *interfaceType* ]\* ] [ include-defaults ] [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays the current (running) configuration of the router, a specified virtual router, a specified interface, or a specified category of router settings. You can create a configuration script from this output by saving it as a file with the .scr extension. This command was formerly documented as **show config**; that abbreviation is still supported.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - *categoryName*—Name of the category or subcategory of router settings; first *categoryName* variable in the syntax represents the category; repeated *categoryName* variables represent subcategories of the category
  - *routerName*—Name of the virtual router
  - exclude-category—Excludes information associated with a particular type of interface
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - include-defaults—Includes commands that set default values for various parameters
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec

