

## show ip dhcp-local binding

---

**Syntax** show ip dhcp-local binding [ *ipAddress* | interface *interfaceType* *interfaceValue* ]  
[ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays DHCP local server binding information for DHCP local server clients.



**NOTE:** This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the **show dhcp binding** command.

---

- Options**
- *ipAddress*—IP address of the subscriber's personal computer
  - *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec

**Related Topics** ■ Monitoring DHCP Bindings (Local Server Binding Information)

