

## show ipv6 dhcpv6-local prefix-lifetime

---

<b>Syntax</b>	show ipv6 dhcpv6-local prefix-lifetime [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JUNOS Release 7.1.0.
<b>Description</b>	Displays the DHCPv6 default prefix lifetime.
<b>Options</b>	■ <i>filter</i> —See Filtering show Commands
<b>Mode</b>	Privileged Exec
<b>Related Topics</b>	■ Monitoring DHCPv6 Local Server Prefix Lifetime

