

show radius servers

- Syntax** show radius [*serverType*] servers [*filter*]
- Release Information** Command introduced before JUNOS Release 7.1.0.
pre-authentication keyword added in JUNOS Release 8.1.0.
- Description** Displays information about the RADIUS servers configured on the router.
- Options**
- *serverType*—One of the following RADIUS server types:
 - authentication—Displays authentication information only
 - accounting—Displays accounting information only
 - dynamic-request—Displays dynamic-request information only
 - pre-authentication—Displays preauthentication information only
 - *filter*—See Filtering show Commands
- Mode** Privileged Exec
- Related Topics**
- Monitoring RADIUS Dynamic-Request Server Information

