

tunnel-subscriber authentication

Syntax	tunnel-subscriber authentication { enable disable } no tunnel-subscriber authentication
Release Information	Command introduced in JUNOS Release 9.1.0.
Description	Configures whether tunnel subscribers within the domain map are authenticated with the authentication server or are granted access without individual authentication. The no version restores the default condition, where users are not authenticated by an authentication server.
Options	<ul style="list-style-type: none">■ enable—Enables tunnel subscriber authentication by the authentication server■ disable—Disables tunnel subscriber authentication by the authentication server; all users in the domain are granted access without individual authentication; this is the default condition
Mode	Domain Map Configuration
Related Topics	<ul style="list-style-type: none">■ <i>Configuring Tunnel Subscriber Authentication in the JUNOS Broadband Access Configuration Guide</i>

