

radius disconnect client

Syntax [no] radius disconnect client *ipAddress*

Release Information Command introduced before JUNOS Release 7.1.0.

Description Configures a RADIUS disconnect client and enters RADIUS Disconnect Configuration mode. The **no** version removes the RADIUS disconnect client.



NOTE: This command is deprecated and may be removed completely in a future release. The function provided by this command has been replaced by the **subscriber disconnect** command and the RADIUS dynamic-request server feature. The RADIUS Disconnect Configuration mode is also deprecated.

Options ■ *ipAddress*—IP address of the RADIUS server that is acting as the disconnect client

Mode Global Configuration

