

retransmit

Syntax retransmit *retries*
 no retransmit

Release Information Command introduced before JUNOS Release 7.1.0.

Description Specifies maximum number of times the router retransmits a RADIUS packet to an authentication or accounting server. The **no** version restores the default value.

Options ■ *retries*—Number of retries, in the range 0–16; default value is 3

Mode RADIUS Configuration

