

service dhcp-local

Syntax [no] service dhcp-local [equal-access | standalone [authenticate]]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Enables the DHCP local server. In standalone mode, the **authenticate** keyword enables AAA-based authentication for incoming DHCP clients. The **no** version disables the DHCP local server and does not save the previous settings.

- Options**
- equal-access—Enables the DHCP local server to work with the SRC (formerly SDX or SSC) or HTTP local server for non-PPP equal access, the default option
 - standalone—Configures the router as a DHCP local server
 - authenticate—Enables AAA-based authentication of incoming DHCP clients

Mode Global Configuration

