

## debounce-interval

---

**Syntax**    `debounce-interval seconds`  
`no debounce-interval`

**Release Information**    Command introduced in JUNOS Release 9.3.0.

**Description**    Modifies the minimum time an Ethernet interface must maintain a given state—for example, up or down—before the interface notifies the upper-layer protocols of the state change. The `no` version restores the default value, 1 second.



**NOTE:** You can configure this command only if you have enabled the debounce timer feature using the **debounce** command.

---

**Options**    ■    *seconds*—Interval for which an interface must maintain a given state before the interface reports the state change to the upper-layer protocols. Number in the range 1–5 seconds; default value is 1 second.

**Mode**    Interface Configuration

---

Published: 2009-10-09