

debounce

Syntax `debounce [seconds]`

`no debounce`

Release Information Command introduced in JUNOS Release 9.3.0.

Description Enables the debounce timer and sets the time interval that the interface waits before reporting a state change to the upper-layer protocols. The **no** version restores the default behavior, disabling debounce on the interface.

Options ■ *seconds*—Interval for which an interface must maintain a given state before the interface reports the state change to the upper-layer protocols. Number in the range 1–5 seconds; default value is 1 second.

Mode Interface Configuration

Published: 2009-10-09