

## minimum-links

---

**Syntax**    minimum-links *minimumLinkValue*  
              no minimum-links

**Release Information**    Command introduced in JUNOS Release 10.0.0.

**Description**    Configures the minimum number of member links in the link aggregation group (LAG) bundle that must be in the Collecting/Distributing state for the LAG interface to be considered up. The **no** version resets the minimum number of member links to the default value.

**Options**    ■    *minimumLinkValue*—Minimum number of links in the LAG bundle in the range 1-8 (8 is the maximum number of member links per LAG bundle); default value is 1.

**Mode**    Interface Configuration

**Related Topics**    ■    *Configuring 802.3ad Link Aggregation and Link Redundancy in the JUNOS Link Layer Configuration Guide*

---

Published: 2009-10-09